

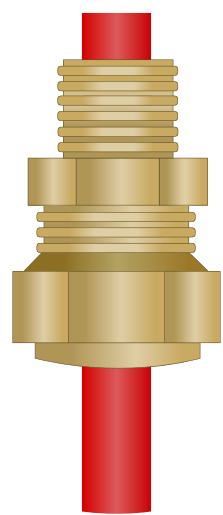




Where to attach the compression fittings to a GROHE kitchen or basin mixer tap

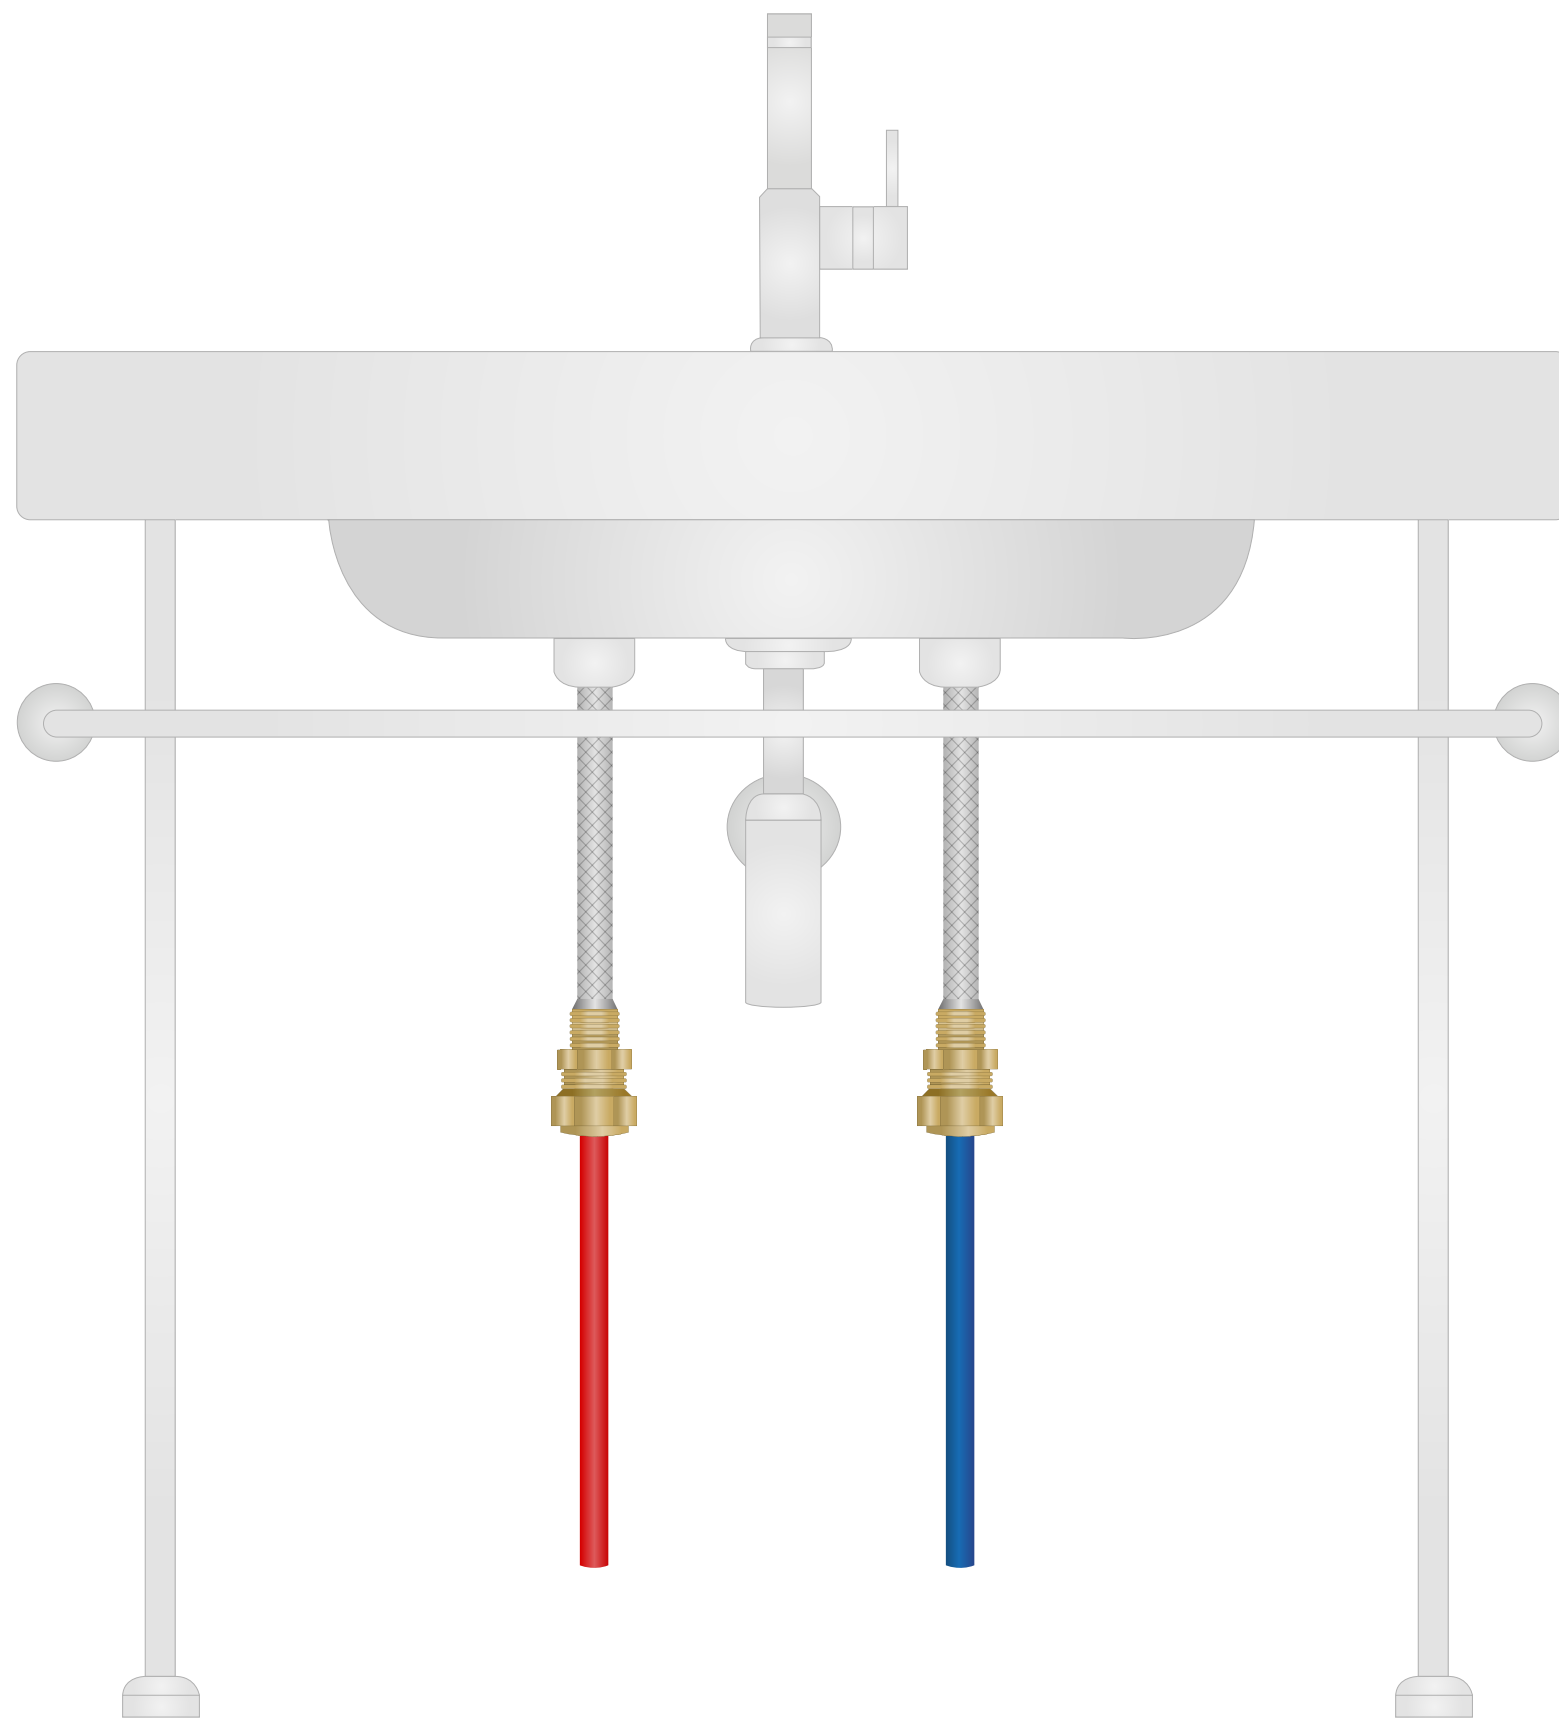


STEP 1
Attach one compression fitting to your HOT water pipe, tighten the nut securely.

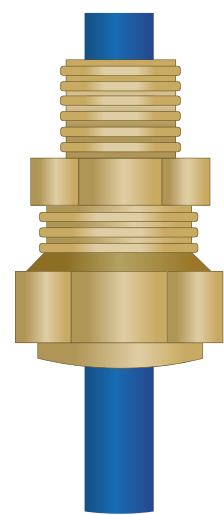

STEP 2
Attach the other compression fitting to your COLD water pipe, tighten the nut securely.

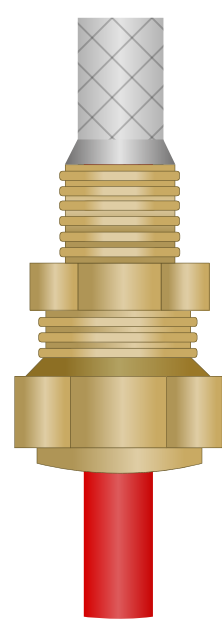

STEP 3
Now attach the left flexible hose of the GROHE mixer to the compression fitting on the HOT water pipe. Tighten securely.

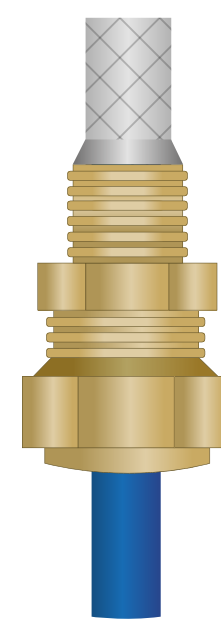

STEP 4
Now attach the right flexible hose of the GROHE mixer to the compression fitting on the COLD water pipe. Tighten securely.



STEP 5
Make sure all the fittings are water tight.

Pure Freude
an Wasser

