

# C101 Car Installation Instructions


From SZDOIT

## 1. Material list

---



Name	Quantities
plate	1
TT motor	4
Black encoder	4
wheel	4
Long M3 flat head screws	8
M3 nut	8

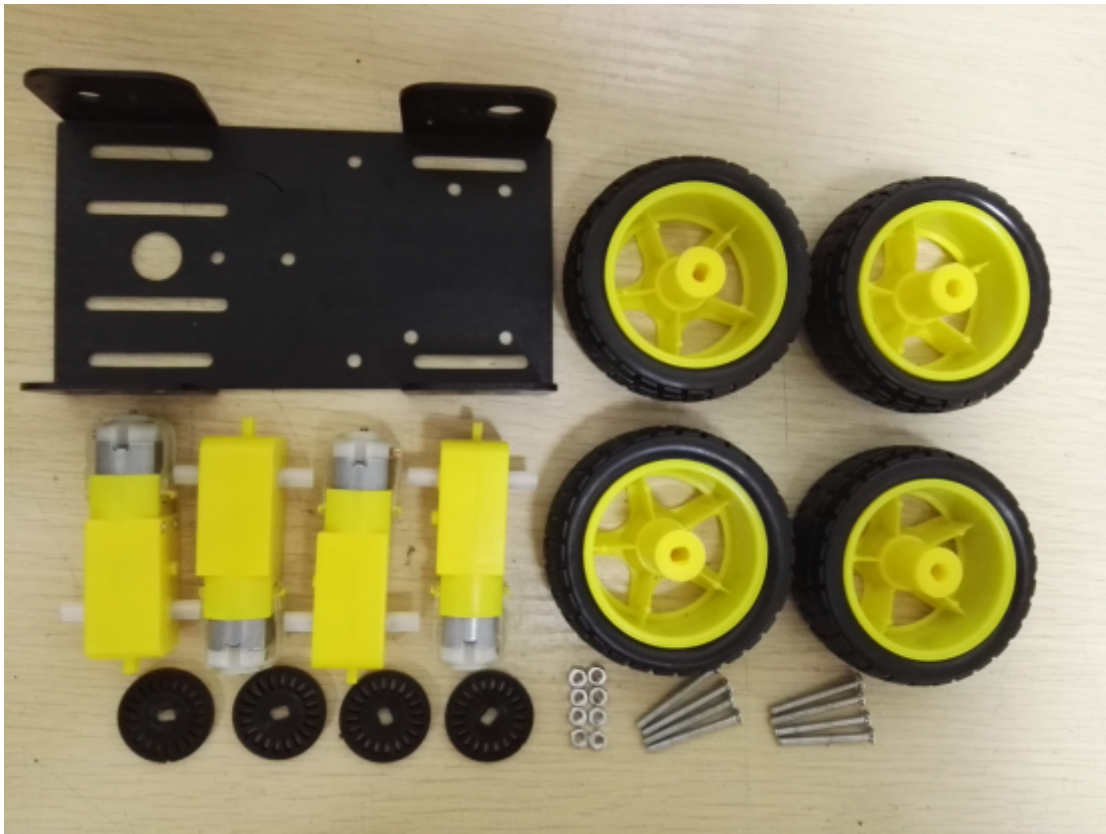

## 2. Installation Process


---

1) Installed the black encoder into the tt motor

List:



Installation process:

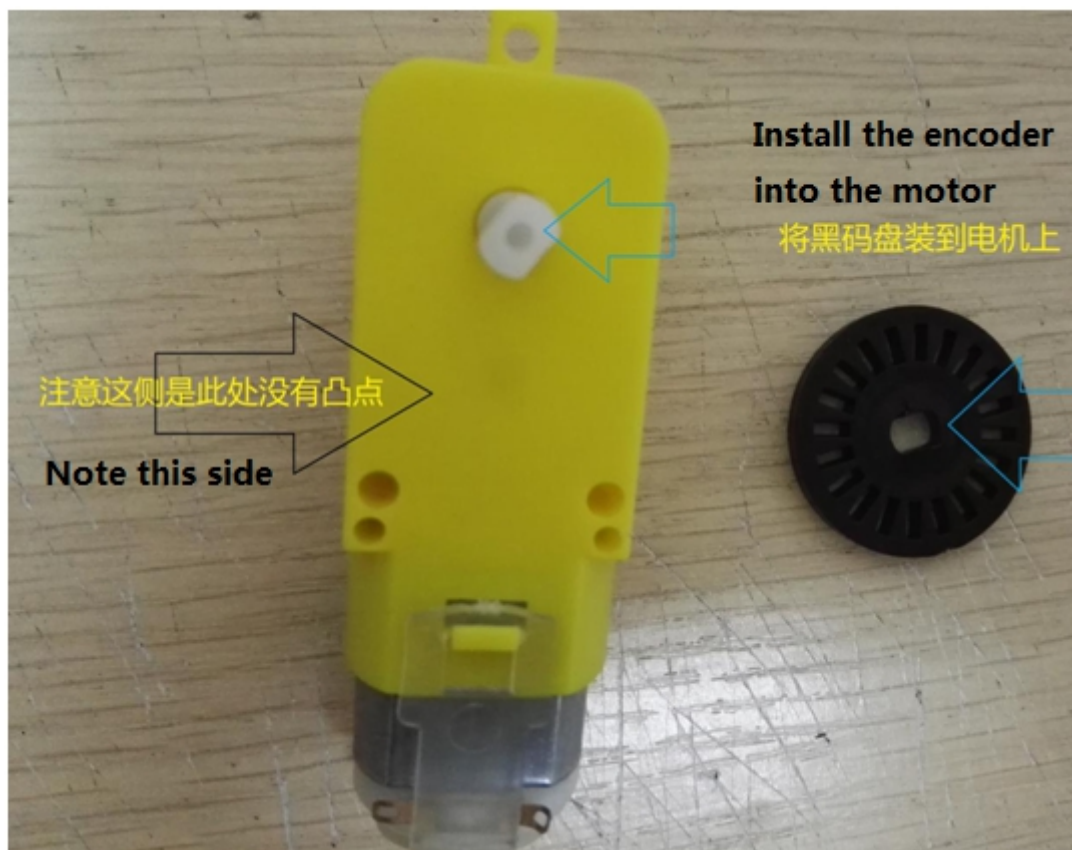




如图将4个舵机的反侧都装上黑码盘

2)The TT motor is mounted on the side side of the chassis


List:

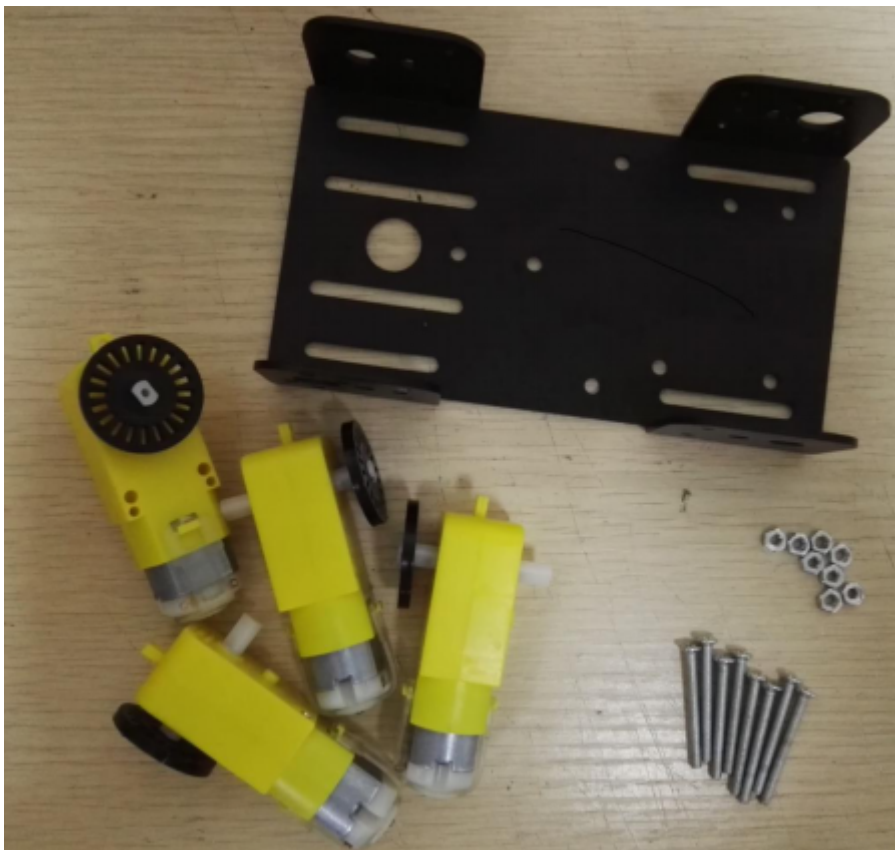

Installation process:

将ttl电机安装到底盘侧边


Install the tt motor into the side plate

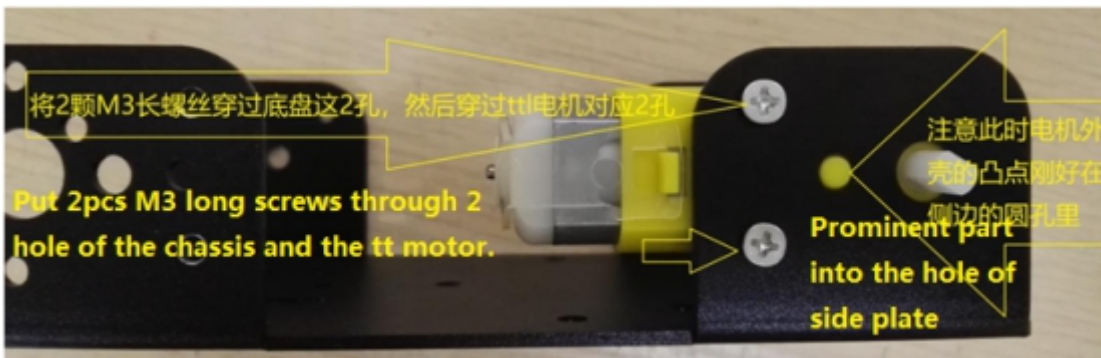



3) Install the plastic wheels on motor

List:

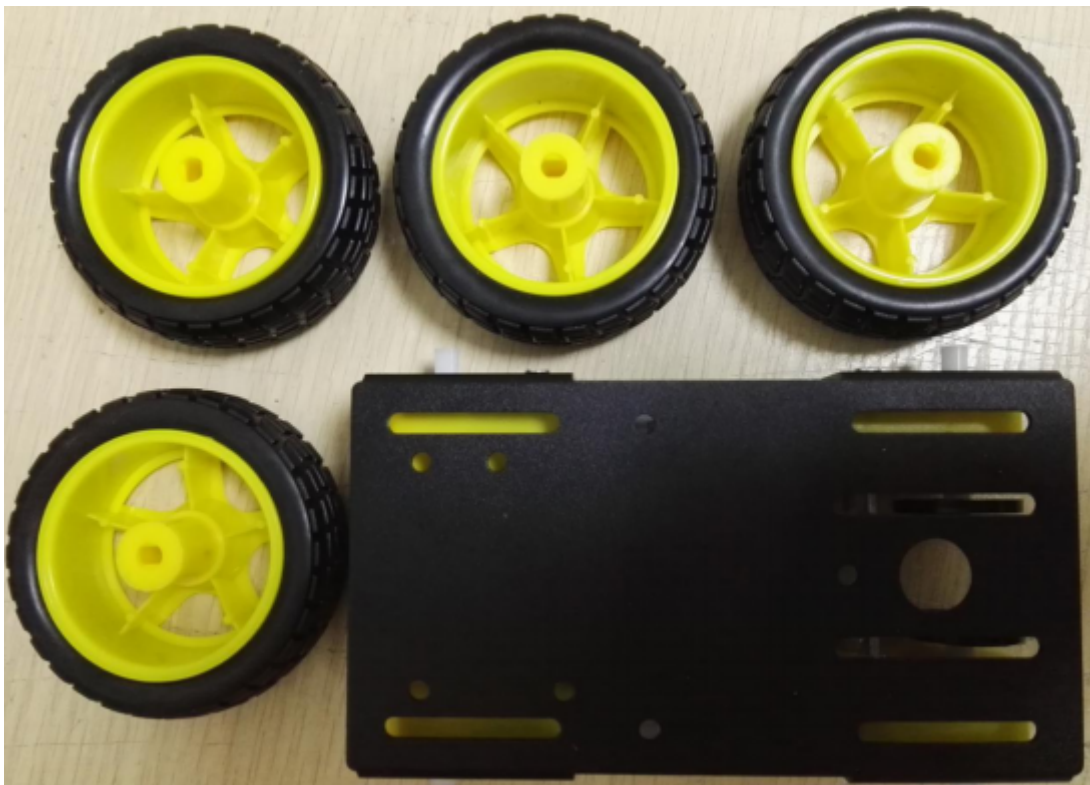





Installation process:



### 3. Real Product

---

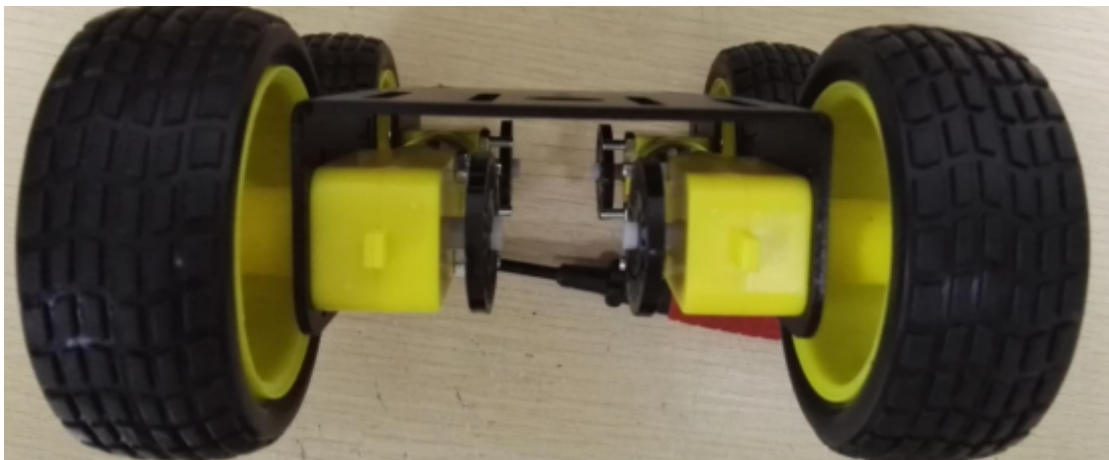

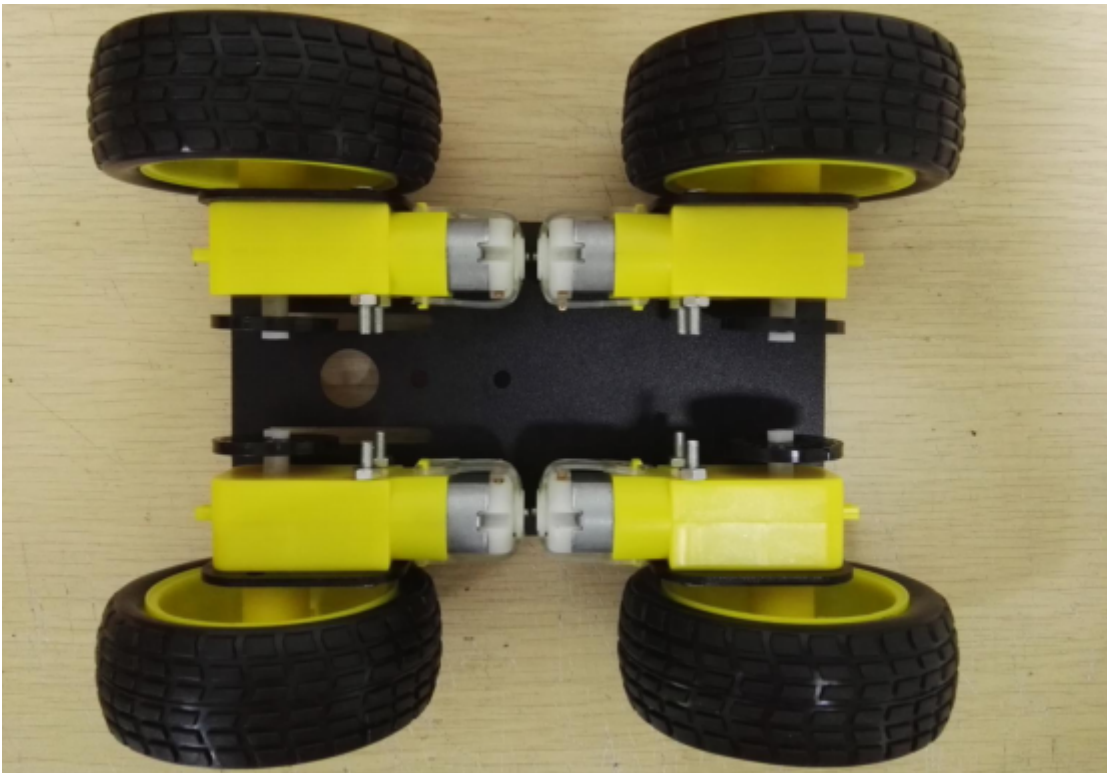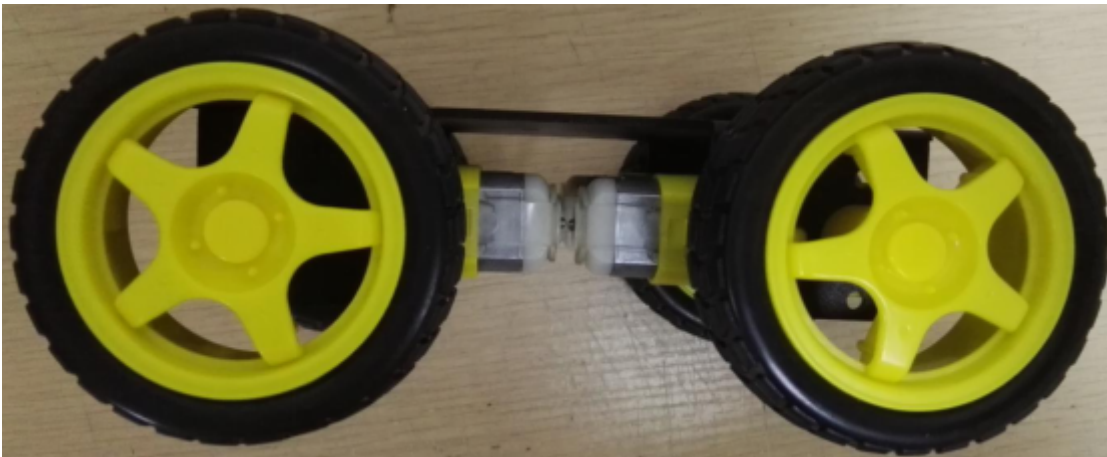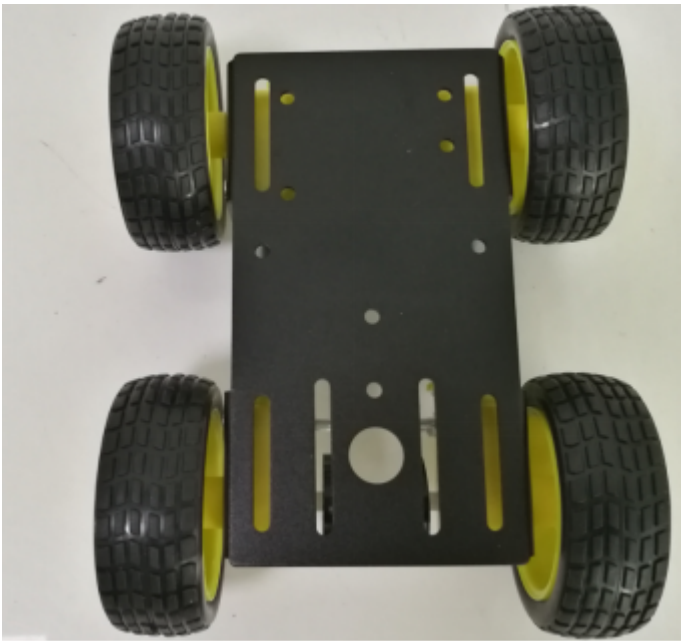

#### 4. Note:

- 1). When installing, 8 screws should be tightened.

2). If the wheel is easy to fall off, it can be considered in the middle viscose treatment.

## Contact Us

---

- E-mails: [yichone@doit.am](mailto:yichone@doit.am), [yichoneyi@163.com](mailto:yichoneyi@163.com)
- Skype: yichone
- WhatsApp:+86-18676662425
- Wechat: 18676662425