











MAKE A DIFFERENCE

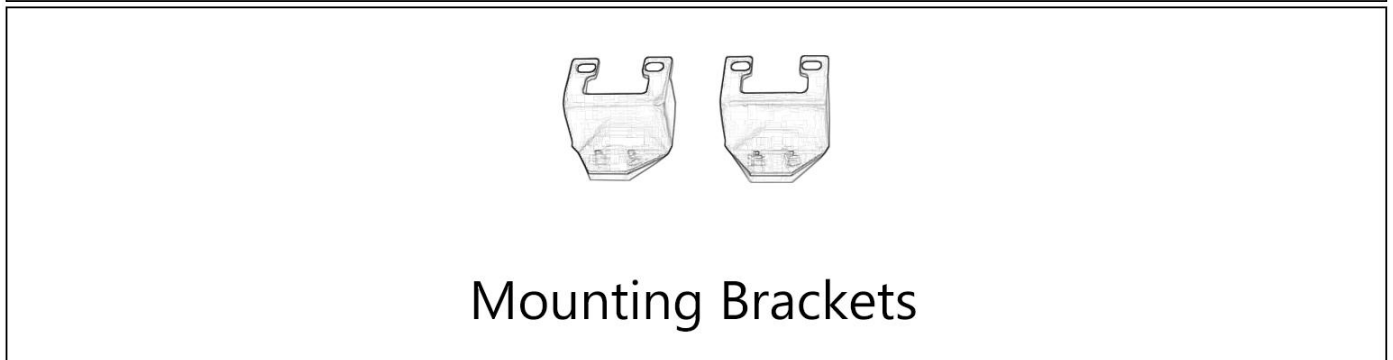Rear Trunk Spoiler Wing Top Tail Light Cover MMR.30036

(1) Contents:

Qty	Part Name	Size(mm)	Qty	Part Name	Size(mm)
1	Rear Trunk Spoiler Assembly		4	Flat Washer	M6*13*1
4	Button Head Socket Cap Bolts Screws	M6*12			



 X4 M6*12	 X4 Cable Ties
 X4 M6*13*1	
 X4 Wire Holder	
 X8 Wire Holder	 X1 Wire
 X8 Double Sided Mounting Tape	

(2) Tools required:

- a. 4mm Hex Bit Socket;
- b. Drive Socket Ratchet Wrench;

(3) Installation time:

About 1 hour, 1-2 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

To view the electronic version (MMR.30036), please scan the QR code.





(4) Installation instruction:

Step 1: Remove the factory bolts which is used to install the glass of the rear tailgate plate. Install the mounting brackets with the factory bolts.

Notes: When installing, please support the rear glass firmly to prevent the rear glass from falling and breaking



Step 2: Confirm the approximate installation position (Need to confirm whether the bracket can be assembled), tear off the 3M glue of the product, and stick the product on the vehicle.

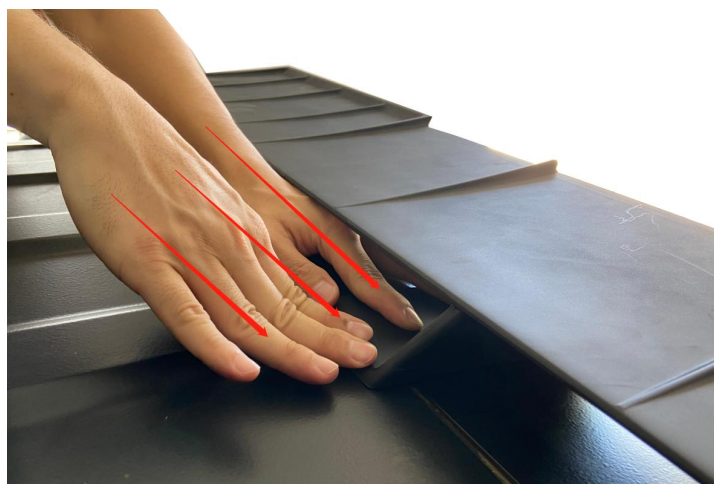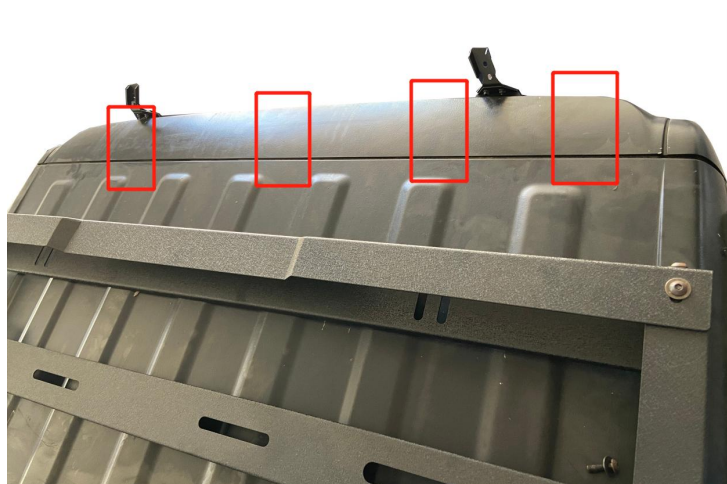

Step 3: Assemble the mounting brackets with the Button Head Socket Cap Bolts Screws (M6*12), Flat Washer (M6*13*1).




Step 4: Remove the rear lights and ready to connect the wire harness in the product.

Step 5: Secure the wiring harness to the body and extend to the taillights with the wire holder & the double sided mounting tape. (You can refer to the blue drawn line)



Step 6: Confirm the connection position of the product wiring harness. The yellow wire is brake light. The black wire is negative electrode. The red wire is daytime running light.

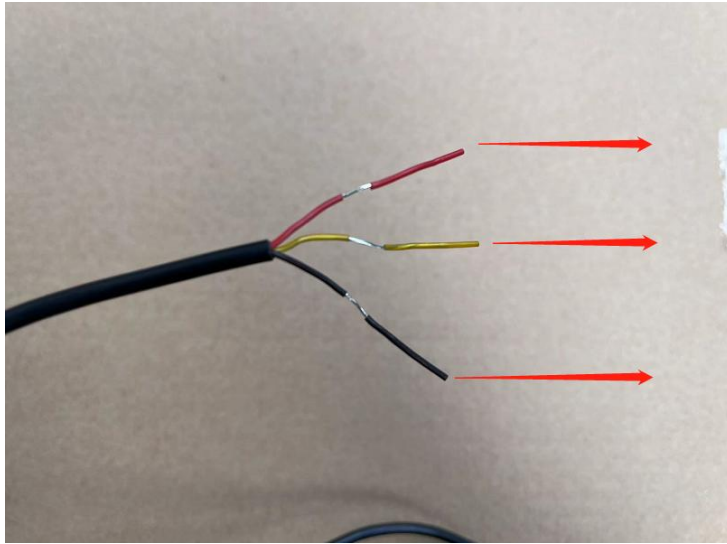


- daytime running light
- brake light
- negative electrode

Step 7: Connect the wire harness to the vehicle. The red wire is connected to the daytime running light. The yellow wire is connected to the brake light. The black wire is connected to the bolts or vehicle body where is no paint.



Daytime Running Light Installation

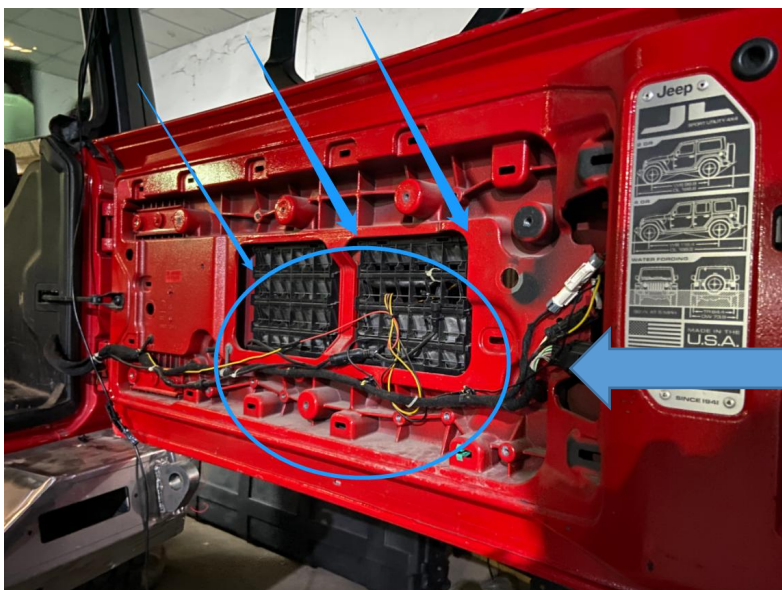

Brake Light Installation

Step 8:

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



Attention:

1.The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

2.Please feel free to contact your distributor if you have any kind of question about your purchase.

Google Hooke Road to find your parts



@HookeRoad4x4

Post Your Jeep/Truck
w/Hashtag #hookeroad to Win Discount Every Week