

FORD BRONCO NO DRILL VERSION MUD FLAPS INSTALLATION MANUAL

FRONT WHEEL MUD FLAPS INSTALLATION:



1.Prepare front wheel mud flaps and all the elements.



2.Detach the factory wheel fender flares.




3. And then will need to install the mud flaps at this place showed in picture.




4.Detach the factory snaps from these 3 places.



5.Can use Phillips screwdriver.

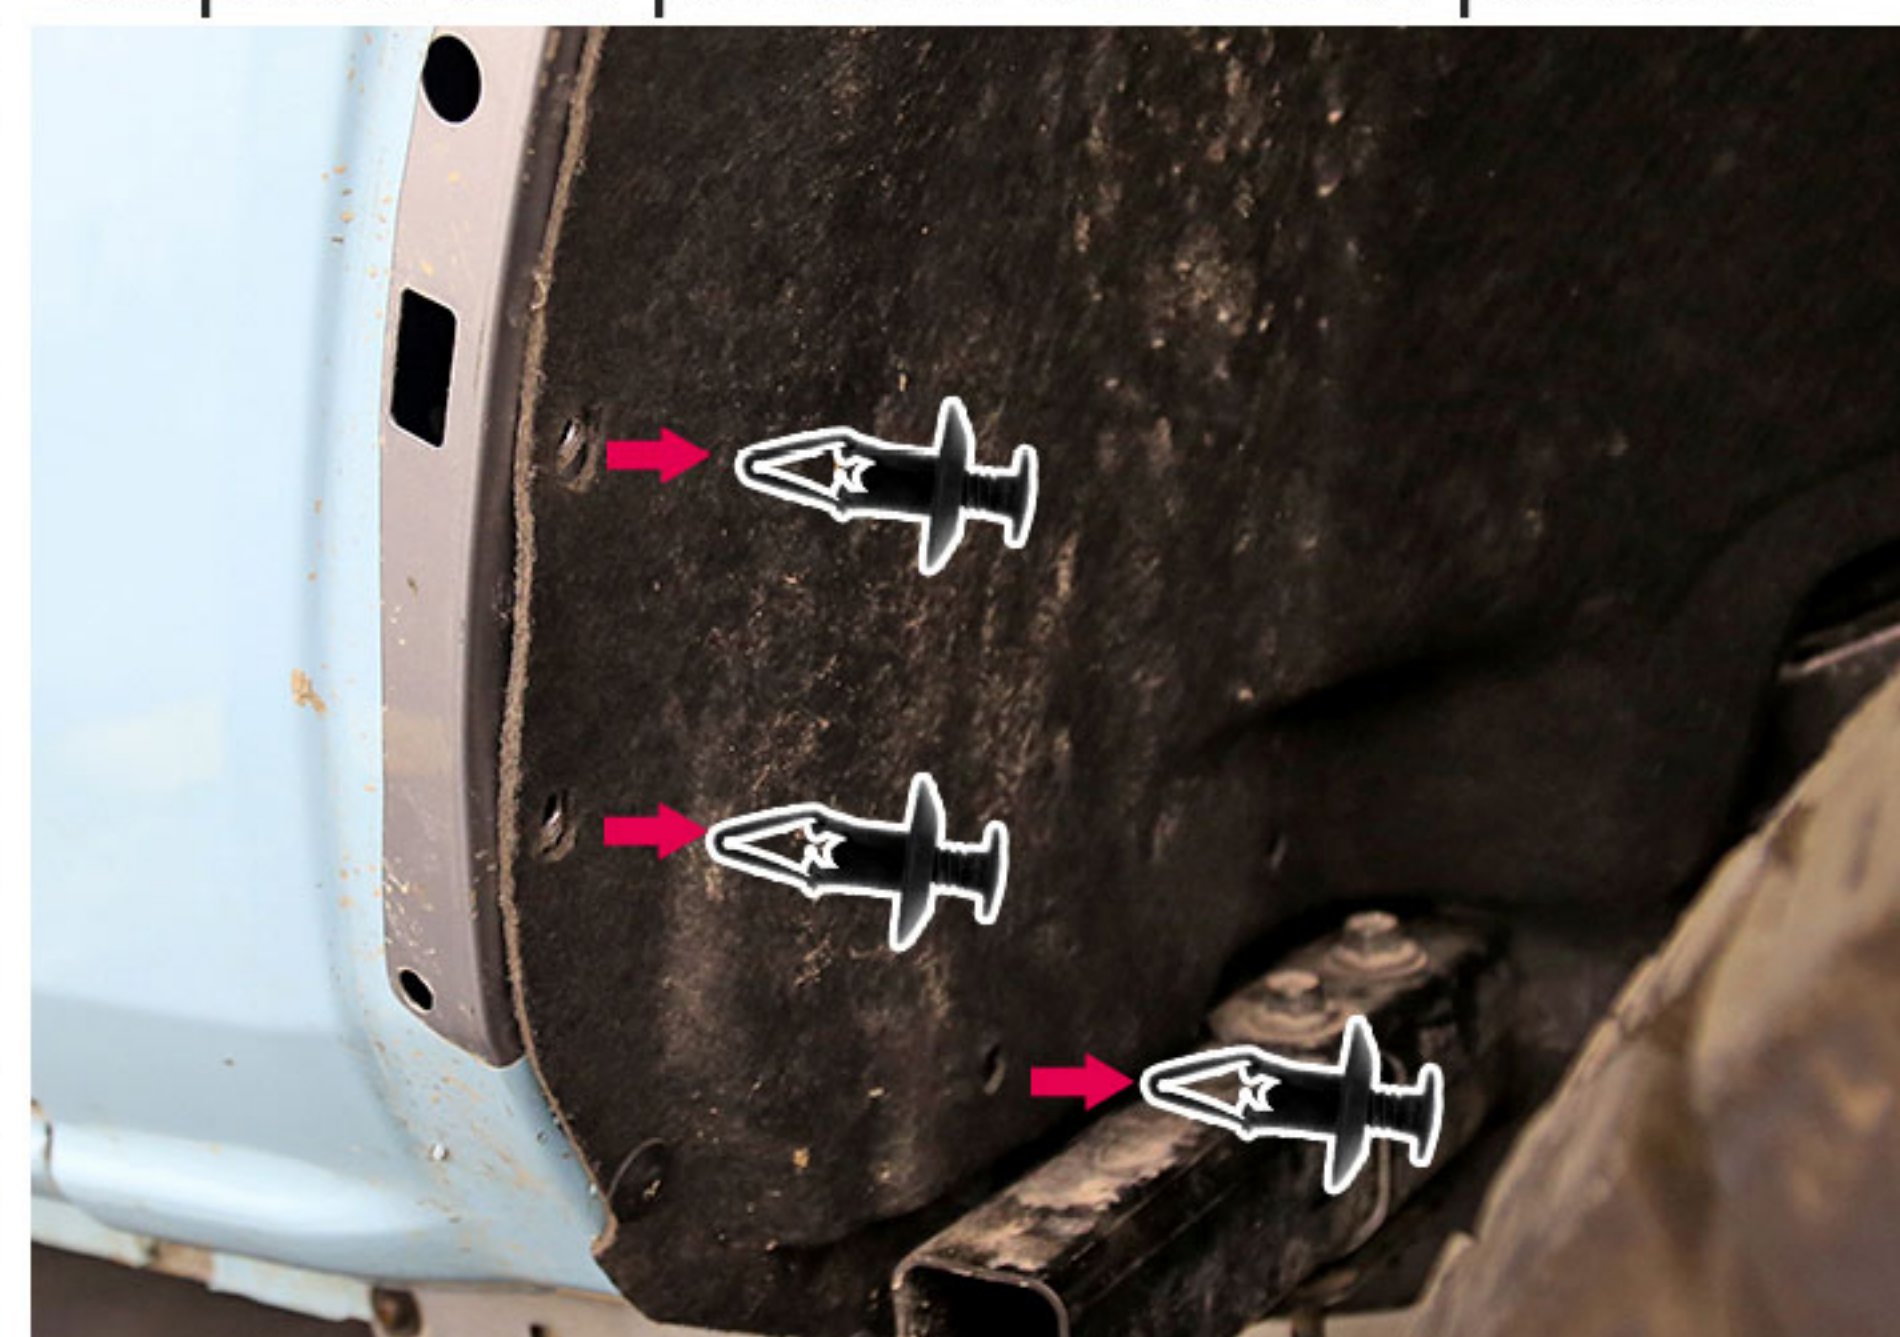

6.Like the picture showed

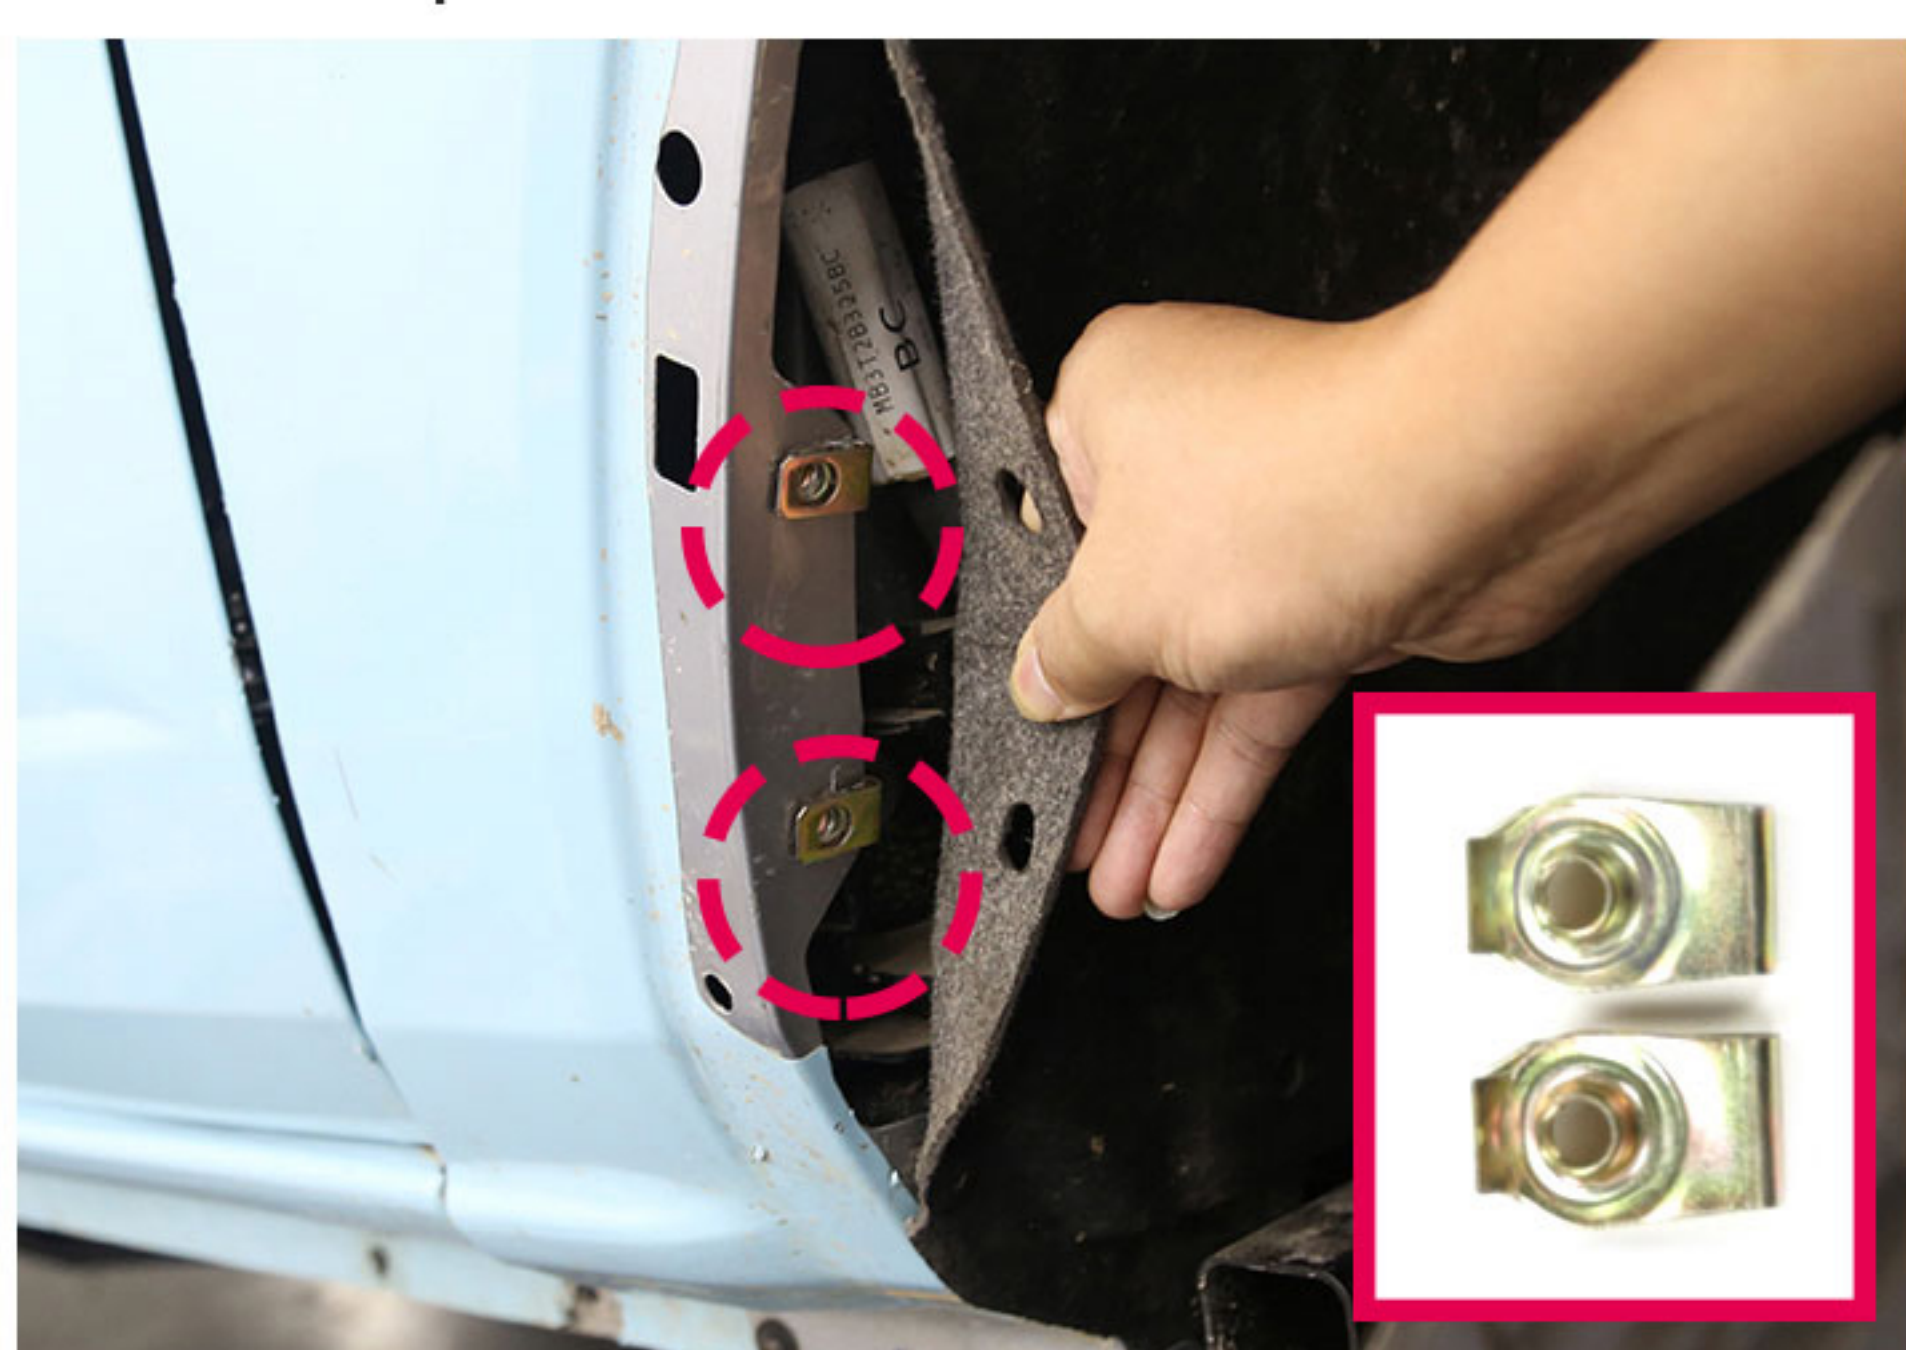

7.And then install the snap nut.



8. After the snap nut is installed, it can be screwed in normally after testing, and then remove the screw.



9.Install the mount as above and check the marks on the back.




10.Screw the screws. NB: can't let snap nut move when installing.




11.Fasten the screws tightly.



12..Install the upper fender and the original vehicle clip. If the original car clip is damaged, please use the same clip in the accessory.

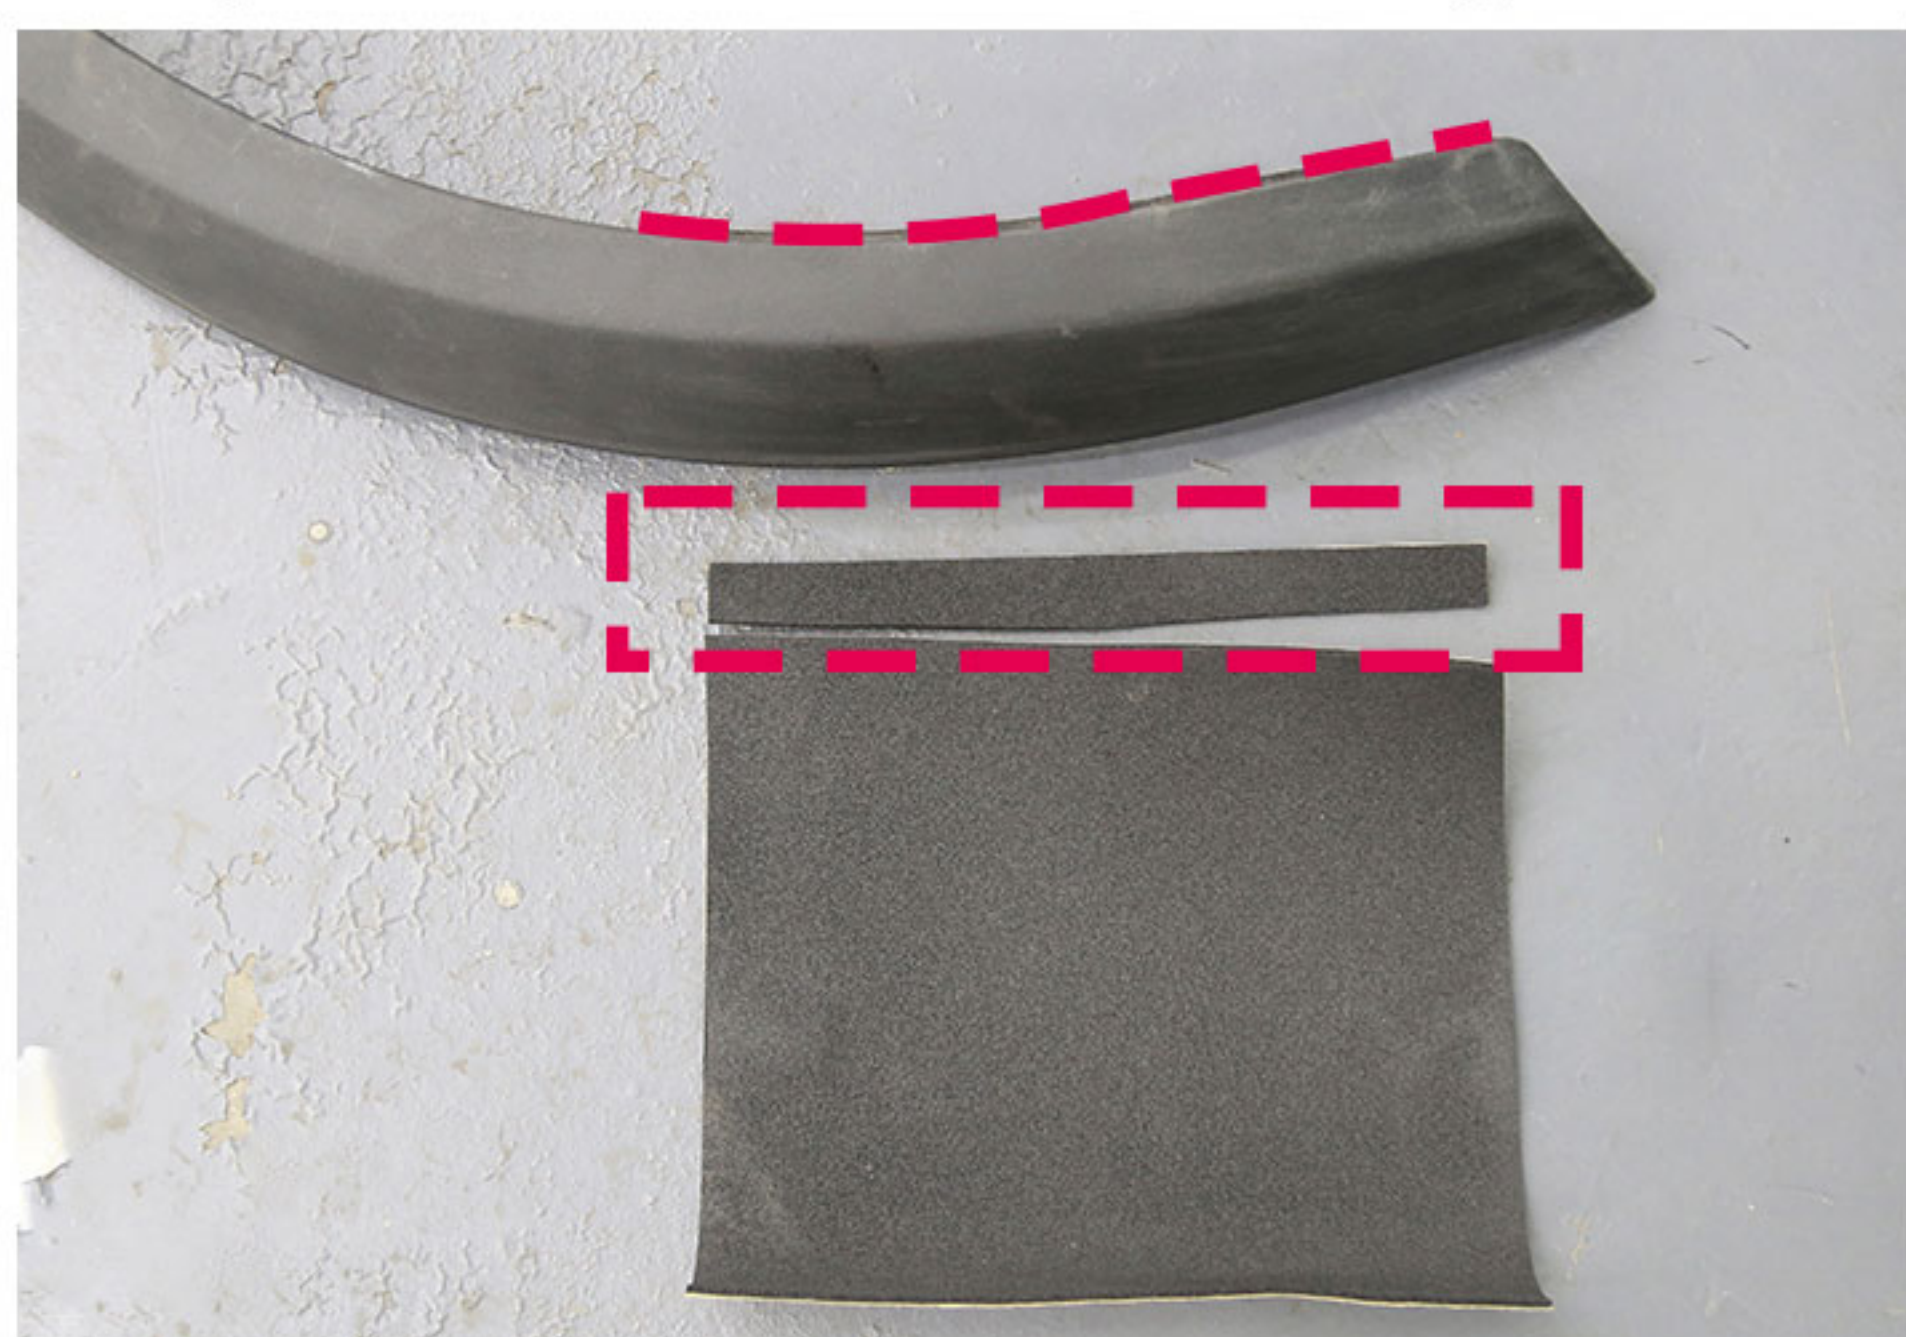

13.Cut a piece of anti shock cotton as shown.

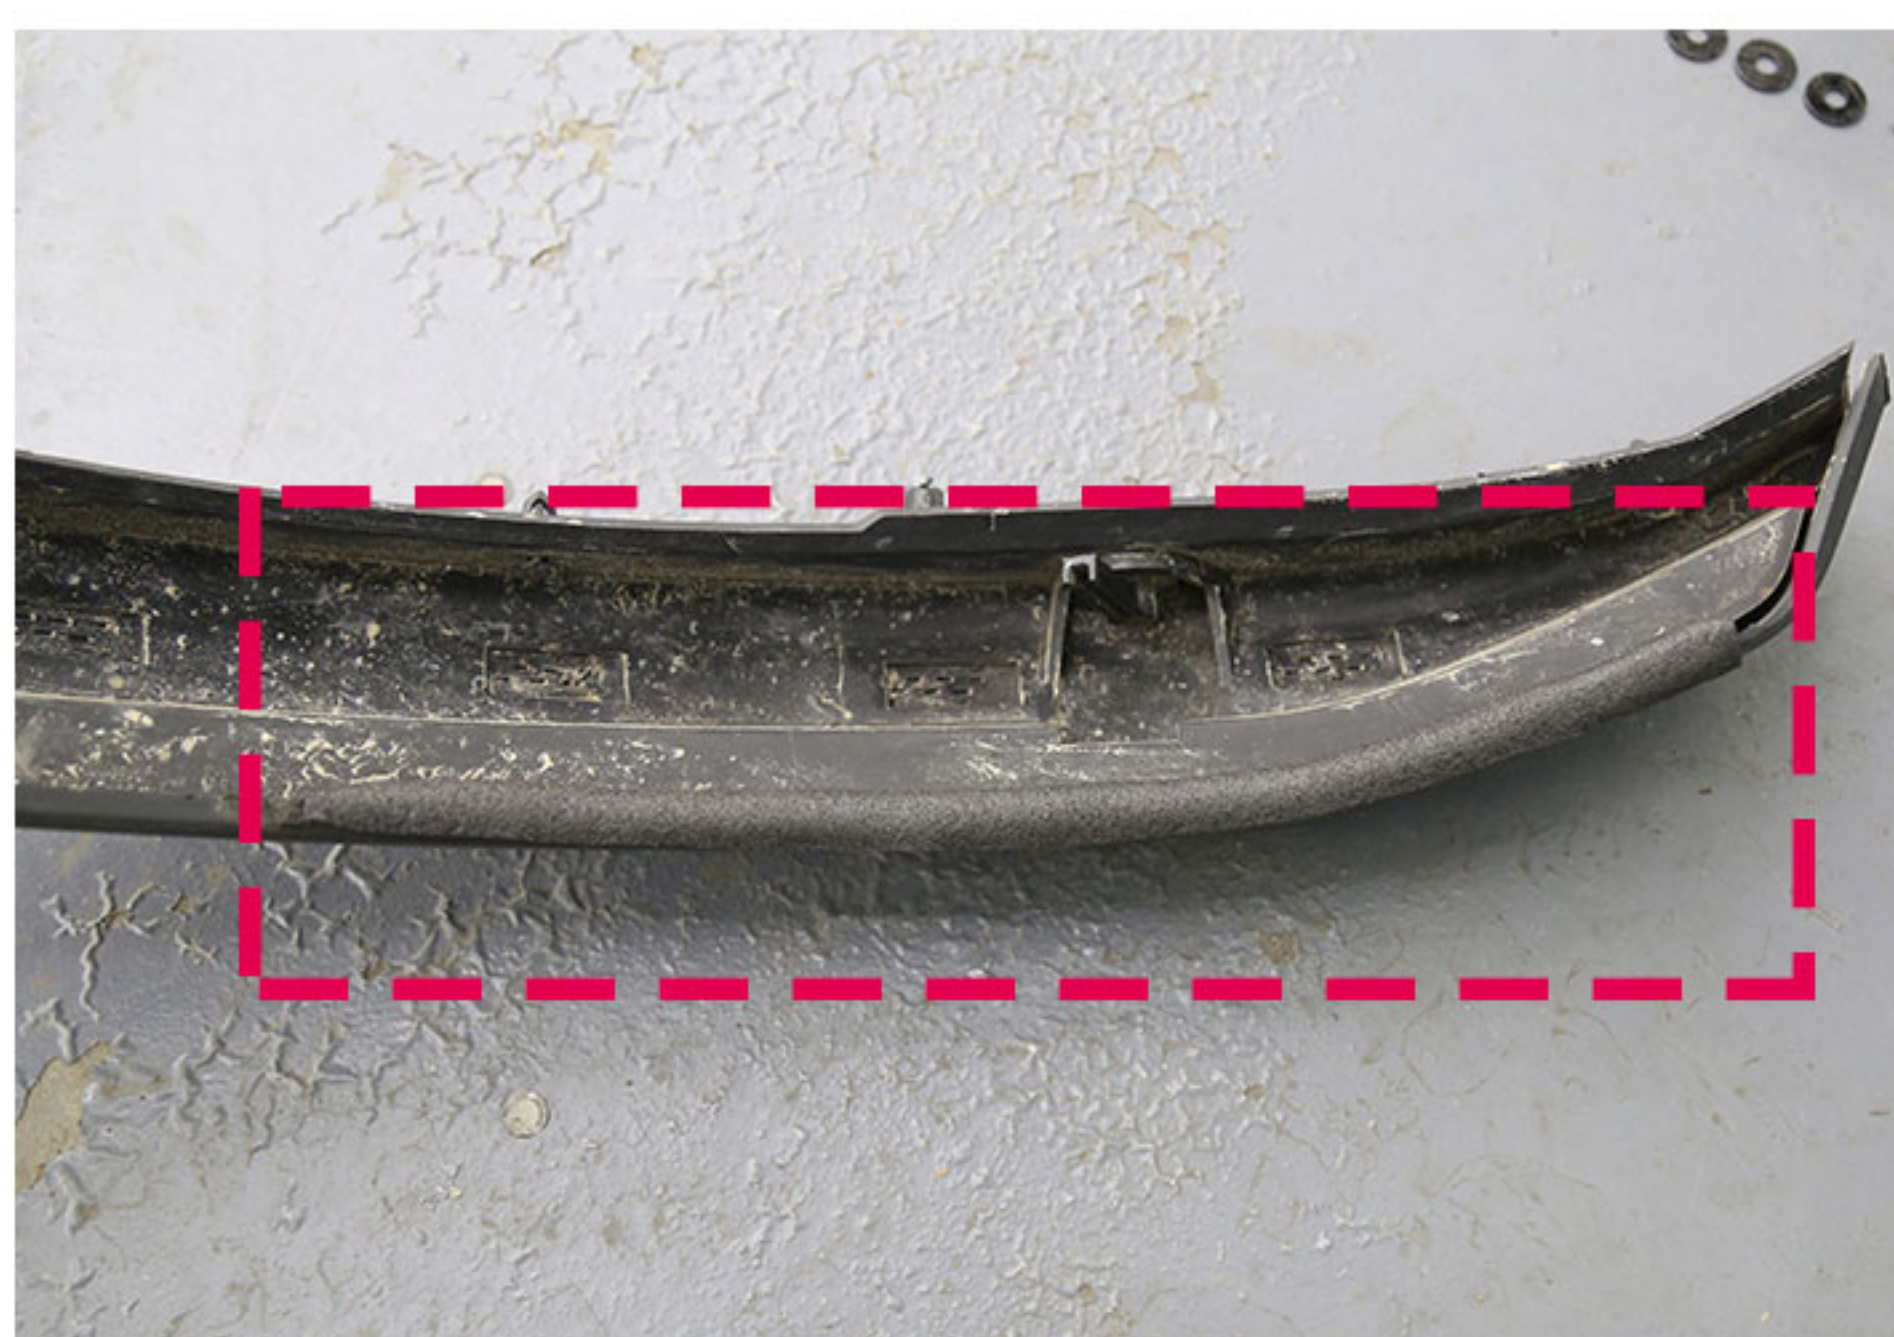


14.Put it between wheel fender flares and the mud flaps.



15.Install the wheel fender flares. Finished.

FORD BRONCO NO DRILL VERSION MUD FLAPS INSTALLATION MANUAL

REAR WHEEL MUD FLAPS INSTALLATION:

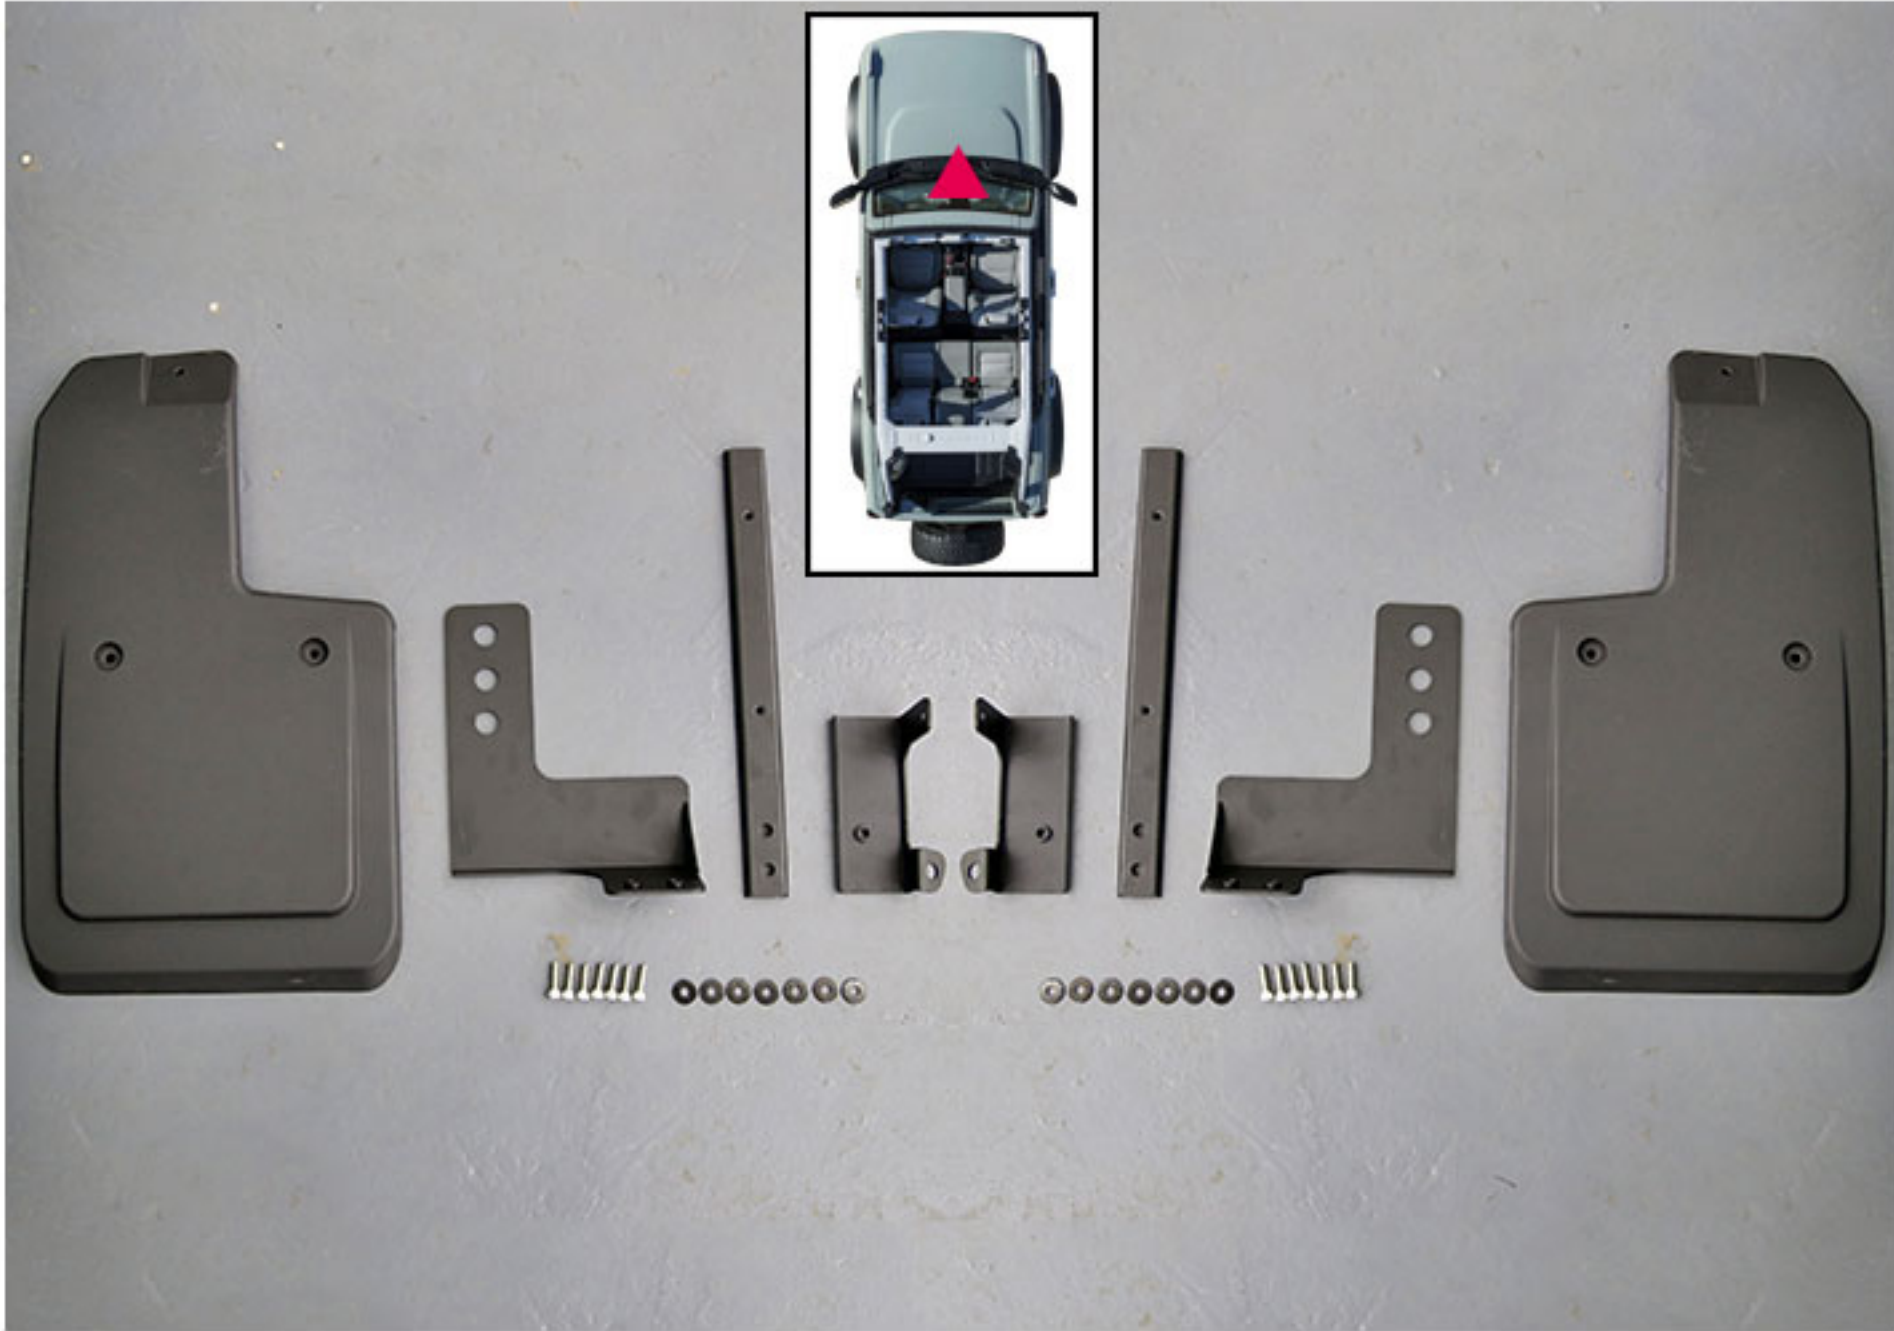

1.Prepare rear wheel mud flaps and all the elements.




2.Detach the factory wheel fender flares.




3.And then will need to install the mud flaps at this place showed in picture.




4.Detach the factory snaps from the place in circle.

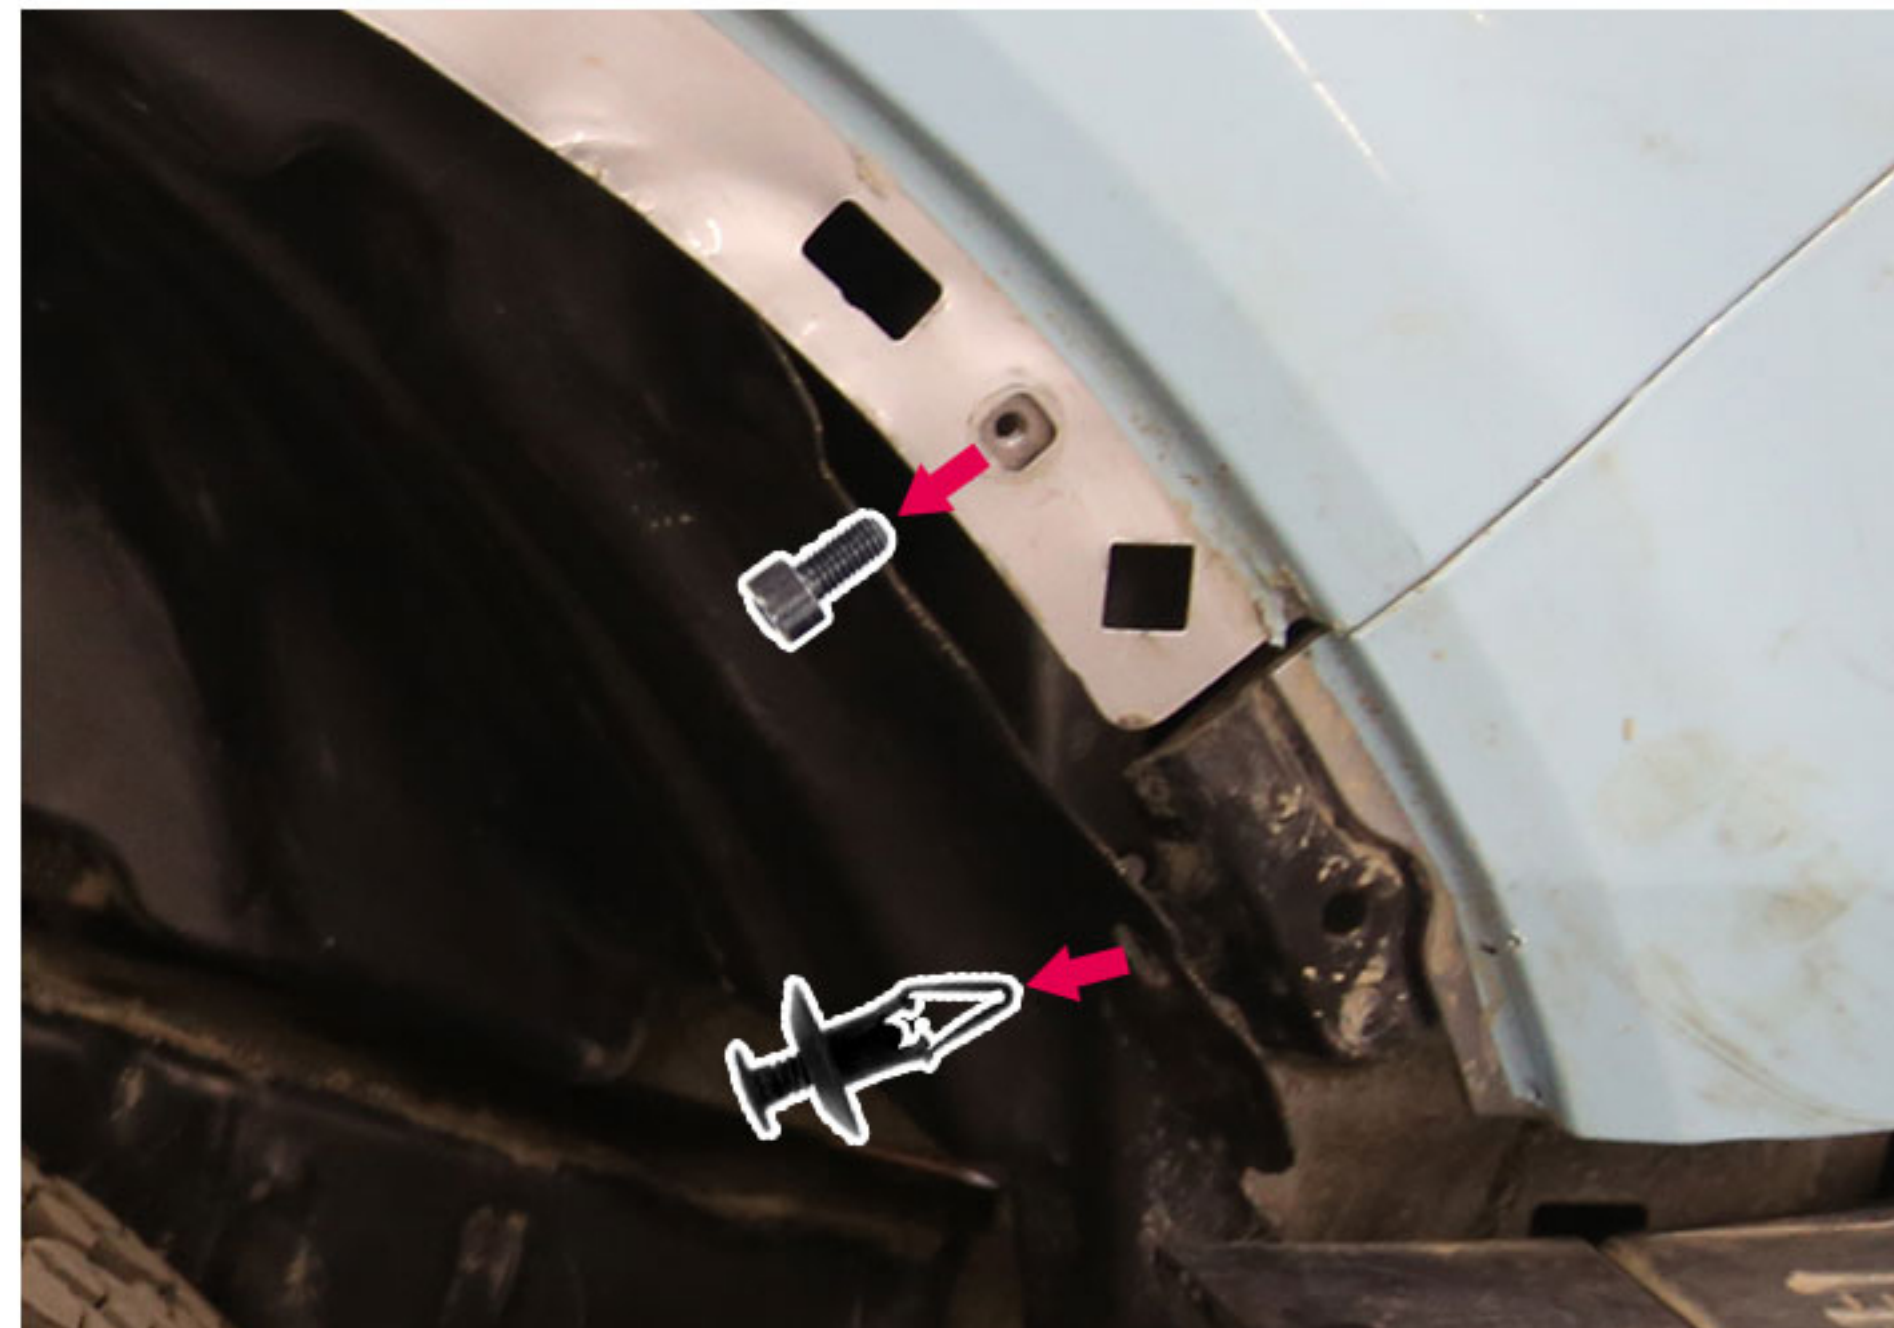

5.Detach one factory screw and snap.

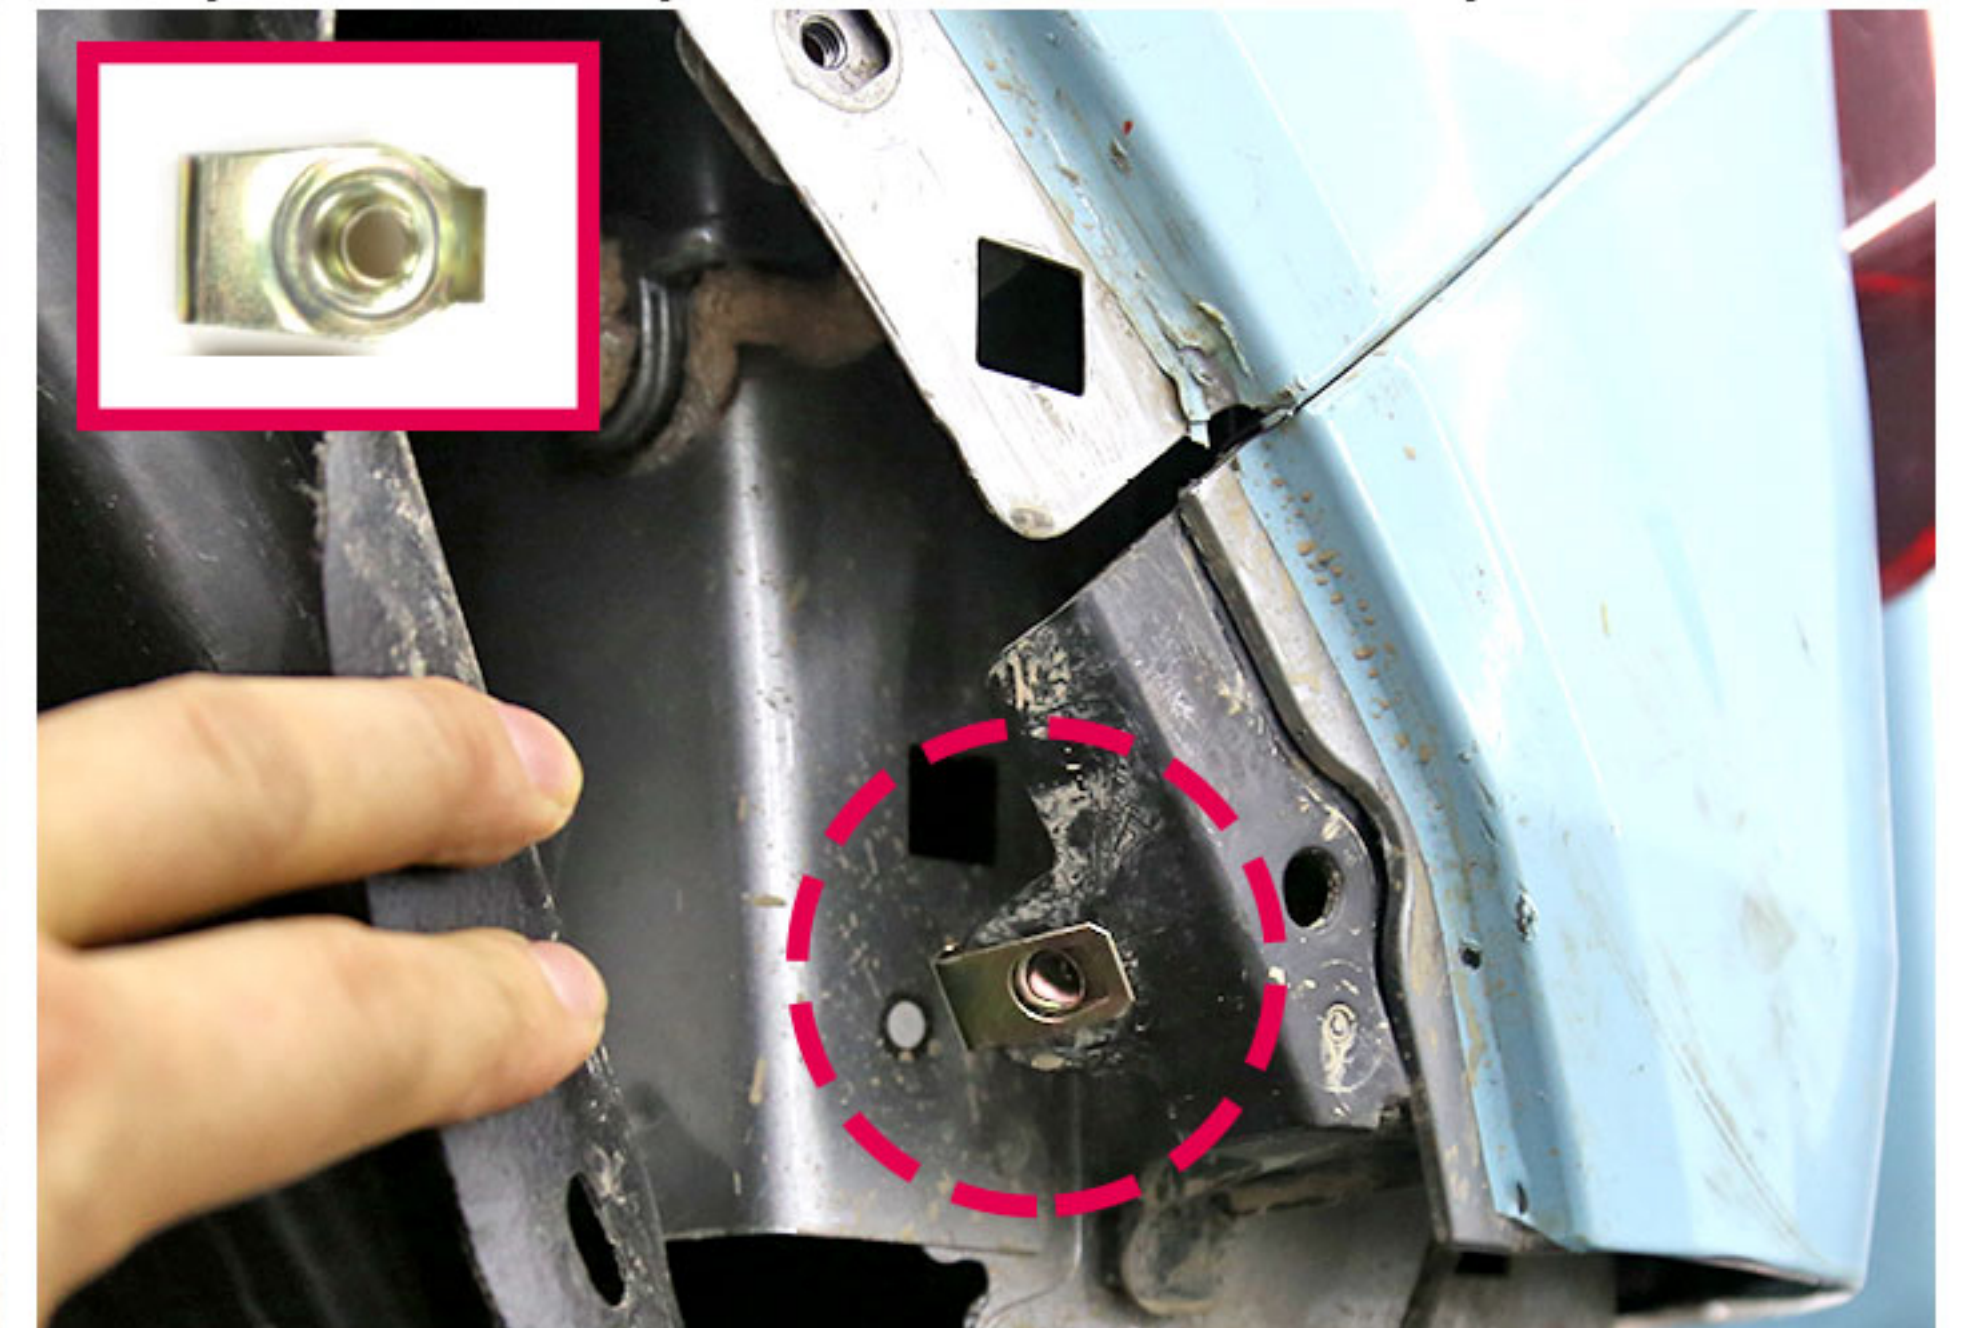


6.Install snap nut, and test if the screw can be screwed in normally. Then take the screw off again.

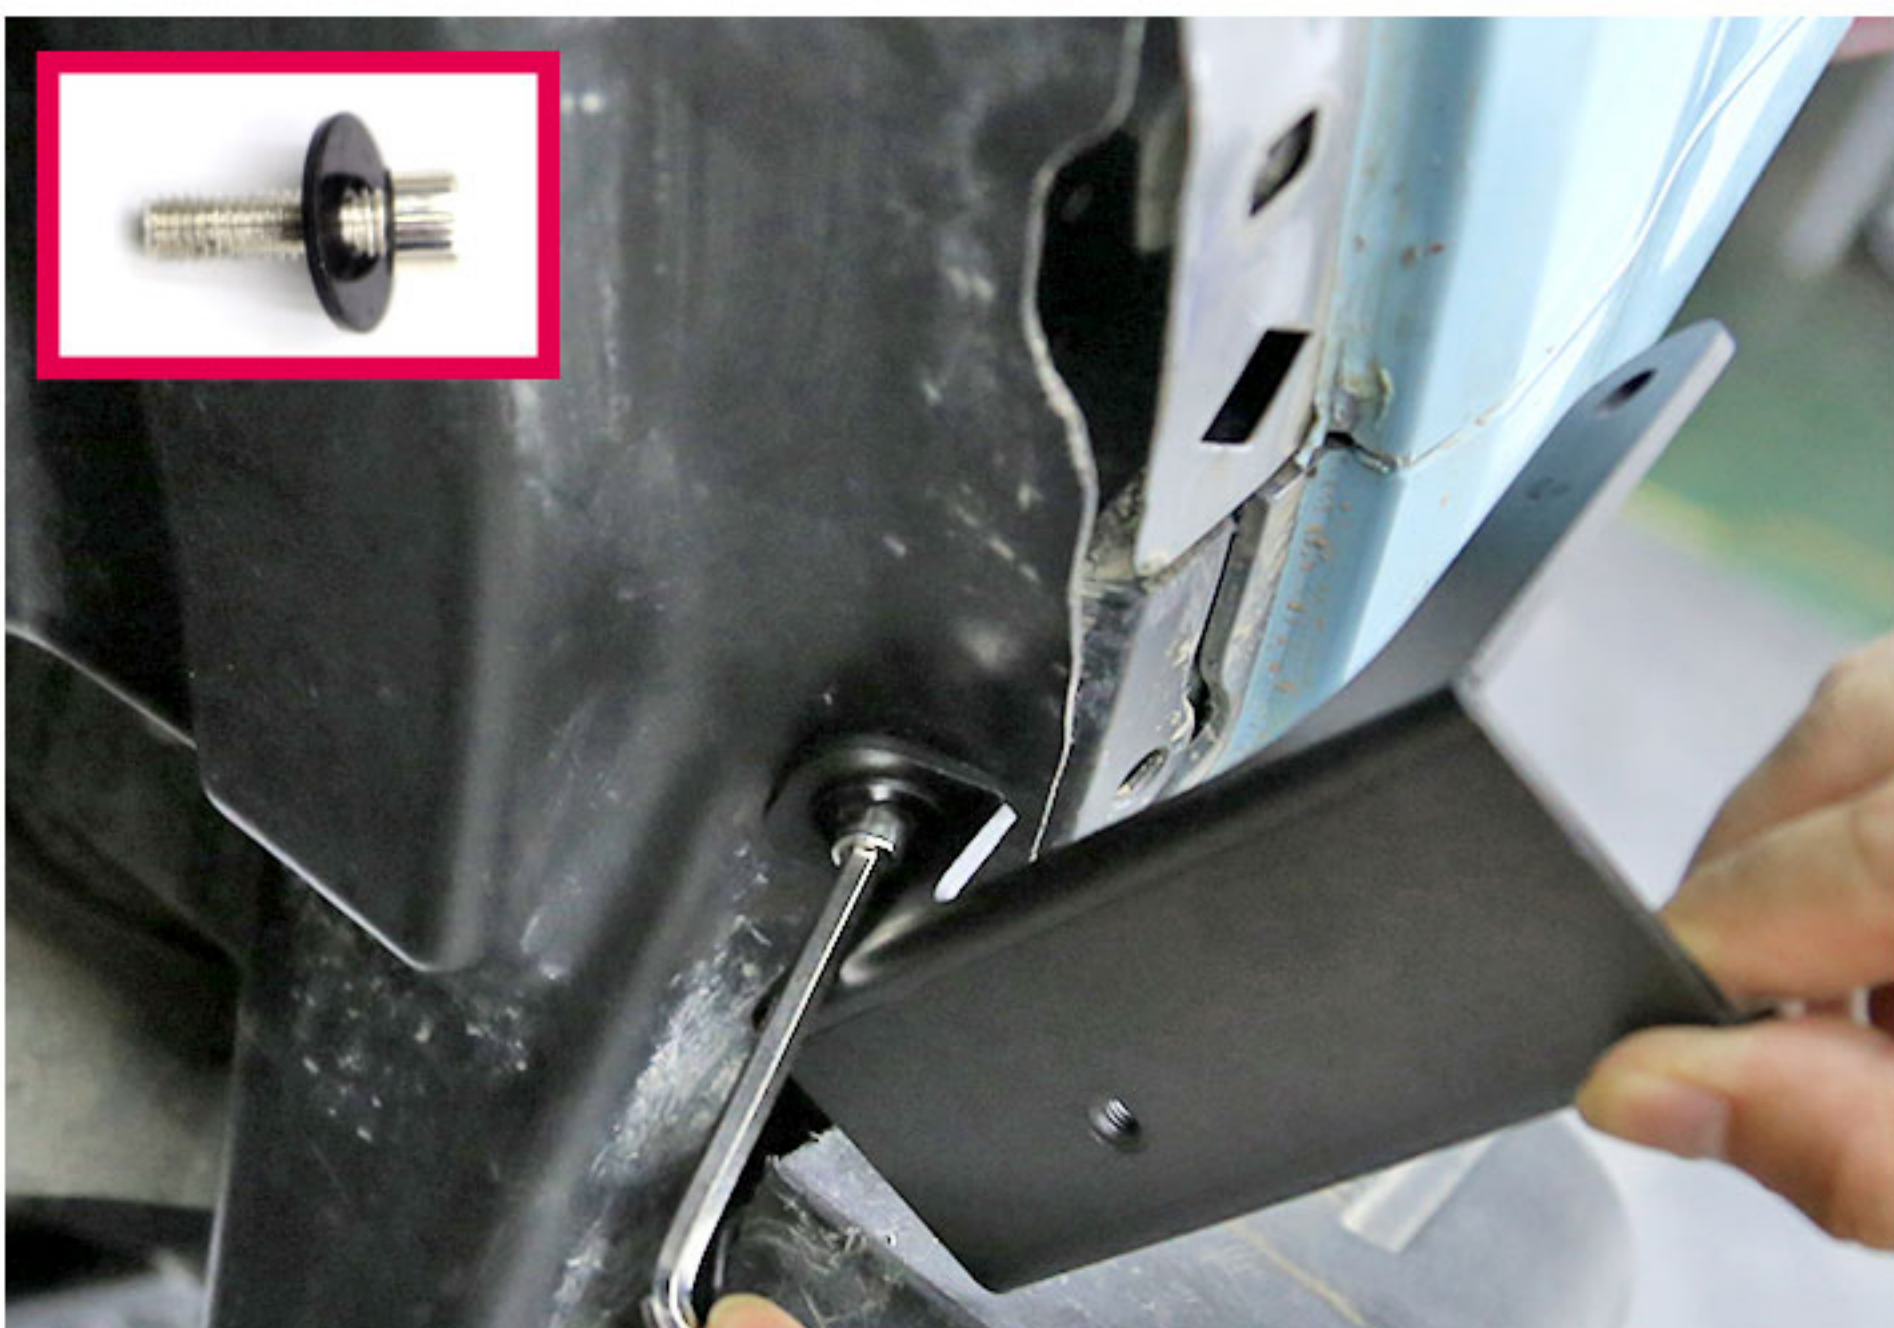


7. Install the mount as shown. Check the marks on the back. Please be patient when using the tools.




8.Put the other side of the mount in between the wheel and factory nut, and install.

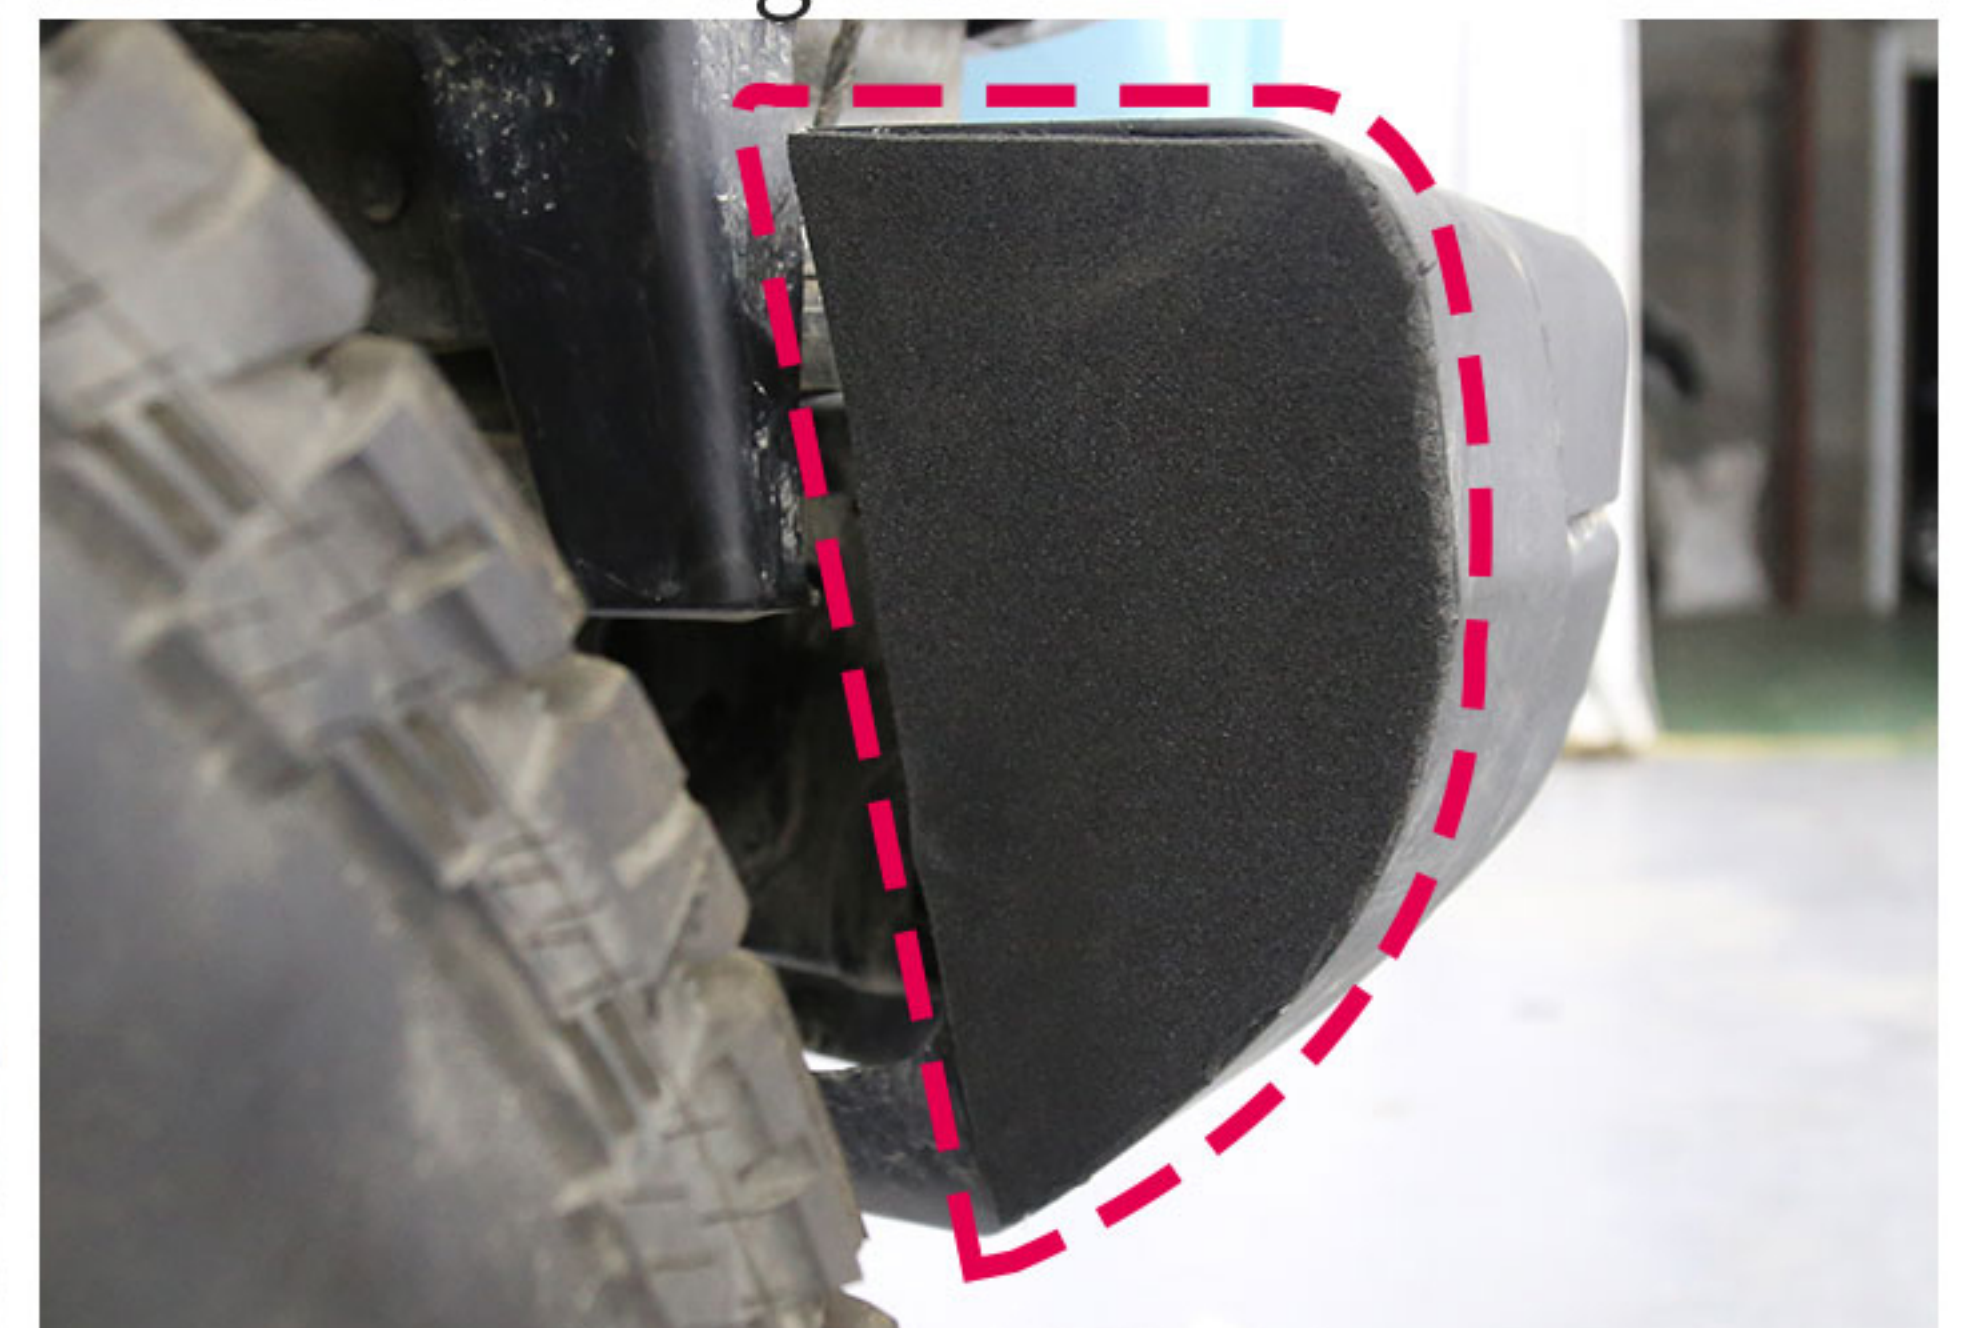


9.Put the anti shock cotton on the rear bumper. And cut it into a correct shape.

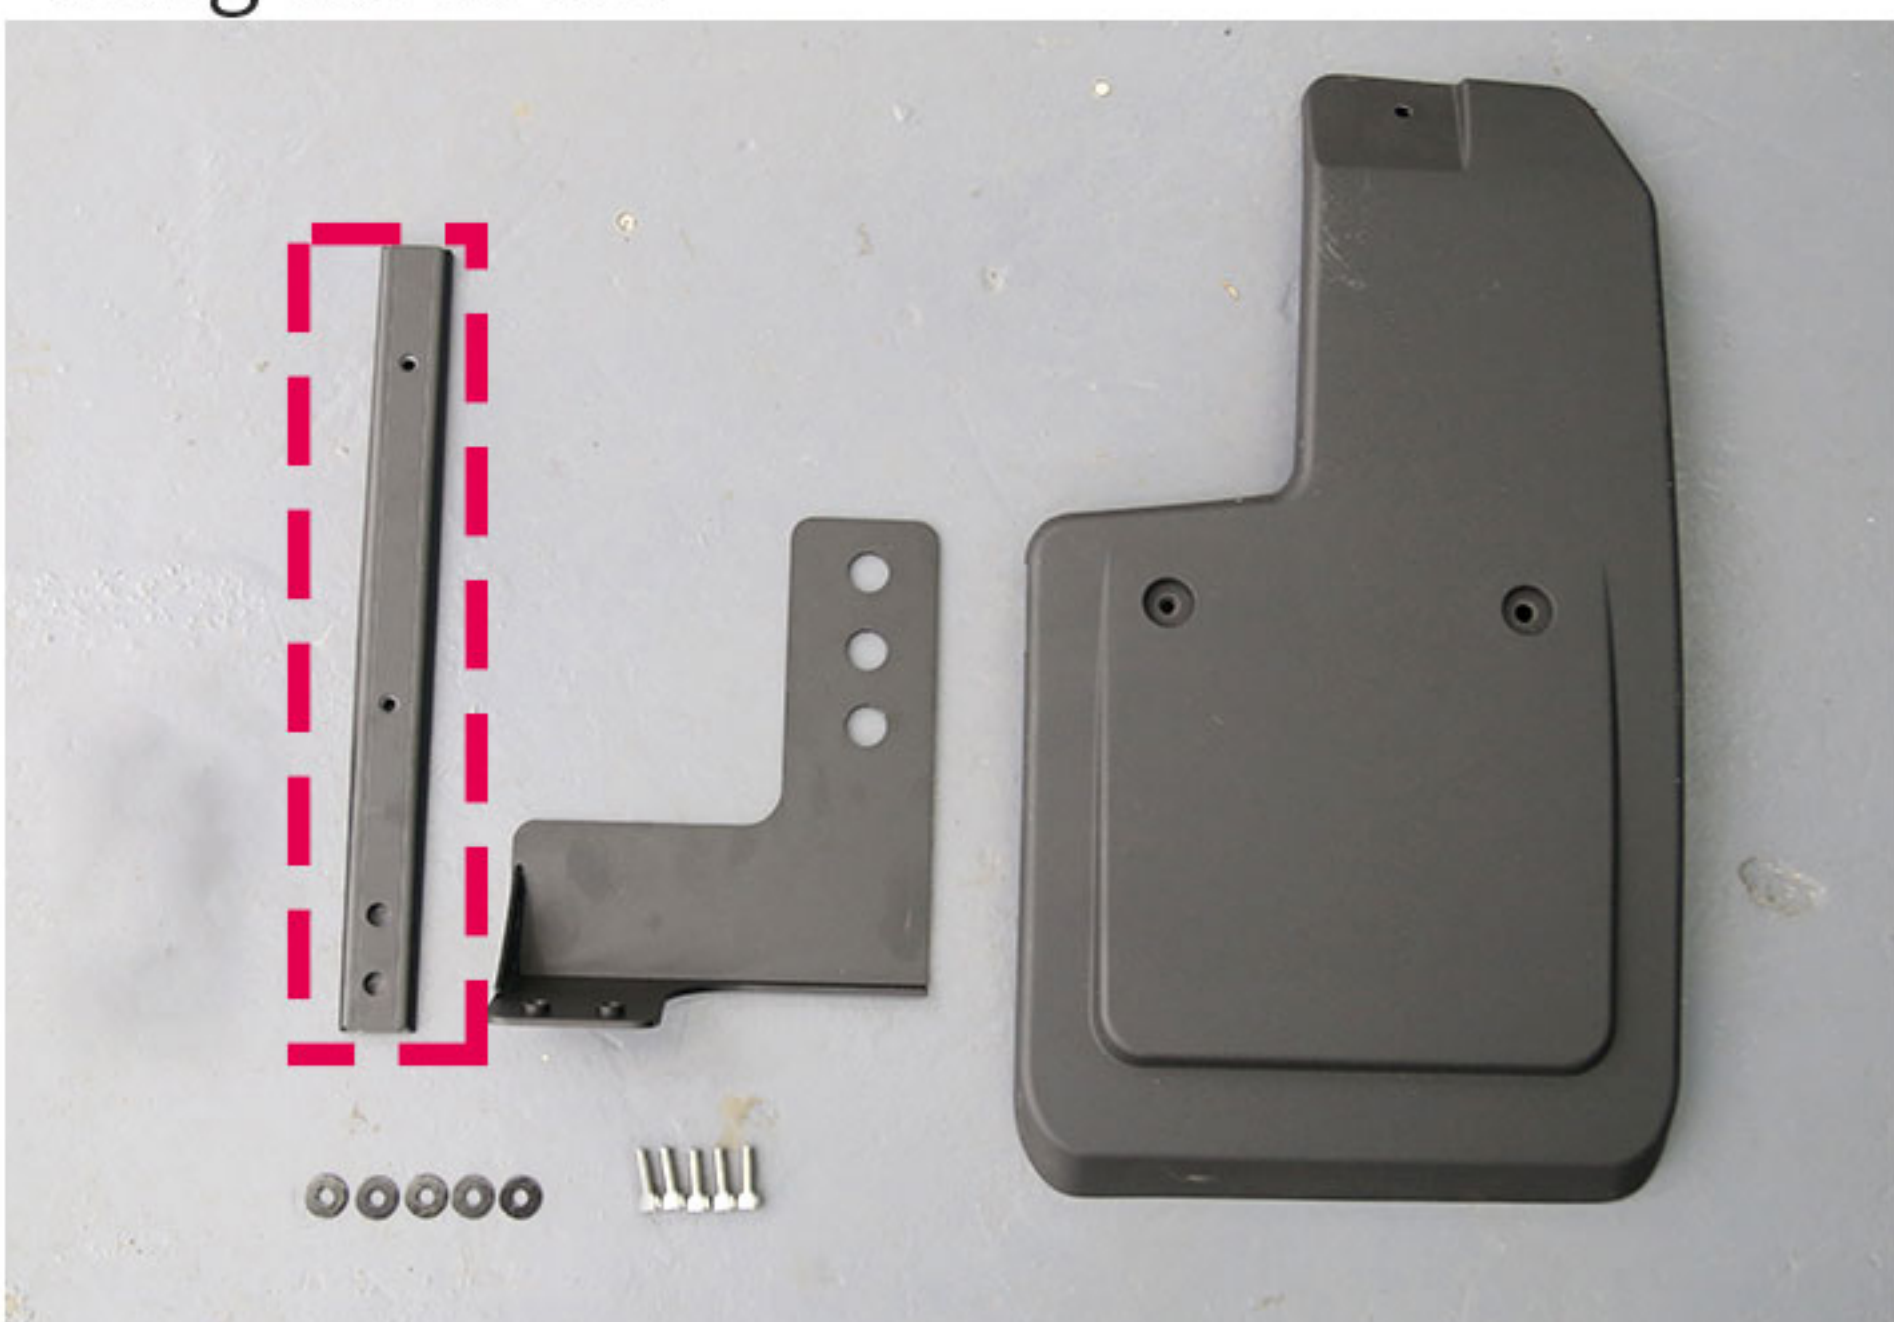

10.Combine the mud flaps with other elements.

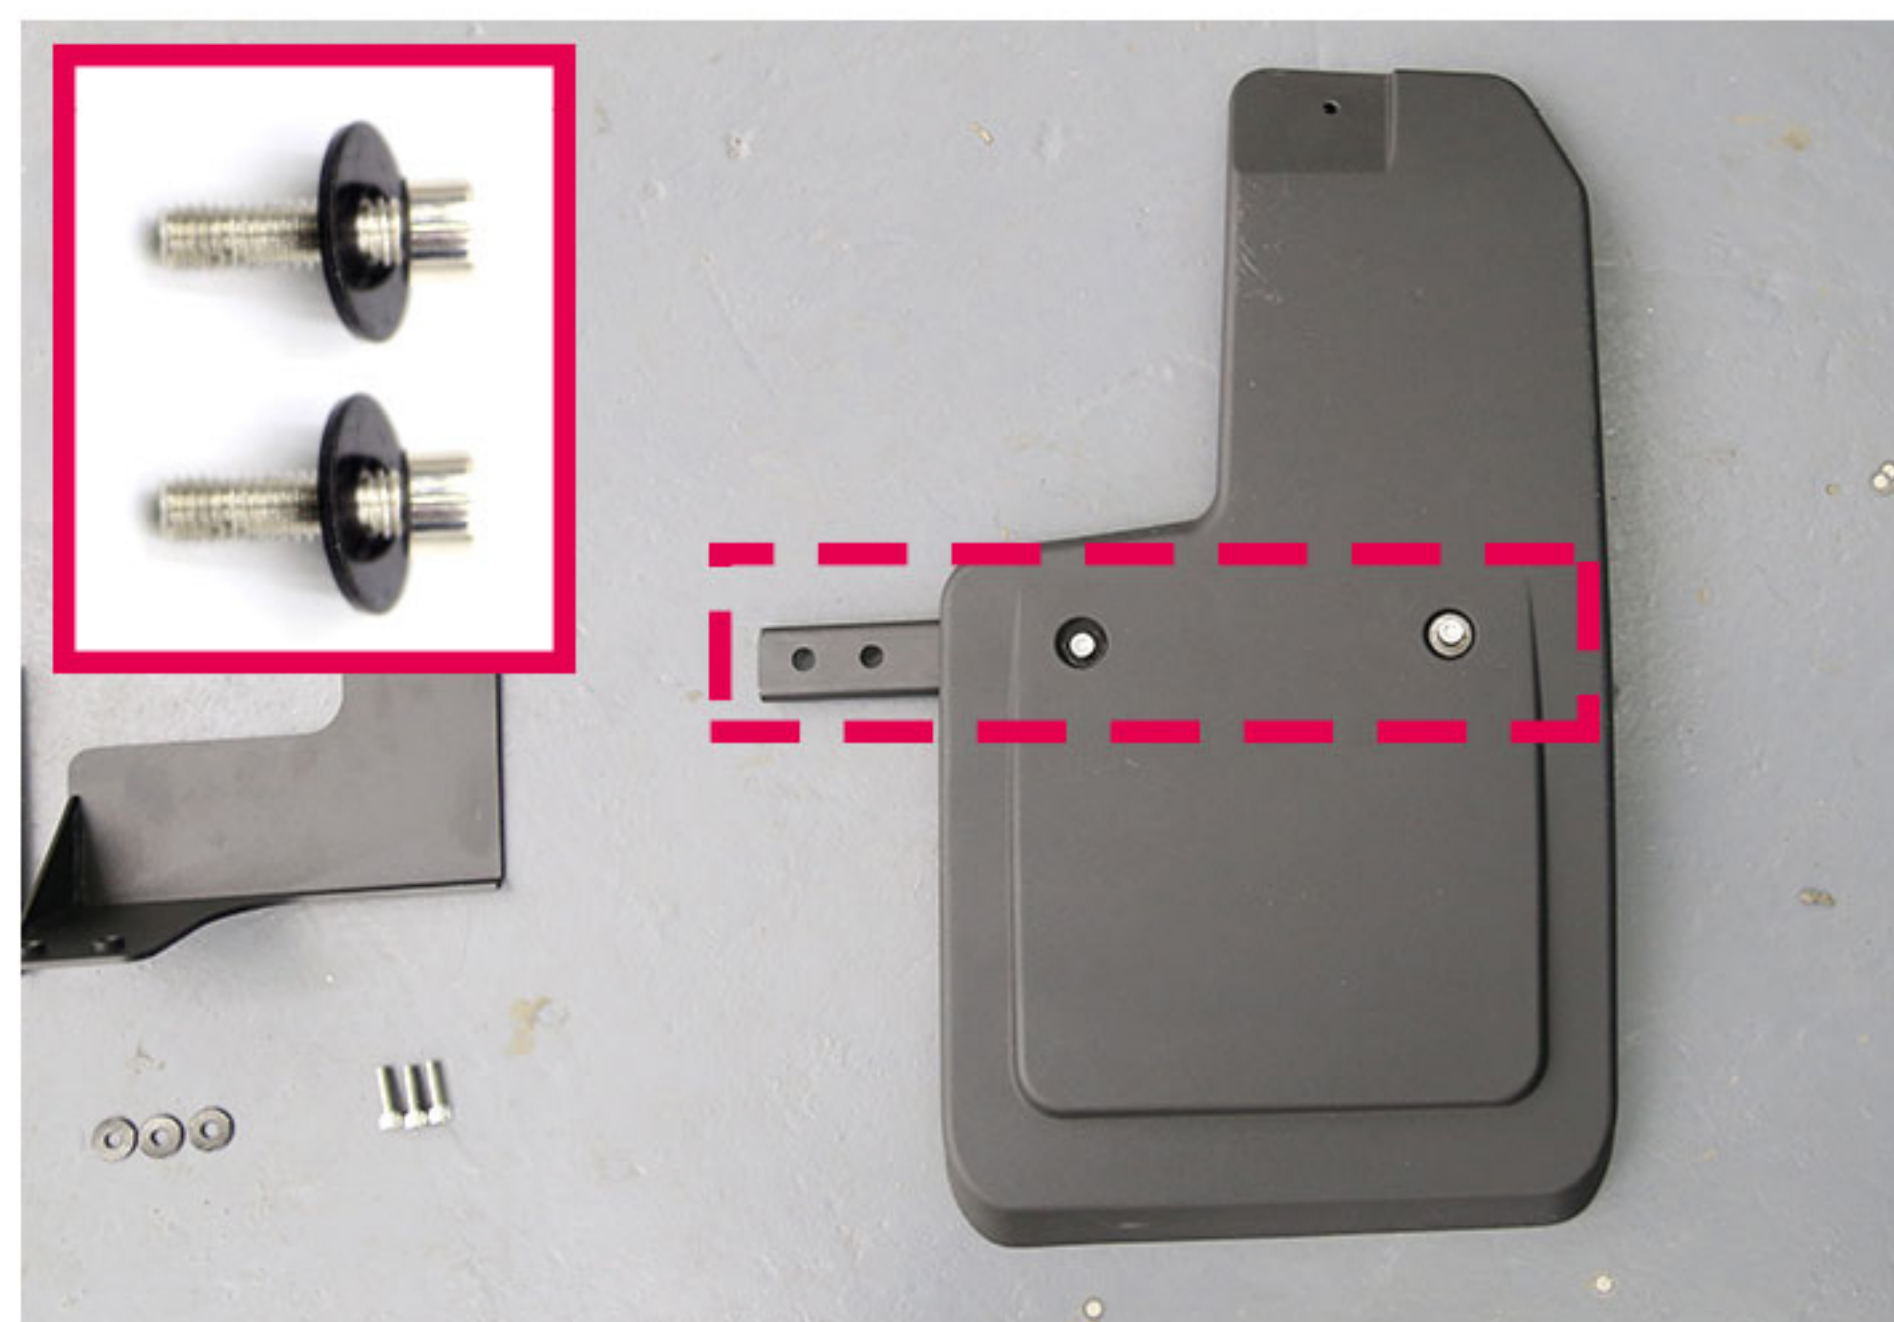

11.The long bar need to be under the mud flaps as shown.

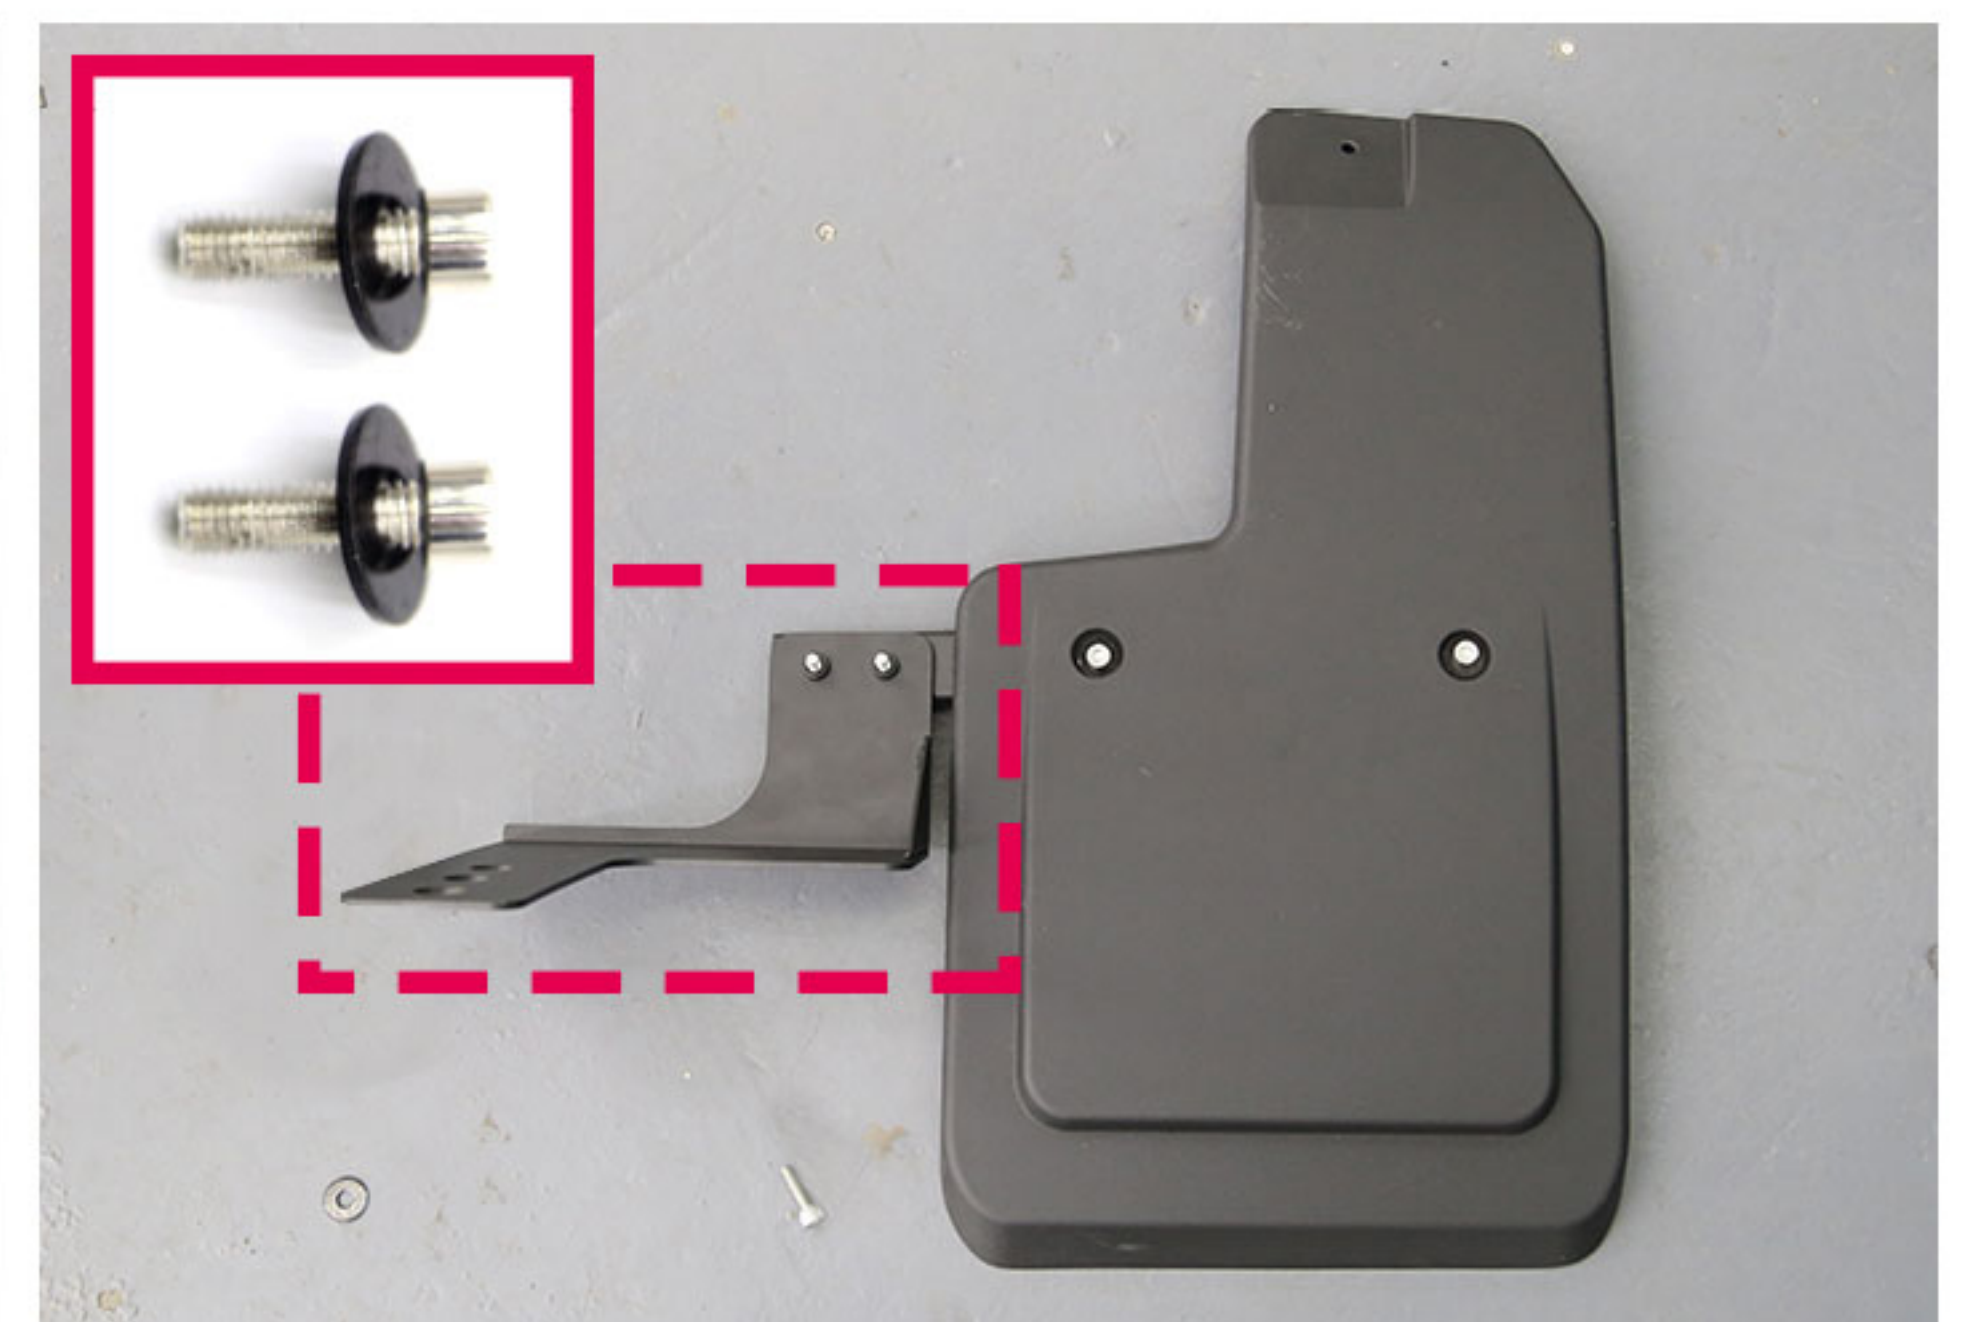


12. L shape mount need to be installed on the long bar as shown.



13.Detach the factory hitch tow screws.



14.Install the other elements above the hitch tow by the original car holes.

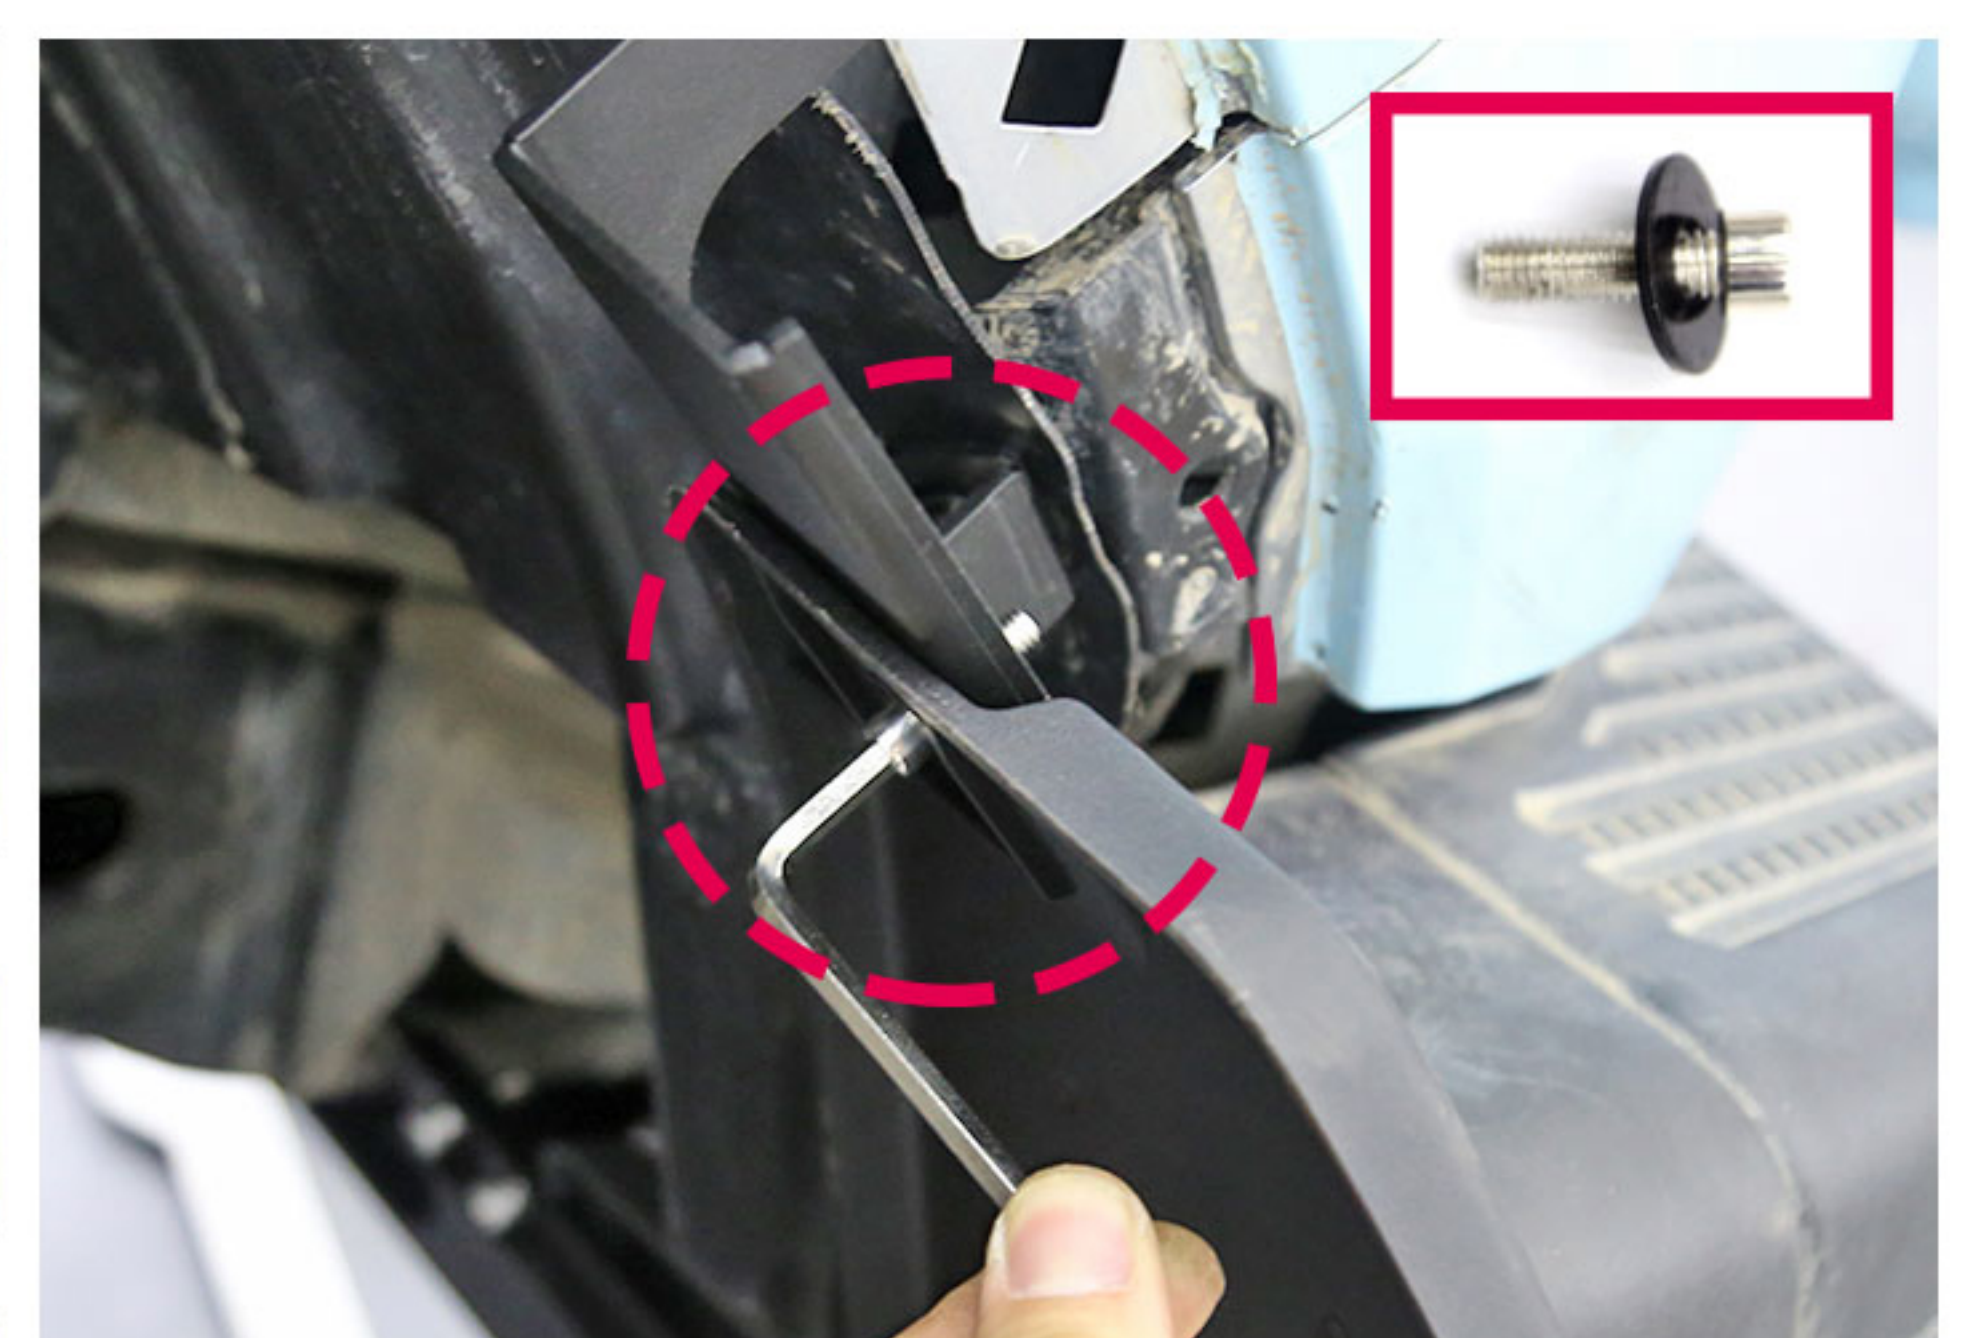

15.Install the screws on the top as shown, and then install the wheel fender flares. Finish.