






OC017 Assembly Instructions

Need Assistance?


If you encounter any issues, please contact us at help@capot.team for support. We're here to help!

Base Hub	Base Legs	Castors	Gas Lift
(A) 	(C) 	(D) 	(E) 
(B)  X10	X5	X5	
Seat	Mechanism	Back Support	Back
(F) 	(G) 	(H) 	(I) 
Armrests	Headrest	Parts Pack	
L  R 	(M) 	(J)  x2 (K)  x2 (L)  x2 (N)  (O)  (P)  x2	
Screws Pack			


Step 1

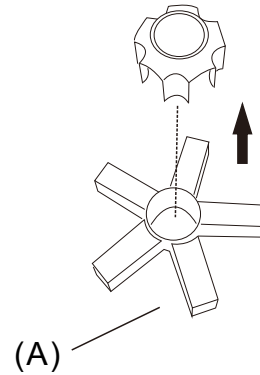


Step 2

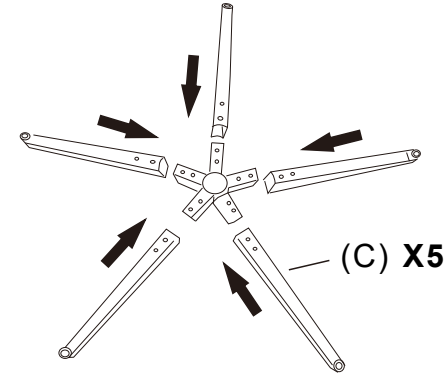


Step 3

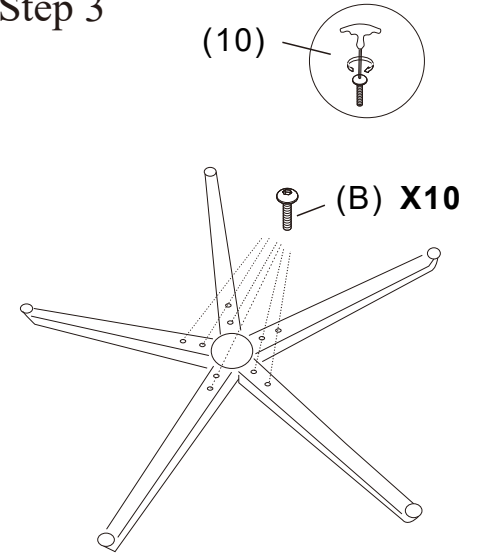


Step 4

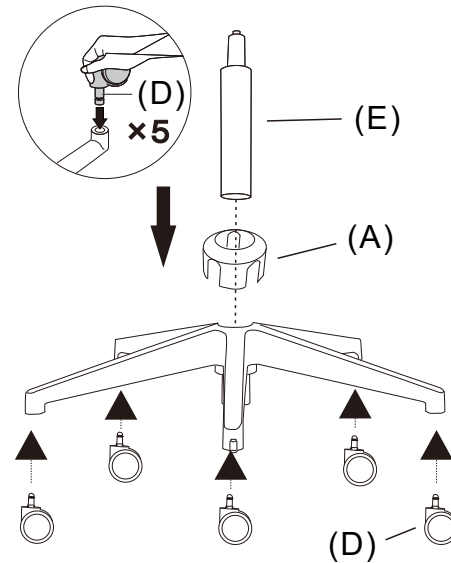

Step 5

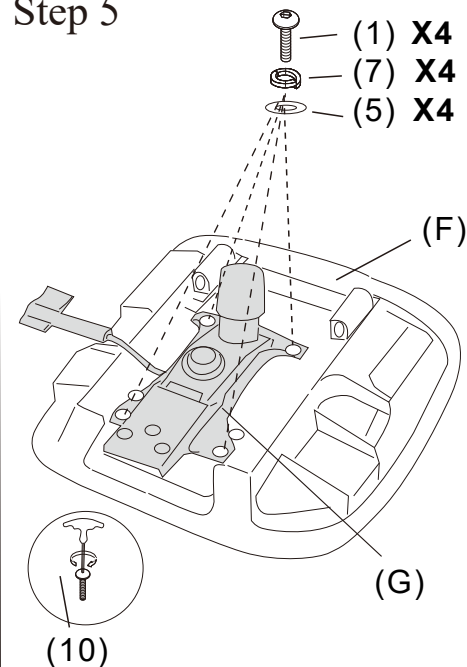


Step 6

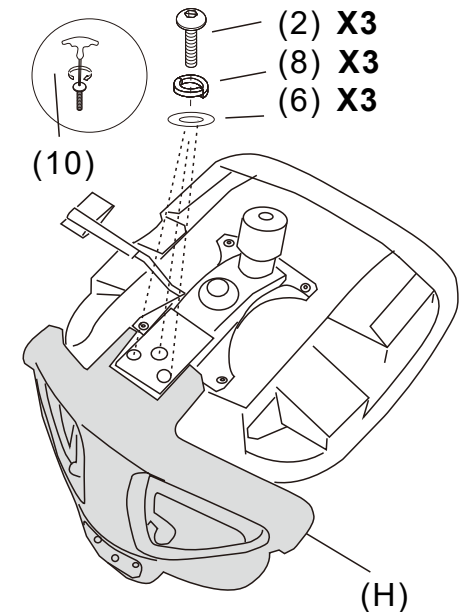


(1)		M6*20mm	4pcs+1
(2)		M8*30mm	3pcs+1
(3)		M6*16mm	3pcs+1
(4)		M6*20mm	1pc
(5)		6*16mm	4pcs+1
(6)		8*17mm	3pcs+1
(7)		6mm	4pcs+1
(8)		8mm	3pcs+1
(9)		4*25*60mm	1pc
(10)		M5	1pc


Step 7

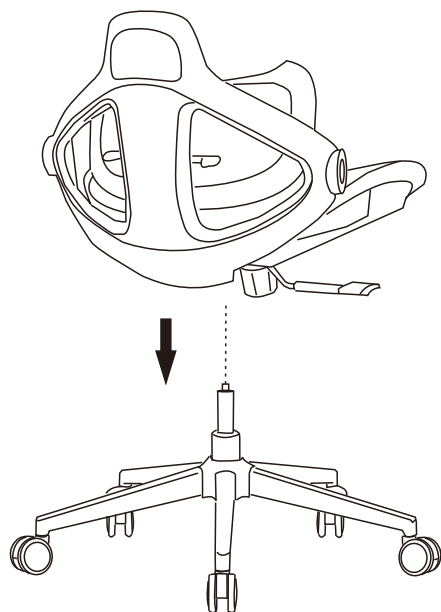

Step 8

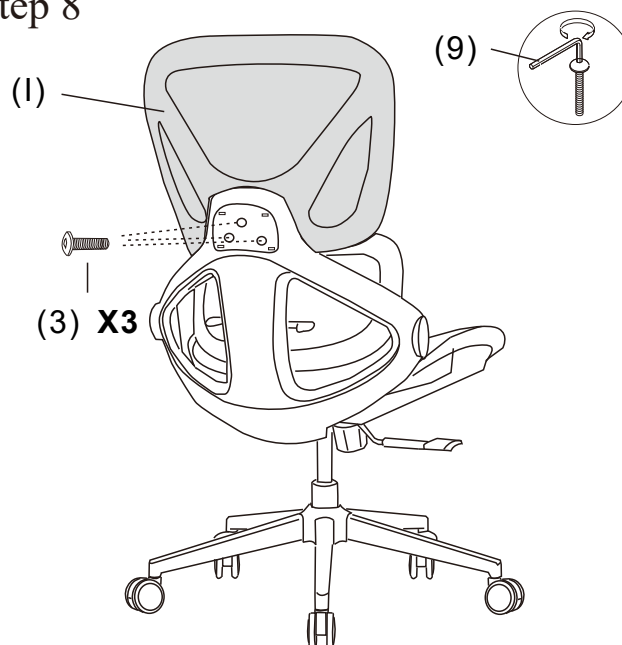


Step 9

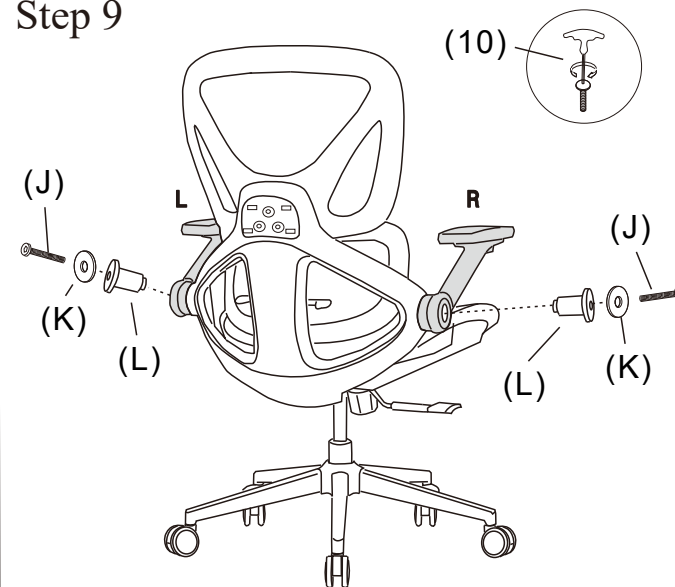


Attention Required:
Ensure that screw (J) is fully tightened and properly secured.

Step 10

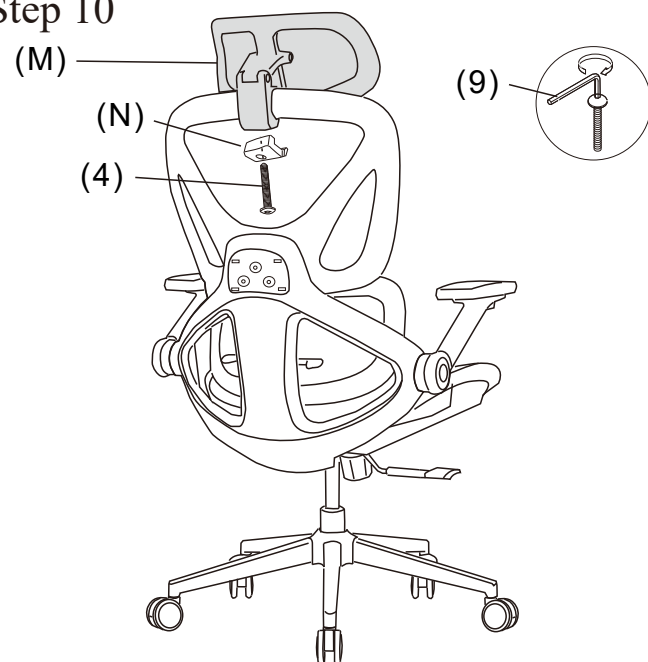

Step 11

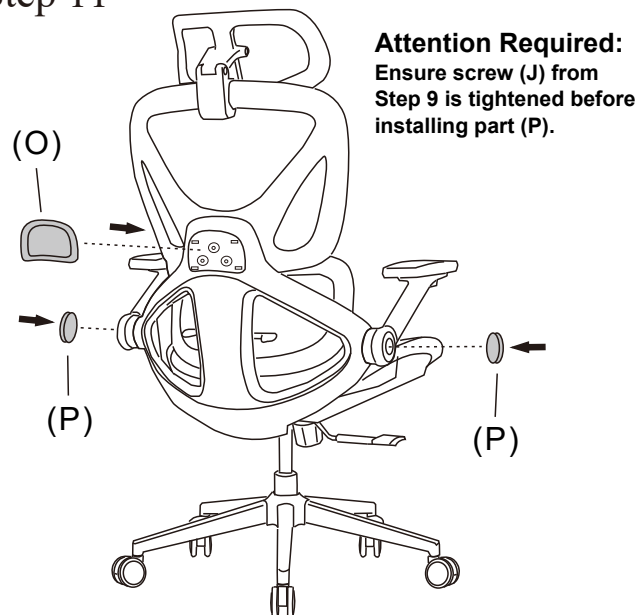

Attention Required:
Ensure screw (J) from
Step 9 is tightened before
installing part (P).

Step 12

