


Quick Installation Guide

AX210/AX200/PCE-AX3000

Wireless PCI Express / M.2 Adapter

1 Connect to a Computer

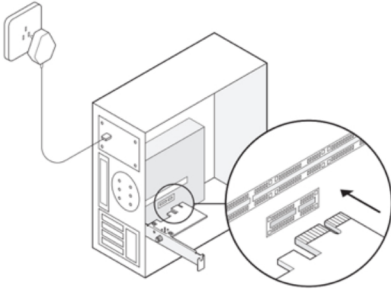

- Turn off your computer, unplug the power cable and remove the case panel.
- Locate an available PCIe x1 slot and carefully insert the adapter.
- Connect the antenna to the adapter.
- Replace the case panel, plug in the power cable and turn on your computer.



Bluetooth connection

Connect Bluetooth cable after the **b** step above, the **White** connector to the Adapter socket, the **Black** one to the USB(**F-USB**) socket on the Motherboard.


2 Install Driver

- Insert the CD and run the driver file to finish the driver installation.
- You can also download the driver from the QR code.
- Follow the InstallShield Wizard to complete the installation.

Note: There are WiFi driver and Bluetooth driver, both of them should be installed.




3 Join a Wireless Network

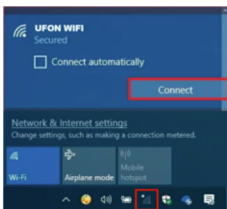

- Click the network icon() on the taskbar.
- Select your Wi-Fi network, click **Connect** and enter the password when prompted.

1 ハードウェアのインストール

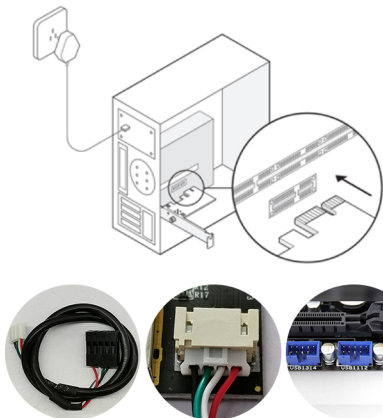


- 電源を切り、電源コードを抜き、ホストのサイドバージョンを取り外します。
- この NIC を **PCIe x1** スロットに慎重に取り付け、付属のネジで背面パネルに固定します。
- 付属の Bluetooth ケーブルの白い端をこのネットワークカードに接続し、黒い端をマザーボードの USB ソケット (F-USB) に接続します。
- アンテナをネットワークカードにインストールする。
- サイドパネルを取り付け、コンピューターの電源コードを接続し、電源を入れます。


2 ドライバー

- 付属の CD を挿入し、Wi-Fi および Bluetooth ドライバーをインストールします。
- QR コードまたは以下のリンクをスキャンして、最新のドライバーとドキュメントを入手できます。



3 ネットワークに接続する

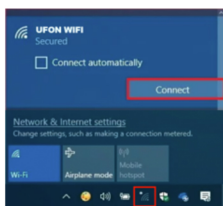

- タスクバーのワイヤレスアイコンをクリックします ()。
- 適切なワイヤレスネットワークを選択して、インストールとインターネットアクセスを完了します。
- 楽しみ。



MADE IN CHINA

Technical Support: ufon.sales@gmail.com
Add: D1113, Longguang Business Center, Shenzhen, China