

User Manual

- 1.How to Measure Window Curtains
- 2.Curtain Styles and Headings
- 3.How to Hang Window Curtains
- 4.Care & Cleaning

How to Measure Window Curtains

Before purchasing your window treatments you will want to decide how you want them to hang. They may hang on the inside or the outside of the window. To measure you will need a pencil, steel measuring tape and paper.

Single or Double Hung Windows

1. Measure the width of the window frame.
(A to B)
2. Measure the length of the window frame.
(C to D)
3. Measure the length from the top of the window frame to the floor.
(E to F)


Determining Proper Width

When measuring the width of your window (A to B), be sure to consider whether you are hanging your curtain hardware on the inside or outside of the window trim. If you are aiming for a fuller, gathered look, make sure to multiply your measurement by 2.5x.

Determining Proper Length

Consider the look you want to achieve and where you want the bottom of your curtains to fall. Panels are usually hung so they fall anywhere from the window sill (C to D) or to the floor (E to F). Typically, panels are hung 4 inches above the window frame.

The most common panel lengths are 54", 63", 84" and 95".

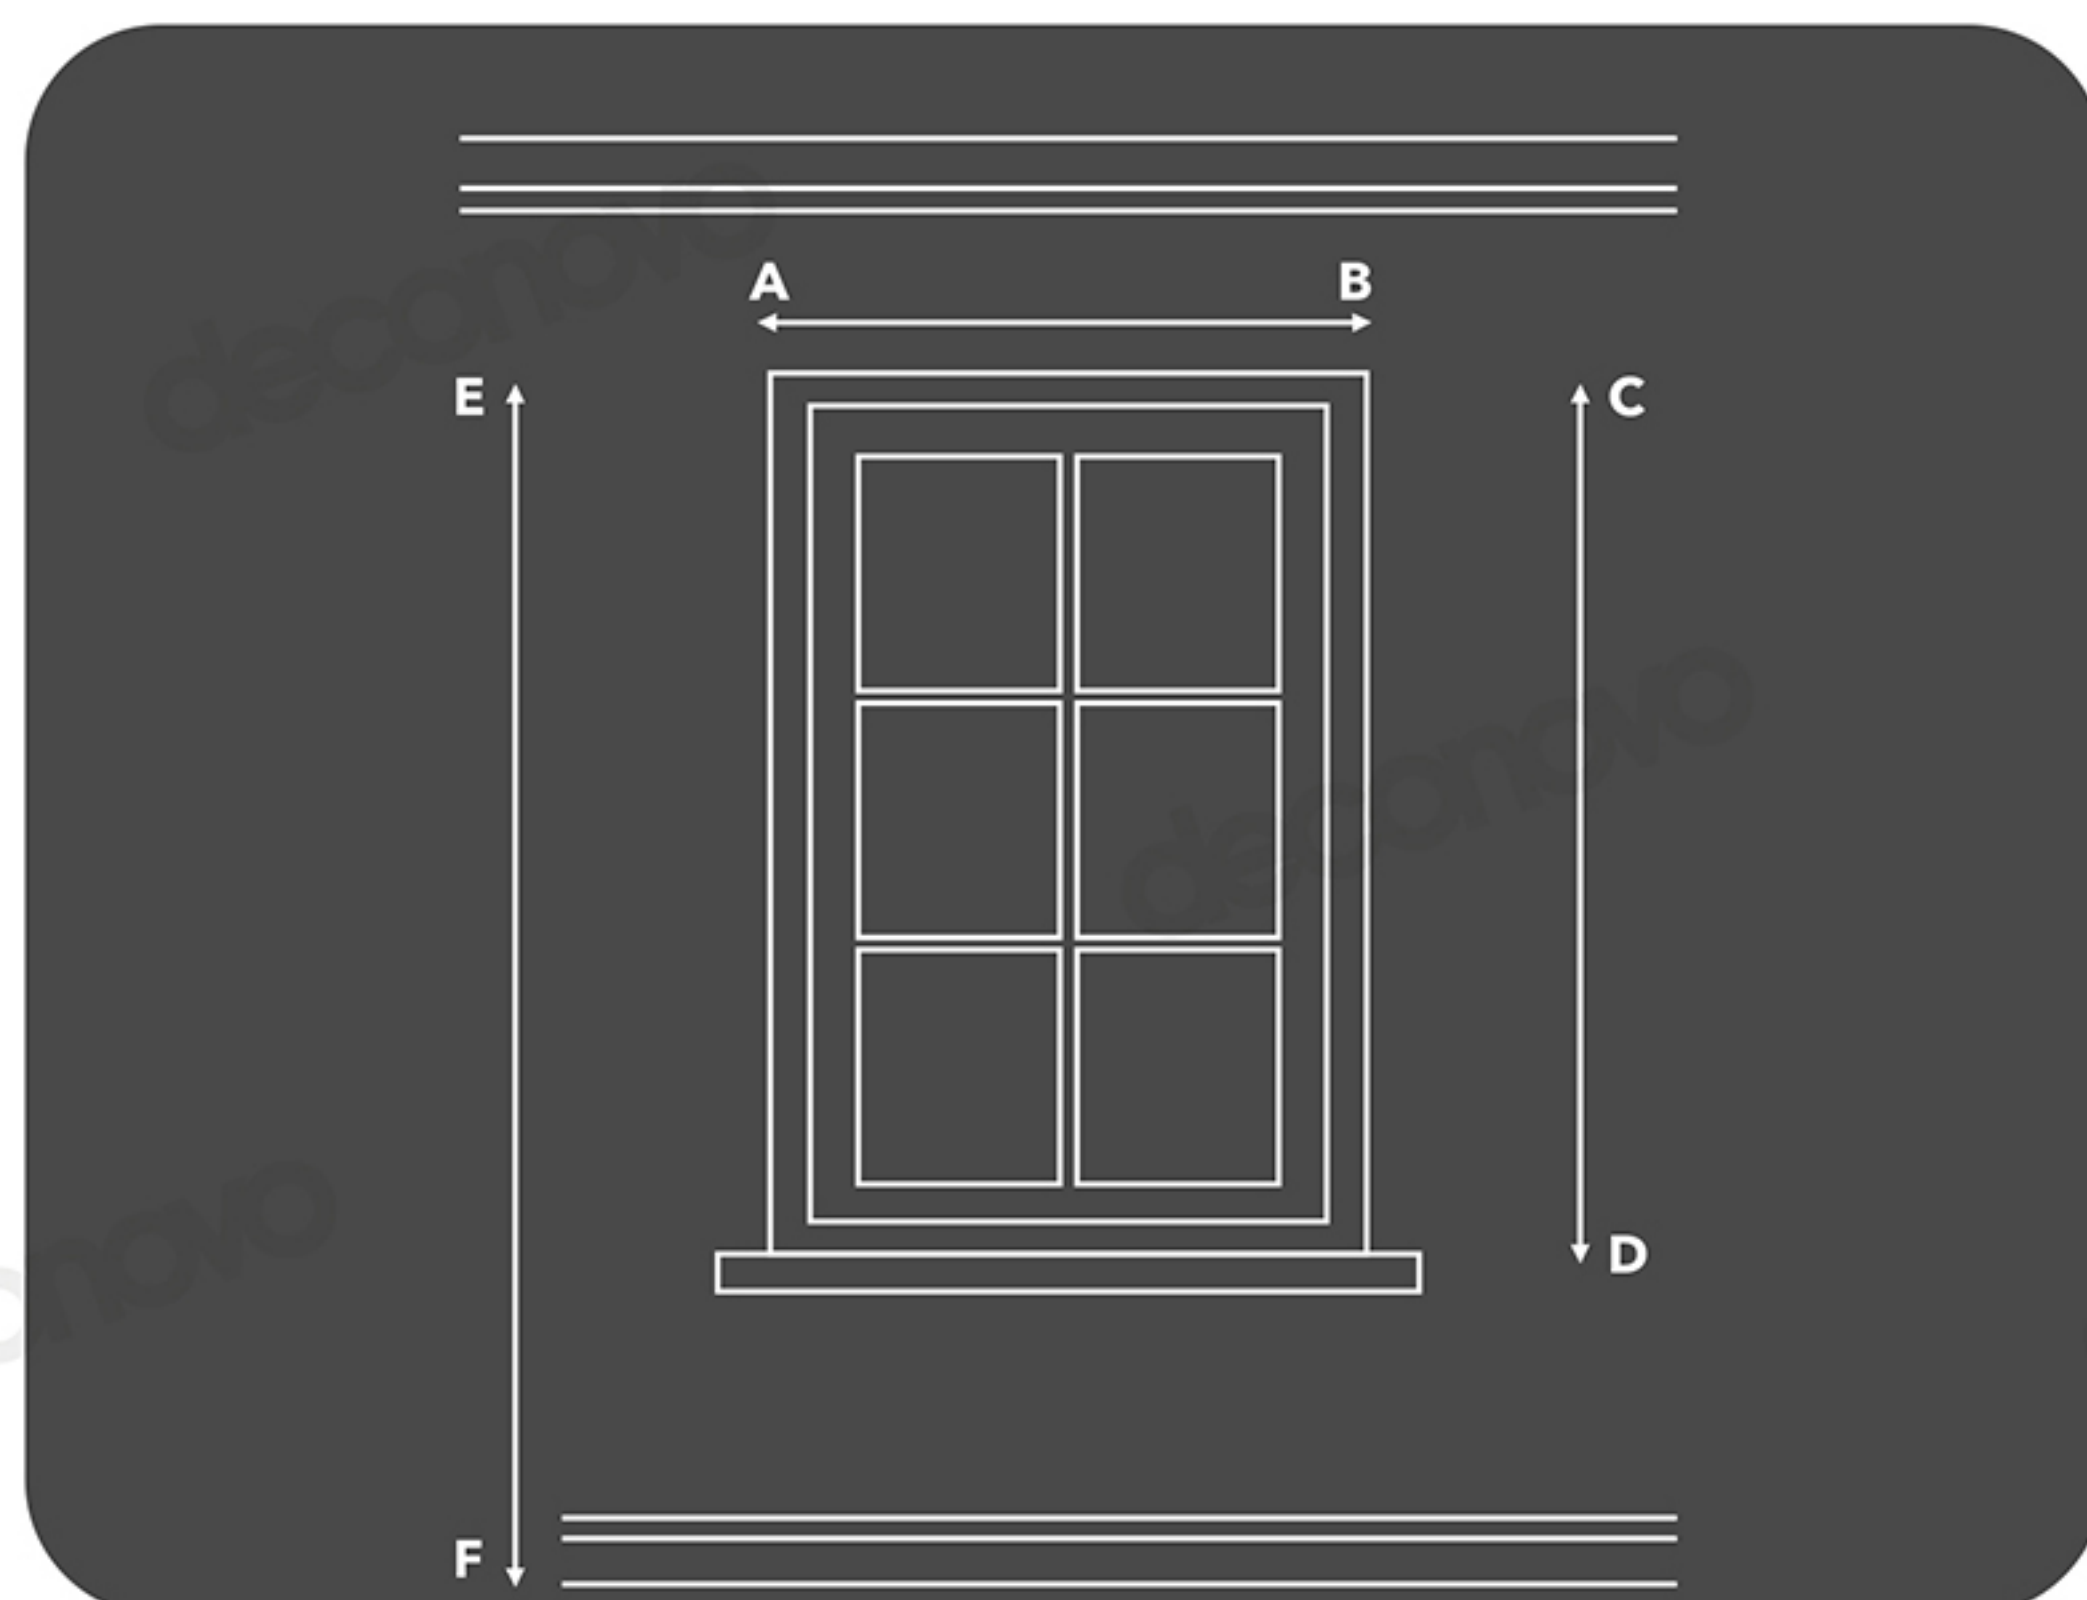

Helpful Tips:

Consider pooling your drapes for a more dramatic effect, this means your drapes will gather on the floor.

If you have baseboard heating, consider whether you want to cover or have curtains end just above baseboard.

Bay Windows


1. Measure the width of each window.
(A to B, B to C, C to D)
2. Measure the length from the top of the window to the window sill
(E to F)
3. Measure the length from the top of the window to the floor.
(G to H)

Determining Window Widths

Measure the width of each window. A typical bay window has left, center and right windows. If you have additional windows, measure those windows as well.

Determining Proper Length

Consider the look you want to achieve and where you want the bottom of your curtains to fall.

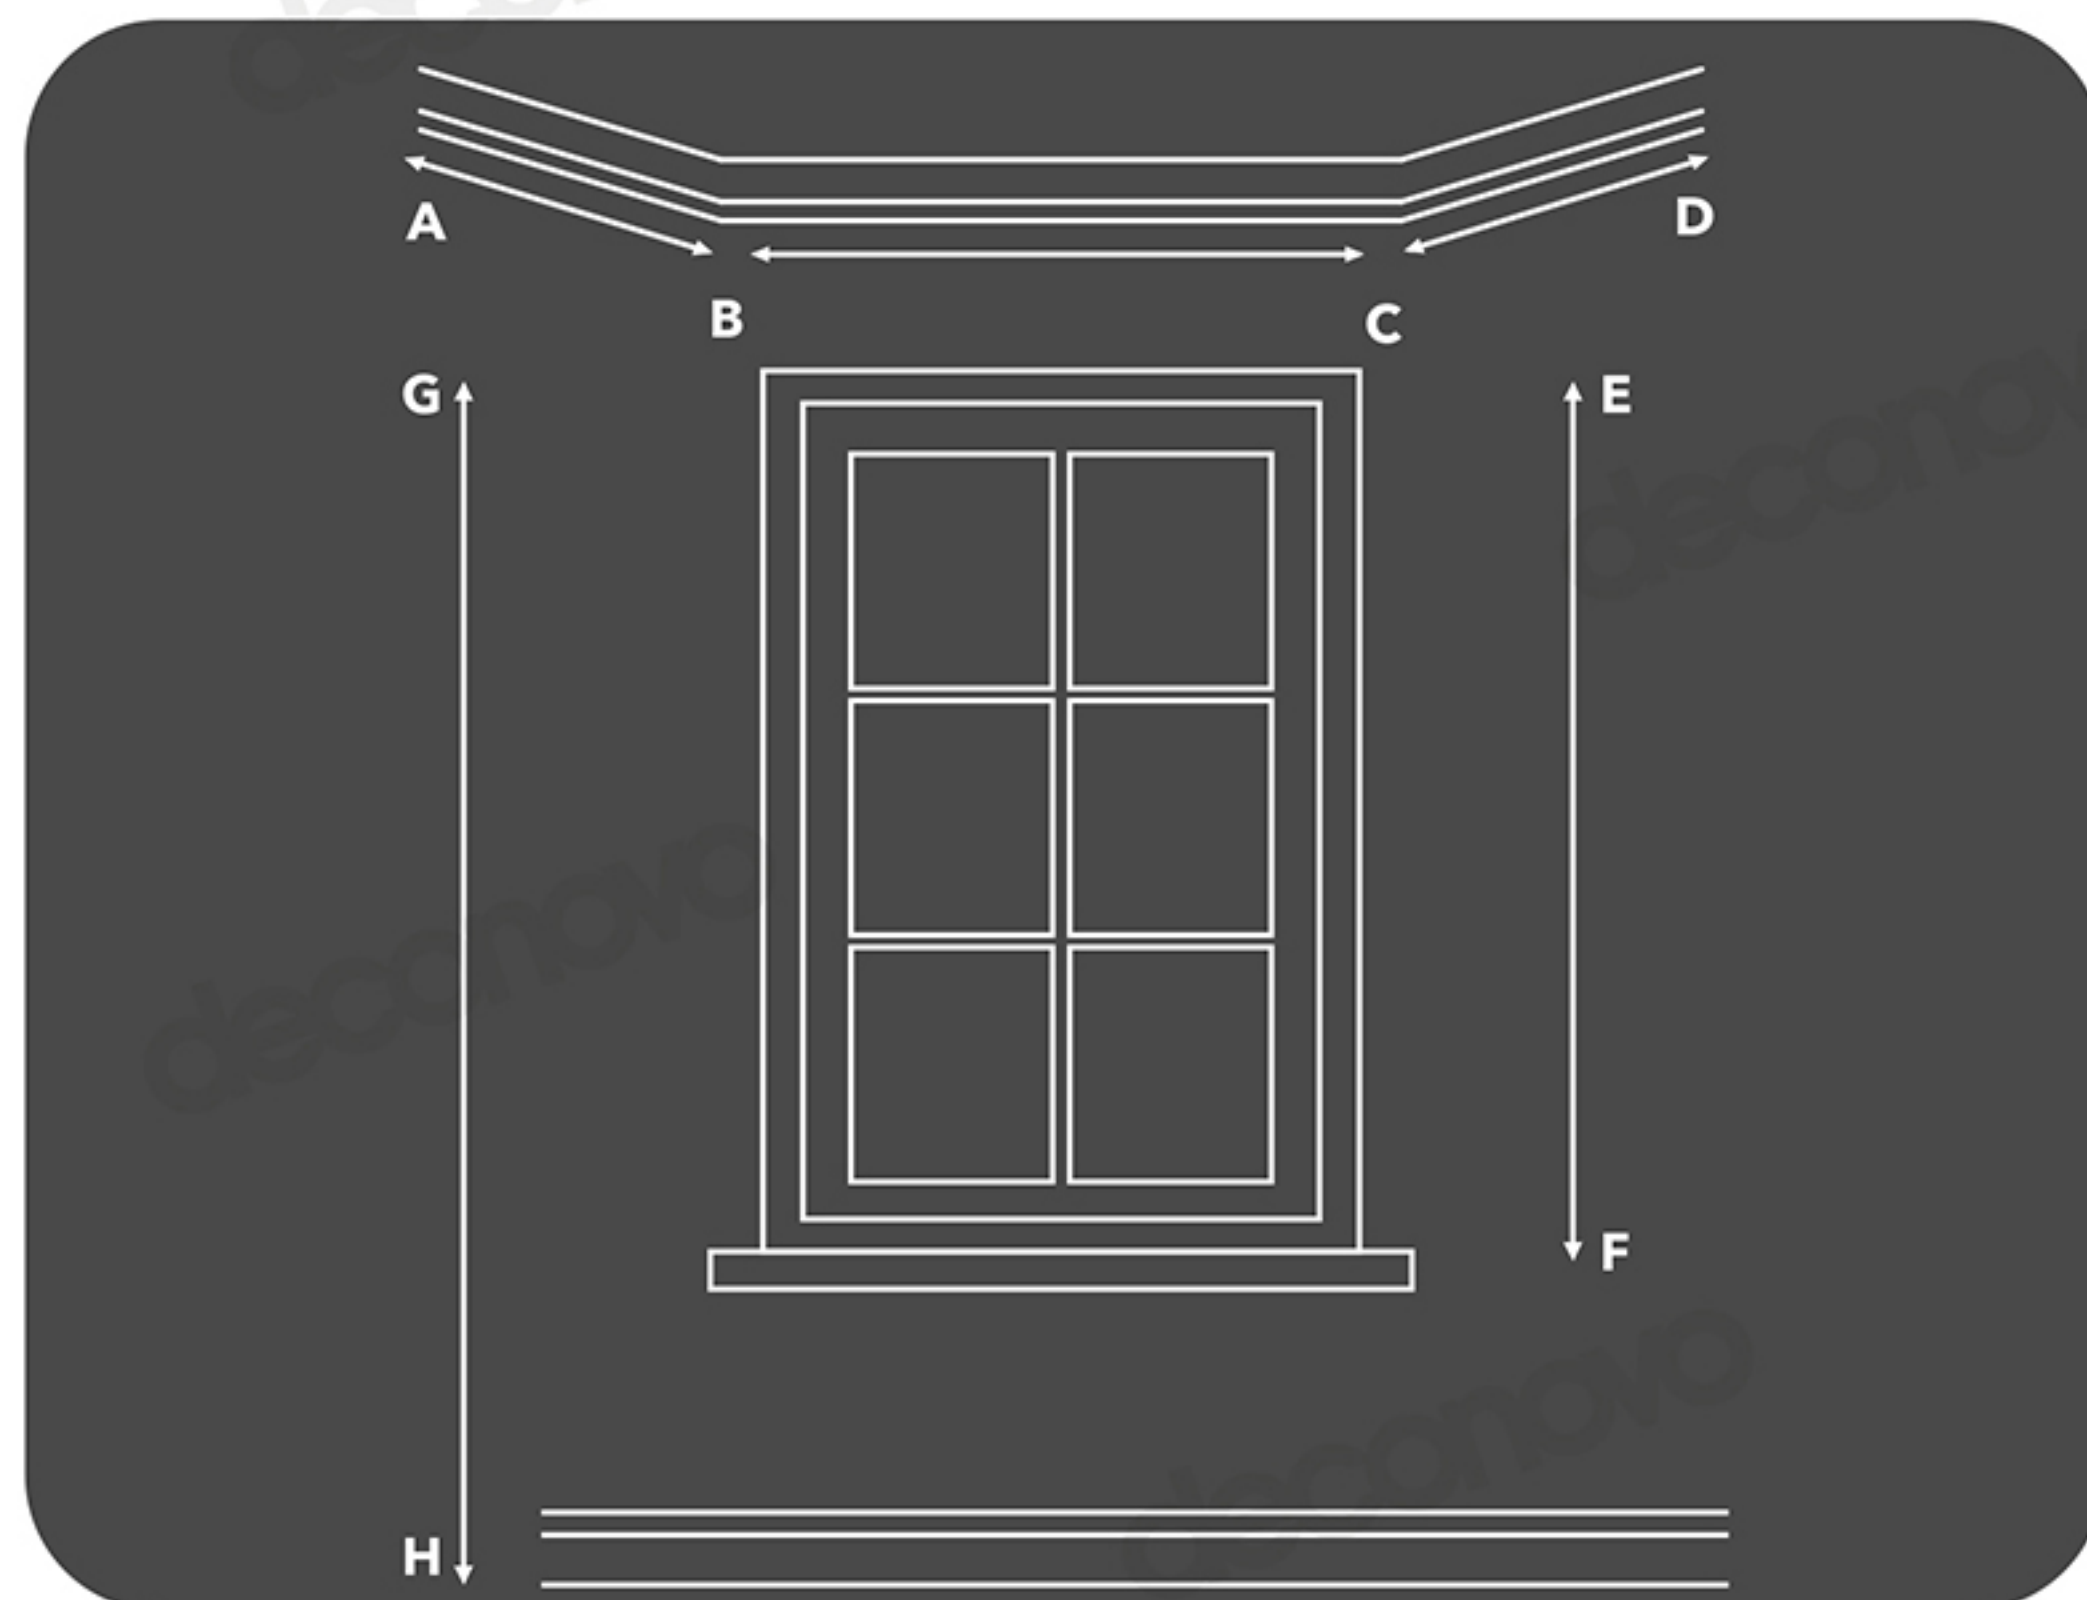

Helpful Tips:

For a more dramatic effect, consider pooling the bottom of your curtains on the floor.

o If you have a seated bay window, consider where you want the curtains to fall above the seated area. Valances can be a nice alternative for a seated bay window arrangement.

Sliding Glass & French Doors


1. Measure the door frame width
(A to B)
2. Measure the door frame length
(C to D)

Determining Proper Width

Measure from outer edge of door frame molding. Hardware should be hung above door frame and cover left to right edges.

Determining Proper Length


Measure from desired hardware placement to floor.

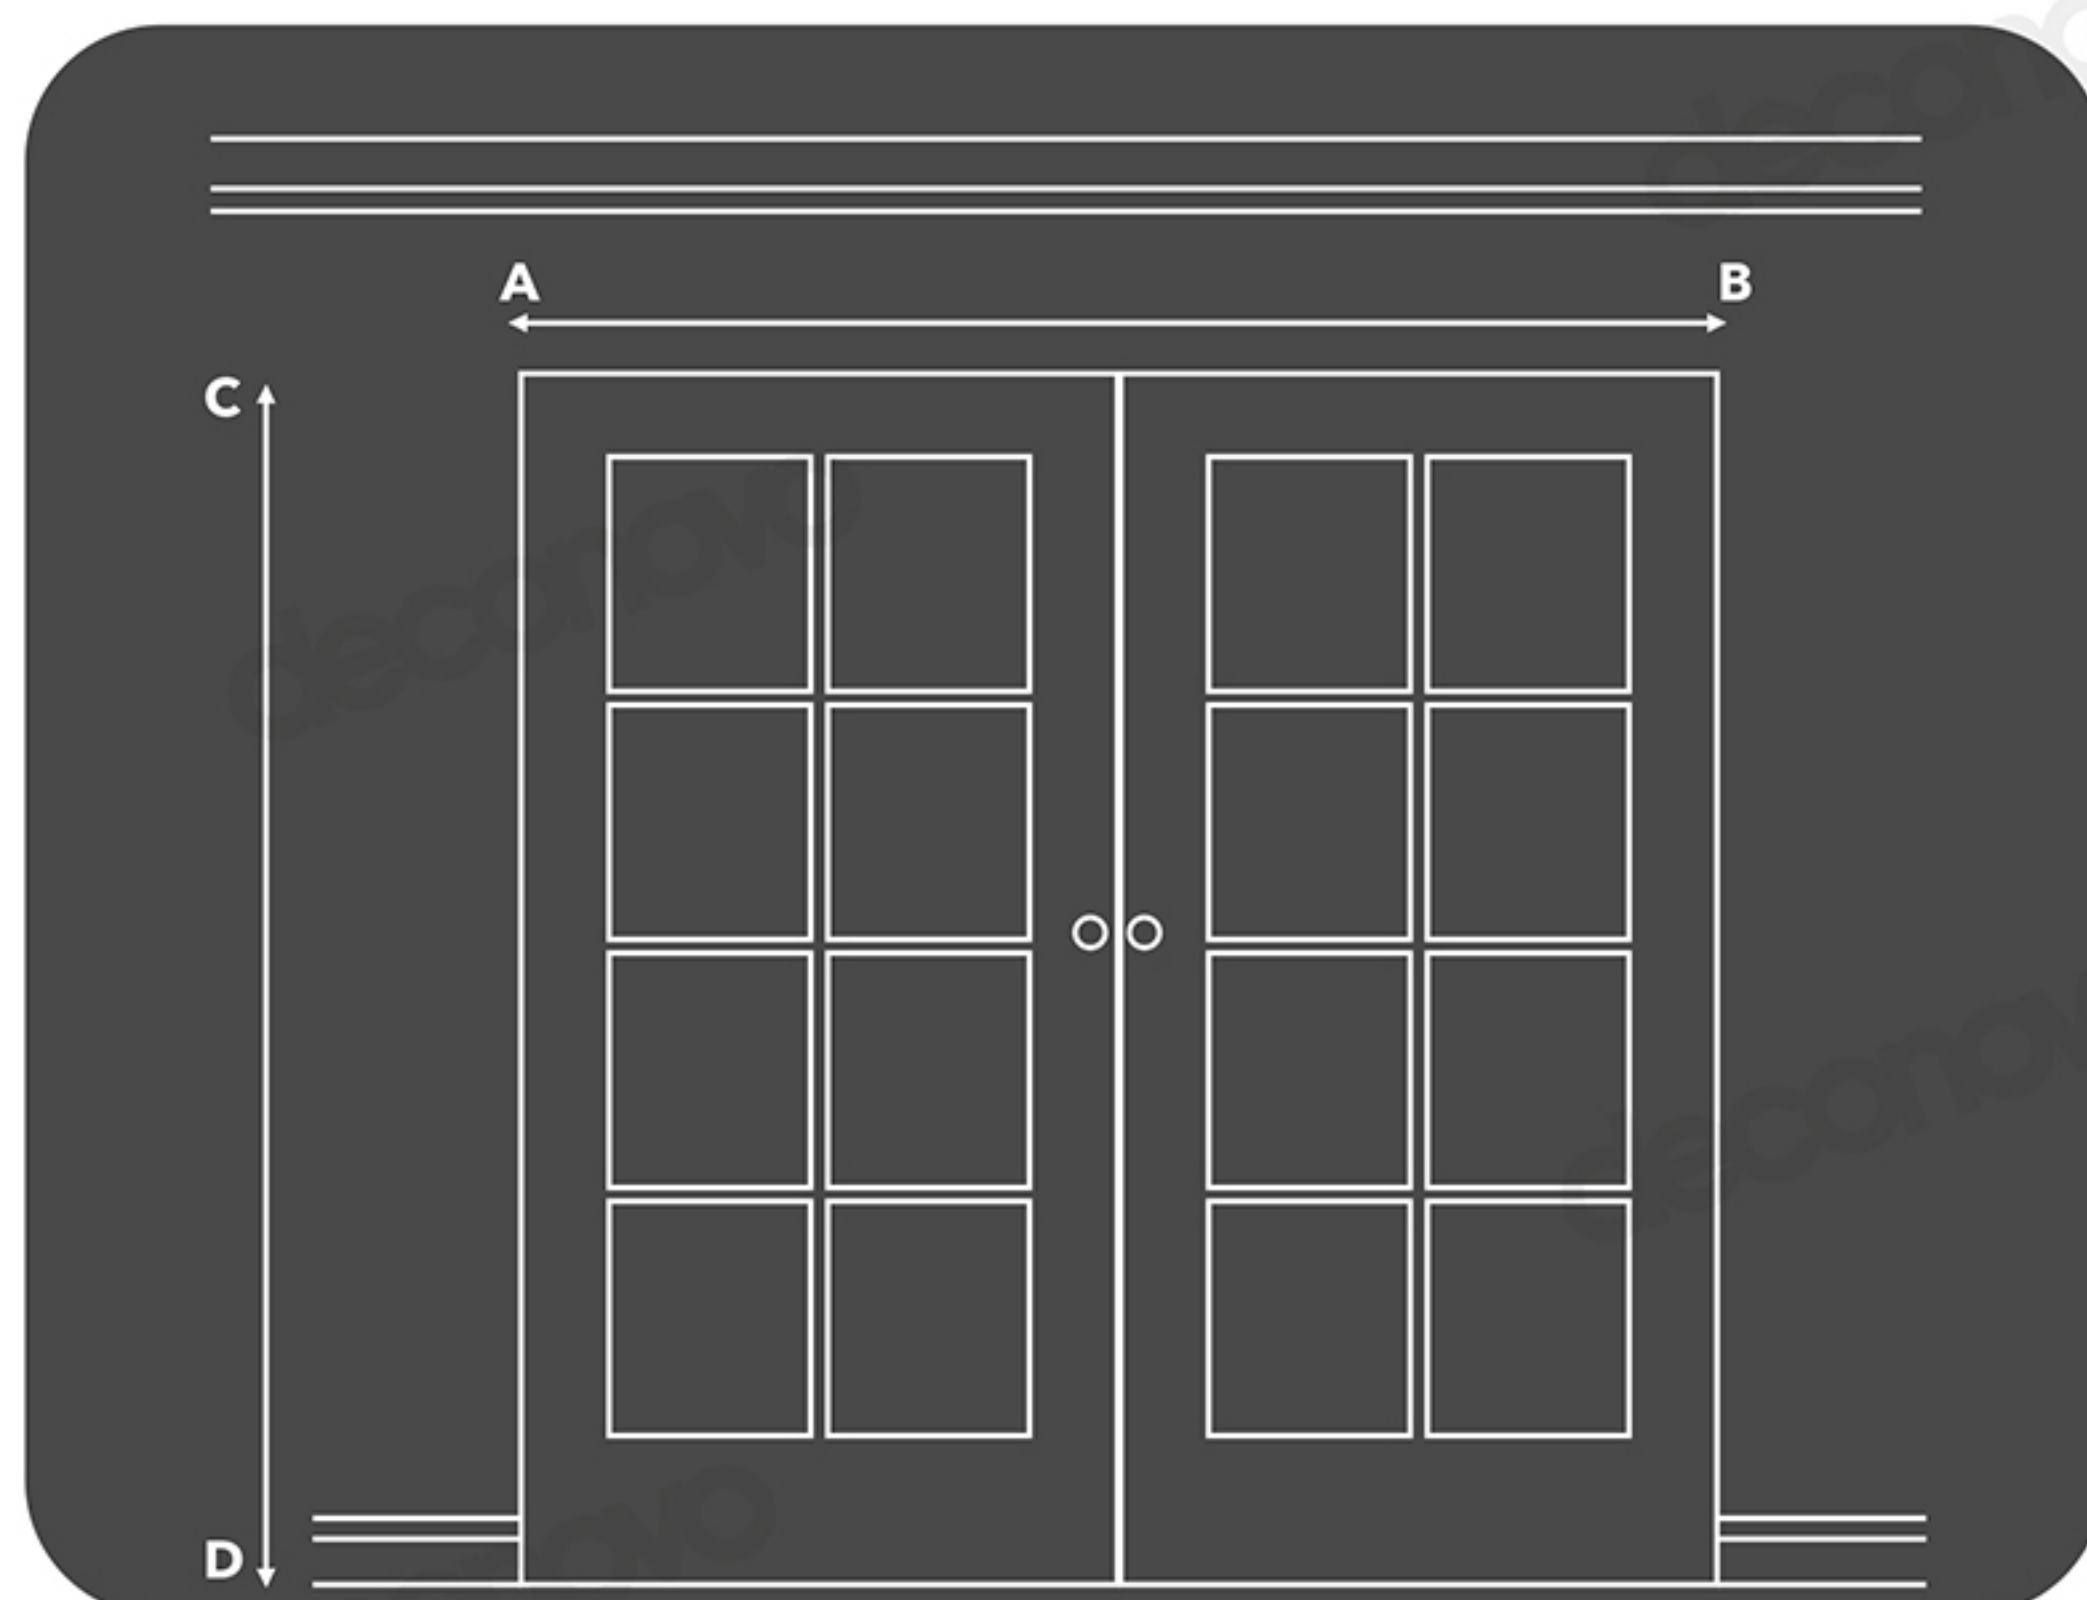

Helpful Tips:


Consider a Traverse Rod for quick and easy sliding of door panels.

Curtain Styles

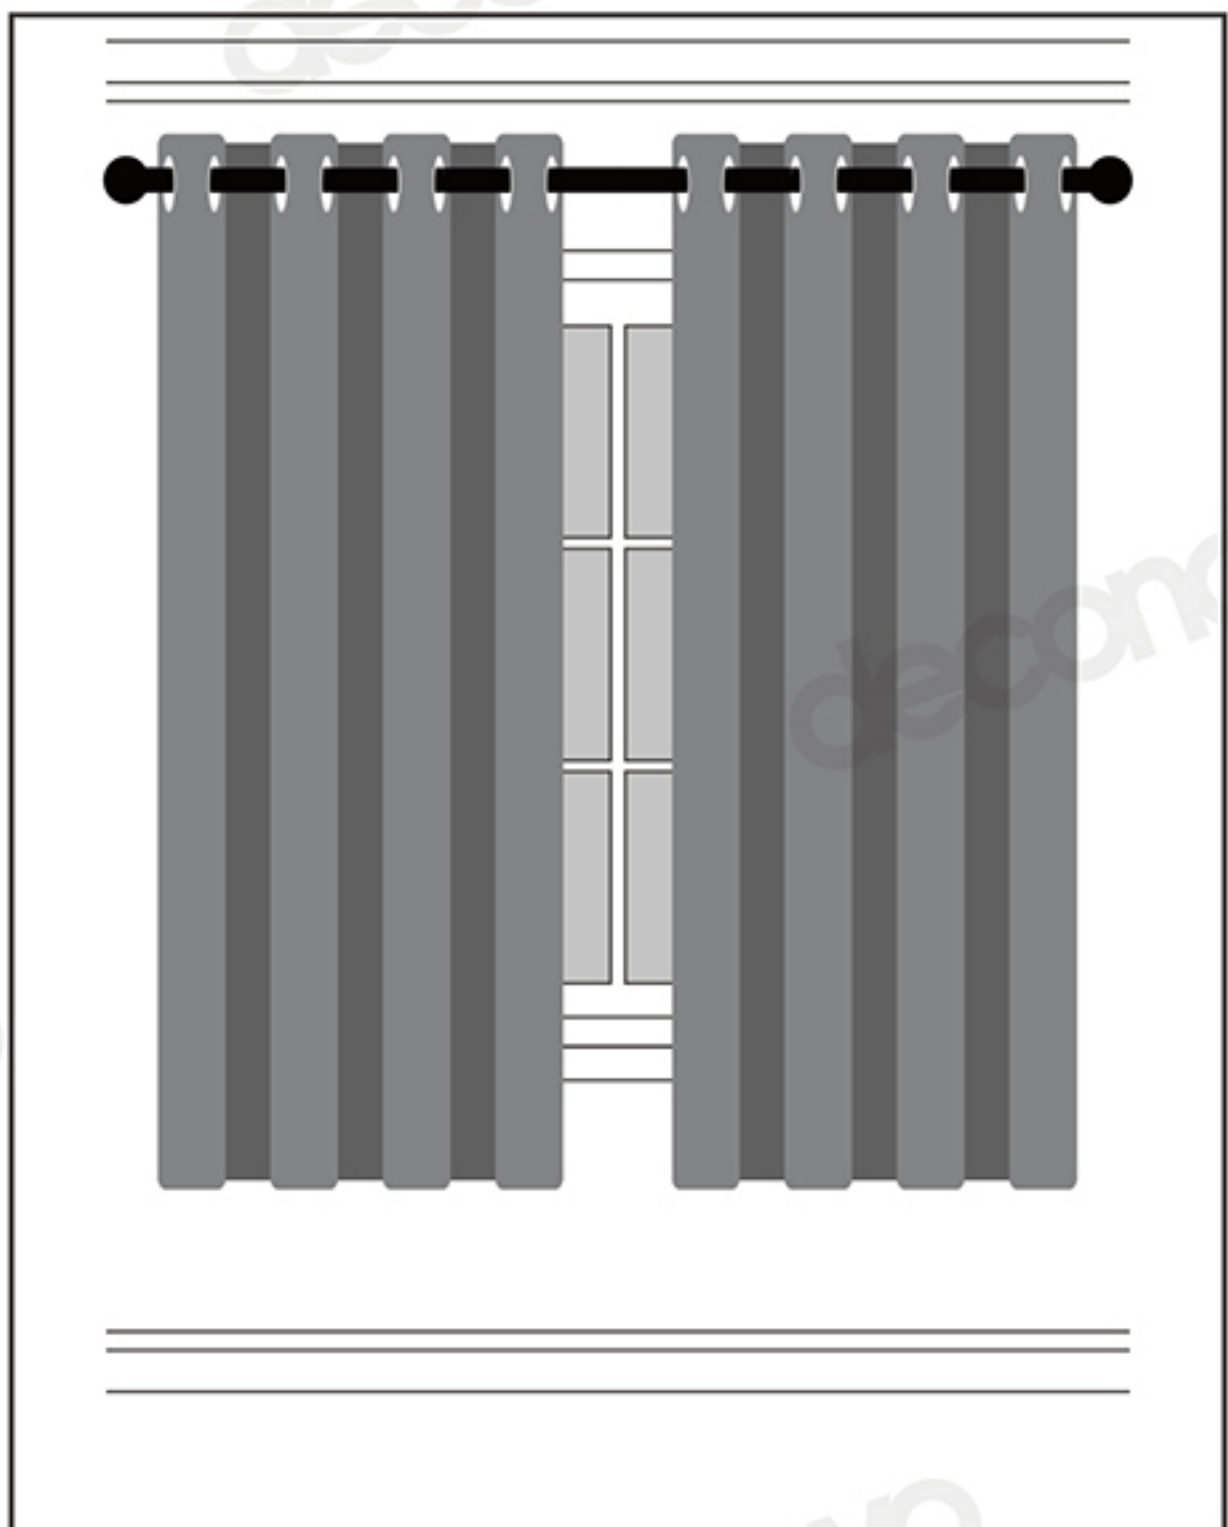


Window Sill
45"-63 " length

Slightly touch the sill to maintain a casual feel in any room.

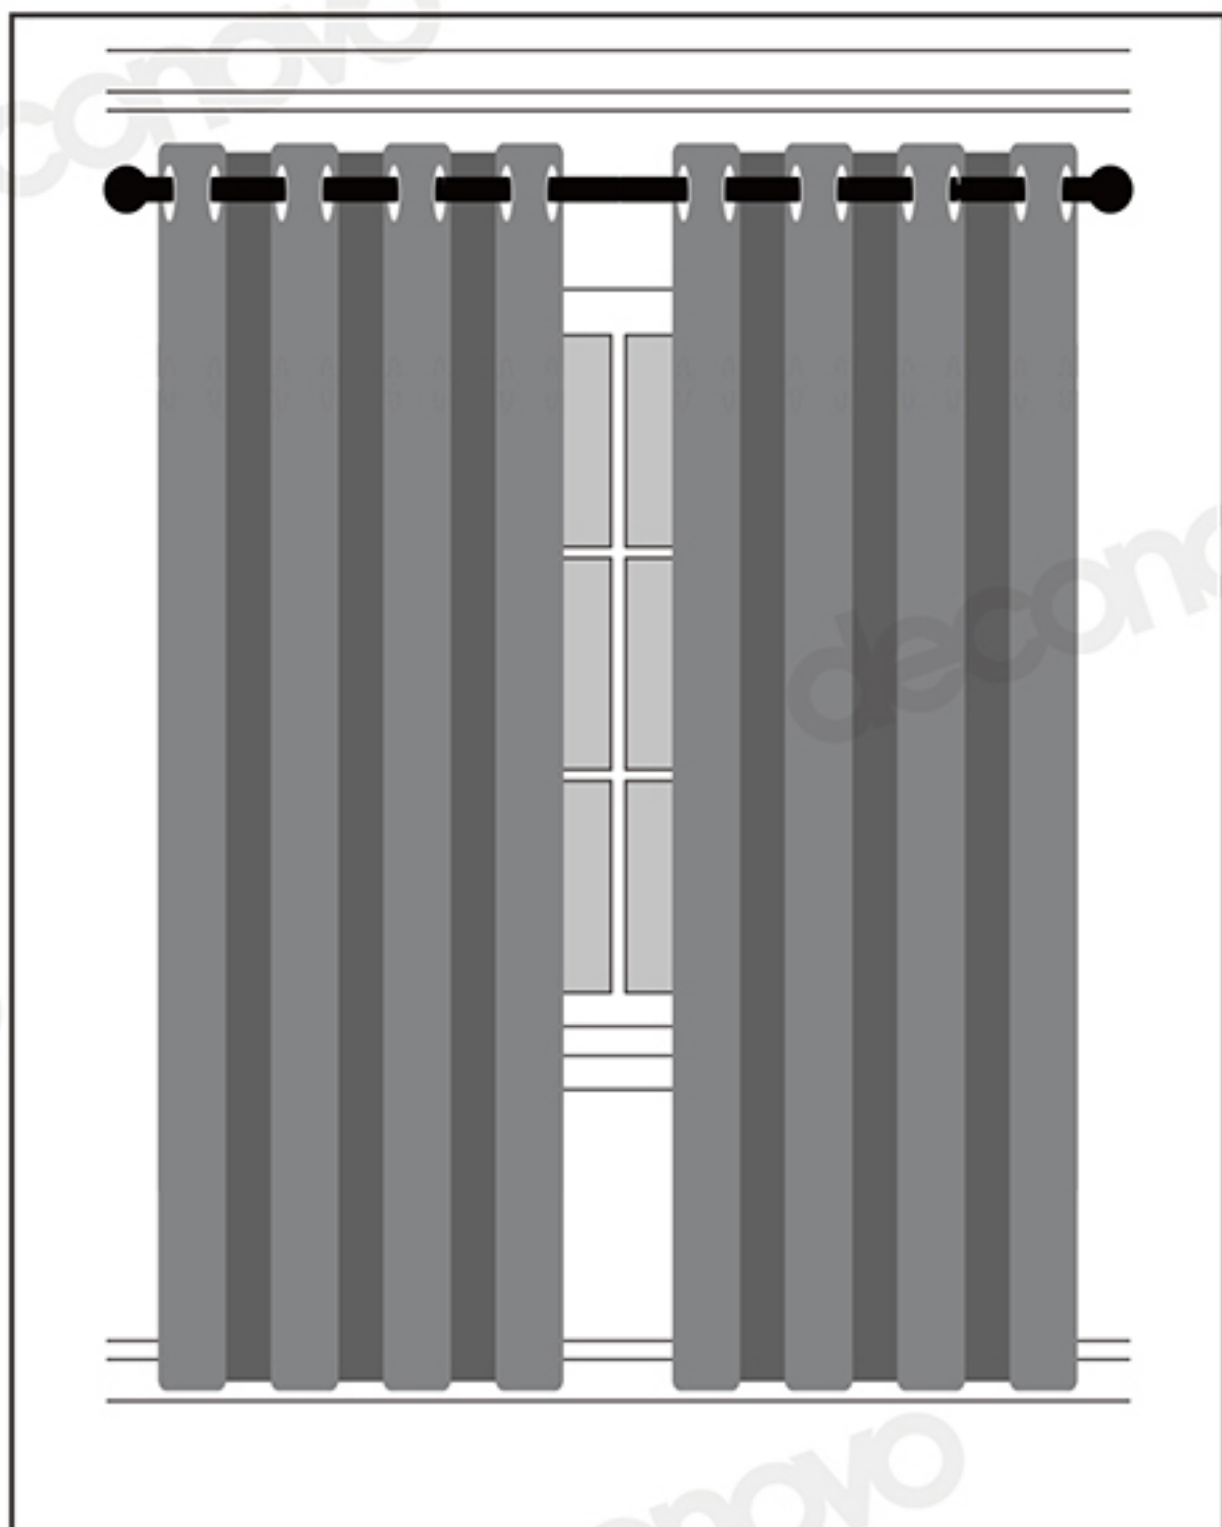


Kiss The Floor
84"- 90" length

Panels brush the floor to create a polished decorative gesture.

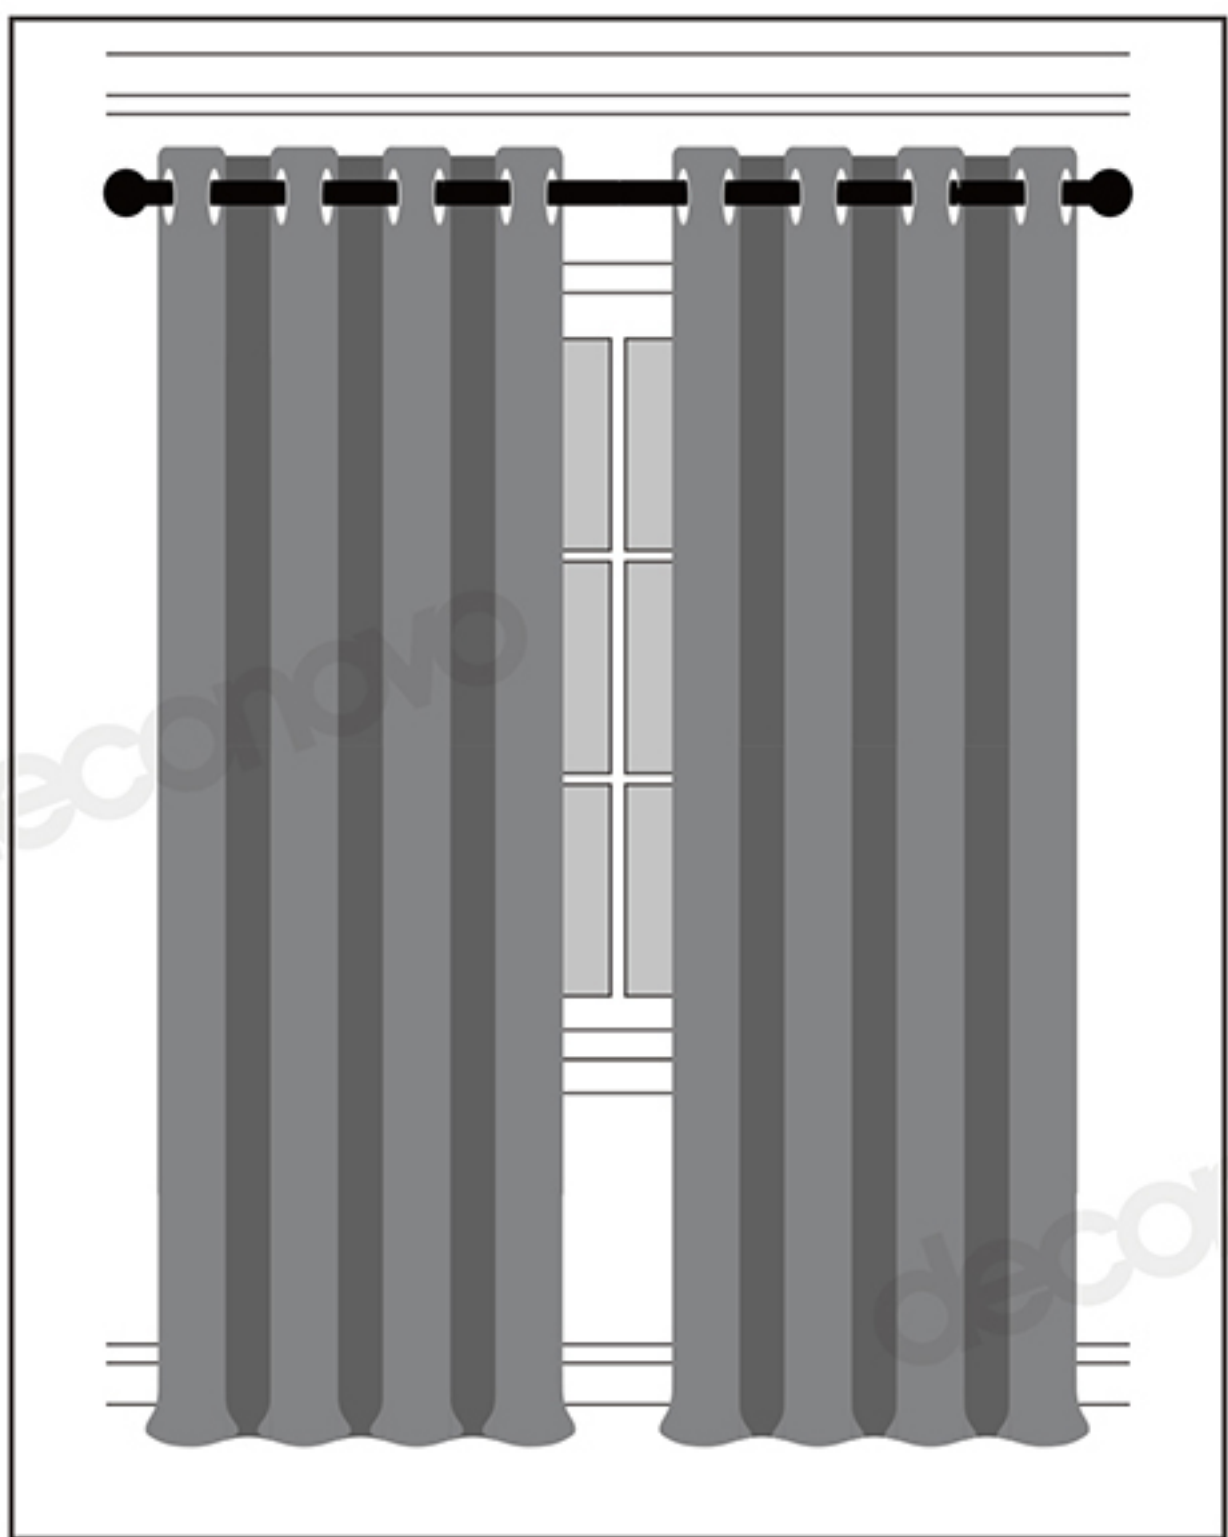

Slight Break
95 " length

Panels have about 1" of material on the floor for a look that mixes formal and casual.

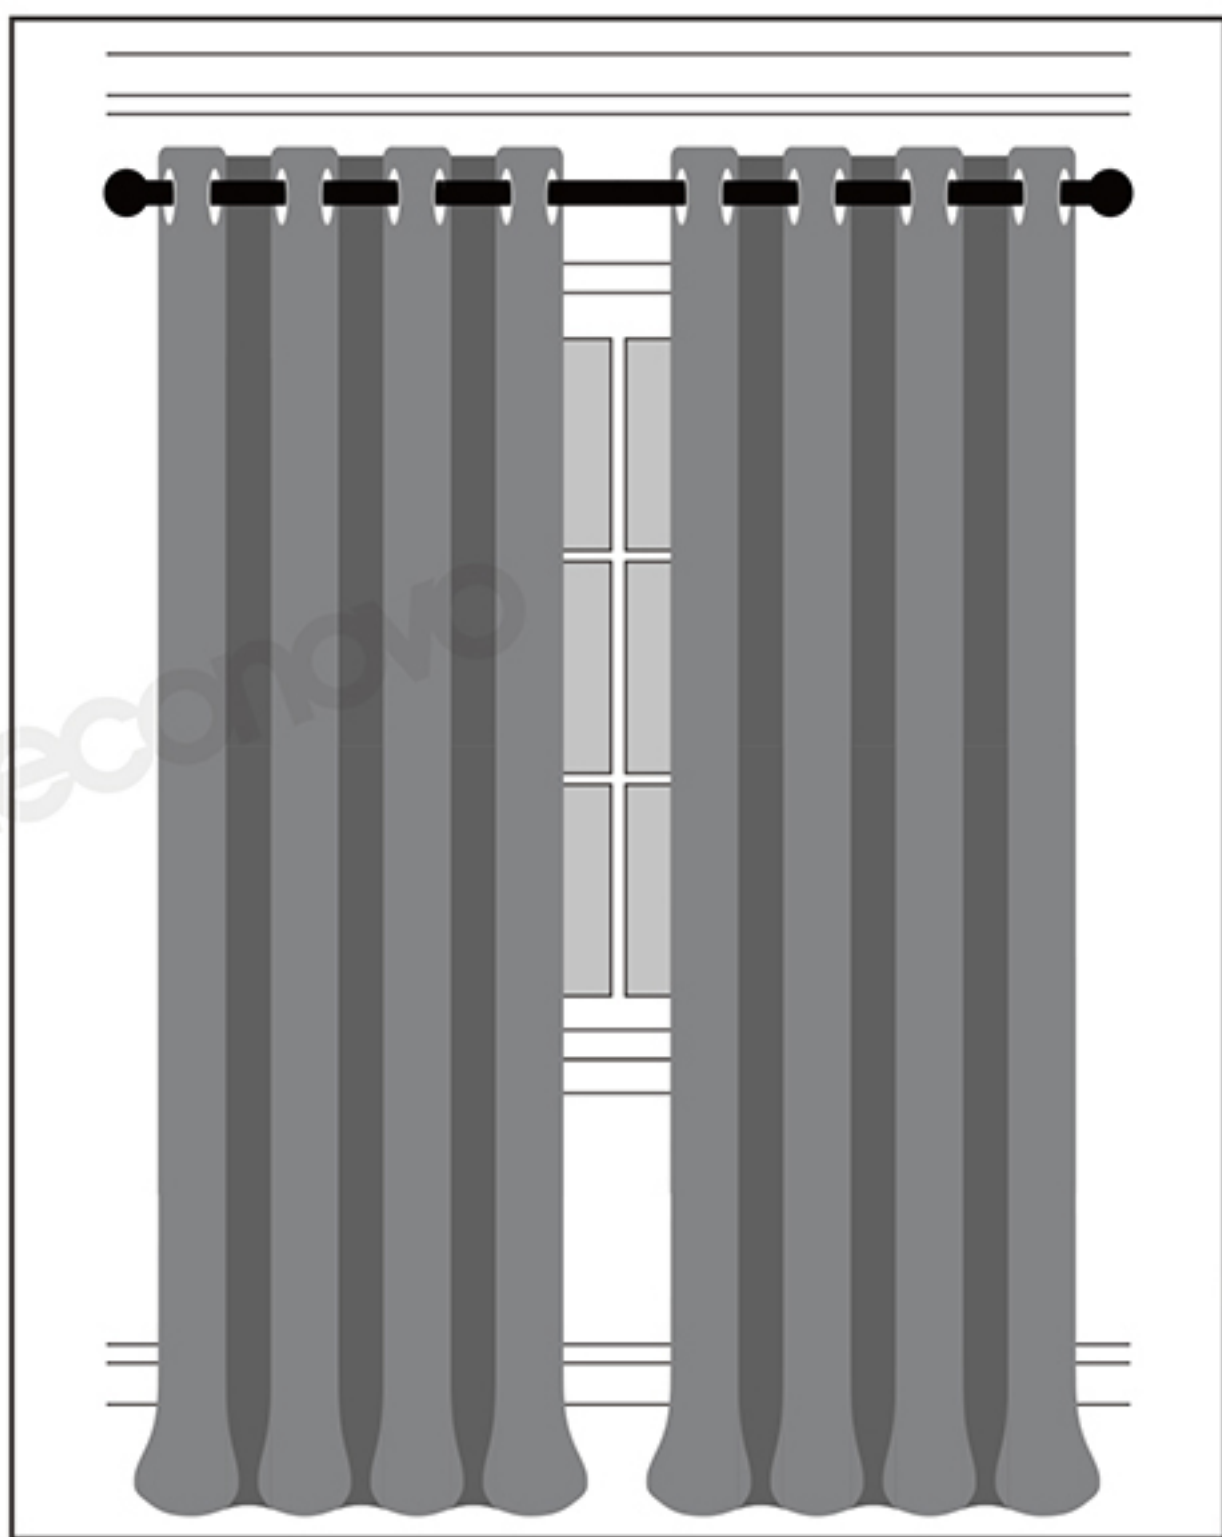


Puddling
108 " -120 " length

Just a few extra inches add subtle sophistication.


Curtain Headings




Grommet

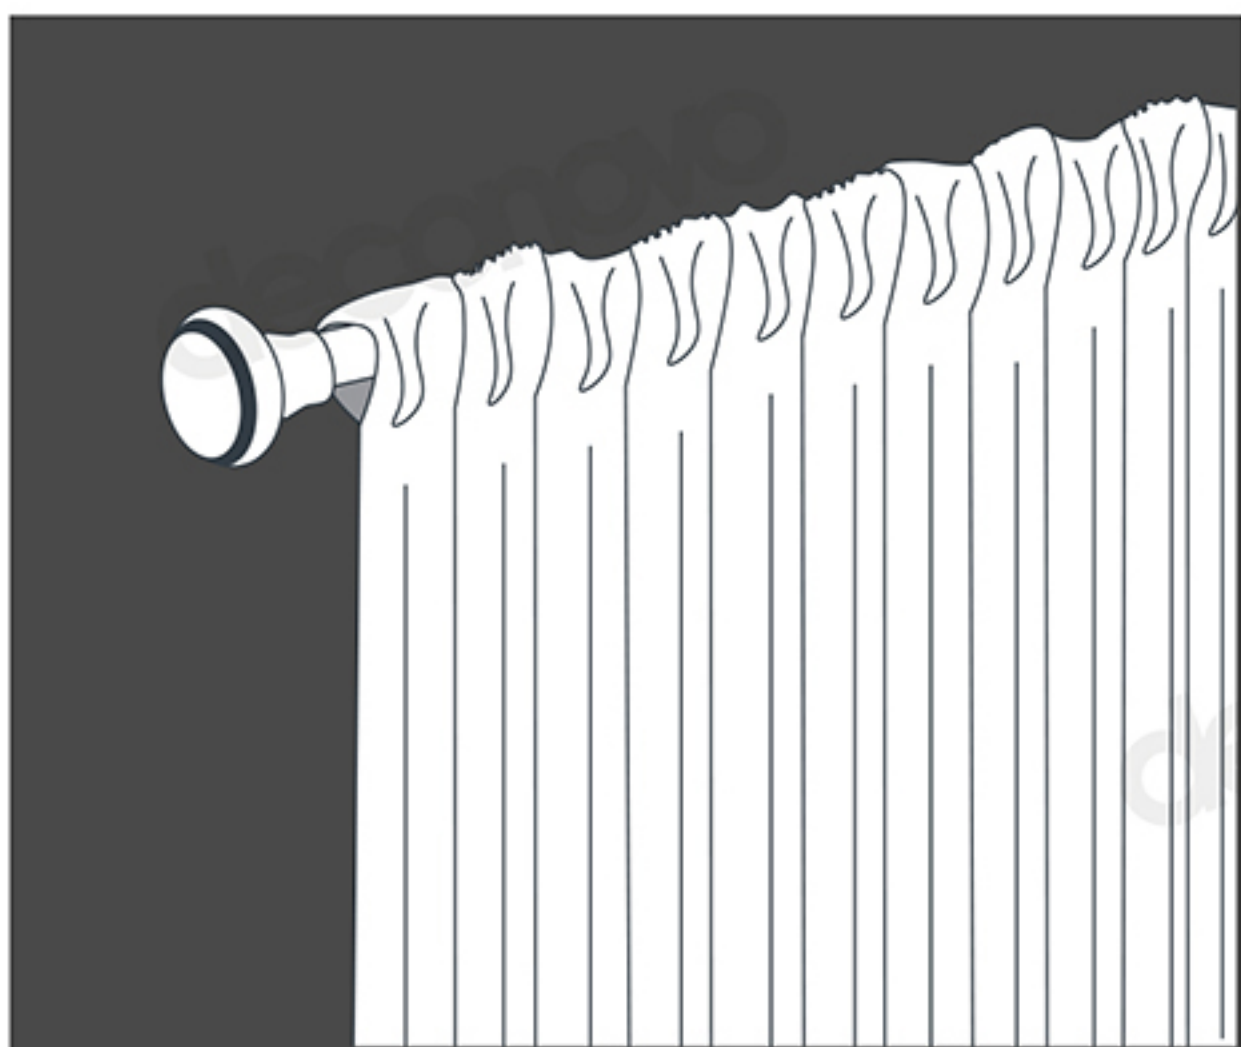


Rod Pockets

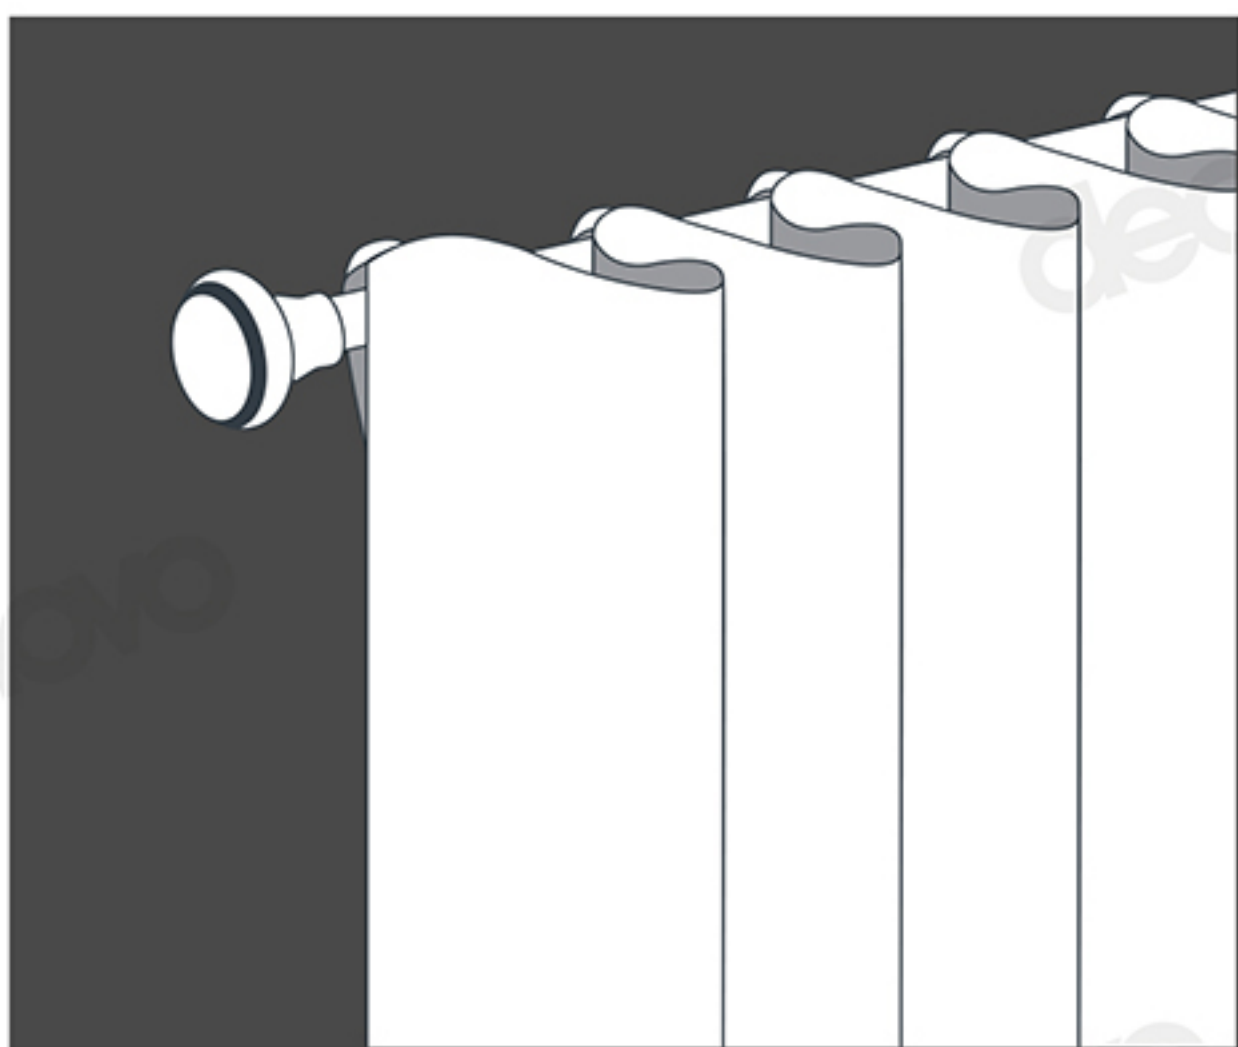

Back Tab and Rod Pocket

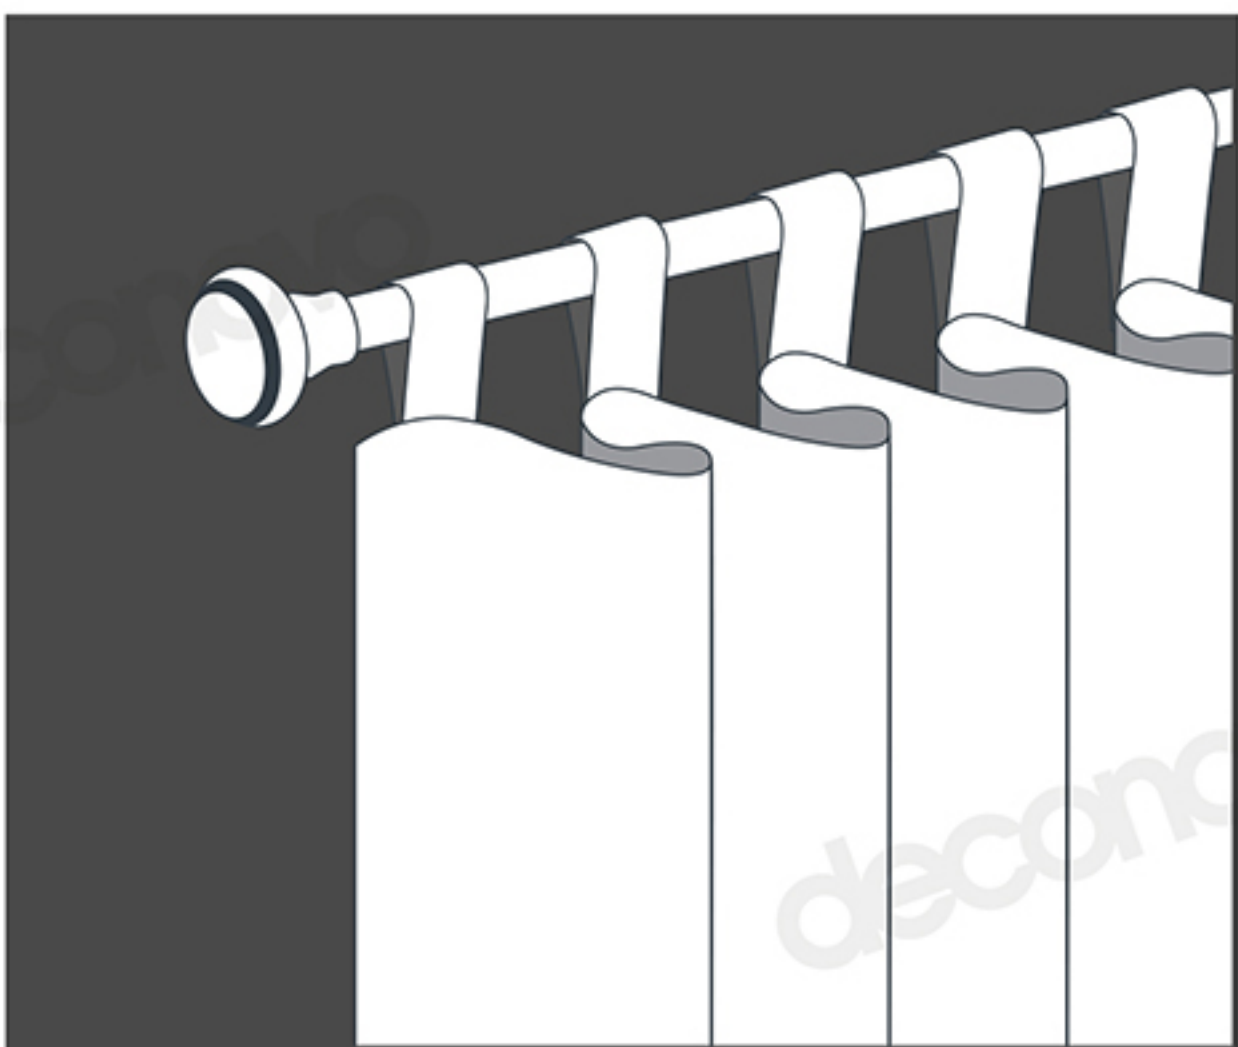


Tab Top

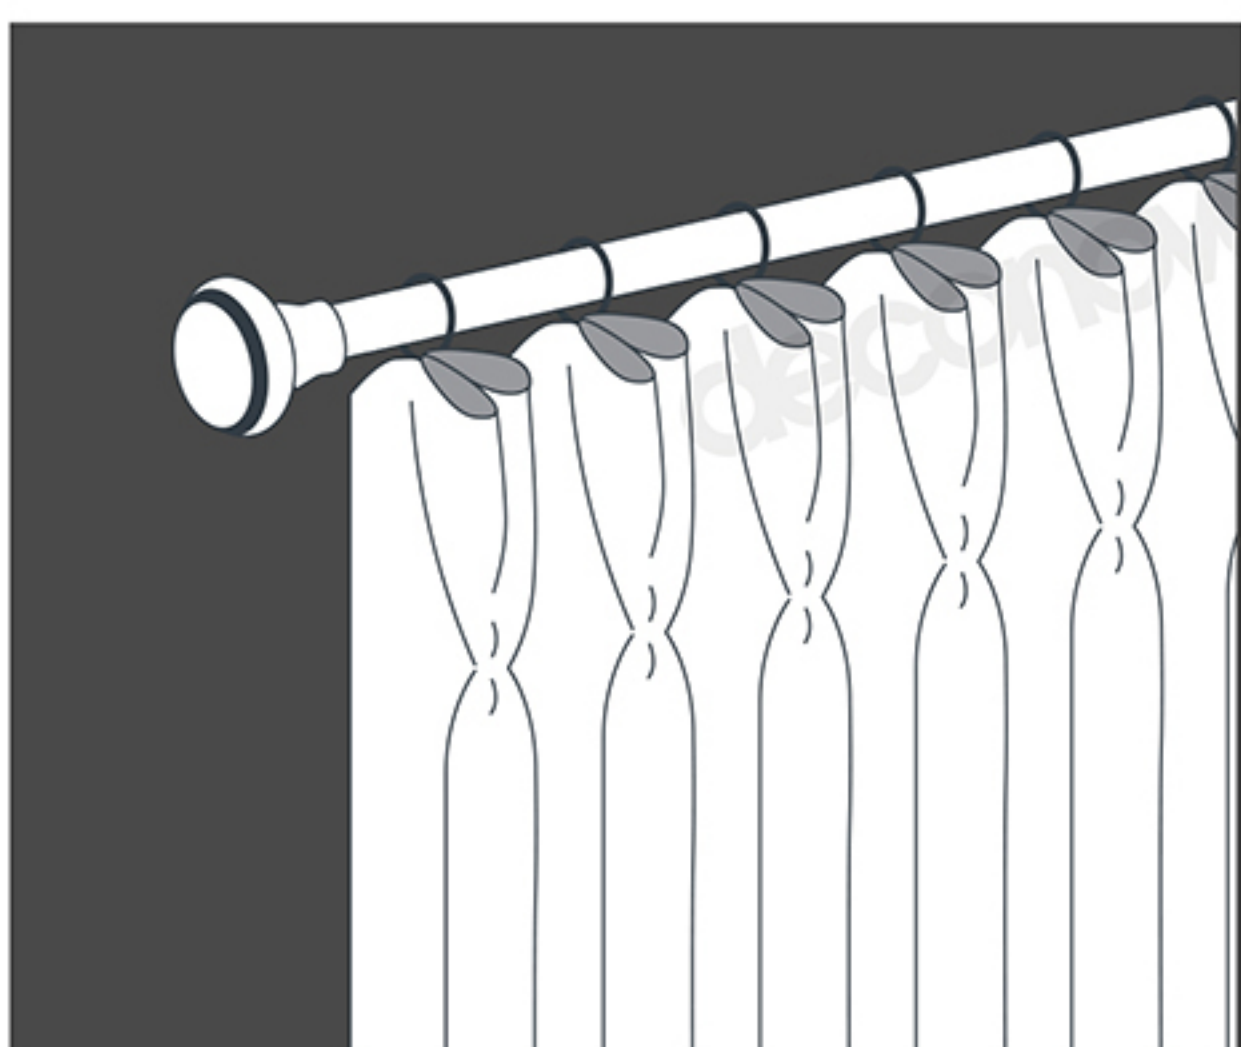

Pinch Pleat

How to Hang Window Curtains

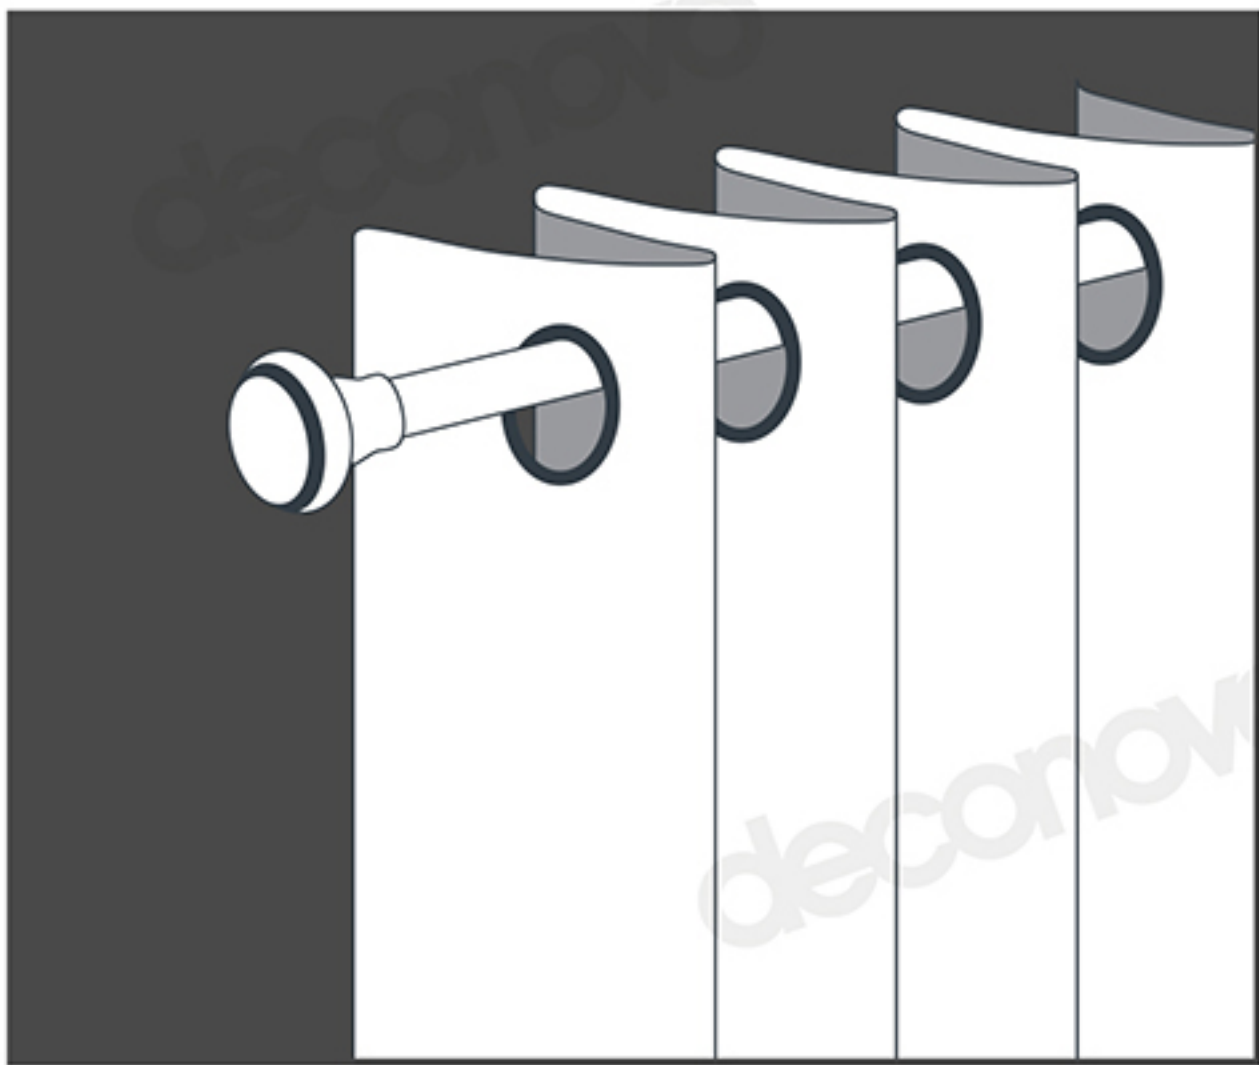

Grommet

Recommended Hardware:


Traditional or decorative curtain rod. Curtain rods usually include brackets and screws.

Hanging Instructions:

- a. Install curtain hardware on window trim or wall depending on your desired look.
- b. Insert curtain rod through each grommet.

Helpful Tips:

Group grommets in hand first then slip rod through for ease.
Check grommet opening measurement to ensure you purchase a rod size that will fit through the opening.

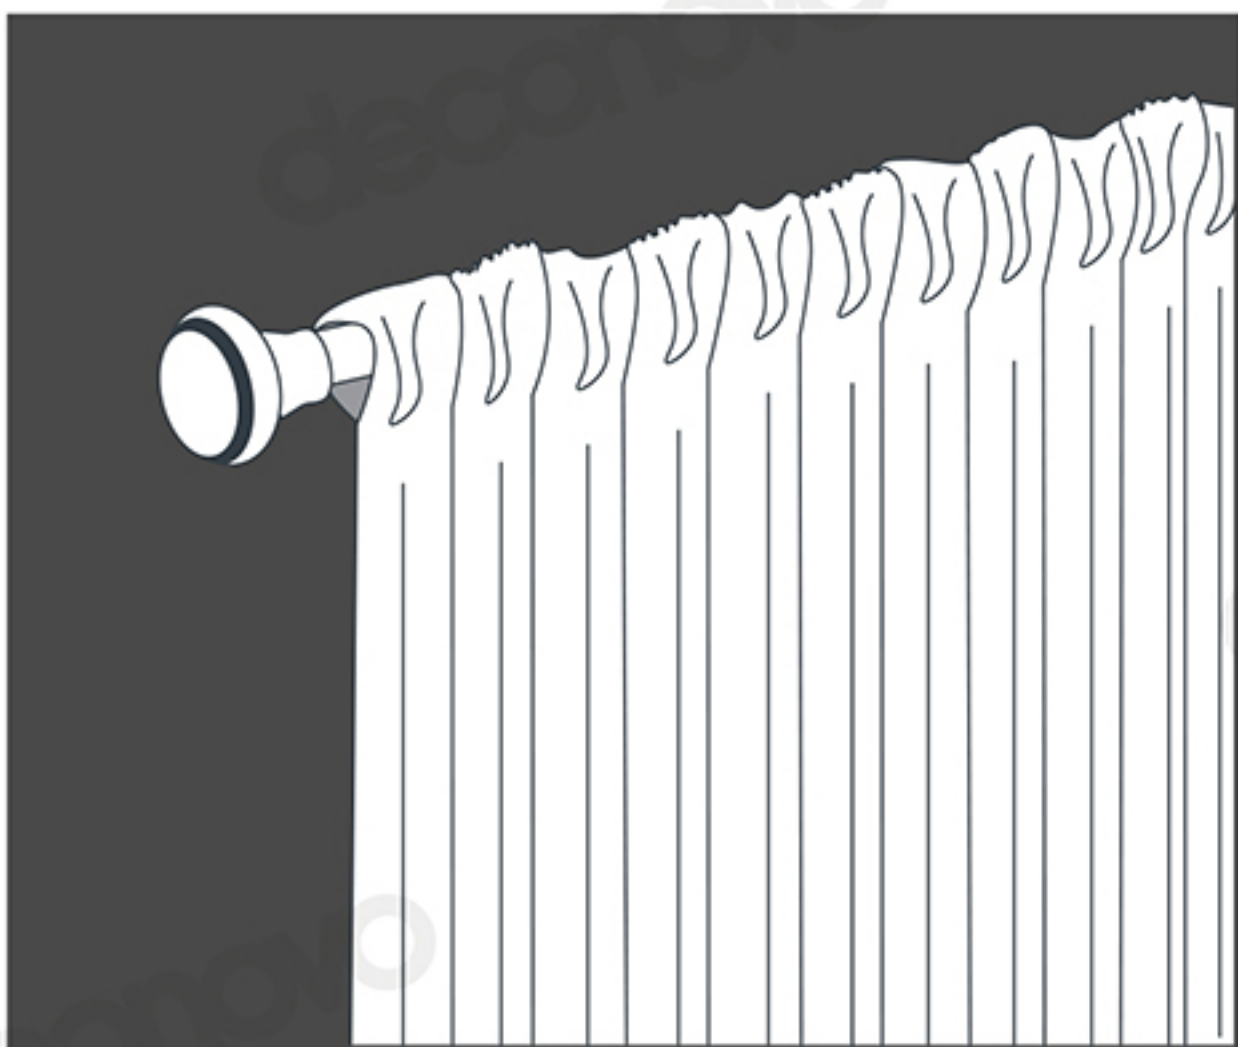

Rod Pockets

Recommended Hardware:

Traditional or decorative curtain rod. Curtain rods usually include brackets and screws.

Hanging Instructions:

- a. Install curtain hardware on window trim or wall depending on your desired look
- b. Glide rod through rod pocket ensuring the front of the panel is facing forward and pull all the way through.
- c. If rod pocket has a header, adjust the curtain so header is spaced evenly and standing up right for a finished look.

Helpful Tips:



Look at side hems to determine curtain orientation. Side with hem fold-over is the back.

Back Tab and Rod Pocket



Recommended Hardware:

Traditional or decorative curtain rod. Curtain rods usually include brackets and screws.

2 ways Hanging Instructions:

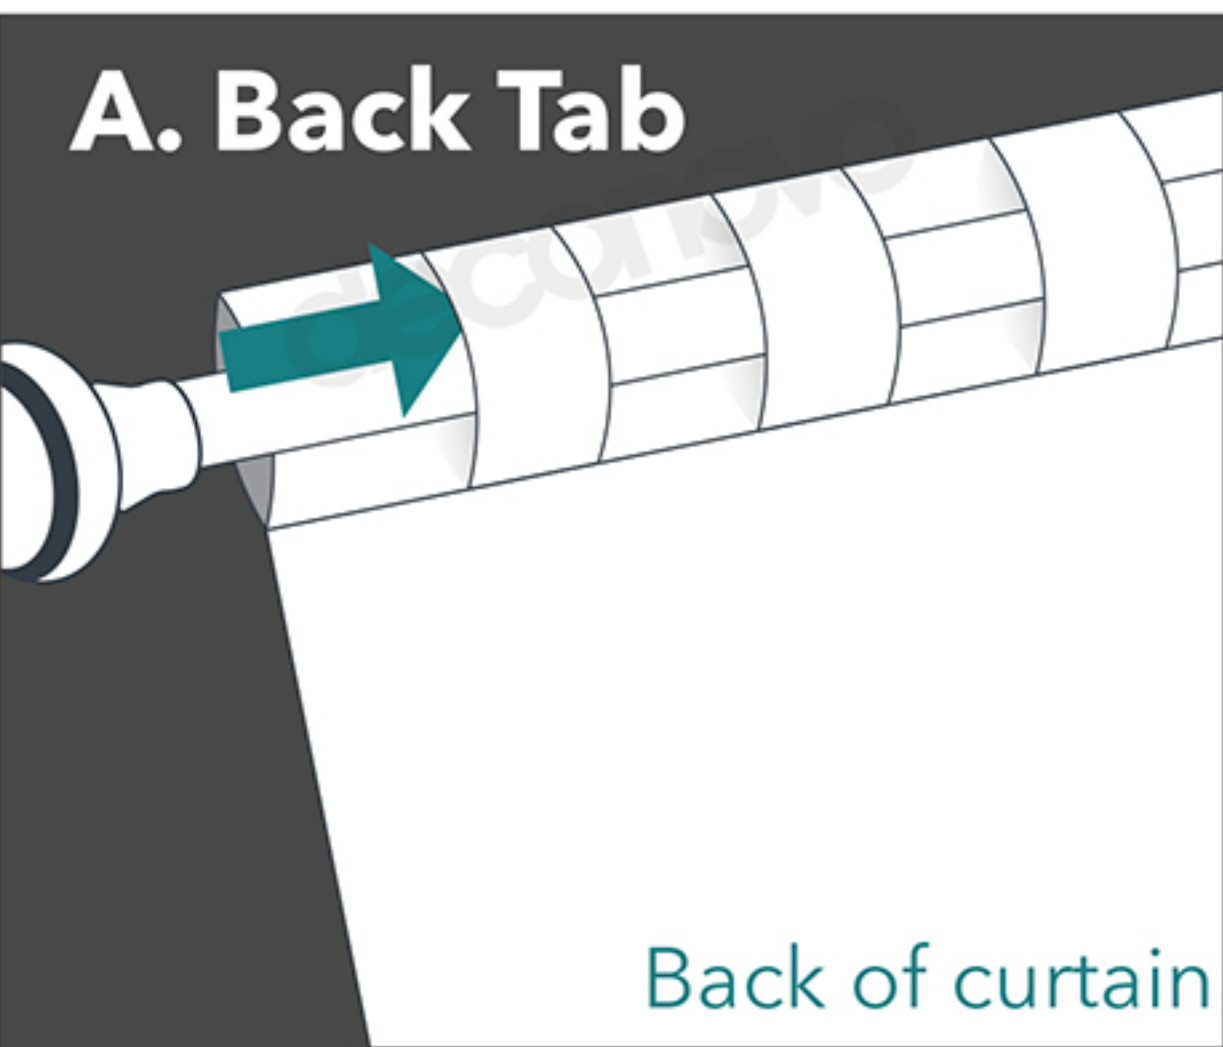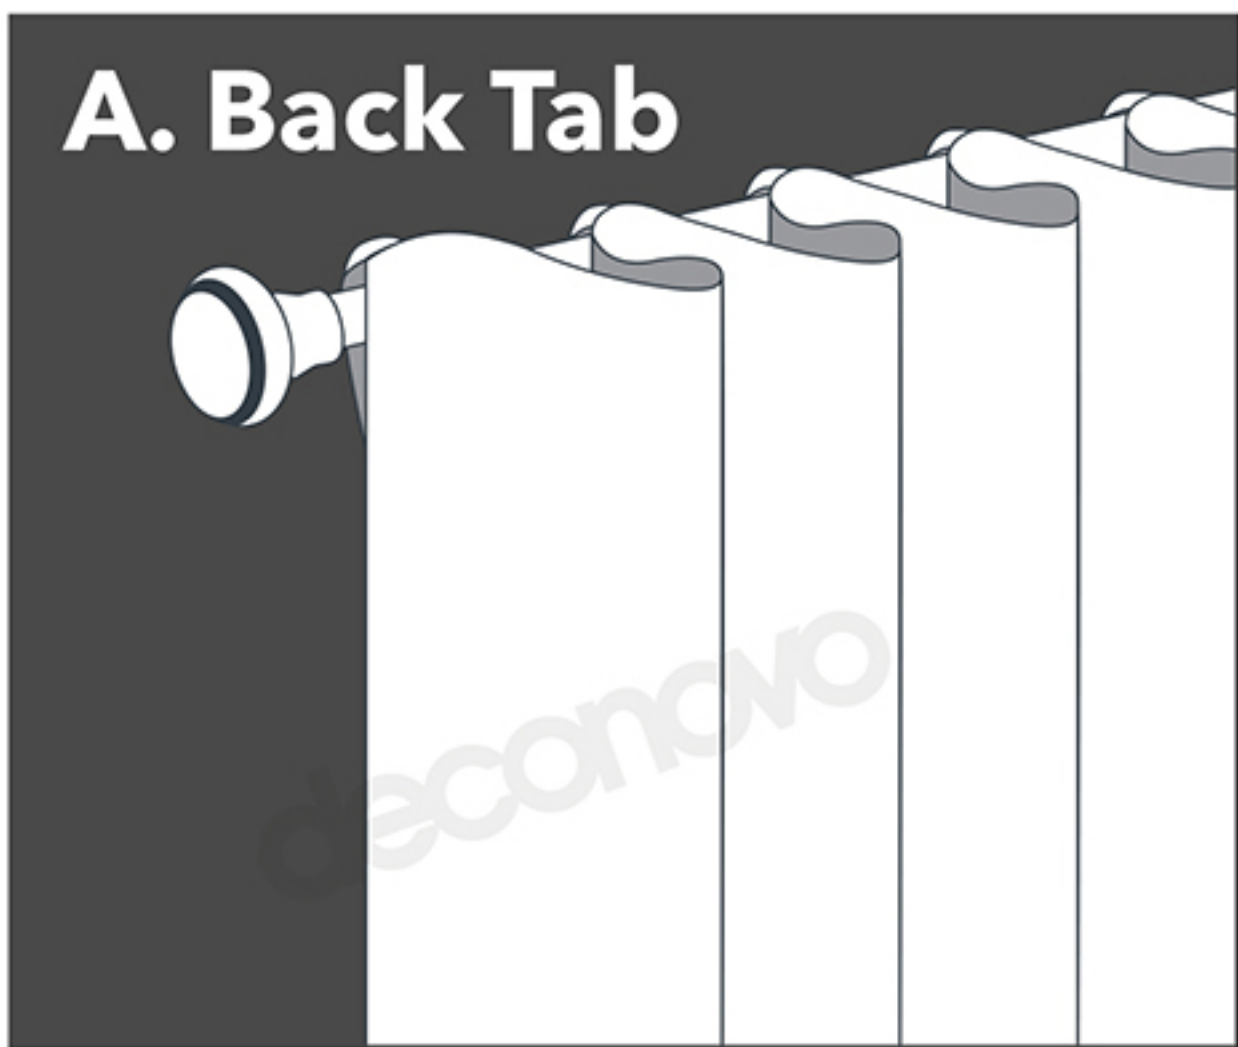

A. Installing Your Back Tab Curtains:
Pass the rod between the pole pocket and the tabs on the back of the curtain.
Once you have inserted the rod through the pocket, let your curtain hang.

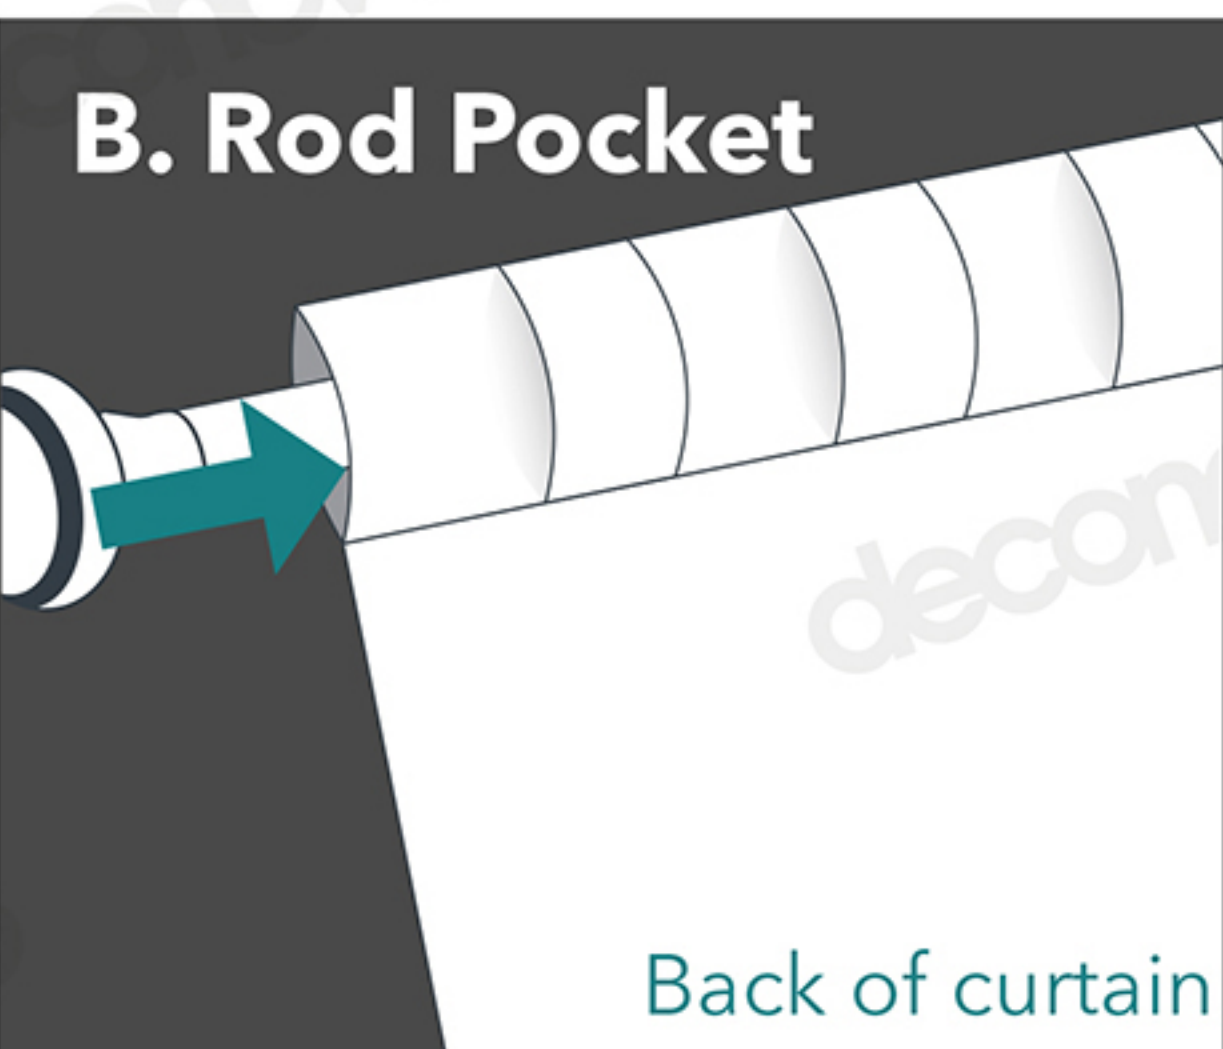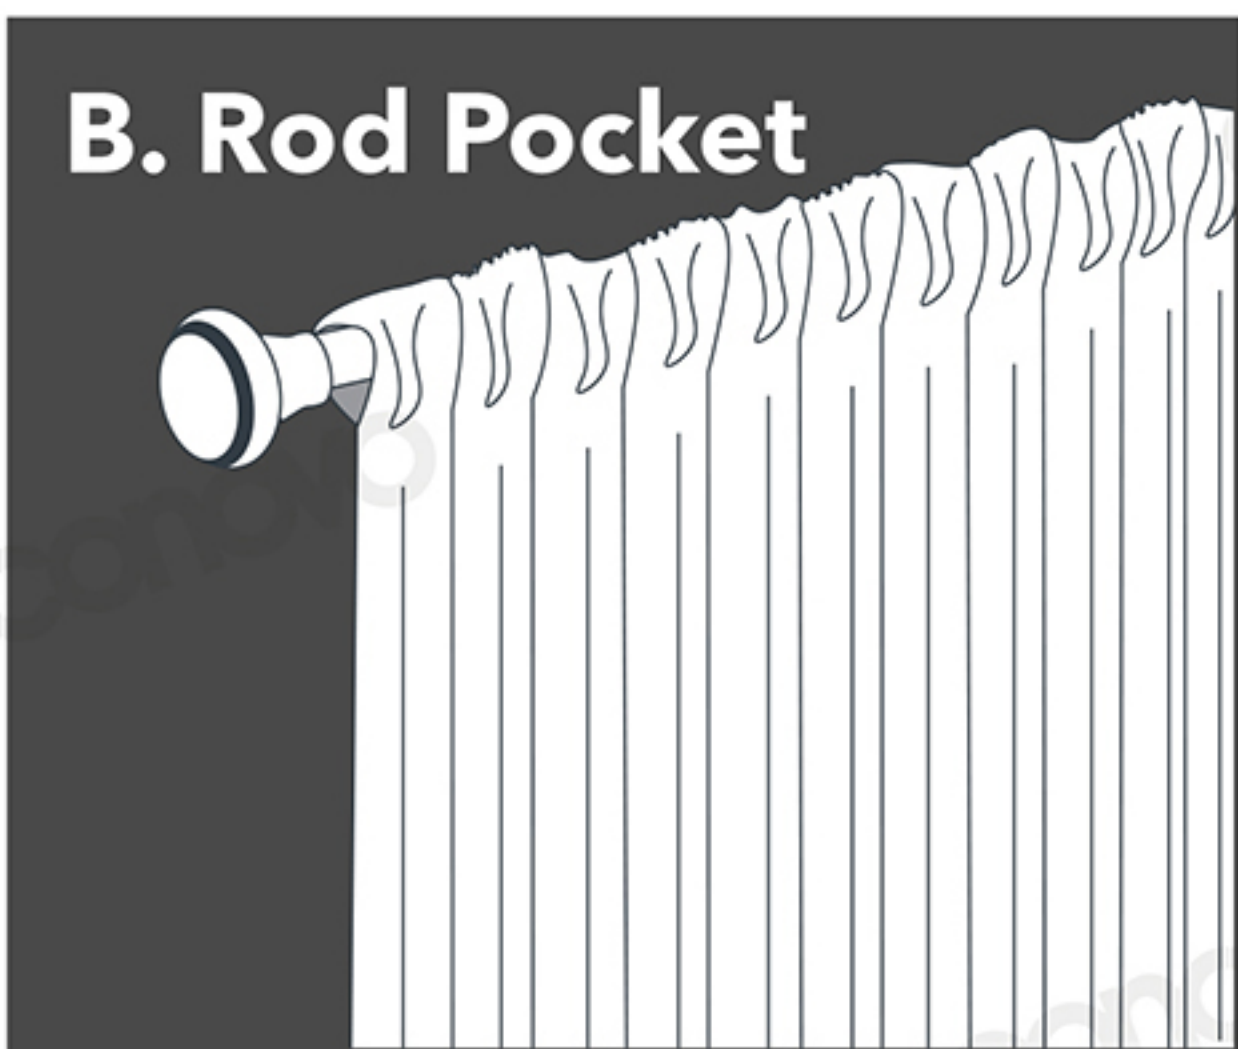


B. Installing Your Rod Pocket Curtains:
Insert your curtain rod through the pocket at the top of the drapery.
Once you have inserted the rod through the pocket, let your curtain hang.

Helpful Tips:

If you steam the folds in place it will help "train" the curtains so that the folds/ripples stay in place after they are opened and closed.

How to Hang Window Curtains

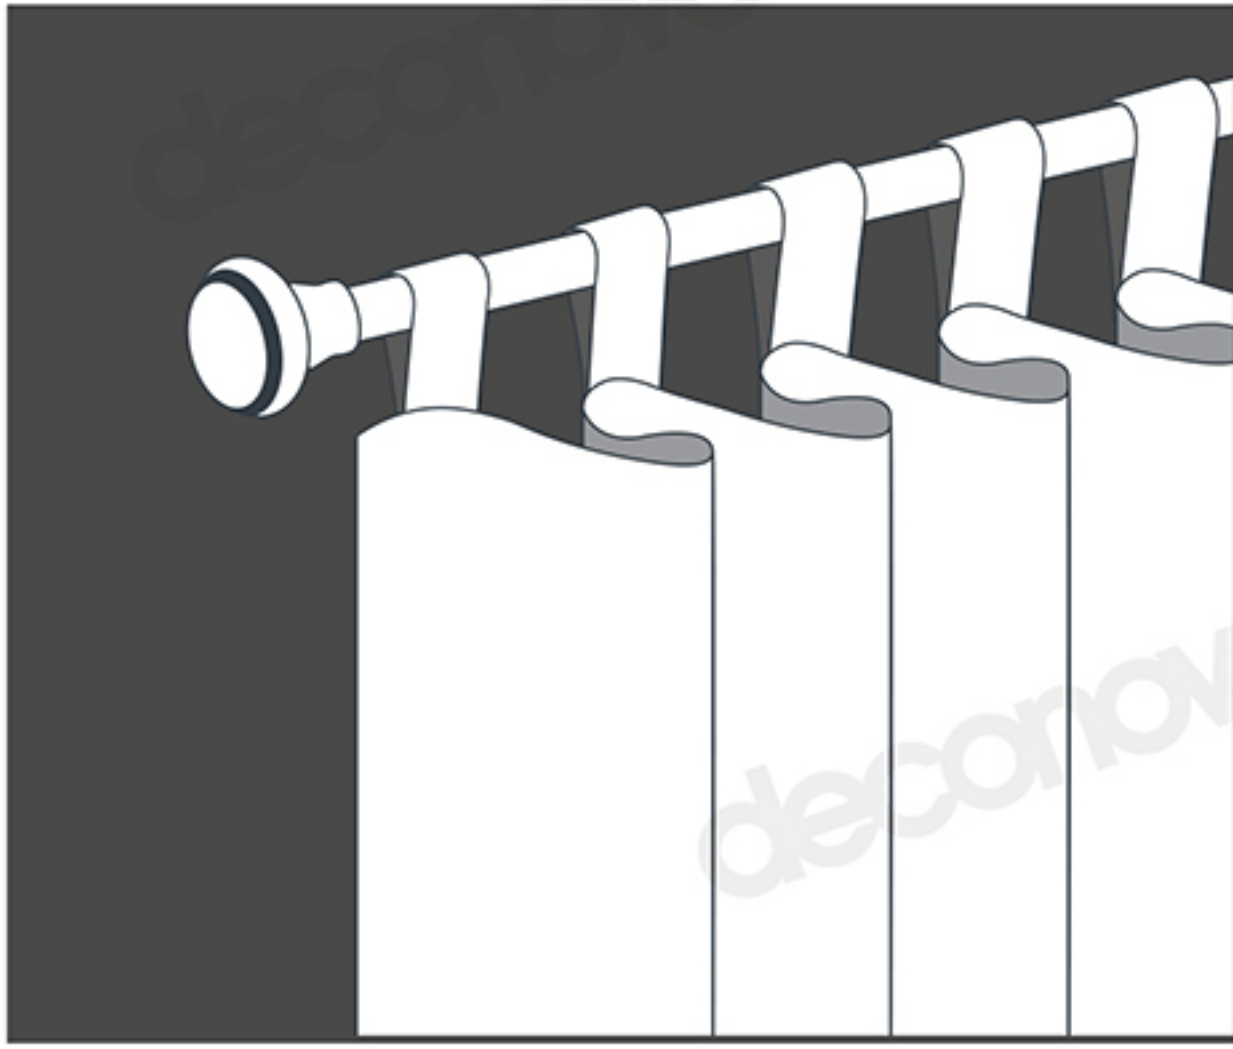

Tab Top

Recommended Hardware:


Traditional or decorative curtain rod. Curtain rods usually include brackets and screws.

Hanging Instructions:

- Install curtain hardware on window trim or wall depending on your desired look
- Insert curtain rod through each tab top fabric loop and adjust curtain panel to create an evenly spaced header.

Helpful Tips:

Since the rod is exposed, use a decorative rod and finials to enhance your finished look.

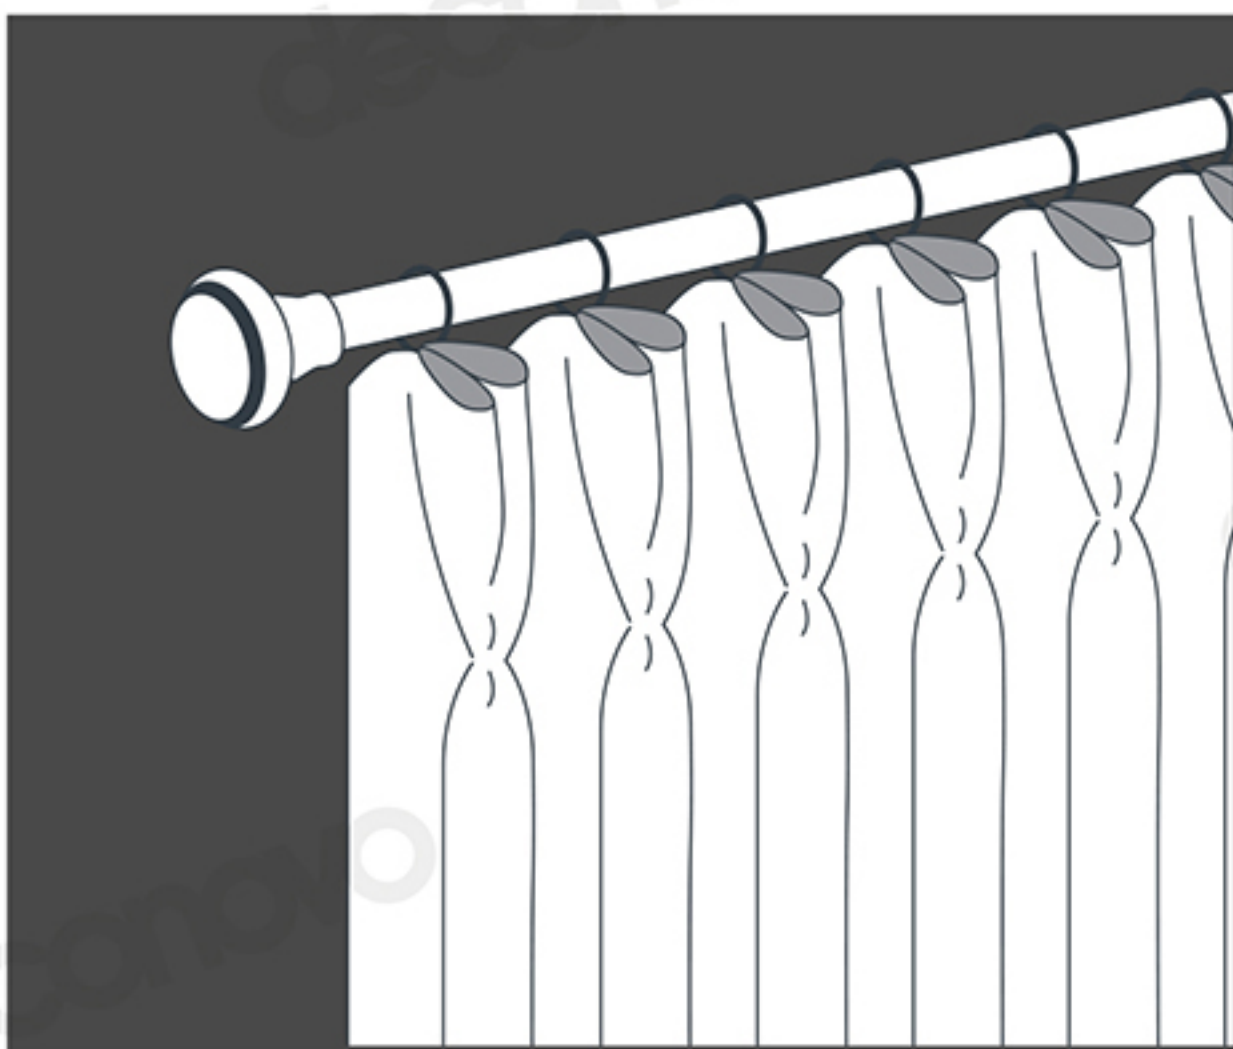

Pinch Pleat

Recommended Hardware:

Decorative rod or a Traverse rod.

Hanging Instructions for Decorative Rod:

- Install curtain hardware on window trim or wall depending on your desired look.
- Prepare curtain by inserting drapery hooks into back-center of each pleat.
- Hook drapery hooks onto clip or drapery rings and slide rings onto decorative rod. Finish by spacing evenly.

Hanging Instructions for Traverse Rod:

- Install traverse rod over door or window using instructions provided on hardware packaging.
- Prepare curtain by inserting drapery hooks into back-center of each pleat.
- Attach each drapery hook into a carrier hook on traverse rod. Finish by spacing evenly.

Helpful Tips:

Consider pinch pleat curtains on patio doors and hang on a traverse rod for easy open and close.

Care & Cleaning

Care & Cleaning

If the curtain is dusty, simply vacuum over it using an upholstery attachment. For stubborn stains or overall deep cleaning, machine wash warm, delicate cycle. Use non-chlorine bleach when needed. Tumble dry low. Little or no ironing necessary.

deconovo

your home decor specialists