ASSEMBLY INSTRUCTIONS

HOME SERIES V2 / SIDE BARRIERS V2

*Pro Package also includes the **Pro Turf.**
This last page of this guide provides installation instructions for the
Rubber Tee's, Flag & Putting Cup (optional add-ons)

HOME SERIES V2
MULTI-SPORT NET

Assembly Instructions

The information in this document is subject to change without notice.
© Copyright The Net Return™ 2007, 2021. All rights reserved.

744905

Read all the warnings before you assemble and use the sports net.



Be sure that you orient your net properly. The Net Return logo always faces the athlete.

Avoid exposing your net to prolonged ultraviolet light as this may fade and/or degrade the sleeve fabric. When not in use, move to a shaded area.

Maintain a safe clearance around and above your net. When orienting your net, consider the surrounding area. Athletes are responsible for injury or damage caused by a mis-hit ball.


STOP

Do not hang, kick, cut or climb on your net. Avoid contacting the net with any sporting equipment other than a ball.




Danger of tipping over! Always weight base with sandbags.

1

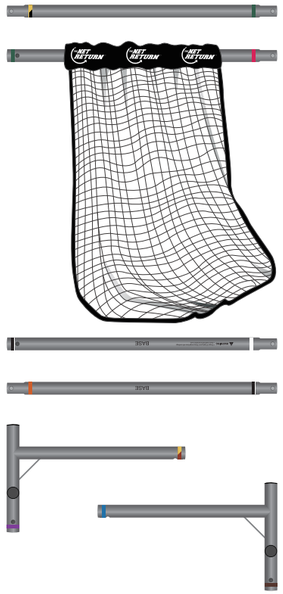


- Lay out the 14 tubes as shown.

Scan the code for a helpful demonstration video or visit www.thenetreturn.com for more details.

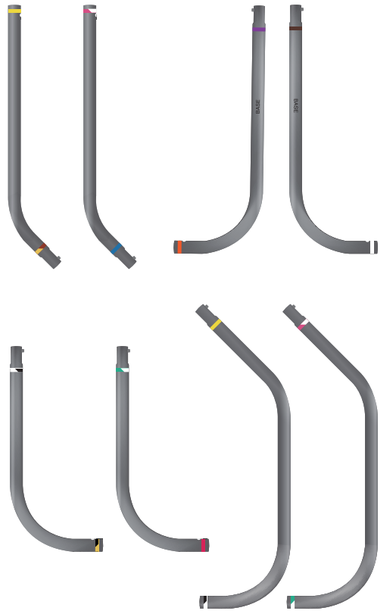

2

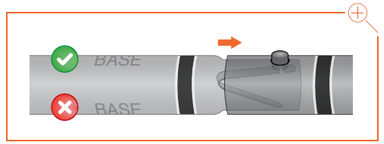




- Find the 4 tubes labeled BASE, and connect them to each other by matching the color stripes together. Make sure the label that says BASE is facing up and can be read.


NOTE: Throughout this manual, certain images contain parts that have been colored yellow. This is meant to bring specific attention to a specific step and is not a representation of their actual color.

3

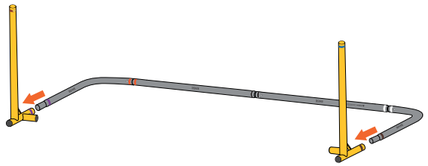


- Next, locate the 2 upright tubes and connect them vertically to the frame base.

4

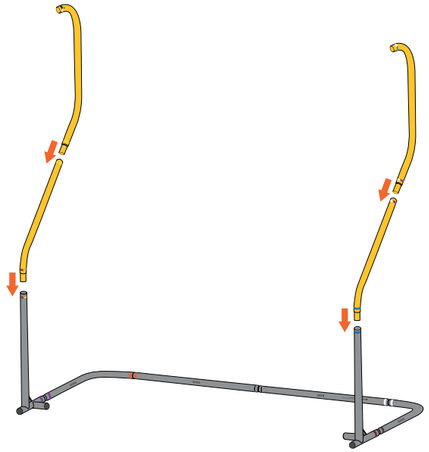

- Continue to build up your frame by connecting the tubes with the identical colored stripes.

5

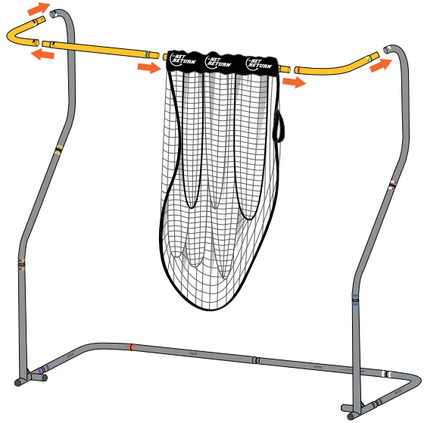

TIP: If the net frame is too tall, tilt the frame onto its back to assemble the uppermost tubes.


- The last tube to connect will be the one with the net.

6



- Once all the tubes are connected, unfasten the Velcro® straps around the net and begin the process of sliding the sleeve down onto the frame, one side at a time.

7

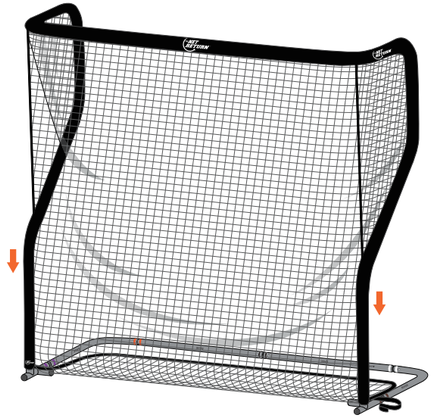

- If you tilted your frame onto its back for assembly, stand your net back up.

TIP: Check that the patch with the Net Return logo is centered along the uppermost tube.
TIP: Lift the bottom of the net and position the excess netting as shown.

- Congratulations, you have successfully assembled your Net Return Home Series Net.

SIDE BARRIERS V2

Assembly Instructions

The information in this document is subject to change without notice.
© Copyright The Net Return™ 2007, 2021. All rights reserved.

750204

Read all the warnings before you assemble and use the sports net.



Be sure that you orient your net properly. The Net Return logo always faces the athlete.

Avoid exposing your net to prolonged ultraviolet light as this may fade and/or degrade the sleeve fabric. When not in use, move to a shaded area.

Maintain a safe clearance around and above your net. When orienting your net, consider the surrounding area. Athletes are responsible for injury or damage caused by a mis-hit ball.


Do not hang, kick, cut or climb on your net. Avoid contacting the net with any sporting equipment other than a ball.



Danger of tipping over! Always weight base with sandbags.

1




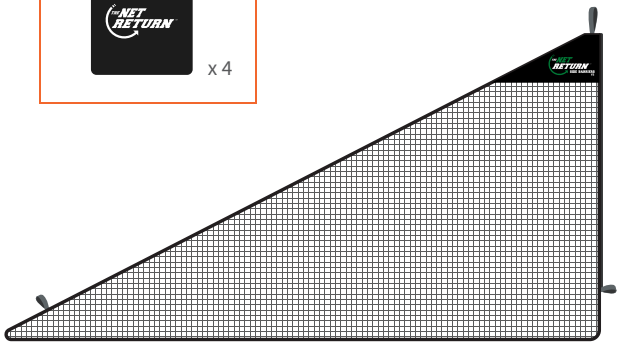


- Lay out the 2 side barriers and 4 sand bags as shown.

NOTE: Throughout this manual, certain images contain parts that have been colored yellow. This is meant to bring specific attention to a specific step and is not a representation of their actual color.


2

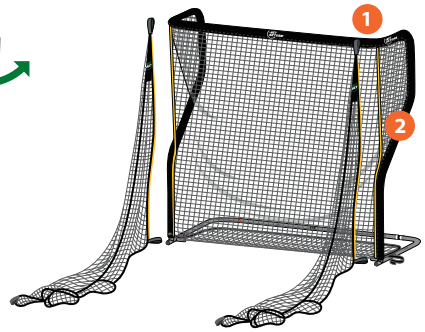


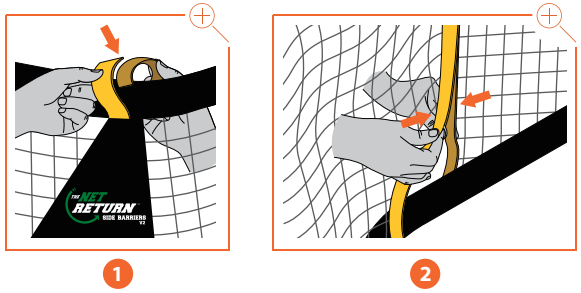

- To attach the side barriers, select one side barrier and align it to one side of your net.
- Fasten the Velcro strap (highlighted in yellow) around the top frame section and fasten securely as shown in the first box above.
- Then, fasten the Velcro strip (also highlighted yellow) along the edge of your side barrier to the corresponding Velcro strip on your net as per the second box above.
- Repeat the same process for the other side barrier.


3

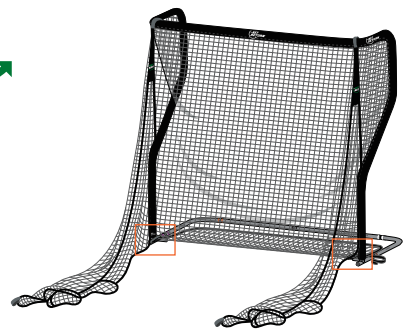


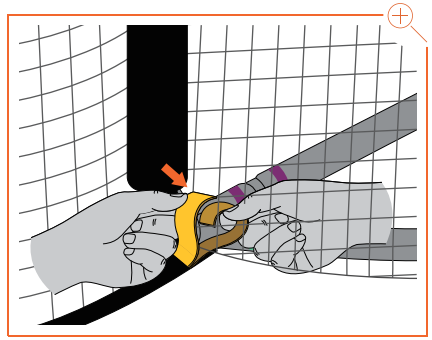

- Locate the lower Velcro straps on the side barriers. Fasten these securely through the net near the base of the frame.

4

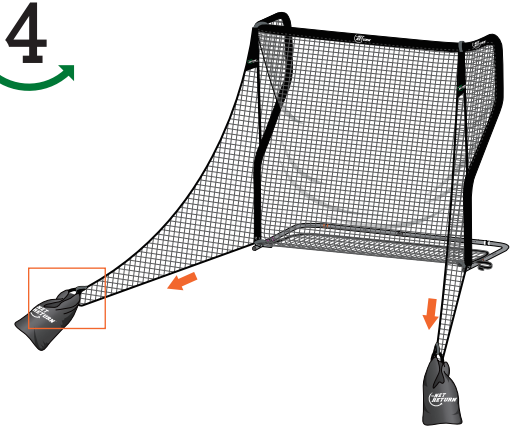

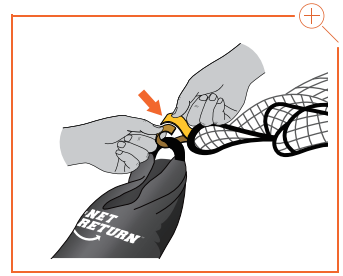

- Fill each of your sandbags with approximately 15 lbs (7 kg) of sand.
- Locate the remaining Velcro on the side barriers. Fasten these securely through the handle of your sandbags.
- Extend the sand bag out to the desired distance. You can flare them wide or they can go straight back.
- Congratulations, you have successfully installed the Side Barriers.

PRO / RUNNER TURF
ADD-ON WITH ACCESSORIES





Both the Pro and Runner turf come with 2 rubber tees. The putting cup & flag is an accessory which can be purchased from TheNetReturn.com

YOU'LL NEED:

- Drill with 3/8" bit
- Utility Knife
- Tape Measure
- Scissors
- Black Marker


RUBBER TEE:

Get situated where you feel most comfortable hitting your Driver (traditionally this is about 8 to 8 1/2 feet back from the front of the net). Mark the location at the end of your Driver using the scissors. Use enough pressure on the scissors so that you can see a mark on the back of the turf.

1




2

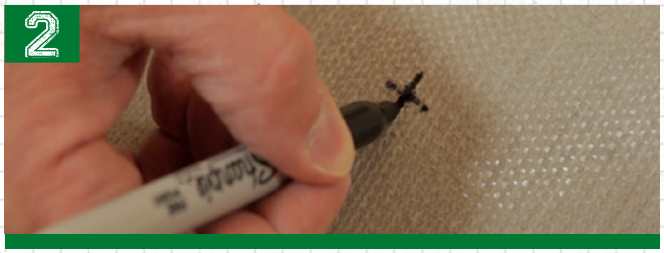

Lift the corner of the turf and find the mark you just created with your scissors.

Use the black marker to highlight the location.

3

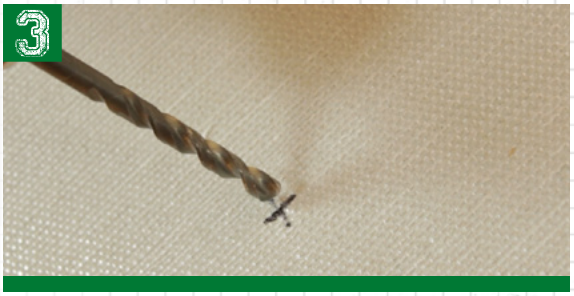

Using your drill with the 3/8" bit, drill the hole for your rubber tee starting from the back of the turf.

Fold the rubber tee in half, feeding it through the hole. If at first it doesn't fit, take the drill and expand the hole a little more, making sure it's still a nice and snug fit.

4





PUTTING CUP:

1 Cut out the putting cup template, which we will use to cut the hole for our putting cup.


The putting cup template is on pg. 6, tear out the page if necessary


2



Flip the turf upside down and place the cut-out where you want your hole. We recommend 4 to 5 inches from the edge of the turf opposite your rubber tee, centered on the turf. Use a tape measure to ensure accuracy.

CONTINUED

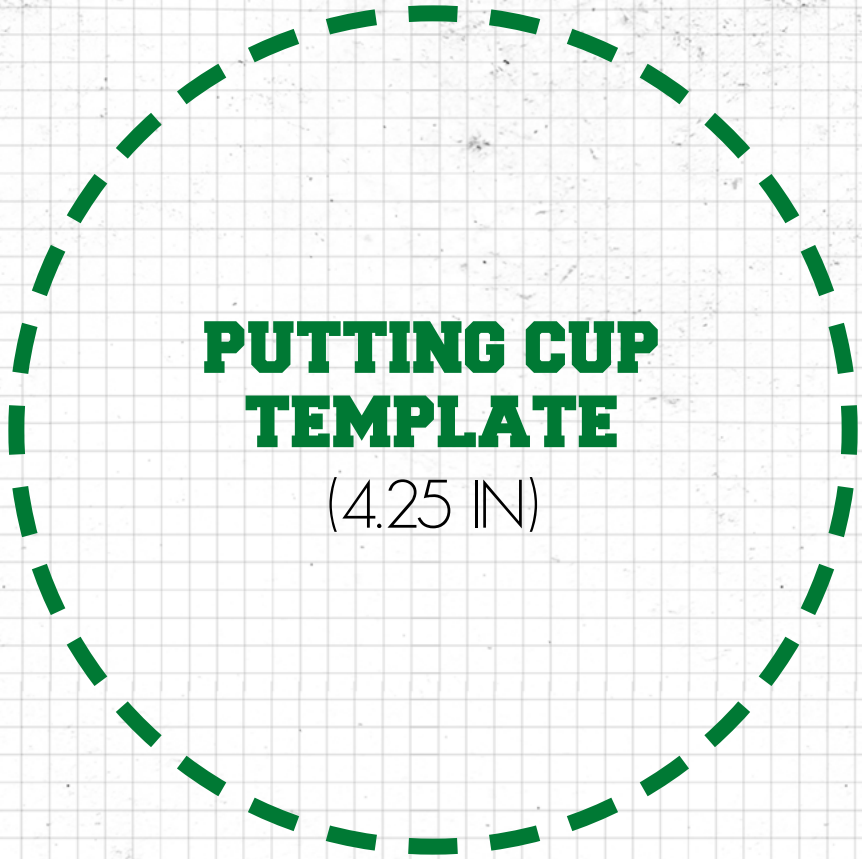
PUTTING CUP
TEMPLATE
(4.25 IN)

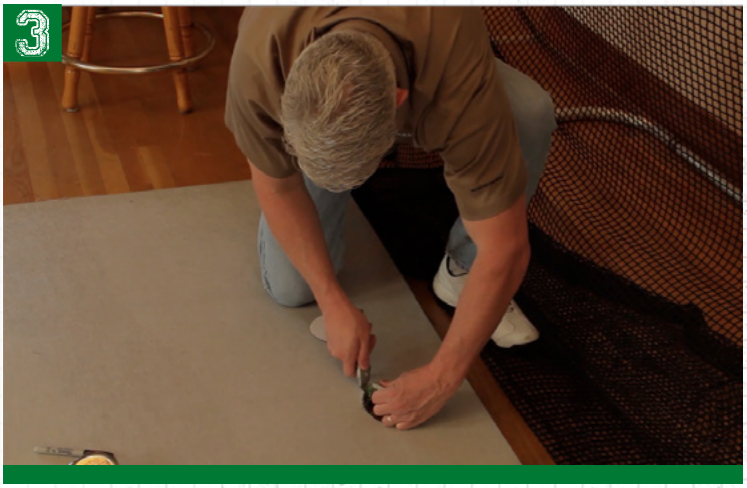

Use the black marker to trace the template, and with the utility knife carefully cut out the hole.



Trim off any residual nylon with your scissors, creating a clean hole.



Flip the turf over and start putting. Note: If your purchased a putting cup and flag (3 pieces), See steps 6-7 below).



The bottom piece of the cup snaps in underneath your turf.



The blowfish slides onto the bottom of the plastic flag pole, which connects into the hole in the center of the cup.

