

If you have any questions about the product, please don't hesitate to contact us.
You can reach us through your order. Thanks for your support !

Note :

- Please tighten the bolts tightly, until they won't turn to avoid squeaking. Use of electric drill is recommended.
- Please check and make sure all bolts are securely tightened on the bed frame as they can loosen over time.



Part List



A*1



B*2



C*1



D*2



E*2



F*2



G*1




H*8



I*2




J*2



U*8PCS
(M6*50)



V*8PCS
(GASKETS)




M*4PCS
(M8*35)



N*12PCS
(M6*25)




O*4PCS
(NUT M6)



P*2PCS
(M8*70)




Q*4PCS
(NUT M8)



R*1 S*1


Step1

Join A to the B with Bolt U & Gaskets V as shown

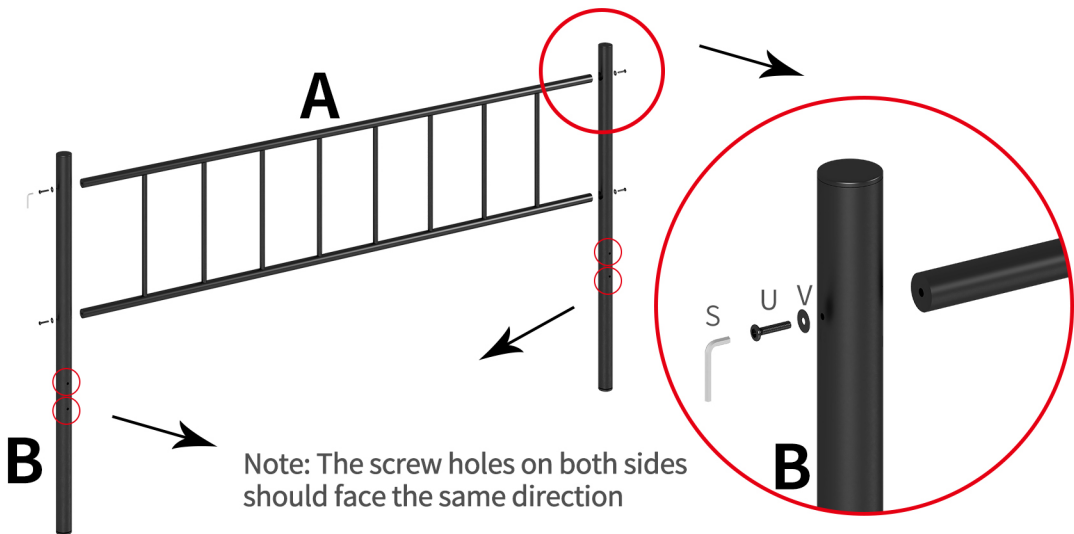


Step2

Join C to the D with Bolt U & Gaskets V as shown

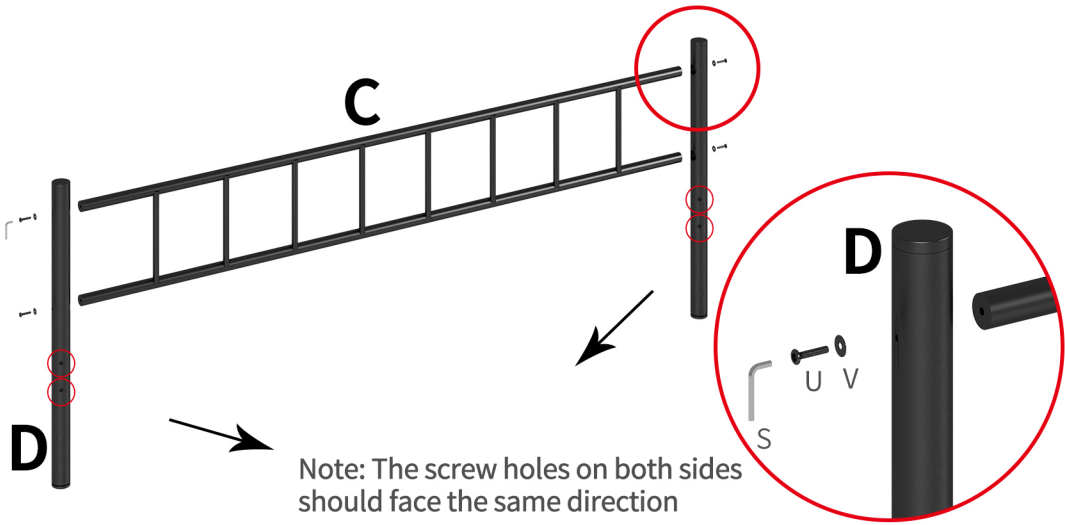


Step3

Unfold and layout E as shown

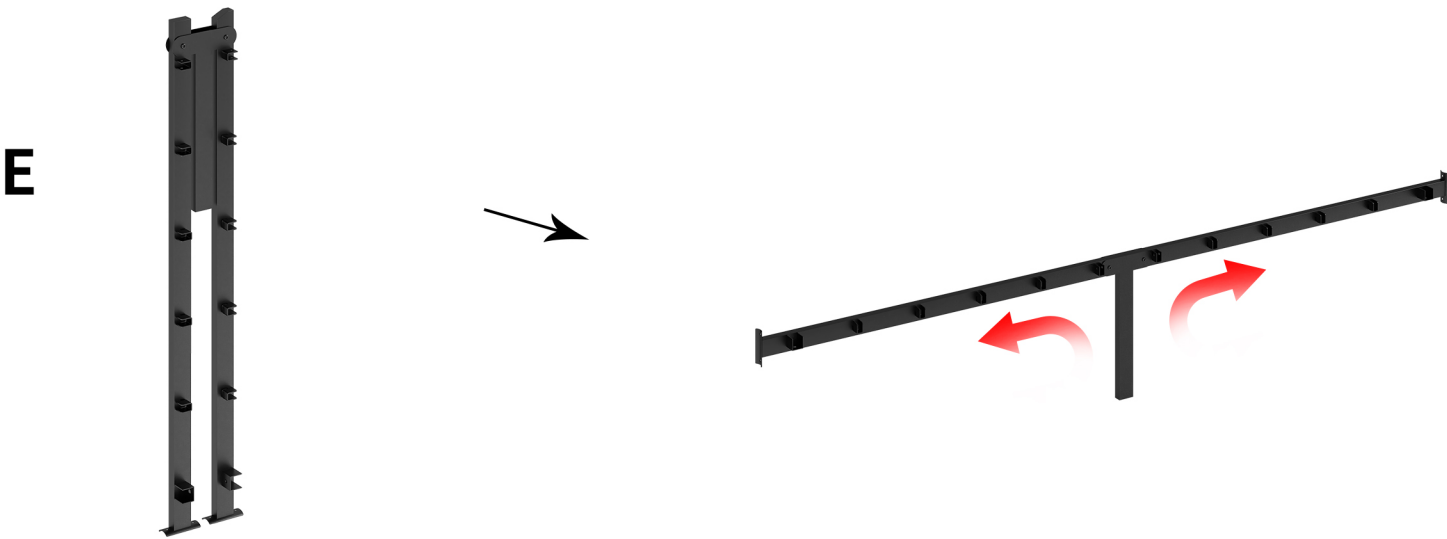

Step4


Join E to the headboard and footboard with Bolt N as shown

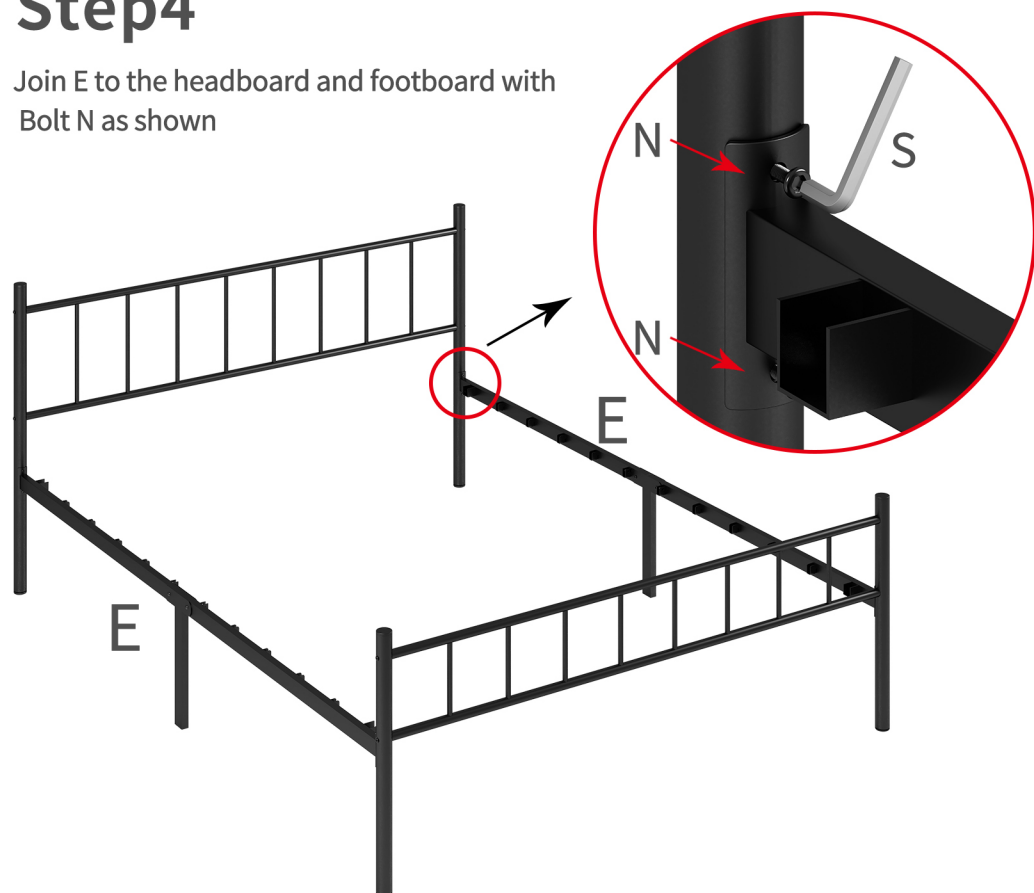

Step5

Insert J to the E


Join J to the E with Bolt N & Nut O as shown

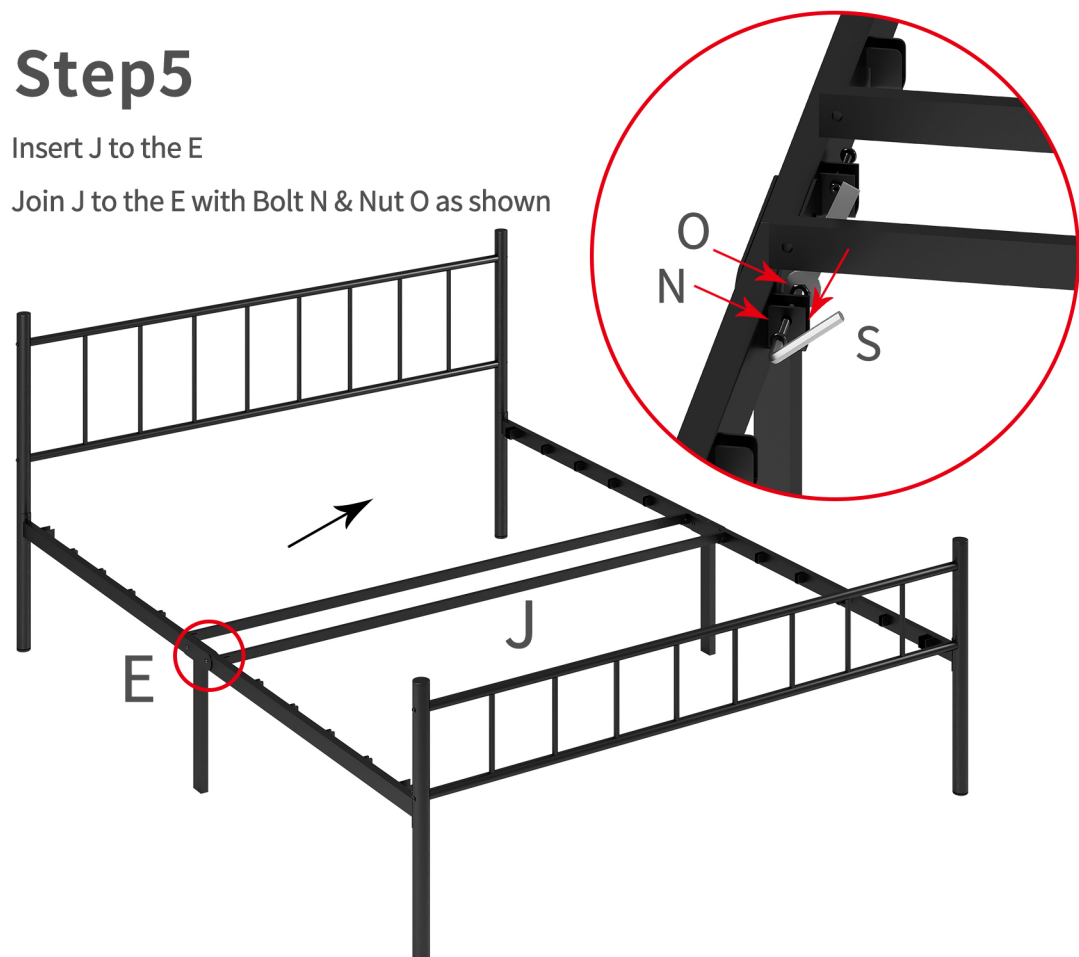

Step6


Insert F to the E

Join F to the E with Bolt M & Nut Q as shown

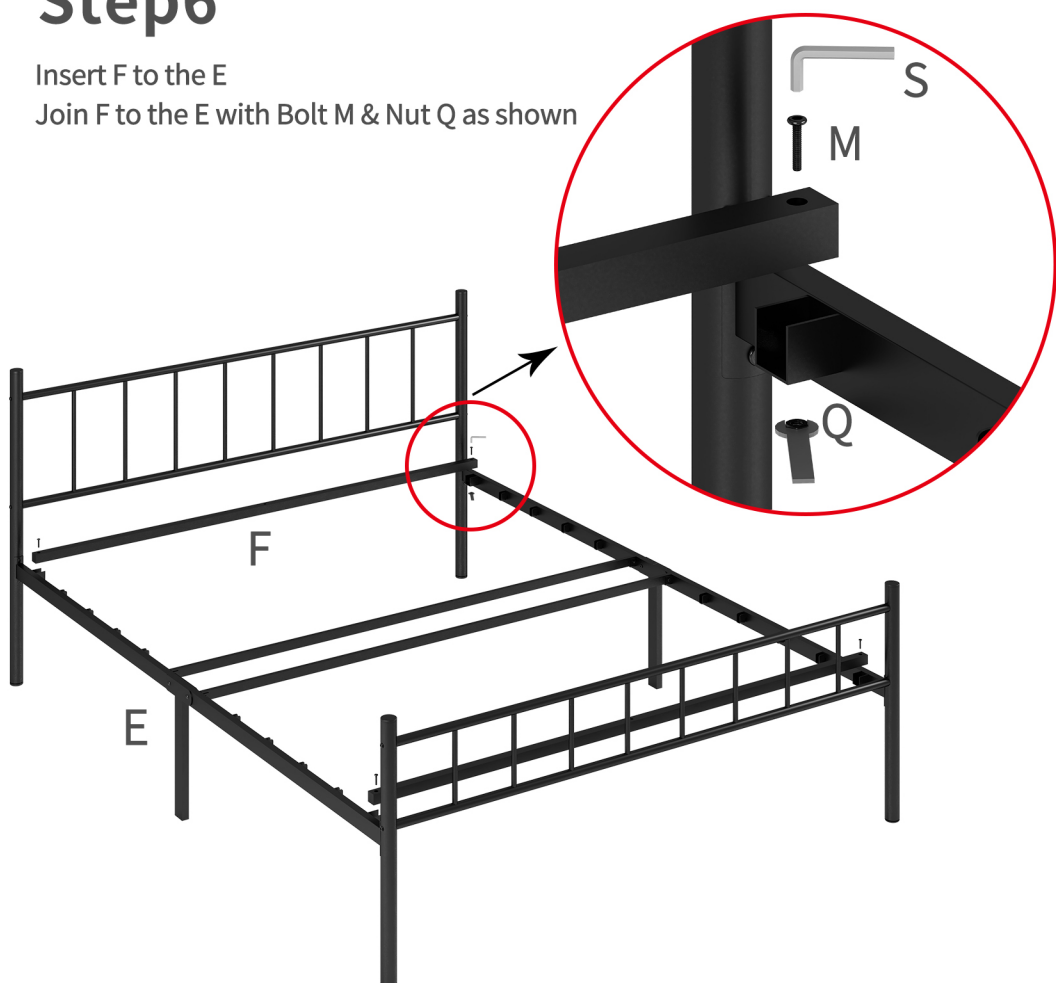


Step7

Unfold and layout G as shown

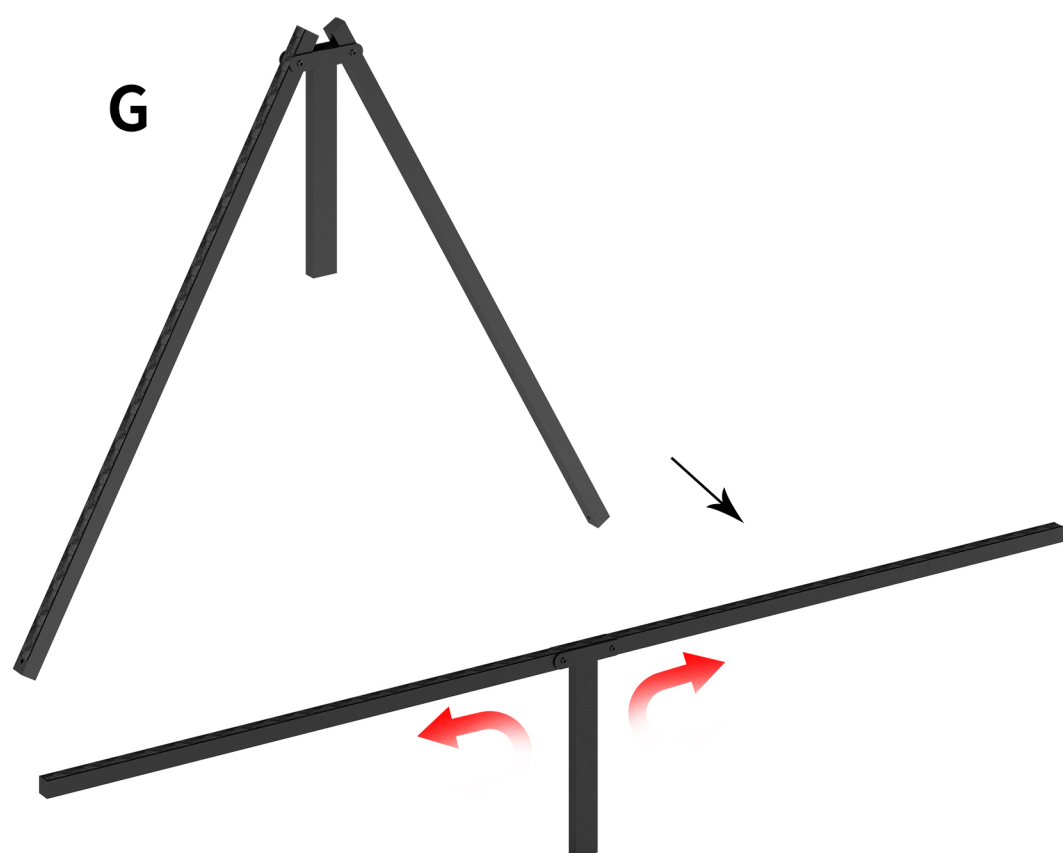

Step8

Join G to the F & I with Bolt P as shown

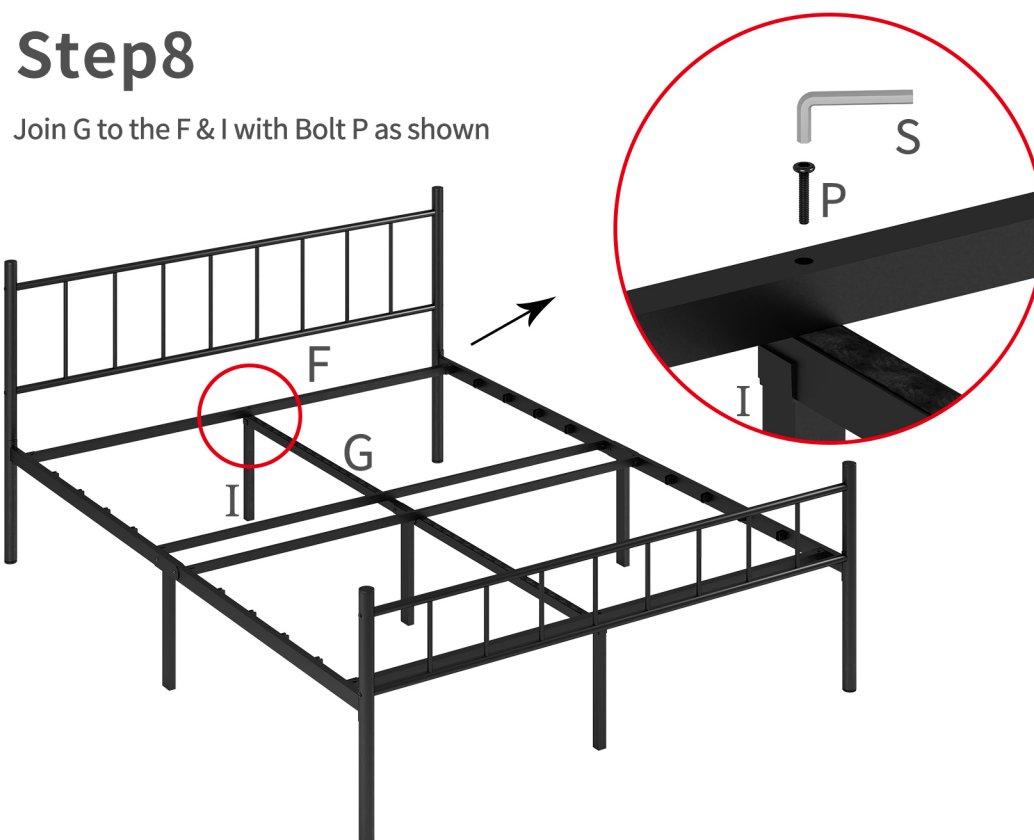

Step9

Insert 8 H slats, complete



In the last step, please make sure all the screws are tightened.