

Important Notice

**Don't get caught off-guard when there is an ice storm or snow.
Keep these snow socks ready for emergencies!**

K&K Snow Socks provide better handling and steering on snowy and icy roads. Highly durable cords and three-dimensional patented fabric technology allow maximum traction and grip. Our snow socks are the result of decades of research and innovation. Our products are tested by independent EU labs in Austria and certified for their superior performance. K&K Snow Socks are at least **2 times thicker and 4 times stronger** than competitors.

K&K Snow Socks are accepted as a legal snow chain alternative or snow traction device in the USA and Europe. Our snow socks comply with all state regulations and can be used where snow chains are required. K&K Snow Socks are independently tested and certified according to EU EN 16662-1 (Reg #: 288-21765). Our snow socks are Approved Alternate Traction Devices (ATD) per the Colorado Department of Transportation (Ref #:5501-22) and comply with the California Vehicle Code (CVC) Section 605. Snow socks are legal snow chain alternatives in California and other states. However, these may be restricted at times due to local conditions. Our snow socks are compatible with all electronic systems such as ESP, ASC + T, ASR, ABS. K&K Snow Socks do not damage the vehicle's electronic stability and brake systems.

Please follow these directions for the best performance:

K&K Snow Socks are designed to improve traction on ice or snow on paved surfaces (asphalt or concrete roads, pavement). Do not use on **gravel, sand, mud, or sleet**.

- Use the **right size** snow socks for your vehicle's tires by checking the dimensions indicated on the tires.
- Use snow socks on your **traction tires** (that is front tires for FWD, rear tires for RWD; for all AWDs or 4x4s, you can use on either front or rear tires). Your tires should have regular pressure for winter before installation.
- For best performance on four-wheel drive vehicles, use on all four tires.
- Put on snow socks before road conditions get worse. Before assembly, make sure that your vehicle is at a safe location. Vehicles passing by on slippery roads cause very high risk.
- Start driving after making sure that the snow socks are fully fitted. After installing test drive for 300 feet and check for proper fitment. Stop driving and check fitment if you hear any noise from your tires or start losing traction. **Avoid sudden acceleration, hard braking, and reduce speed for turns.**
- You can easily get out of the snow or ice and keep driving under 25 mph. Follow posted speed limits and **do not exceed 25 mph** to avoid damaging the snow socks.
- When you get to a dry road from a snowy or icy road, remove snow socks from your tires. Our snow socks are designed to be used for many years. **Do not use on dry roads** to avoid damaging the snow socks. Do not use any snow sock if there is excessive wear and tear due to improper use.
- Do not leave wet snow socks on your tires when parking in freezing temperatures. The socks may freeze and stick to the tires or ground if the car is parked for an extended period during cold weather.
- You can wash the product in mild water after each use to prevent odor. Do not tumble dry. There is a plastic bag in this box is for carrying wet snow socks after use. The other bag is for storage and safely washing your snow socks in your washer.

- **Follow local traffic directions and weather alerts, use your best judgment.
Do not drive if you are not sure that it is safe to drive!**

We are committed to 100% customer satisfaction and offer free replacement in case you experience any issues with our snow socks. Please contact us at info@knkcar.com



INSTALLATION INSTRUCTIONS

ON



Start installing on the top.



Pull downward to cover 3/4.



Adjust and check alignment.




Roll forward or backward for a half rotation.


Press the gas pedal very softly to avoid spinning.



Adjust and check full proper alignment.

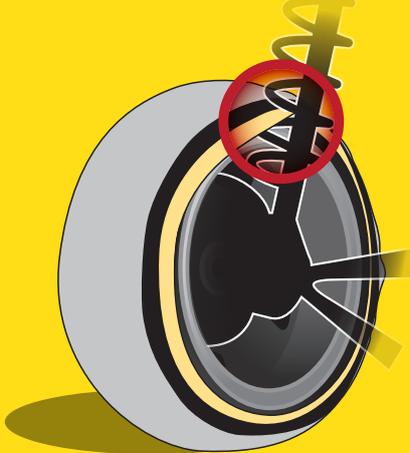

Avoid Contact with the Suspension.

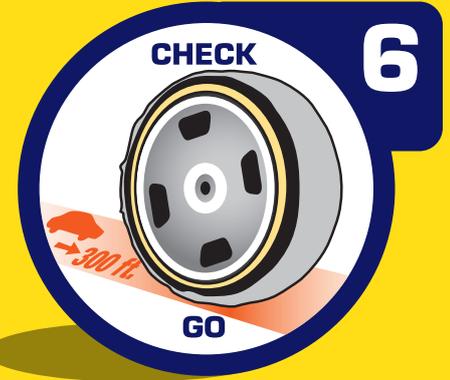

Test drive for 300 ft, stop and check for proper fitment.

OFF



Gently start removing from the top, remove 3/4 of the snow sock.



Roll forward or backward for a half rotation. Press the gas pedal very softly to avoid spinning. Completely remove the snow socks before driving.

