

APPLICATION GUIDE

- Precision Crafted Steel
- Package Color Coded for Easy Thread Identification
- Lustrous Chrome Plating

EASY SELECTIVE STEPS


1-2-3




White Knight
Wheel Accessories

STEP 1


IDENTIFY STYLE OF LUG NUT OR LOCK NEEDED FOR YOUR VEHICLE

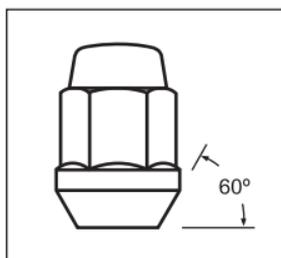

Conical Seat
Wheels require a
conical seat nut or
lock.

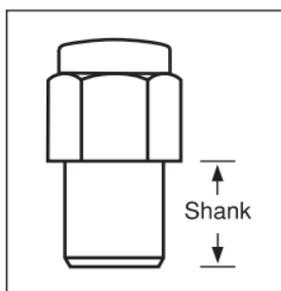


Mag Wheels
require a straight
shank nut or lock
with washers.

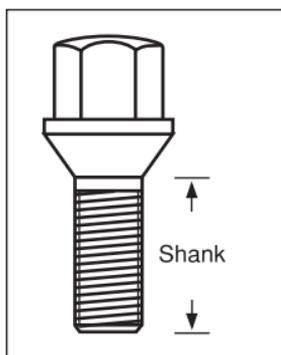


Some European
makes of vehicle
wheels require lug
bolt. Available in
cone seat and ball
seat.


CONE SEAT

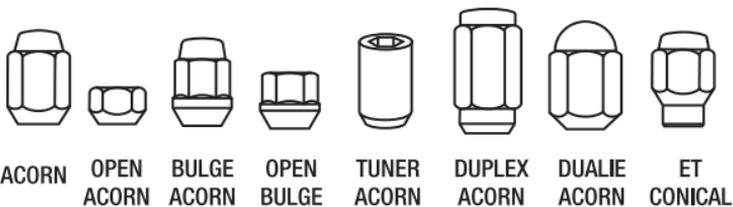


MAG SEAT

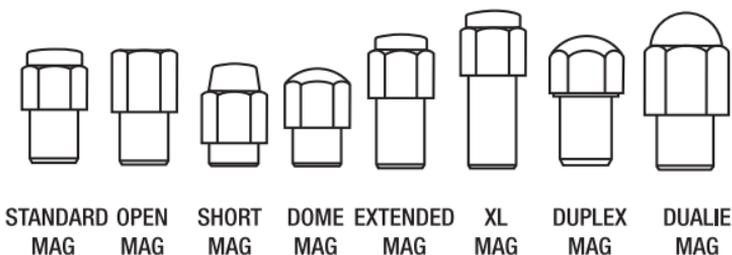

LUG BOLT

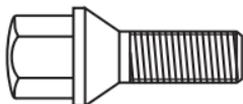

CONE
SEAT

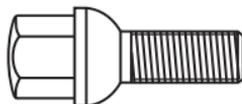

BALL
SEAT

STEP 2

CONFIRM PROPER THREAD SIZE.

- Find your vehicle in this application guide by MAKE AND MODEL then by year.
- Determine the correct thread size.

MAKE AND MODEL	YEAR	THREAD SIZE
ACURA		
ALL	1986-0n	12mm X 1.50
AUDI		
ALL	1988-0n	14mm x 1.50 Bolt
ALFA ROMEO		
ALL	1972-0n	12mm X 1.50
AMC		
ALL	1958-1982	1/2"

STEP 3

FIND THE LUG NUT OR WHEEL LOCK YOU NEED.

WHITE KNIGHT Lug nuts and wheel locks are packaged color coded for easy thread identification.



**color
code**

	7/16" R.H.
	1/2" R.H.
	9/16" R.H.
	12mm x 1.25 R.H.
	12mm x 1.50 R.H.
	14mm x 1.50 R.H.
	14mm x 2.0 R.H.
	12mm x 1.75 R.H.
	14mm x 1.25 R.H.

THREAD SIZE APPLICATION GUIDE

This is ONLY a guide. To insure proper fit, refer to your stock lug nut to determine the correct thread size for your vehicle.

Information provided within comes from various sources. It should be understood that while this information is accurate to the best of our knowledge, it is only a guide. The company cannot be held liable for any of the recommendations made within. The expertise and judgment of installer of the wheel and tire package always overrides any recommendations in this guide.

MAKE AND MODEL	YEAR	THREAD SIZE
----------------	------	-------------

ACURA

ALL (Except Below)	1986-On	12mm x 1.50
MDX	2001-2006	12mm x 1.50
MDX	2007-On	14mm x 1.50
RL	2005-On	14mm x 1.50
TL	2004-2008	12mm x 1.50
TL	2009-On	14mm x 1.50
ZDX	2010-On	14mm x 1.50

ALFA ROMEO

ALL	1972-On	12mm x 1.50
-----	---------	-------------

AMC

ALL (Except Below)	1958-1982	1/2"
Alliance & Encore	1983-On	12mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
-----------------------	-------------	--------------------

ASTON MARTIN

ALL	2004-On	14mm x 2.00
-----	---------	-------------

AUDI

ALL (Except Below)	1980-On	14mm x 1.50 Bolt
4000	1980-1987	12mm x 1.50 Bolt

BENTLEY

ALL	2004-On	14mm x 1.50 Bolt
-----	---------	------------------

BMW

ALL	1962-1976	12mm x 1.50
ALL (Except Below)	1977-On	12mm x 1.50 Bolt
5 Series	2012-On	14mm x 1.25 Bolt
6 Series	2012-On	14mm x 1.25 Bolt
7 Series	2002-2008	14mm x 1.50 Bolt
7 Series	2009-On	14mm x 1.25 Bolt
X3	2003-2010	14mm x 1.50 Bolt
X3	2011-On	14mm x 1.25 Bolt
X5	2000-2006	14mm x 1.50 Bolt
X5	2006-On	14mm x 1.25 Bolt
X6	2008-On	14mm x 1.25 Bolt

BUICK

All Front Wheel Drive	1979-1989	12mm x 1.50
Allure	2005-On	12mm x 1.50
Apollo	1973-1981	7/16"

MAKE AND MODEL	YEAR	THREAD SIZE
Century	1973-1981	7/16"
Century	1982-On	12mm x 1.50
Electra	1958-1984	1/2"
Electra	1985-1991	12mm x 1.50
Enclave	2008-On	14mm x 1.50
Grand Sport	1961-1982	7/16"
Lacrosse	2005-On	12mm x 1.50
Lacrosse	2010-On	14mm x 1.50
Le Sabre	1961-1976	1/2"
Le Sabre	1977-1985	7/16"
Le Sabre (Station Wagon, V8)	1977-1990	1/2"
Le Sabre	1986-2005	12mm x 1.50
Lucerne	2006-On	12mm x 1.50
Limited	1980-On	12mm x 1.50
Opel	1968-1979	12mm x 1.50
Park Avenue	1984-2005	12mm x 1.50
Rainier	2004-On	12mm x 1.50
Reatta	1988-1992	12mm x 1.50
Regal	1977-1981	7/16"
Regal	1982-2004	12mm x 1.50
Regal	2011-On	14mm x 1.50
Rendezvous	2002-On	12mm x 1.50
Riviera	1963-1978	1/2"

MAKE AND MODEL	YEAR	THREAD SIZE
Riviera	1979-1999	12mm x 1.50
Roadmaster	1991-1996	12mm x 1.50
Skyhawk	1975-1981	7/16"
Skyhawk	1982-1991	12mm x 1.50
Skylark	1962-1979	7/16"
Skylark, Somerset	1980-1998	12mm x 1.50
Special & Special Wagon	1967-1977	7/16"
Terraza	2005-On	12mm x 1.50
Verano	2012-On	12mm x 1.50

CADILLAC

All Front Wheel Drive	1979-On	12mm x 1.50
Allante	1979-1993	12mm x 1.50
Brougham	1987-1990	1/2"
Brougham	1991-1995	12mm x 1.50
Catera	1997-2002	12mm x 1.50 Bolt
Cimarron	1981-1988	12mm x 1.50
CTS, CTS-V	2003-2007	12mm x 1.50
CTS, CTS-V	2008-On	14mm x 1.50
Deville (RWD)	1962-1985	1/2"
Deville (FWD)	1986-2005	12mm x 1.50
DTS	2006-On	12mm x 1.50
El Dorado	1953-1978	1/2"
El Dorado	1979-2002	12mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
Escalade	1999-On	14mm x 1.50
Fleetwood (RWD)	1960-1986	1/2"
Fleetwood (FWD)	1987-1996	12mm x 1.50
Seville	1975-1976	7/16"
Seville	1977-1979	1/2"
Seville	1980-On	12mm x 1.50
SRX , XLR, XLR-V	2004-2009	12mm x 1.50
SRX	2010-On	14mm x 1.50
STS, STS-V	2005-On	12mm x 1.50
XTS	2013-On	14mm x 1.50

CHEVROLET/GEO

Aveo	2004-On	12mm x 1.50
Bel Air, Biscayne	1954-1970	7/16"
Bel Air, Biscayne	1971-1976	1/2"
Beretta	1988-1996	12mm x 1.50
Camaro	1967-1981	7/16"
Camaro	1982-2002	12mm x 1.50
Camaro	2010-On	14mm x 1.50
Caprice	1968-1976	1/2"
Caprice	1977-1990	7/16"
Caprice (Station Wagon & V8)	1977-1990	1/2"
Caprice and Wagon	1991-1996	12mm x 1.50
Cavalier, Celebrity, Corsica	1982-2005	12mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
Chevelle	1964-1976	7/16"
Chevette	1976-1987	12mm x 1.50
Citation	1980-1985	12mm x 1.50
Cobalt	2005-On	12mm x 1.50
Corvette	1953-1983	7/16"
Corvette	1984-On	12mm x 1.50
Cruze	2011-On	12mm x 1.50
Epica, Optra	2004-2007	12mm x 1.50
Equinox	2005-On	12mm x 1.50
Geo Metro	1990-1994	10mm x 1.25
Geo Metro	1995-2001	12mm x 1.25
Geo Metro Convertible	1990-1993	12mm x 1.25
Geo Prizm, Storm	1990-2002	12mm x 1.50
Geo Tracker	1989-2004	12mm x 1.25
HHR	2006-On	12mm x 1.50
Impala	1958-1970	7/16"
Impala	1971-1976	1/2"
Impala	1977-1984	7/16"
Impala (Station Wagon & V8)	1977-1984	1/2"
Impala	1993-On	12mm x 1.50
Laguna, Monza & Vega	1965-1981	7/16"
Lumina	1989-2001	12mm x 1.50
Lumina APV	1990-1996	12mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
Malibu	1964-1981	7/16"
Malibu	1982-On	12mm x 1.50
Metro	1995-2001	12mm x 1.25
Monte Carlo	1970-1981	7/16"
Monte Carlo	1982-On	12mm x 1.50
Nova, Chevy II	1962-1979	7/16"
Nova	1986-1989	12mm x 1.50
Sonic	2012-On	12mm x 1.50
Spectrum	1985-1989	12mm x 1.50
SSR	2004-2006	12mm x 1.50
Volt	2011-On	12mm x 1.50

CHEVROLET/GMC TRUCKS & SUV

Acadia	2007-On	14mm x 1.50
Avalanche	2002-On	14mm x 1.50
Astro Van	1985-2002	1/2"
Astro Van	2003-2006	14mm x 1.50
Blazer 4x4 (6 Lug)	1971-1991	7/16"
Blazer 2 W/D (5 Lug)	1971-1991	1/2"
Blazer	1992-1994	14mm x 1.50
S-10 Blazer	1983-2005	12mm x 1.50
C-10	1971-1988	1/2"
C-1500 (5 Lug)	1971-1987	1/2"
C-1500 (5 Lug)	1988-1998	14mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
C-2500	1988-2000	14mm x 1.50
C-3500	1988-2000	14mm x 1.50
Caballero, El Camino	1964-1981	7/16"
Caballero, El Camino	1982-1987	12mm x 1.50
Canyon	2004-On	12mm x 1.50
Chevy 3/4 Ton Van (5 Lug)	1960-1981	1/2"
Colorado	2004-On	12mm x 1.50
Envoy	1999-2009	12mm x 1.50
Express Van, Denali	1996-On	14mm x 1.50
Equinox	2005-2009	12mm x 1.50
Equinox	2010-On	14mm x 1.50
Jimmy (5 Lug)	1969-1970	7/16"
Jimmy (5 Lug)	1971-1991	1/2"
Jimmy (6 Lug)	1971-1991	7/16"
Luv	1972-1984	12mm x 1.50
Pickup (5 Lug)	1971-1987	1/2"
Pickup (6 Lug)	1937-1987	7/16"
Pickup (8 Lug)	1965-1987	1/2" or 9/16"
Pickups (All)	1988-On	14mm x 1.50
S-15, Sonoma & Jimmy	1983-On	12mm x 1.50
Safari	1985-2002	1/2"
Safari	2003-2005	14mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
Savana	1992-On	14mm x 1.50
Silverado (All)	1996-On	14mm x 1.50
Sierra	1999-On	14mm x 1.50
Sprint	1964-1981	7/16"
SSR	2004-2006	12mm x 1.50
Suburban (5 Lug)	1969-1970	7/16"
Suburban (5 Lug)	1971-1991	1/2"
Suburban (6 Lug)	1969-1991	7/16"
Suburban (8 Lug)	1969-1991	9/16"
Suburban, Yukon All	1992-On	14mm x 1.50
Tahoe	1995-On	14mm x 1.50
Terrain	2010-On	14mm x 1.50
Tracker	1989-2004	12mm x 1.25
Traverse	2009-On	14mm x 1.50
Trail Blazer, Trailblazer XL	2002-2009	12mm x 1.50
Uplander	2005-2009	12mm x 1.50
Van/Express	1996-On	14mm x 1.50
Van 5 Lug (Except Express & Savana)	1971-1996	1/2"
Van 6 Lug (Except Express & Savana)	1971-1996	7/16"
Van 8 Lug (Except Express & Savana)	1965-1996	1/2" or 9/16"
Venture Minivan	1997-2005	12mm x 1.50
Yukon, Yukon Denali	2000-On	14mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
CHRYSLER		
200	2011-On	12mm x 1.50
300, 300C, 300S	2005-On	14mm x 1.50
300M	1999-2004	12mm x 1.50
Aspen	2007-2009	9/16"
Cirrus	1995-2001	12mm x 1.50
Concorde, LHS	1993-2004	12mm x 1.50
Cordoba, Mirada & Newport	1971-On	1/2"
Crossfire	2004-2008	12mm x 1.50 Bolt
E-Class	1981-1988	12mm x 1.50
Imperial	1990-1995	12mm x 1.50
Le Baron	1982-1995	12mm x 1.50
New Yorker (FWD)	1983-1998	12mm x 1.50
New Yorker Fifth Ave.	1971-1992	1/2"
Pacifica	2004-2008	12mm x 1.50
PT Cruiser	2000-2010	12mm x 1.50
Sebring	1995-2010	12mm x 1.50
Town & Country	1982-On	12mm x 1.50
Windsor	1960-1961	1/2"
DAEWOO		
ALL	1998-2003	12mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
-----------------------	-------------	--------------------

DODGE

024	1978-1984	12mm x 1.50
400, 600, 600ES, Aries	1981-1984	12mm x 1.50
Aspen & Demon	1973-1980	1/2"
Avenger	1995-On	12mm x 1.50
Caliber	2007-On	12mm x 1.50
Challenger	1971-1977	1/2"
Challenger	1978-1983	12mm x 1.50
Challenger	2009-On	14mm x 1.50
Charger	1966-1970	1/2"
Charger	1971-1976	1/2"
Charger	1978-1988	12mm x 1.50
Charger	2006-On	14mm x 1.50
Colt, Lancer	1970-1993	12mm x 1.50
Conquest	1982-1988	12mm x 1.50
Coronet	1965-1977	1/2"
D50	1975-1994	12mm x 1.50
Dart	1960-1964	1/2"
Dart (w/out disc brakes)	1971-1976	7/16"
Dart (w/disc brakes)	1971-1976	1/2"
Dart	2013-On	12mm x 1.50 Bolt
Daytona, Monaco, Shelby	1981-1994	12mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
Diplomat	1977-1988	1/2"
Dynasty	1988-1995	12mm x 1.50
Intrepid	1993-2004	12mm x 1.50
Magnum	2005-On	14mm x 1.50
Mirada, St. Regis, Swinger	1971-1983	1/2"
Neon, SRT-4	1994-2006	12mm x 1.50
Nitro	2007-2011	1/2"
Omni, O24, De Tomaso	1978-1991	12mm x 1.50
Shadow & Spirit	1987-1995	12mm x 1.50
Stealth	1991-1996	12mm x 1.50
Stratus	1995-2006	12mm x 1.50
Viper	1992-2010	1/2"

DODGE TRUCKS & SUV

B-100, W-100 & W-150	1970-On	1/2"
Caravan, Grand Caravan	1982-On	12mm x 1.50
Dakota	1987-2004	1/2"
Dakota	2005-On	9/16"
Durango	1998-2003	1/2"
Durango	2004-2009	9/16"
Durango	2011-On	14mm x 1.50
Journey	2009-On	12mm x 1.50
Pickup	1971-1993	1/2"
Pickup	2002-On	9/16"

MAKE AND MODEL	YEAR	THREAD SIZE
Ram 1500	1994-2001	1/2"
Ram 1500	2002-2011	9/16"
Ram 1500	2012-On	14mm x 1.50
Ram 2500 & 3500	1994-2011	9/16"
Ram 2500 & 3500	2012-On	14mm x 1.50
Raider	1987-1989	12mm x 1.50
Ram Charger	1971-1992	1/2"
Ram 50, Dodge 4-WD P/U, 400 Rampage & Caravan 600	1982-On	12mm x 1.50
SRT-10	2004-On	9/16"
Sprinter Van	2004-2009	14mm x 1.50 Bolt
Van	1971-2003	1/2"
Van 2500, 3500	1994-2003	9/16"

EAGLE

ALL	1988-On	12mm x 1.50
-----	---------	-------------

FERRARI

ALL	2000-On	14mm x 1.50 Bolt
-----	---------	------------------

FIAT

ALL	2012-On	12mm x 1.25 Bolt
-----	---------	------------------

FORD

Aspire	1995-1997	12mm x 1.50 Bolt
Contour	1995-2001	12mm x 1.50
Courier	1977-1983	12mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
Crown Victoria / LTD	1960-On	1/2"
Custom, Fairlane, Fairmont, Falcon, Futura, Galaxie, Granada, Maverick, Pinto & Torino	ALL	1/2"
Escort, EXP	1981-1983	1/2"
Escort, EXP, Festiva	1984-2001	12mm x 1.50
Fiesta	1977-On	12mm x 1.50
Five Hundred	2005-2007	1/2"
Focus	2000-On	12mm x 1.50
Fusion	2006-On	12mm x 1.50
Mustang	1965-On	1/2"
Probe, Tempo, Taurus	1986-2008	12mm x 1.50
Taurus	2008-On	1/2"
Thunderbird	1955-1988	1/2"
Thunderbird	1989-2006	12mm x 1.50
VX3, ZX2	1997-2003	12mm x 1.50

FORDTRUCKS & SUV

Aerostar	1986-1997	1/2"
Bronco, Club Wagon, F-100	ALL	1/2"
Courier	1977-1983	12mm x 1.50
Edge	2007-On	1/2"
Escape	2001-On	12mm x 1.50
E-Series	1992-On	1/2"

MAKE AND MODEL	YEAR	THREAD SIZE
Excursion	2000-2002	14mm x 2.00
Excursion	2003-2005	14mm x 1.50
Expedition	1997-1999	12mm x 1.75
Expedition	2000-On	14mm x 2.00
Explorer	1991-On	1/2"
Flex	2009-On	1/2"
Freestar	2004-2007	1/2"
Freestyle	2005-2007	1/2"
F-150	1960-1996	1/2"
F-150, F-250	1997-1999	12mm x 1.75
F-150	2000-On	14mm x 2.00
F-250	1981-1996	1/2" or 9/16"
F-250	2000-2002	14mm x 2.00
F-250	2003-On	14mm x 1.50
F-350	1981-1996	9/16"
F-350, F-450, F-550	1997-2002	14mm x 2.00
F-350, F-450, F-550	2003-On	14mm x 1.50
Ranchero	ALL	1/2"
Ranger	1983-On	1/2"
Transit Connect	2010-On	12mm x 1.50
Van (E50, E100, E200)	ALL	1/2"
Van (E250, E350)	ALL	9/16"
Windstar	1994-2003	12mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
-----------------------	-------------	--------------------

HONDA

ALL	1967-1980	12mm x 1.25
ALL (Except Below)	1980-On	12mm x 1.50
Odyssey, Ridgeline	2005-On	14mm x 1.50
Pilot	2009-On	14mm x 1.50

HUMMER

Hummer H1, H2	2003-2010	14mm x 1.50
Hummer H3	2005-2010	12mm x 1.50

HYUNDAI

ALL		12mm x 1.50
-----	--	-------------

INFINITI

ALL (Except Below)		12mm x 1.25
QX56	2011-On	14mm x 1.50

ISUZU

ALL		12mm x 1.50
-----	--	-------------

JAGUAR

ALL (Except Below)	1976-On	1/2"
XJ	1991-2003	1/2"
XJ	2004-On	12mm x 1.50
S- and X- Type	1999-On	12mm x 1.50
XF, XK, XKR Type	2008-On	12mm x 1.50

JEEP

All (5 Lug)	1958-On	1/2"
-------------	---------	------

MAKE AND MODEL	YEAR	THREAD SIZE
All (6 Lug)	ALL	7/16"
All (8 Lug)	ALL	1/2"
Commander	2006-On	12mm x 1.50
Compass, Patriot	2007-On	12mm x 1.50
Grand Cherokee	2011-On	14mm x 1.50
Prospector	2008-On	12mm x 1.50
Wrangler	2012-On	14mm x 1.50

KIA

ALL (Except Below)		12mm x 1.50
Rio	2001-2002	12mm x 1.50 Bolt

LAMBORGHINI

Gallardo	2006-On	14mm x 1.50 Bolt
----------	---------	------------------

LAND ROVER

ALL (Except Below)		14mm x 1.50
Freelander	2002-2005	12mm x 1.50

LEXUS

ALL (Except Below)	1990-On	12mm x 1.50
LS460, LS460L	2007-On	14mm x 1.50
LS600hL	2008-On	14mm x 1.50
LX470	1999-2007	14mm x 1.50
LX570	2008-On	14mm x 1.50

LINCOLN

Aviator, Town Car	ALL	1/2"
-------------------	-----	------

MAKE AND MODEL	YEAR	THREAD SIZE
Blackwood	2002-2003	14mm x 2.00
Continental	1939-1987	1/2"
Continental	1988-2002	12mm x 1.50
LS	2000-2006	12mm x 1.50
Mark	1967-1992	1/2"
Mark LT	2006-2008	14mm x 2.00
Mark VIII	1993-1998	12mm x 1.50
MKS	2009-On	1/2"
MKT, MKX	2007-On	1/2"
MKZ	2007-On	12mm x 1.50
Navigator	1997-1999	12mm x 1.75
Navigator	2000-On	14mm x 2.00
Zephyr	2006	12mm x 1.50
LOTUS		
ALL	ALL	12mm x 1.50 Bolt
MASERATI		
ALL	ALL	14mm x 1.50 Bolt
MAYBACH		
ALL	ALL	14mm x 1.50 Bolt
MAZDA		
All (Except Below)	ALL	12mm x 1.50
Pickup B2300, B2500, B3000, B4000 & Navajo	1993-On	1/2"

MAKE AND MODEL	YEAR	THREAD SIZE
-----------------------	-------------	--------------------

MERCEDES

All (Except Below)	ALL	12mm x 1.50 Bolt
500 SEL	1992-On	14mm x 1.50 Bolt
C Class	2008-On	14mm x 1.50 Bolt
CL Class	1997-On	14mm x 1.50 Bolt
CLS Class	2006-On	14mm x 1.50 Bolt
G Class	2002-On	14mm x 1.50 Bolt
GL Class	2007-On	14mm x 1.50 Bolt
GLK Class	2010-On	14mm x 1.50 Bolt
E Class	2002-On	14mm x 1.50 Bolt
ML Class	1998-On	14mm x 1.50 Bolt
R Class	2006-On	14mm x 1.50 Bolt
S Class	1992-On	14mm x 1.50 Bolt
SL Class	2007-On	14mm x 1.50 Bolt
SL Class AMG	2003-On	14mm x 1.50 Bolt

MERCURY

Bobcat	1975-1981	1/2"
Capri	1979-1990	1/2"
Capri	1991-1994	12mm x 1.50
Cornet	1963-1980	1/2"
Cougar	1967-1988	1/2"
Cougar	1989-2002	12mm x 1.50
Cyclone	1963-1987	1/2"

MAKE AND MODEL	YEAR	THREAD SIZE
Grand Marquis	1979-2011	1/2"
LN7 & Lynx	1981-1983	1/2"
LN7 & Lynx	1983-1987	12mm x 1.50
Marauder	2003-2004	1/2"
Mariner	2005-On	12mm x 1.50
Marquis	1967-1990	1/2"
Milan	2006-On	12mm x 1.50
Montego	1968-2007	1/2"
Monterey	2004-2006	12mm x 1.50
Mountaineer	1997-On	1/2"
Mystique, Topaz, Sable, Tracer	1991-1999	12mm x 1.50
Villager	1993-2003	12mm x 1.25

MINI

ALL	2007-On	14mm x 1.25 Bolt
Cooper, Cooper S	2002-2006	12mm x 1.50 Bolt

MITSUBISHI

ALL		12mm x 1.50
Raider	2006-2009	9/16"

NISSAN (DATSUN)

ALL (Except Below)	1972-On	12mm x 1.25
1600, 2000	1965-1971	7/16"
NV 1500, 2500, 3500	2012-On	14mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
-----------------------	-------------	--------------------

OLDSMOBILE

ALL (Except Below)		12mm x 1.50
98	1960-1984	1/2"
Custom Cruiser	1981-1990	1/2"
Cutlass, F85	1964-1981	7/16"
Cutlass	1982-1999	1/2"
Delta 88	1977-1985	7/16"
Delta 88, Station Wagon & V8	1977-1985	1/2"
Tornado	1966-1978	1/2"

PLYMOUTH

ALL (Except Below)		12mm x 1.50
Barracuda	1971-1976	7/16" or 1/2"
Belvedere	1971-1976	1/2"
Duster	1973-1980	1/2"
Duster & Dart	1963-1974	7/16"
Fury, GTX, Road Runner & Satellite	1971-1989	1/2"
Trailduster, Van	1976-1988	1/2"
Valiant	1971-1976	7/16" or 1/2"
Voyager	1984-On	12mm x 1.50
Voyager 4x4	1974-1983	1/2"

PONTIAC

ALL (Except Below)		12mm x 1.50
--------------------	--	-------------

MAKE AND MODEL	YEAR	THREAD SIZE
Bonneville, Catalina	1960-1976	1/2"
Bonneville, Catalina	1977-1981	7/16"
Bonneville Station Wagon & V8	1977-1981	1/2"
Bonneville	1982-2005	12mm x 1.50
Firebird	1967-1981	7/16"
Firebird	1982-2002	12mm x 1.50
G8	2008-2010	14mm x 1.50
Grand Am, Grand Prix	1969-1981	7/16"
Grand Am	1985-2005	12mm x 1.50
Grand Prix	1982-On	12mm x 1.50
GTO	1968-1971	7/16"
Lemans, Tempest	1964-1981	7/16"

PORSCHE

ALL (Except Below) 911, 914, 924, Boxter	1965-1997	14mm x 1.50
Cayman, Cayenne, Panamera	1997-On	14mm x 1.50 Bolt

SAAB

9-2X	2005-2006	12mm x 1.25
9-4X	2011-On	14mm x 1.50
9-7X	2005-On	12mm x 1.50
900, 900 Turbo	1979-1987	1/2"
900, 900 Turbo	1988-1993	14mm x 1.50 Bolt

MAKE AND MODEL	YEAR	THREAD SIZE
9000	1986-On	14mm x 1.50 Bolt
900, 9-3, 9-4, 9-5	1994-On	12mm x 1.50 Bolt
9-5	2011-On	14mm x 1.50 Bolt

SATURN

ALL (Except Below)	1991-On	12mm x 1.50
Astra	2008-2009	12mm x 1.50 Bolt
LS	1999-2004	12mm x 1.50 Bolt
Outlook	2007-2009	14mm x 1.50

SCION

ALL	2004-On	12mm x 1.50
FR-S	2012-On	12mm x 1.25

SMART

Fortwo	2005-On	12mm x 1.50 Bolt
--------	---------	------------------

SUBARU

ALL		12mm x 1.25
-----	--	-------------

SUZUKI

All (Except Below)	ALL	12mm x 1.25
Forenza, Verona	2004-On	12mm x 1.50
Reno	2005-2008	12mm x 1.50
Swift	2004-On	12mm x 1.50

TOYOTA

ALL (Except Below)		12mm x 1.50
--------------------	--	-------------

MAKE AND MODEL	YEAR	THREAD SIZE
Land Cruiser	1998-On	14mm x 1.50
Sequoia	2008-On	14mm x 1.50
Tundra	2007-On	14mm x 1.50

VOLKSWAGEN

All (Except Below)	ALL	12mm x 1.50 Bolt
Beetle	1968-On	14mm x 1.50 Bolt
CC	2009-On	14mm x 1.50 Bolt
Eos	2007-On	14mm x 1.50 Bolt
Eurovan MV	1993-1996	14mm x 1.50 Bolt
Golf (4 Lug)	1992-1998	12mm x 1.50 Bolt
Golf (5 Lug)	1992-2006	14mm x 1.50 Bolt
Golf	2010-On	14mm x 1.50 Bolt
GTI	1999-On	14mm x 1.50 Bolt
Jetta (4 Lug)	1981-1998	12mm x 1.50 Bolt
Jetta VR6	1993-2005	14mm x 1.50 Bolt
Jetta (5 Lug)	1999-On	14mm x 1.50 Bolt
Passat (4 Lug)	1990-1997	12mm x 1.50 Bolt
Passat VR6	1992-1997	14mm x 1.50 Bolt
Passat (5 Lug)	1998-On	14mm x 1.50 Bolt
Phaeton	2004-2005	14mm x 1.50 Bolt
Rabbit	2007-On	14mm x 1.50 Bolt
Routan	2009-On	12mm x 1.50

MAKE AND MODEL	YEAR	THREAD SIZE
-----------------------	-------------	--------------------


Sedan 4 Lug, Transporter Van	1968-1979	14mm x 1.50 Bolt
Tiguan	2009-On	14mm x 1.50 Bolt
Touareg	2003-On	14mm x 1.50 Bolt

VOLVO

DL-240	1976-1986	1/2"
DL-240	1987-On	12mm x 1.50
740, 760, 780 & 940	ALL	12mm x 1.50
850, 880, 960	ALL	12mm x 1.75
S70, V70 Cross Country	ALL	12mm x 1.75 Bolt
SC70	ALL	14mm x 1.50 Bolt
C30	2007-On	12mm x 1.50
C70	1993-2004	12mm x 1.75 Bolt
C70	2005	14mm x 1.50 Bolt
C70	2006-On	12mm x 1.50
S40, V40, V50	2000-On	12mm x 1.50
S60	1993-On	14mm x 1.50 Bolt
S80	2000-On	14mm x 1.50 Bolt
S90, V90	1984-2003	12mm x 1.50
V70	1993-1999	12mm x 1.75 Bolt
V70	2000-On	14mm x 1.50 Bolt
XC60, XC70, XC90, XR70	2000-On	14mm x 1.50 Bolt

Installation Instructions

1. Make sure wheel studs are clean and tight. Replace or tighten a problem stud.
2. Ensure the wheel is flat against mounting surface with studs through each hole.
3. All White Knight nuts should be hand started and then secured in a criss-cross sequence (see illustrations) with a torque wrench and socket. Refer to your vehicle owner's manual or wheel manufacturer's guide for proper torque specifications (see the torque chart below).
4. Check and retighten **all** nuts after 25 miles of driving and again after 50 miles, until wheel nut torque remains unchanged.

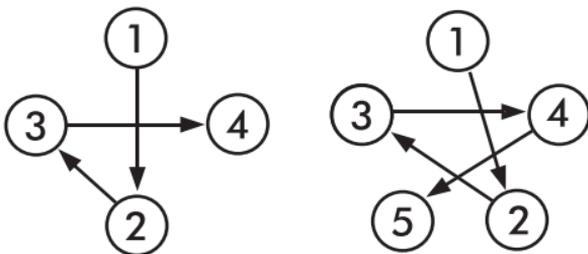


TORQUE CHART (IN FOOT POUNDS)

LUG SIZE	7/16"	1/2"	9/16"	5/8"	10mm	12mm	14mm
TORQUE	70 ⌋ 80	75 ⌋ 85	135 ⌋ 145	150	45 ⌋ 55	70 ⌋ 80	85 ⌋ 90

Knurl Stud Application Guide

- Knurl studs made of 10.9 grade alloy steel
- Cold-forge process increases durability and ensures precise measurements.
- Through-hardened

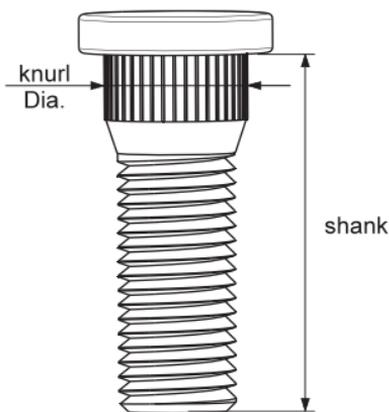

PART NO.	THREAD SIZE	KNURL DIA.	SHANK
960-364	1/2" - 20	0.614"	1-15/32"
1986 - 2001 Jeep			
960-138	1/2" - 20	0.530"	1-17/32"
1971 - 1991 Buick, 1975 - 1990 Cadillac, 1971 - 1995 Chevrolet, 1971 - 1997 Chevy/GMC Truck, 1964 - 1990 Oldsmobile, 1971 - 1989 Pontiac			
960-159	1/2" - 20	0.620"	1.59mm"
1971 - 1991 Buick, 1972 - 1996 Cadillac, 1971 - 1995 Chevrolet, 1971 - 1997 Chevy/GMC Truck, 1971 - 1990 Oldsmobile, 1971 - 1989 Pontiac			

PART NO.	THREAD SIZE	KNURL DIA.	SHANK
960-109	1/2" - 20	0.625"	1-5/8"
1973 - 1988 AMC, 1949 - 1983 Ford, 1953 - 1975 Ford Truck, 1956 - 1999 Jeep, 1969 - 1972 Lincoln, 1949 - 1983 Mercury			
960-219	1/2" - 20	0.620"	1-29/32"
1968 - 1970 Buick, 1965 - 1969 Ford, 1967 - 1996 Ford Truck, 1965 - 1968 Mercury, 1967 - 1970 Oldsmobile			
960-240	12mm X 1.25	12.90mm	32.5mm
1997 - 2003 Infiniti, 1970 - 2000 Nissan, 1977 - 2005 Nissan Truck			
960-378	12mm X 1.25	14.35mm	40.00mm
1990 - 2012 Infiniti, 1990 - 2012 Nissan, 2004 - 2012 Nissan Truck			
960-320	12mm X 1.25	12.90mm	41.40mm
1990 - 1997 Infiniti, 1968 - 1996 Nissan, 1972 - 2012 Nissan Truck			
960-362	12mm X 1.50	12.30mm	34.00mm
1992 - 1998 Acura, 1990 - 1997 Honda			
960-269	12mm X 1.50	12.22mm	36.00mm
1986 - 2012 Acura, 1980 - 2012 Honda			
960-244	12mm X 1.50	14.30mm	37.00mm
1990 - 1992 Daihatsu, 1990 - 2002 Lexus, 2005 - 2006 Scion, 1965 - 2006 Toyota			
960-262	12mm X 1.50	14.35mm	37.50mm
1996 - 1999 Acura, 1976 - 1981 Chevy/GMC Truck, 1964 - 2002 Honda, 1981 - 2002 Isuzu Truck, 1983 - 2004 Mitsubishi Truck			

PART NO.	THREAD SIZE	KNURL DIA.	SHANK
960-253	12mm X 1.50	14.10mm	38.50mm
1973 - 1987 Chevrolet, 1982 - 2009 Chrysler, 1978 - 2005 Dodge, 1978 - 2001 Plymouth, 1981 - 1987 Pontiac			
960-266	12mm X 1.50	14.00mm	40.10mm
1985 - 2002 Chevrolet, 1989 - 1997 Geo, 1990 - 2012 Lexus, 2003 - 2005 Pontiac, 2003 - 2012 Scion, 1985 - 2012 Toyota, 1973 - 2012 Toyota Truck			
960-254	12mm X 1.50	12.80mm	42.00mm
1979 - 2012 Buick, 1979 - 2012 Cadillac, 1980 - 2012 Chevrolet, 1982 - 2012 Chevy/GMC Truck, 1994 - 1995 Honda, 2003 - 2010 Hummer, 1990 - 2000 Isuzu Truck, 1979 - 2004 Oldsmobile, 1980 - 2010 Pontiac, 1991 - 2010 Saturn			
960-275	12mm X 1.50	14.50mm	41.50mm
1987 - 1989 Chrysler, 1988 - 1992 Daihatsu, 1971 - 1994 Dodge, 1979 - 1993 Dodge Truck, 1989 - 1995 Eagle, 1994 - 2005 Hyundai, 1983 - 1999 Mitsubishi, 1983 - 1999 Mitsubishi Truck, 1976 - 1994 Plymouth, 1979 - 1982 Plymouth Truck			
960-340	12mm X 1.50	12.80mm	42.00mm
1989 - 2012 Ford, 1994 - 2005 Hyundai, 1995 - 2006 Kia, 1988 - 2012 Mazda, 1991 - 2002 Mercury			

PART NO.	THREAD SIZE	KNURL DIA.	SHANK
960-285	12mm X 1.50	14.94mm	42.50mm
1982 - 2005 Chrysler, 1981 - 2005 Dodge, 1993 - 2005 Mazda, 1981 - 2001 Plymouth			
960-312	12mm X 1.50	14.30mm	43.70mm
1996 - 2007 Chrysler, 1996 - 2007 Dodge, 1987 - 1991 Dodge Truck, 1994 - 2002 Honda, 1991 - 2004 Isuzu Truck, 1996 - 1997 Lexus, 1983 - 2004 Mitsubishi Truck, 1996 - 2000 Plymouth, 1979 - 2007 Toyota Truck			
960-414	12mm X 1.50	14.40mm	44.10mm
1995 - 2008 Chrysler, 1985 - 2008 Dodge, 1989 - 1998 Eagle, 1989 - 2005 Hyundai, 2007-2012 Jeep, 2001 -2005 Kia , 1985 - 2012 Mitsubishi, 2003 - 2005 Mitsubishi Truck, 1989 - 1994 Plymouth			
960-369	12mm X 1.50	14.70mm	46.30mm
1993 - 2008 Chrysler, 1993 - 2007 Dodge, 1993 - 2001 Plymouth			
960-365	12mm X 1.50	13.40mm	51.20mm
1983 - 1997 Ford, 1995 - 1998 Ford Truck, 1988 - 1998 Lincoln, 1983 - 1997 Mercury			
960-327	14mm X 1.50	15.90mm	46.50mm
1999 Cadillac, 1988 - 2000 Chevy/GMC Truck			



White Knight®

White Knight Wheel Accessories

15325 Blackburn Ave.

Norwalk, CA 90650

(800) 343-8313

(562) 483-5217

(562) 483-5219 Fax

www.whtknight.com

E mail: sales@whtknight.com