



**Microsoft**

# Getting Started

Microsoft® Wireless Mouse Products

[www.microsoft.com/hardware](http://www.microsoft.com/hardware)



## HEALTH WARNING

Use of a keyboard or mouse may be linked to serious injuries or disorders.

When using a computer, as with many activities, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. However, if you experience symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensation, or stiffness, **DO NOT IGNORE THESE WARNING SIGNS. PROMPTLY SEE A QUALIFIED HEALTH PROFESSIONAL**, even if symptoms occur when you are not working at your computer. Symptoms such as these can be associated with painful and sometimes permanently disabling injuries or disorders of the nerves, muscles, tendons, or other parts of the body. These musculoskeletal disorders (MSDs) include carpal tunnel syndrome, tendonitis, tenosynovitis, and other conditions.

While researchers are not yet able to answer many questions about MSDs, there is general agreement that many factors may be linked to their occurrence, including: medical and physical conditions, stress and how one copes with it, overall health, and how a person positions and uses his or her body during work and other activities (including use of a keyboard or mouse). Some studies suggest that the amount of time a person uses a keyboard may also be a factor. Some guidelines that may help you work more comfortably with your computer and possibly reduce your risk of experiencing an MSD can be found in the "Healthy Computing Guide" topic of the *User's Guide*, provided with the software program on your CD. If you do not have the CD for this product, you can access the "Healthy Computing Guide" from <http://www.microsoft.com/hardware/>, or (in the United States only) call 1-800-360-7561 to request a CD at no charge. If you have questions about how your own lifestyle, activities, or medical or physical condition may be related to MSDs, see a qualified health professional.

Information in this document, including URL and other Internet Web site references, is subject to change without notice. Unless otherwise noted, the example companies, organizations, products, domain names, e-mail addresses, logos, people, places and events depicted herein are fictitious, and no association with any real company, organization, product, domain name, e-mail address, logo, person, place or event is intended or should be inferred. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Microsoft Corporation.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

Microsoft Corporation grants the purchaser of this product the right to reproduce one (1) copy of the enclosed "Getting Started" printed guide for each Hardware Device you purchased in the package.

©1999-2003 Microsoft Corporation. All rights reserved.

Microsoft, IntelliMouse, Natural, and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

Patents pending.

# Welcome!

Setting up your Microsoft® mouse takes a few simple steps, and then you can enjoy the freedom and convenience of wireless technology.

1

## Install IntelliPoint Software

IntelliPoint software enables the unique features of your mouse and provides battery status and wireless signal quality information.



**Note** If you do not already have a mouse, you can connect the receiver before installation so you can use your mouse during IntelliPoint Setup.

### About Your Rights and Obligations

The software with this product is licensed, not sold. You must either agree to the license contract in the software Setup screens or promptly return the entire product for a refund, excluding the return costs. After you install the software, you may consult the license and the Limited Warranty for the product at any time by looking in the "Legal Information" section of the software *User's Guide*. You may also print a copy for your records.

### To install IntelliPoint software (Microsoft Windows® operating system)

1. Insert the Microsoft IntelliPoint compact disc into the computer's CD drive. If Setup does not start automatically, do the following:
  - Click the **Start** button, and then click **Run**.
  - Type `[drive]:setup`. For example, if your CD drive is drive D, type `d:setup`.
2. Follow the Setup Wizard instructions on your screen.

Depending on your operating system version, you may be asked to restart your computer before Setup can begin.
3. After installation is complete, restart your computer if prompted to do so.

If your mouse has a Universal Serial Bus (USB) connector, it can be used with a Macintosh computer.

**To install IntelliPoint software (Macintosh)**

- Insert the Microsoft IntelliPoint compact disc into the computer's CD drive, double-click the **IntelliPoint Installer** icon, and then follow the on-screen instructions. After installation is complete, restart your computer if prompted to do so.

**2 Insert the Batteries**

Whenever you insert batteries, always make sure both of them are new. Alkaline batteries are recommended, and two alkaline batteries are included in the package.



**Note** To preserve battery life, the mouse automatically enters power saving mode when not in use, so there is no need for a power switch.

1. Turn the mouse upside down, and then remove the battery compartment cover.
2. Insert the batteries, making sure to properly orient the positive (+) and negative (-) ends as specified by the battery compartment labels.
3. Close the battery compartment cover.




**Important** Before boarding any aircraft, remove the batteries from the wireless mouse. The wireless mouse can emit radio frequency (RF) energy, similar to a cellular telephone, whenever batteries are installed and the mouse is activated either by touch or button press.

**3 Position the Wireless Mouse and Receiver**

For optimum performance, position the receiver so that it is at least 8 inches (20 cm) away from the mouse and any items that might cause interference, such as computer monitors, large metal objects (including metal furniture), desktop fans, or fluorescent lights. The mouse may work up to 6 feet (1.8 m) away from the receiver, but this distance varies depending on positioning, nearby items causing interference, and other factors.

## 4 Connect the Receiver to the Computer

The connection procedure depends on the type of computer you are using and the connectivity supported for your mouse as specified on the package. If your mouse is PS/2 compatible, a PS/2 connection is recommended for a Windows-based computer.

 **Important** Use an adapter plug only if it is included with your Microsoft mouse.

### PS/2 Connection (Windows)


1. Shut down and turn off your computer.
2. If your mouse cable has a round **PS/2 connector**, plug it into your computer's round PS/2 mouse port.

Or, if your mouse has a **USB-to-PS/2 adapter**, attach it to the Universal Serial Bus (USB) connector, and then plug it into your computer's round PS/2 mouse port.


3. Turn on your computer.

### USB Connection (Windows or Macintosh)


- With your computer turned on, plug the rectangular **USB connector** into your computer's USB port.

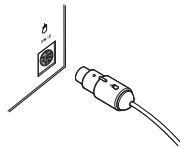

PS/2 Connection

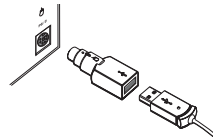

USB-to-PS/2 Adapter

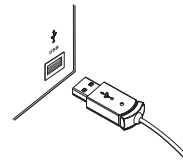

USB Connection

5

### Test the Mouse

Try using the mouse. If it does not work as expected, make sure the following procedures were completed as specified earlier in these instructions:

- New batteries were inserted correctly.
- The receiver was properly connected to the computer.
- The receiver and mouse were properly positioned.

If the mouse is still not working, try changing the channel. Changing the wireless connection channel is useful if you are experiencing interference.

#### To change the wireless connection channel

- Press the button on the bottom of the wireless mouse.

If changing the channel does not solve the problem, you may need to reconnect the mouse to the receiver.

#### To reconnect the mouse to the receiver

1. Make sure that the mouse and receiver are positioned as specified earlier in these instructions.
2. Press the button on the top of the wireless receiver. The receiver light blinks to indicate that it is in "connect" mode.
3. Press the button on the bottom of the mouse.

If reconnecting the mouse to the receiver does not solve the problem, refer to the *User's Guide* installed with IntelliPoint software.



**Important** Before using this product, read about the potential for radio interference in the topic titled "Radio and TV interference regulations" in the *User's Guide* installed with IntelliPoint software.

## 6 Read the *User's Guide*

The *User's Guide* is your complete product manual, and it is installed with IntelliPoint software. It contains important product information in a searchable format, including:

- Microsoft mouse and IntelliPoint software feature descriptions and instructions.
- Troubleshooting topics and Product Support Services information.
- End-User License Agreement (EULA), Limited Warranty, and regulatory information.
- Healthy Computing Guide.
- Battery removal and safety information.
- Radio interference information.

### To open the *User's Guide*

- **Windows:** Click the **Start** button, point to **Programs** (or **All Programs**), point to the **Microsoft Mouse** folder, and then click **Mouse User's Guide**.
- **Macintosh:** Click the **Apple** menu, click **System Preferences** (or **Control Panels**), click **Microsoft Mouse**, and then click **User's Guide** on the **Help** menu.

## 7 Customize the Mouse Settings (Optional)

IntelliPoint software lets you reassign any button to a different command or change your mouse settings. For example, you can adjust how quickly the screen moves when you scroll.

### To start IntelliPoint software

- **Windows:** Click the **Start** button, point to **Programs** (or **All Programs**), point to the **Microsoft Mouse** folder, and then click **Microsoft Mouse**.
- **Macintosh:** Click the **Apple** menu, click **System Preferences** (or **Control Panels**), and then click **Microsoft Mouse**.

## Troubleshooting

If you have a question about your Microsoft mouse, try the following:

- View the *User's Guide* installed with IntelliPoint software, which contains product information and troubleshooting tips.
- Look in Readme.txt on the IntelliPoint CD for late-breaking product information (Windows version only).
- Go to the Microsoft Hardware Web site at:  
<http://www.microsoft.com/hardware/>  
for additional product information and IntelliPoint software updates.
- See the "Product Support Services" section of the *User's Guide*, or go to:  
<http://microsoft.com/support/>  
for information about how to contact Microsoft Product Support Services.

## Product Information and Software Updates

For general Microsoft mouse product information and IntelliPoint software updates, go to the Microsoft Hardware Web site at:  
<http://www.microsoft.com/hardware/>

## Regulatory Information

This device complies with part 15 of the FCC Rules and Industry Canada RSS-210. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tested to comply with FCC standards. For home and office use. Model number: Wireless Optical Mouse and receiver (all models), FCC ID C3KMS9; Wireless Wheel Mouse and receiver (all models), FCC ID C3KMS8; Wireless IntelliMouse Explorer and receiver (all models), FCC ID C3KMS7, FCC ID C3K1007, FCC ID C3K1008 and Models 1000-1040.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Any changes or modifications not expressly approved by Microsoft could void the user's authority to operate this device.

For use with UL Listed and GS approved personal computers.

For detailed information on U.S. and Canadian radio interference regulations, search for "regulations" in the *User's Guide* installed with IntelliPoint software.

Microsoft Corporation; One Microsoft Way; Redmond, WA; 98052-6399; U.S.A.

United States: (800) 426-9400

Canada: (800) 933-4750

No serviceable parts included. This device is rated as a commercial product for operation at +41°F (+5°C) to +95°F (+35°C).

### RF Technical Specifications

RF output power: < 54 db  $\mu$ V/m @ 3 m

Channel RF frequencies for Wireless Wheel Mouse and Wireless IntelliMouse Explorer:

Channel 1 - 27.045MHz, Channel 2 - 27.145MHz

Channel RF frequency for Wireless Optical Mouse: Channel 1 - 27.145MHz

### Information for Optical Mouse Products Only

User-observable light is 15 microwatts in normal operation.

Class 1 LED Product

This product has been tested to comply with International Standard IEC 60825-1: (1993), incl. Amd.2(2001). This product uses LEDs that are inherently Class 1.

## Important Battery Information

### General Precautions

- Keep batteries out of reach of children.
- Insert the batteries in the proper direction as indicated by the positive (+) and negative (-) markings on the battery and battery compartment.
- Do not mix old and new batteries or batteries of different types (for example, carbon and alkaline batteries).
- Always remove old, weak, or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Disposal Regulations.
- If a battery leaks, remove all batteries and recycle or dispose of them in accordance with the battery manufacturer's instructions and Local and National Disposal Regulations. Before inserting new batteries, thoroughly clean the battery compartment with a damp paper towel, or follow the battery manufacturer's recommendations for cleanup. If fluid from the battery comes into contact with skin or clothes, flush with water immediately.
- Remove the batteries if your device is to be stored for longer than a month without being used.

### Special Precautions

Released battery electrolyte is corrosive, can cause damage to the eyes and skin, and may be toxic if swallowed. The precautions below are to prevent the sudden release of electrolytes, which these prohibited actions can cause:

- Do not open, puncture, or mutilate the batteries.
- Do not install the batteries incorrectly. Carefully observe the positive (+) and negative (-) markings on the battery for proper installation.
- Do not heat batteries.
- Do not use a fire to dispose of batteries.

### Product Disposal Information

Dispose of this product in accordance with Local and National Disposal Regulations.

## Declaration of Conformity

We, the undersigned,

**Company:** Microsoft Corporation  
**Address:** One Microsoft Way, Redmond WA 98052-6399  
**Country:** U.S.A.  
**Telephone number:** +1 425-882-8080  
**Fax number:** +1 425-936-7329

certify and declare under our sole responsibility that the following equipment:

**Product Description/Intended use:**

**EU/EFTA member states intended for use:** 27MHz low power wireless computer mouse for home and office use  
EU: Austria, Belgium, Denmark, Finland, France, Germany, Greece, Ireland, Italy, Luxembourg, The Netherlands, Portugal, Spain, Sweden, United Kingdom

**EFTA:** Switzerland, Iceland, Liechtenstein, Norway

**Restrictive use:** -none-

**Manufacturer:** Microsoft Corporation

**Brand:** Microsoft

**Model Number:** Wireless Optical Mouse and receiver (all models)  
Wireless Wheel Mouse and receiver (all models)  
Wireless IntelliMouse Explorer and receiver (all models)  
Models:1007, 1008, 1009, 1013

is tested to and conforms with the essential radio test suites included in following standards:

<b>Standard</b>	<b>Issue date</b>
EN 300 220-3	V1.1.1 (2000-09)
EN 301 489-03	V1.3.1
EN 60950	2000
EN 60825-1	1994/A2:2001

and therefore complies with the essential requirements and provisions of the **Directive 1999/5/EC** of the European Parliament and of the council of 9 march 1999 on Radio equipment and Telecommunications Terminal Equipment and the mutual recognition of their conformity.

The technical documentation as required by the Conformity Assessment procedure is kept at the following address:

**Company:** Microsoft European Operation Centre  
**Address:** Blackthorn Road, Sandyford Industrial Estate, Dublin 18  
**Country:** Ireland  
**Telephone number:** +353 1 295 3826  
**Fax number:** +353 1 295 3581





**Microsoft**

