

TB-1738 Electric Manicure & Pedicure Set Instruction Manual

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

⚠ WARNING

- The following persons should not use this device: children; persons with skin inflammation on the fingers or toes; persons with allergies; persons with reduced physical, sensory or mental capabilities; persons with diabetes.
- If you feel uncomfortable while using the device, please stop using it and consult a doctor.
- Do not use this device for any other purpose than nail care.
- Do not attempt to modify, disassemble, or repair the device by yourself.

⚠ CAUTION


- This device has a lithium battery. Do not place or store the device for a long time in a hot or humid environment. If you do not intend to use the device for a long time, store it after the battery is full.

1. Device Specifications

Name: Electric Manicure & Pedicure Set
Model No.: TB-1738
Input: 5V /600mA
Power: 3.7V /0.81W
Type of Battery: Li-polymer 3.7V 700mAh
Executive Standard: Q/XM1006-2020

2. Device Description

- 1) Power Button
- 2) Rotation Direction Button
- 3) + / - Speed Buttons
- 4) USB Charging Port
- 5) Emery Head (100#)
- 6) Emery Nail Groove Head (120#)
- 7) Chrome Grinding Head (150#)
- 8) **Polisher Cylinder Head (150#)**
- 9) Felt Cone
- 10) Ceramic Drill Head
- 11) USB Cable
- 12) Accessories Storage Box

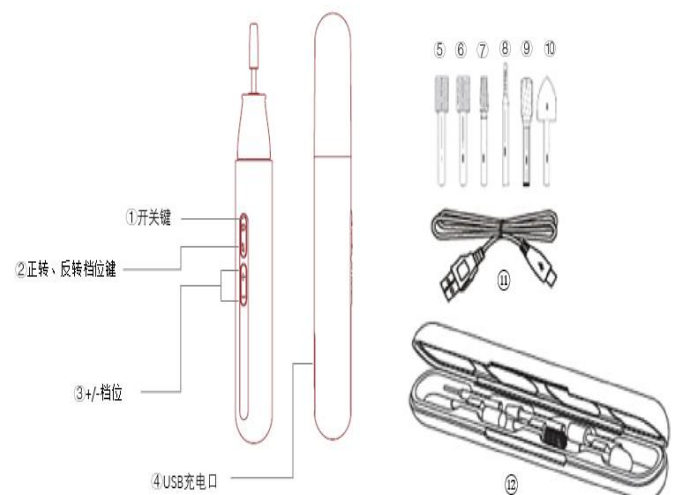

Picture 1

3. Preparation Instructions

- ※ Charging the device: Connect the USB cable to the device charging port and to the adapter to start charging the device. The indicator flashes red while the device is charging and turns blue when the battery is full.
- ※ The battery indicator flashes red when the battery is low. If the device runs out of battery, it will automatically shut down after the charging indicator flashes.
- ※ Charging the device takes approximately 2.5 hours. When the battery is full, the device can be used consecutively for about 90 minutes.

4. How to Use

To ensure the correct operation of this device, please read the instructions carefully before use.

- Open the accessories storage box. (Picture 2)
- Select and install the attachment according to your needs. To install the attachment, push it firmly into the top of the device until the head is firmly in place.
 - Emery Head (Cone Type 100#): Use this head to polish the edge and sides of natural and acrylic nails. Shortens and shapes the tip of your nails. It is also suitable to grind thicker skin. (Picture 3)
 - Emery Nail Groove Head (Needle Tip Type 120#): Removes dry cuticle skin and exfoliates the lateral nail folds. (Picture 4)
 - Chrome Grinding Head (150#): Polishes natural and acrylic nails. Trims nail edges and buffs out any ridges to smooth the nail surface. Use this head to clean the cuticle area. (Picture 5)
 - Polisher Cylinder Head (150#): Polishes and removes dead skin around the cuticle area and both sides of the nail. (Picture 6)
 - Felt Cone: Suitable to polish and smooth the nail surface. (Picture 7)

Picture 7

- Ceramic Drill Head (Corn Type): Use this head to quickly remove phototherapy gel polish. (Picture 8)

Picture 8

- After you install the attachment, press and hold the power button for around 1.5 seconds to turn on the device and the attachment rotation. (Picture 9)

Picture 9

- To switch the rotation direction: press the rotation direction button to change the rotation direction. The device will take 0.5s to change the direction rotation. (Picture 10)

Picture 10

- To increase the speed:
 - Press and hold the + button to adjust the speed continuously up to the highest level.
 - Short press the + button each time you want to increase one speed level. The speed can be adjusted up to 6 times.
- To decrease the speed:
 - Press and hold the - button to adjust the speed continuously to the lowest intensity level.
 - Short press the - button each time you want to decrease one speed level. The speed can be adjusted up to 6 times.
- After use, press the power button to turn off the device. After cleaning the attachments, store them in the storage box. (Picture 11)

Picture 11

5. Cleaning & Maintenance

- 1) Make sure the device is power off before you start cleaning.
- 2) Do not immerse the device in water. The attachments can be cleaned separately.
- 3) Clean the surface of the device with a clean slightly wet cloth.
- 4) Do not use lubricants, detergents, polishing agents, or air fresheners on this device.

7. Storage

This device has a lithium battery. Do not place or store the device for long periods in a hot or humid environment. If you do not intend to use the device for a long time, store it after the battery is full.

8. Recycling

The built-in battery contains substances that may pollute the environment. When disposing of this device, do not put it in the general household waste. Please dispose of this device at an official recycling point to contribute to environmental protection.

Warranty & Support

- Troubleshooting

Problem	Possible Cause	Solution
Abnormal noise.	The attachment was installed incorrectly.	Install the attachment correctly as guided.
The device does not work.	The battery is low.	Charge the device as guided.
	The battery is out of power.	
The battery indicator does not light up.	The USB cable is not properly connected.	Plug the USB cable correctly into the device charging port and charging adapter.
The attachment is in an eccentric position.	The attachment was not installed correctly.	Install the attachment correctly as guided.
The attachment easily falls.		
Other Problems.		Please consult your local dealer.
Note: If the device still does not work properly after using the above solutions, please stop using the device and contact your local dealer.		

After-Sales Service

Please visit our website www.touchbeauty.com or contact our customer service team customer@touchbeauty.com if you need to learn about our products or if you need any information. You can also contact an affiliate dealer in your country.

MANUFACTURER: TOUCHBEAUTY BEAUTY & HEALTH (SHENZHEN) CO., LTD

ADDRESS: 601 & 602, Block F5, TCL International E-City, 1001 Zhongshanyuan Road, Shuguang Community, Xili Subdistrict, Nanshan District, Shenzhen, China.