




GM Passlock Ignition Lock Cylinder Replacement Instructions

Removal & Installation

1. Remove the trim panel from around the radio. This panel is normally held in with only snap-in clips. However some models may have 1-2 screws securing the panel.
2. Unbolt and remove the radio in order to gain access to the side and rear of the ignition lock cylinder.
3. Press the small release tab while turning the key to the ON position. See pictures below.

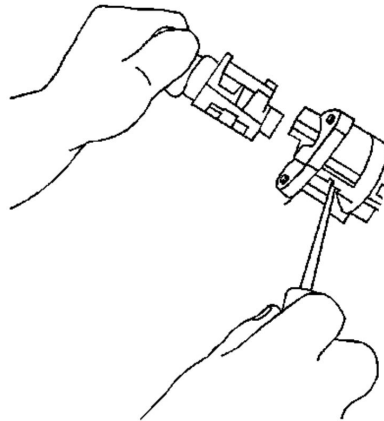

4. With the key still in the ON position pull towards you to remove the lock cylinder.
5. Install the new lock in the reverse order. Continue to the programming procedure below.

Programming Procedure

1. Insure your vehicle's battery is fully charged.
2. Clear any diagnostic trouble codes in the ECU using a scan tool or by disconnecting the vehicle's battery for 10-15 minutes.
3. Turn the ignition ON but do not start the car.
4. Turn the key to the start position, then allow the key to return to the ON position. The vehicle will not start during this step.
5. At this point a SECURITY icon will appear on the instrument cluster.
6. Leave the ignition ON and the SECURITY icon will turn OFF within approximately 10 minutes.
7. Turn the ignition OFF and wait 5 seconds
8. Repeat steps 3 to 7, 2 more times for a total of 3 cycles, approximately 30 minutes.
9. Insure you turn the ignition OFF before proceeding to step 10
10. Turn the ignition to the ON position and start the vehicle. The key should now be programmed and the vehicle will start.