Manual of iooioo A80/A81 V2503311

Scan by WhatsApp to talk to us in :		Customer service email: iooioo@qq.com Phone: +1 5599337972

Product interface introduction:

1. Power Button

   Press and hold 2 seconds to turn on/off

   When LED is Green, double click to print device QR code

2. Type-C Interface

   Charged with PC, power bank or mobile phone charger

3. Paper Exchange Button (One in left, another in right)

   Press the 2 buttons on the left and right to open cover

4. Power LED light Indicator Status

   Green light on: normal status

   Green light flashing: Charging and in power on statue

   Red and Green flashing alternatively: Print head over heat. Print will resume automatically once cool down.

   Blue light on: Bluetooth is connected

   Red light on: Cover open or not close tightly/no paper/charging and in power off state





Phone Bluetooth printing:

Video of iPhone: https://www.amazon.com/vdp/07442cb5ca1541a98e5faa816a71f637

Video of Android: https://www.amazon.com/vdp/0168ce30256849f6afc6d098551e07cf

1. Please search for [SharpFox] on Google Play or App Store to download and install. (tips: make sure phone Internet is active during usage of the APP SharpFox, otherwise it will cause many problems.)
2. Press and hold the power button for 2 seconds to turn on the printer, (tips: make sure LED is Green, otherwise it will not print).
3. (Tips: Make sure no other phone is connected with printer, only 1 phone could the printer.) Activate phone Bluetooth (Tips: some phone will request to click "allow new Bluetooth connection" in the Bluetooth setting, otherwise printer will not connect with phone."). (Tips: For Android phone, please activate permission of location service and nearby device of phone for app, otherwise printer will not connect with phone). If password text-box pop-up, please enter 0000.) Open [SharpFox] App, sign up and login or use it as guest mode. In main menu,make sure word above "Connect Device" is"A4 Printer" but not "Pocket Printer" or not "Label Maker"(Otherwise it will not connect the printer. If it is not "A4 Printer, please click it to change it to "A4 printer""), click "Connect Device->", and then click the popup device name begins with "A80".(Tips: If you still could not connect the phone, please try to reboot the printer, and try to connect again) Or if the device name did not popup, when the LED is green, double click printer power button to print the QR code, and click the "Scan" to scan the QR code. (Tips: Don't connect printer in the mobile phone Bluetooth settings, please connect it within APP. Every printer was

double tested before shipment, if you still could not connect with phone, please talk with us in WhatsApp or call us.)

4. Print photo: Click "Photo print"->" Photo print"-> select the photo, then select the width of the paper (ranged from 8.5 inch to 2.25 inch), then click "Print"
5. Import document into SharpFox to print: Open your document from another app, such as WhatsApp, click the document in WhatsApp to open it, then click the bottom-left icon, then click "···" and select SharpFox to import the file into it. Then in the SharpFox app, click the file, then click the print logo, then select width of the paper (8.5 inch to 2.25 inch) and select Text and then click the Print button (tips: use the default rolled paper setting, even you are using folded paper, otherwise the content may print at the perforated line of the folded paper).
6. To print notes & Images: In the main menu, click "Notes & Images", input the text and image, then click the print icon.

Windows PC with Bluetooth or USB; Mac PC, Linux, RaspBerry PI, printing with USB cable:

Video of Windows PC connect with Bluetooth or USB:


https://www.amazon.com/vdp/07aa78e10ec942739d70d1fe99bc7e3d


Video of Mac PC connect with USB: https://www.amazon.com/vdp/0b9ecec3de5242f9a3871f598d1d4781

1. Press and hold power button to power on printer (Tips: Make sure LED light is "Green", otherwise it will not print) .
2. Connect PC and printer with USB C data cable(If you want to connect Windows PC with Bluetooth, no need to connect with USB cable).
3. Select the driver for Windows with Bluetooth; Windows, Mac,, Linux or RaspBerry Pi with USB, then download and install driver from https://help.flashlabel.com/support/solutions/folders/150000534362

   (Tips: 1. If there is error, please turn off antivirus software in your PC.)

   Or from https://r906.com/elaj/i/driver/YXWLfromWEB241026.zip
4. Select printer "A80" from documents/Picture when printing from PC. (tips: only letter/A4 is supported to print from PC, for paper with width <A4, please print from phone.) If you are using letter paper, please select letter paper size in printer options. If you are using A4 paper, please select A4[210*297mm](Tips: Not A4) paper size in printer option. (tips: use the default rolled paper setting, even you are using folded paper, and there is no 6 black marks at the back of the flat folded paper, otherwise the content may print at the perforated line of the folded paper).
5. For windows, if you still could not connect PC, make sure "Print Spooler" is running before installation. To start it, select Windows key + R in keyboard to open Run. Then type "services.msc", and click OK. Then Right-click "Print Spooler" . Then select Start.)

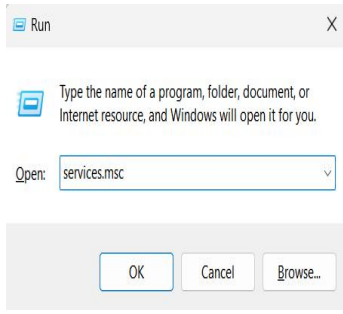

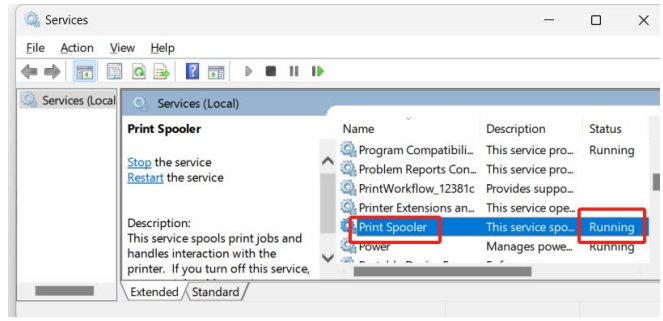


(Tips: Every printer was double tested before shipment, if you still could not connect with phone/PC, please talk with us in WhatsApp or call us.)

Paper installation:

1. Press the 2 exchange paper button to open the cover.
2. Align paper to the right side if they are less than letter size (tips: make sure the diameter of the "untied" rolled paper is <3cm, otherwise the paper will jam by the friction of the roll and the paper housing, or put the rolled paper at outside of the printer).
3. Install the paper with the printable size facing the printer head and the paper need to come out of the printer a little. You could scratch the paper by nail

to confirm the printable side.
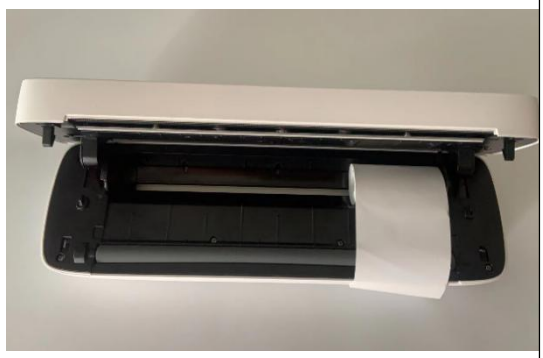
<table>
<tr>
<td>
Printable side need to face the print head. Otherwise, it will print nothing.</td>
<td>
For tattoo stencil transfer paper installation: Step1: Remove the white sheet between the plastic sheet and the top white sheet. Step2: Install the paper as the picture.</td>
</tr>
<tr>
<td>
For printable side facing outside of the roll</td>
<td>
For printable side facing inside of the roll</td>
</tr>
<tr>
<td>
For notes rolls less than letter size with diameter<3cm.</td>
<td>
For “untied” sticker roll with diameter >3cm. If you put inside, paper will jam.</td>
</tr>
</table>

Charging Instructions


1. Input: 5V 2A. It is recommended to use a mobile phone charger for charging.
2. It is recommended to fully charge the battery before use.
3. If the printer has not been used for an extended period, please charge it every three months to prevent potential charging issues caused by long-term natural wear and tear of the lithium batteries.

Clean The Printer Head

Please turn off the printer and open the printer cover and take out the paper;

Dip a cotton cloth or cotton swab with medical alcohol, and wipe gently along the center to the periphery of the printer head;

After cleaning the printer head, do not use the printer immediately. Please wait for 1 to 2 minutes, use the printer after the alcohol has completely evaporated

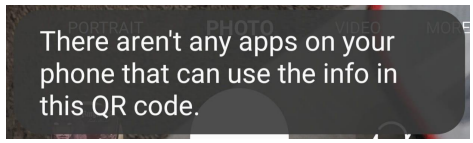FAQs:	Root Cause	Actions
 Or **Connected failed**	Under phone setting, it was added to Bluetooth blacklist.	Remove it from the blacklist of Phone Bluetooth setting
Why phone could not connected with printer by Bluetooth sometimes? 	Printer connected with other phone	When LED of Printer is blue, it means it was connected with other printer. Please turn of the Bluetooth in other phone.
	Bluetooth is not ready after power up.	When LED is green, double click the power button to print the QR code, if there is no name after B/T:, then the Bluetooth is not ready, please restart the printer and wait for 3 seconds to reprint the QR code.
What to do, if jam paper during printing		Open paper cover to stop printing
Why printing become unclear?	Print head become dirty	Clean print head as the instruction in the manual
Is there any video or instruction to show how printer A80/A81 of IOOIOO, aixiqee, GUTHERREN, minzhi, Munbyn print from Windows PC, MAC PC and Phone with the 6 marks continuous folded letter size inkless paper?		https://r906.com/elaj/i/manual/manualFoldedLetter6marks.pdf

		
Where to buy the folded paper for A80/A80h		Please visit our IOOIOO store in amazon https://www.amazon.com/dp/B0F32Z36H5