

STV 415 instruction

size : 297(L) x 210(H)mm

Job start: 9 Nov 2015

1 April 16(rev.5)

P.1



These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.

Remove all packaging materials and check that the unit is not damaged before use. Decide on an appropriate location for your product (see siting instructions below).


INSTALLATION

- Remove all packaging and carefully read instructions.
- Slide off outer casing on front of unit exposing battery compartment. Lift off battery cover and insert 2 x AA alkaline batteries, replace both covers (do not use rechargeable batteries). Batteries not included.
- Thread the Jet-Spray unit onto the top of the sensor housing and tighten carefully by hand to avoid leaks (do not over tighten).
- For high flower beds, or to deter larger target pests, thread the stand-pipe extension onto the bottom of the sensor housing. Otherwise, connect the sensor housing directly to the stake unit, ensuring it is tightened to avoid leaks (do not over tighten).
- Carefully push the stake into the ground in the desired location taking care not to apply direct pressure to the sensor unit housing. In hard ground, make a hole using a spike or fork before pushing the stake into the ground to avoid damage to the unit.
- Ensure the sensor unit is level, pointing in the direction of the area you wish to protect, and that there is no foliage or obstructions in front of the PIR sensor.



Siting Instructions

1. This product is suitable for OUTDOOR USE ONLY.
2. Connect garden hose to the unit but do not turn on.
3. To test the PIR sensor, turn the dial (on back of unit) fully clockwise to position 9 and wave hand in front of sensor. The valve will open and click, then close again five seconds later.
4. Set the sensitivity of the PIR sensor by turning the dial at the back of unit - 0 is off and 9 will sense movement approximately 10 metres in front of the PIR sensor.
5. Check the coverage area by waving your hand in front of the PIR sensor until you hear the open click. To adjust the trajectory of the water push down on the black hammer head and turn the dial at the top of the unit (see diagram B).
6. The Jet-Spray Repeller's coverage area is arc-shaped. Set the width of the arc by sliding the two green limiters left and right. (see diagram A). The wire clip moves between the two green limiters when the Jet-Spray repeller is activated. The unit automatically switches direction when the wire clip hits a tab.
7. Turn on the water supply and wave your hand in front of the PIR sensor to test. Repeat steps 3-6 to adjust the coverage area as required.

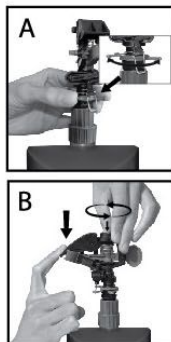

P.2

Effective

Detects and repels foxes, herons, cats, squirrels and other nuisance animals in vulnerable garden areas.

Easy Set-up

Uses battery power and a standard quick-fit hose connection in any garden area.

Optional Height

Stand pipe extension for high flower beds or larger target species.

Adjustable Area

0 to 10 metre PIR sensitivity enables variable coverage area up to 100 square metres.



WARNINGS

- This product is suitable for OUTDOOR USE ONLY.
- Do not unscrew/remove back of unit as this will void warranty.
- This product is intended for use as an animal deterrent only - not to be handled by children.
- An adult must carry out battery replacement and installation.
- Remove exhausted batteries from this product.
- Do not use rechargeable batteries.
- Do not mix new and used batteries.
- Do not mix alkaline standard (carbon-zinc) or rechargeable batteries.
- Do not allow any part to come in contact with heat or a direct flame.
- When installing (2 x AA) alkaline batteries in the battery compartment, ensure the batteries are placed as marked (+) (-)
- Only the recommended batteries should be used.
- If any part of the unit is damaged you should stop using it immediately.

CARE AND MAINTENANCE

- Turn the unit off whenever pets are at play in the protected zone, or when gardening or, when other human activity is likely to trigger the unit.
- Do not immerse the unit in water or other liquids
- Do not tamper with the unit's internal components.
- From time to time use a damp cloth to wipe the PIR lens clean.
- Do not use alcohol, benzene or paint thinners