

l voit 
NeoClassic 450S Smart
Ultrasonic Cool Mist Humidifier



Questions or Concerns?
Please contact us Mon–Fri,
9:00 am–5:00 pm PST/PDT
at support.levoit.com
or at 1-888-726-8520.

**READ AND SAVE THESE
INSTRUCTIONS**

Safety Information

- To reduce the risk of fire, electric shock, or other injury, follow all instructions and safety guidelines.

GENERAL SAFETY

- Only** use your humidifier as described in this manual.
- Place the humidifier and cord so that it will not be knocked over. Do not place near large pieces of furniture or in high-traffic areas.
- When not in use, turn the humidifier off and disconnect from power by removing the plug from the outlet.
- Do not** use the humidifier in wet environments.
- Keep the humidifier out of reach from children.
- Do not** open the base or remove the water level sensor for self-servicing.
- Always** unplug your humidifier from the power outlet before cleaning your humidifier or detaching the water tank from the humidifier base.
- Always** make sure to place the humidifier on a flat, level surface before operation.
- Only** fill the water tank with clean water. Never fill the water tank with any other liquids.
- Do not** place the humidifier near sources of heat, such as stovetops, ovens, or radiators.
- Do not** place the humidifier directly on floors, carpets, or rugs.
- Do not** use other items as replacement parts for this product.
- Do not** cover the nozzle while the humidifier is on. Doing so may damage the humidifier.
- Remove the water tank from the base before moving the humidifier.
- Do not** immerse the humidifier base, power cord, or plug in water. If the humidifier is damaged or is not functioning properly, stop using it and contact **Customer Support** immediately (see page 14).
- This humidifier is not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This humidifier can be used by children 8 years and older as well as persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the humidifier.
- Supervise children when they are near the humidifier.
- Children should not clean or perform maintenance on the humidifier without supervision.
- Children should be supervised to ensure that they **do not** play with the humidifier.
- Not for commercial use. Household use **only**.

SAFETY INFORMATION (cont.)

**CAUTION: RISK OF LEAKS AND
ELECTRIC SHOCK**

Do not add essential oils, supplemental water treatment liquids, or water filters into the water tank or base chamber. This will damage the humidifier and cause leaks.

POWER & CORD

- Ensure that the plug fits properly into a polarized socket.
- Your humidifier has a polarized plug (one prong is wider than the other), which fits into a polarized outlet **only** one way. This is a safety feature to reduce the risk of electric shock. If the plug does not fit, reverse the plug. If it still does not fit, do not use the plug in that outlet. **Do not** bypass this safety feature.
- Do not** handle the power cord or plug with wet hands. Keep the plug and power cord away from liquids.
- If the power supply cord is damaged, it must be replaced by Arovast Corporation or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (see page 14).
- Unplugging the power cord will disable remote control of the humidifier and temporarily disconnect the humidifier from VeSync and other third-party apps.

Package Contents

- 1 x Smart Ultrasonic Cool Mist Humidifier
- 1 x User Manual



Specifications

Model	LUH-N451S-WUS
Power Supply	AC 120V, 60Hz
Rated Power	25W
Water Tank Capacity	1.11 gal / 4.2 L
Max Mist Output	270 mL/h
Max Runtime	42 hours on sleep mode setting Note: The humidifier may run for a longer or shorter time depending on the environmental temperature and humidity.
Noise Level*	≤ 30dB * ≤ 26dB on low setting and sleep mode
Dimensions	8.1 x 8.1 x 12.8 in / 20.6 x 20.6 x 32.6 cm
Weight	3.99 lb / 1.81 kg


Note: To access additional smart humidifier functions, download the VeSync app (see page 8).

Getting to Know Your Humidifier


- A. Nozzle
- B. Max Water Line (Tank)
- C. Mist Tube
- D. Water Filter
- E. Mist Shield
- F. Detachable Sink
- G. Noise Silencer
- H. Air Outlet
- I. Base Chamber
- J. Control Panel/Display
- K. Water Tank Cover
- L. Water Tank
- M. Aroma Chamber
- N. Max Water Line (Sink)
- O. Night Light Cover
- P. Night Light
- Q. Humidity Sensor (On the Back)
- R. Transducer
- S. Air Inlet
- T. Float Brackets
- U. Float
- V. Secondary Float
- W. Lock & Unlock Marking
- X. Tank Alignment Sensor
- Y. Water Outlet Valve
- Z. Feet
- AA. Power Cord

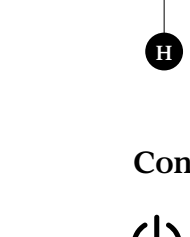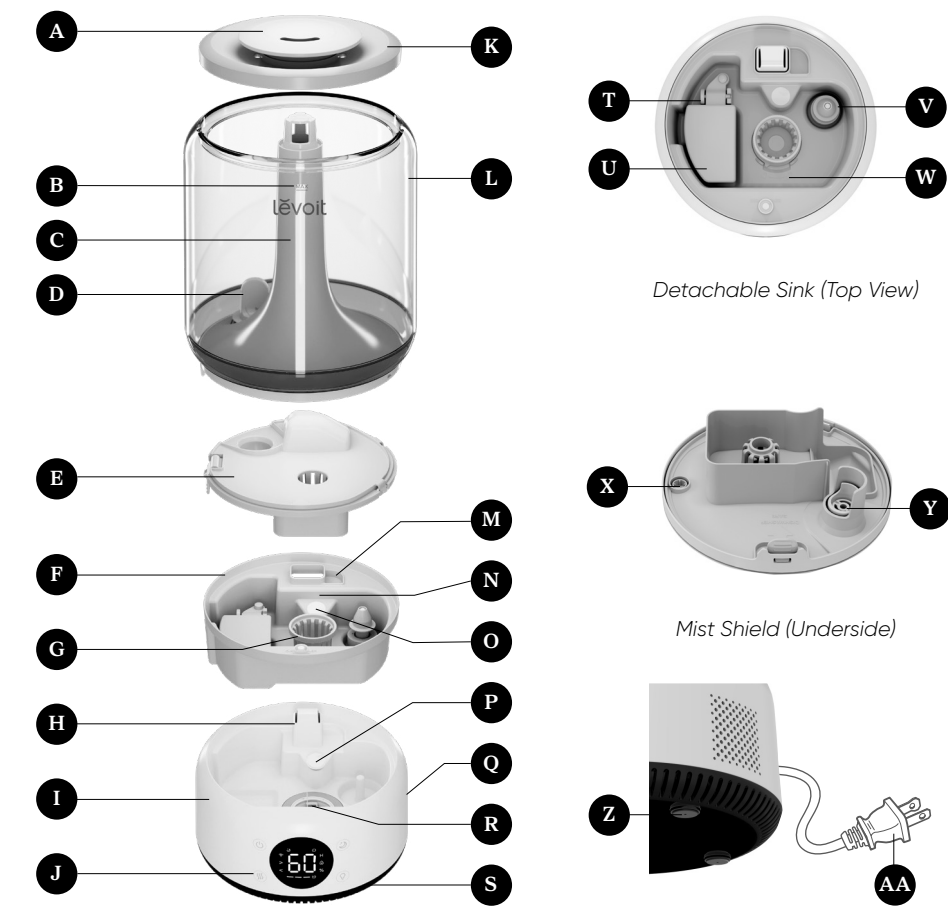


Detachable Sink (Top View)

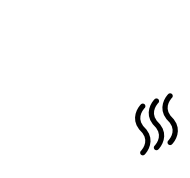

Mist Shield (Underside)

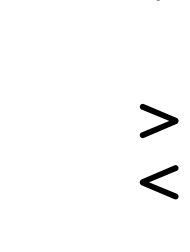

CONTROL PANEL

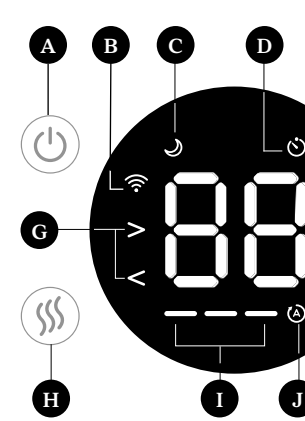

- A. On/Off Button
- B. Wi-Fi® Indicator
- C. Sleep Mode Indicator
- D. Timer Indicator
- E. Hour Indicator
- F. Sleep Mode Button
- G. Less Than/More Than Indicators
- H. Mist Level Button
- I. Mist Level Indicator
- J. Auto Mode Indicator
- K. Humidity Percentage
- L. Night Light Button
- M. Fault indicator

Controls

On/Off Button

- Tap to turn the humidifier on/off.
- Press and hold for 5 seconds to pair with the VeSync app. See the in-app instructions for more information.
- Press and hold for 15 seconds to reset the humidifier. This will restore the humidifier's default settings and disconnect it from Wi-Fi® and the VeSync app (see page 8).

Mist Level Button

- Tap repeatedly to cycle through mist level settings: low, medium, high, and Auto.

Wi-Fi Indicator

- Turns on, off, or blinks to indicate pairing status. See the VeSync in-app instructions for more information.

Less Than/More Than Indicators

- Turns on when the relative humidity is detected at < 20% or > 90%.

Sleep Mode Button

- Tap to turn Sleep Mode on (see page 9). Tap any button to wake up display, then tap any button again to exit Sleep Mode.
- Press and hold for 3 seconds to turn off display lights back on.

Night Light Button

- Tap repeatedly to cycle through night light settings: low, high, and off.
- Can be used without humidification.
- Adjust night light color and brightness in the VeSync app (see page 9).

Fault Indicator

- Flashes for 5 seconds then turn off when there is low or no water in the tank.
- Lights up when the water tank is removed. Remains on until the tank is replaced.
- When the light turns on, please refill the tank and properly place it on the base.

Getting Started

- Remove all packaging.
- Rinse and reassemble all parts before first use (see **Care & Maintenance**, page 7).

Note: Make sure the float and water filter are securely in place.

- Choose a hard, flat location for the humidifier at least 12 in / 30 cm away from any walls. The surface must be water-resistant. [Figure 1.1]

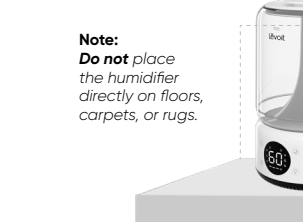


Figure 1.1



Figure 1.2

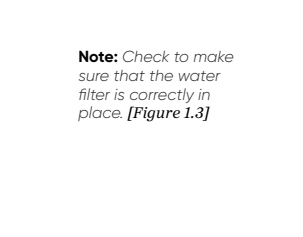


Figure 1.3



Figure 1.4

Note: Check to make sure that the float is securely in place. [Figure 1.4]

Filling & Refilling

Note: Make sure the water tank is clean before filling.

- Turn off the humidifier.
- Remove the water tank cover. [Figure 2.1]
- Fill the tank with room-temperature water. [Figure 2.2]

Do not fill with hot water.



Figure 2.1

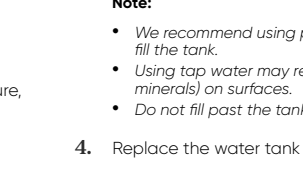


Figure 2.2




Figure 2.3

Note: Make sure the nozzle on the water tank cover is placed over the mist tube, otherwise the humidifier may not work correctly.

- Replace the water tank cover. [Figure 2.3]

CAUTION

- Do not** add water directly into the base chamber. [Figure 2.4]
- Do not** add water through the mist tube. [Figure 2.5]
- Do not** use water treatment liquids or third-party water filters in this humidifier.



Figure 2.4



Figure 2.5

Note: The base chamber's max water line is only for reference. **Do not** pour water directly into the base chamber.

Using Your Humidifier

- Plug in the humidifier.
- Tap to turn your humidifier on.
- Tap repeatedly to cycle through mist settings: low, medium, high and Auto.
- Rotate the nozzle to adjust the direction of the mist. [Figure 3.1]

Note:

- Direct the nozzle away from any furniture, walls, or other objects to prevent them from getting wet.
 - Do not** inhale the mist directly from the nozzle.
- Optionally, use the controls or the VeSync app to turn on night light, Sleep Mode, and more (see **VeSync App Features**, page 9).



Figure 3.1

- When your room has reached your preferred humidity level, turn the humidifier to a lower setting, or turn it off. A comfortable humidity level is between 40% and 60%.

IMPORTANT TIPS

Your humidifier must have the correct level of water in the base chamber to work properly. If there is too much water in the base chamber, the humidifier cannot create mist.

- Do not** place the humidifier on an inclined surface.
- Only** add water to the water tank.
- Avoid moving or shaking the humidifier. This may cause the water tank to release too much water into the base chamber.
- Before moving the humidifier, turn it off, unplug it, and remove the water tank. Empty any excess water from the base chamber.
- If your humidifier doesn't produce mist properly, check the water line in the base chamber to see if it's above the max water line. If there's too much water in the base chamber, pour out any extra water.

Note: The base chamber's max water line is only for reference. **Do not** pour water directly into the base chamber.



Figure 4.1



Figure 4.2

Figure 4.3

Figure 4.4

Figure 4.5

Figure 4.6

Note: **Do not** put the base chamber in the dishwasher. Wipe the base with a cloth to remove any water.

- Dry all parts with a cloth. Make sure all parts are completely dry before reassembling or storing.

Care & Maintenance

Note:

- All maintenance should be done on a water-resistant surface, such as a kitchen counter.
- Change the water daily to avoid bacteria growth.
- Use a tissue or cloth to clean the nozzle regularly.
- If not using the humidifier for 1 week or longer, do not leave water inside. Clean and dry the humidifier instead.

CLEANING

You should clean your humidifier water tank and base chamber every 3 days, and when you're ready to store it.

Note: Never immerse the base chamber in water or liquid.

- Unplug the humidifier.
- Remove the water tank and pour out any remaining water.
- Bend the water filter to the side to remove it from the water tank. [Figure 4.1]
- Pour out any remaining water in the base chamber. [Figure 4.2]

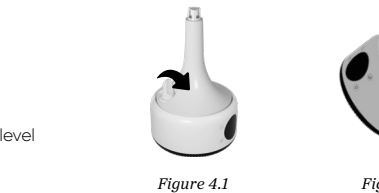


Figure 4.1

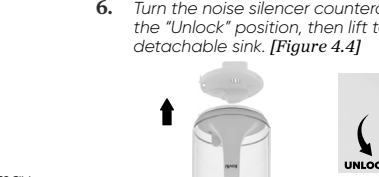


Figure 4.2

- Pinch the latch and lift it upward to remove the mist shield. [Figure 4.3]
- Turn the noise silencer counterclockwise to the "Unlock" position, then lift to remove the detachable sink. [Figure 4.4]



Figure 4.3



Figure 4.4

Note: **Do not** put the base chamber in the dishwasher. Wipe the base with a cloth to remove any water.

- Dry all parts with a cloth. Make sure all parts are completely dry before reassembling or storing.

DESCALING YOUR HUMIDIFIER

To descale the humidifier (remove mineral buildup):

1. Remove the water filter from the water tank.
2. Fill the water tank with 2 US cups / 475 mL of distilled white vinegar. **[Figure 5.1]**
3. Replace the tank cover and swish the vinegar around the tank.
4. Place the water filter, mist shield, detachable sink, and float into a container. Fill the container with enough vinegar to cover all parts.
5. Let the water tank and additional parts sit in the vinegar for 15–20 minutes.
6. Pour out the vinegar and rinse the tank and parts until vinegar smell is completely gone. **[Figure 5.2]**
7. Dry all parts with a cloth. Make sure all parts are completely dry before reassembling or storing.



Figure 5.1



Figure 5.2

REASSEMBLING

1. Place the float back into the base chamber. **[Figure 5.3]**
 - Make sure the correct side of the float is facing up.
 - Insert the smaller prong into the closed side of the float brackets.
 - Place the larger prong into the open (U-shaped) side of the float brackets.
2. Install the detachable sink and turn the noise silencer clockwise to the “Lock” position to secure into place. **[Figure 5.4]**
3. Push the mist shield into the water tank until you hear it click into place.
4. Reinstall the water filter into the tank.
5. Place the water tank onto the base, then place the tank cover on to the tank.



Figure 5.3



Figure 5.4

Note: If the detachable sink isn't locked into place, water may leak into the base.

STORING

Follow the cleaning instructions (see page 7) and allow all parts to dry completely before storing. Store in a cool, dry location.

VeSync App Setup

Note:

- Due to ongoing updates and improvements, the VeSync app may be slightly different than shown in the manual. In case of any differences, follow the in-app instructions.
- Requires device to run app, Wi-Fi or mobile data, and iOS® version 15 or Android™ version 8 (or above). Standard data and messaging rates may apply. Registration is required.

1. To download the VeSync app, scan the QR code or search “VeSync” in the Apple App Store® or Google Play Store. **[Figure 6.1]**
2. Open the VeSync app. If you already have an account, tap **Log In**. To create a new account, tap **Sign Up**.

Note: You must create your own VeSync account to use third-party services and products. These will not work with a guest account. With a VeSync account, you can also allow your family and friends to control your smart humidifier.




Figure 6.1



Figure 6.1

3. Follow the in-app instructions to set up your smart humidifier.
- Note:**
- You can use the VeSync app to connect your smart humidifier to Amazon Alexa or Google Assistant™. Follow the in-app instructions to connect VeSync to your voice assistant.
 - Your phone must have Location turned on while your phone is connecting to your smart humidifier. This is required to establish the Bluetooth® connection. You can turn Location off after your smart humidifier is finished connecting to the VeSync app.

Wi-Fi Connection:

- To disconnect the smart humidifier from Wi-Fi, press and hold  for 15 seconds until the Wi-Fi indicator turns off. This will restore the device's default settings and disconnect it from the VeSync app.
- To reconnect, please follow the instructions in the VeSync app for adding a device.

STORING

Follow the cleaning instructions (see page 7) and allow all parts to dry completely before storing. Store in a cool, dry location.

AUTO MODE

Auto Mode uses the humidifier's sensor to automatically adjust the mist level to maintain a target humidity level. The default target humidity level is 50%.

Note: You can use the VeSync app to change the target humidity level to fit your needs.

1. Repeatedly tap  until you reach Auto Mode. **Note:** The humidifier will automatically mist for 15 seconds after being turned on, even if the room has reached the target humidity level.
2. The humidifier will continue detecting the humidity level in the room. It will start and stop misting again according to the following table:

Room Relative Humidity*	Automatic Mist Level
$\Delta > 10\%$	High
$5\% \leq \Delta \leq 10\%$	Medium
$\Delta \leq 5\%$	Low
Reach Target	Automatic Stop

*If you change the default target humidity from 50% in the VeSync app, the humidity percentages will change accordingly.

SLEEP MODE

Sleep Mode changes the humidifier's mist setting to low and turns off the control panel lights, making it ideal for sleep.

- Tap  to turn Sleep Mode on.
- When Sleep Mode is on, you can tap any button to wake up the control panel.
- Once you wake up the control panel, tap any button to exit Sleep Mode and resume manual controls.

USING THE AROMA CHAMBER

Your humidifier can be used for aromatherapy.

1. Remove the water tank and mist shield. Add 3–5 drops of essential oil to the aroma chamber. **[Figure 7.1]**
2. Replace the water tank and mist shield, then turn the humidifier on. The humidifier will automatically diffuse aroma while humidifying.

Note: Do not add essential oils, water treatment liquids, or third-party water filters into the water tank or base chamber. Only add essential oils to the aroma chamber.



Figure 7.1

VeSync App Functions

The VeSync app allows you to access additional smart functions, including those listed below.

REMOTE CONTROL FROM YOUR PHONE

- Turn the humidifier on/off.
- Cycle through mist levels.
- Turn Auto Mode on/off, and set target humidity level.
- Turn Sleep Mode on/off.
- Turn the night light on/off, and adjust its color and brightness.
- Turn the display lights on/off.

MONITOR HUMIDITY LEVELS

- Check current humidity levels in the humidifier's environment.

NEW AUTO MODE

- The new auto mode offers four sub-modes, tailored to diverse daily scenarios and personal preferences.

SET TIMERS & SCHEDULES

- Program individual timers or create a schedule for your smart humidifier.

THIRD-PARTY VOICE CONTROL

- Compatible with Amazon Alexa and Google Assistant™ for voice commands.

Note: The VeSync app is continually updated, and app features will expand.

SLEEPWAKE

This function combines Sleep Aid and Wake Up function.

- Sleep Aid function can create a cozy bedroom environment and help you fall asleep faster.
- Wake up function can gently rouse your body from sleep and wake up feeling refreshed and energized.

SCENE MODE

- Sync mist, light, and music for tailored vibes — ideal for meditation, yoga, nap, and focus sessions. You can also DIY your own scene mode.

SMART CLEANING REMINDER

- Analyze the optimal time for a cleaning reminder, helping maintain the optimal performance of your humidifier.

Troubleshooting

Problem	Possible Solution
The humidity level isn't changing in my room.	Use a higher mist level setting. Depending on your environment, the humidifier may take longer to humidify your air.
Display shows Error Code "E1" or "E5"	The humidifier is malfunctioning. Contact Customer Support (see page 14).
Little or no mist comes out.	Turn the mist level to a higher setting. Turn the mist level to a higher setting. There may be too much water in the base chamber. Empty the base chamber. Refill the water tank (not the base chamber) and place the water tank properly onto the base. Make sure the air inlet on the bottom of the base is not blocked. The humidifier should not be set on carpet or other surfaces that may block the air inlets. Clean the humidifier (see Care & Maintenance , page 7). Make sure the nozzle is not blocked or clogged. Make sure the nozzle is not blocked or clogged. Make sure the humidifier is on a level surface. If the water tank or base was washed with detergent, rinse thoroughly with clean water to remove any detergent. Clean the water filter (see page 7). The water temperature may be too low. Turn the mist level to the highest setting and let the humidifier run for a while, then adjust to the desired setting.
Humidifier doesn't turn on or turns off unexpectedly.	Plug the humidifier into a working outlet and turn it on. Add purified or distilled water to the water tank.
Humidifier produces an unusual smell.	If the humidifier is new, unplug and rinse all parts, then place in a cool, dry place for 12 hours. Clean the water tank and base chamber (see Care & Maintenance , page 7).
Humidifier makes a loud or unusual noise.	Make sure the water tank is properly in place (see Getting Started , page 6). Set mist level to a lower setting. Empty the base chamber. Refill the water tank (not the base chamber) and place the water tank properly onto the base. The humidifier may be malfunctioning. Stop using the humidifier and contact Customer Support (see page 14).
White scale (mineral buildup) appears around the humidifier.	We recommend using purified or distilled water to fill the humidifier. Avoid using water with high mineral content. Clean the humidifier (see Care & Maintenance , page 7).
White dust appears around the humidifier.	We recommend using purified or distilled water to fill the humidifier. Avoid using water with high mineral content, such as tap water. Clean the humidifier (see Care & Maintenance , page 7).
Water leaks from the humidifier.	Avoid running the humidifier in a room with over 60% relative humidity. Wipe any excess water off the top and bottom of the base. Do not shake the humidifier. Make sure to place the humidifier on a flat, level surface. Make sure the silicone sealing ring around the water outlet valve is secure. Check the water tank for leaks. If there are leaks, contact Customer Support (see page 14).
Mold grows inside the humidifier.	Clean the water tank and base chamber regularly (see Care & Maintenance , page 7).
Essential oil has little or no smell.	Add more essential oil. For best results, use pure essential oil.

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT - PART 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

VeSync App Troubleshooting

WHY ISN'T MY HUMIDIFIER CONNECTING TO THE VESYNC APP?

- Make sure your phone has Bluetooth® turned on and is not currently connected to another Bluetooth device.
- During the setup process, you must be on a secure 2.4GHz Wi-Fi network. Confirm that the network is working correctly.
- Make sure the Wi-Fi password you entered is correct.
- Make sure your humidifier and phone are within 30 ft / 10 m of each other.
- Reset the humidifier by pressing and holding  for 15 seconds. Then try connecting again.

MY HUMIDIFIER IS OFFLINE

- Make sure the humidifier is plugged in. The humidifier may appear to be offline if it is unplugged, or if the outlet does not have power.
- Refresh the VeSync menu by swiping down on the screen.
- Make sure your router is connected to the internet and your phone's network connection is working.
- Reset the humidifier using one of these options:
 - A. Delete the humidifier from the VeSync app. Swipe left (iOS®) or press and hold (Android), then tap Delete.
 - B. Press and hold [power] for 15 seconds. Then, reconfigure your humidifier with the VeSync app.

Note: Power outages, internet outages, or changing Wi-Fi routers may cause your humidifier to go offline.

THE VESYNC APP IS DISPLAYING AN INCORRECT HUMIDITY PERCENTAGE WHILE THE HUMIDIFIER IS TURNED ON.

- The room may be larger than the humidifier's effective range. Move to a room smaller than 505 ft² / 47 m².
- Moisture may have built up inside the humidity sensor. Turn off the humidifier and allow the sensor to air dry. Make sure the nozzle is facing away from the sensor so that mist does not settle on the sensor (see **Getting To Know Your Smart Humidifier**, page 4).
- If the humidifier is placed within 12 in / 30 cm of a wall or in a corner, the humidity sensor cannot provide a proper reading for the relative humidity in the room.

If your problem is not listed, please contact Customer Support (see page 14).

Federal Communication Commission Interference Statement - Part 18

This device complies with part 18 of the FCC Rules.

This equipment generates and uses ISM frequency energy and if not installed and used properly, that is in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with limits for an ISM Equipment pursuant to part 18 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following:

- Reorient the receiving antenna of radio or television.
 - Relocate the equipment with respect to the receiver.
 - Move the equipment away from the receiver.
 - Plug the equipment into a different outlet so that the equipment and receiver are on different branch circuits.
- Conduct only the user maintenance found in this manual. Other maintenance and servicing can cause harmful interference and can void the required FCC compliance. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to the equipment. It is the responsibility of the user to correct such interference.

FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY

Arovast Corporation hereby declares that this equipment is in compliance with FCC requirements. The declaration of conformity can be found at <https://www.vesync.com/legal/compliance/fcc>

Warranty Information

Product	NeoClassic 450S Smart Ultrasonic Cool Mist Humidifier
Model	LUH-N451S-WUS
For your own reference, we strongly recommend that you record your order ID and date of purchase.	
Order ID	
Date of Purchase	

Levito Limited Product Warranty

Register your products at <https://warranty.levit.com/warranty> to stay up to date with important product information such as product updates, limited warranties, usage and maintenance recommendations, and notifications concerning safety warnings or product recalls. Registration is not required to claim your limited warranty.

Two (2) Year Limited Consumer Product Warranty

Arovast Corporation ("Arovast") warrants that the product shall be free from defects in material and workmanship for a period of **2 years from the date of original purchase** ("Limited Warranty Period"), provided the product was used in accordance with its use and care instructions (e.g., in the intended environment and under normal circumstances).

Your Limited Warranty Benefits

During the Limited Warranty Period and subject to this limited Warranty Policy, Arovast will, in its sole and exclusive discretion, either (i) refund the purchase price if the purchase was made directly from the online Levito store, (ii) repair any defects in material or workmanship, (iii) replace the product with another product of equal or greater value, or (iv) provide store credit in the amount of the purchase price.

Who is Covered?

This limited warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product, regardless of whether the product transferred ownership during the specified term of the limited warranty. The original consumer purchaser must provide verification of the defect or malfunction and proof of the date of purchase to claim the Limited Warranty Benefits.

Be Aware of Unauthorized Dealers or Sellers

This limited warranty does not extend to products purchased from unauthorized dealers or sellers. Arovast's limited warranty only extends to products purchased from authorized dealers or sellers that are subject to Arovast's quality controls and have agreed to follow its quality controls. Please be aware, products purchased from an unauthorized website or dealer may be counterfeit, used, defective, or may not be designed for use in your country. You can protect yourself and your products by making sure you only purchase from Arovast or its authorized dealers.

If you have any questions about a specific seller, or if you think you may have purchased your product from an unauthorized seller, please contact our Customer Support Team via support@levit.com.

What's Not Covered?

- Normal wear and tear, including parts that might wear out over time (e.g., batteries, filters, cleaning brush, essential oil pads, etc.).
- If the product or purchase has been altered in any way or is made illegible.
- If the model number, serial number or production date code on the product has been altered, removed or made illegible.
- If the product has been modified from its original condition.
- If the product has not been used in accordance with directions and instructions in the user manual.
- Damages caused by connecting peripherals, optional equipment or accessories other than those recommended in the user manual.
- Damages or defects caused by accident, abuse, misuse, or improper or inadequate maintenance.
- Damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Arovast.
- Damages or defects occurring during commercial use, rental use, or any use for which the product is not intended.
- If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, dishwasher, or water (unless the user manual expressly states that the product is dishwasher-safe).
- Incidental and consequential damages.
- Damages or defects exceeding the cost of the product.

Claiming Your Limited Warranty Service in 5 Simple Steps:

1. Make sure your product is within the specified limited warranty period.

Customer Support

If you have any questions or concerns about your new product, please contact our Customer Support Team.

Arovast Corporation

1775 Flight Way, Suite 150
Tustin, CA 92782
USA

URL: support.levit.com
Toll-Free: 1-888-726-8520

Disclaimers of Limited Warranties

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, EXCEPT AS WARRANTED IN THIS LIMITED PRODUCT WARRANTY POLICY, AROVAST CORPORATION PROVIDES THE PRODUCTS YOU PURCHASE FROM AROVAST CORPORATION "AS IS" AND AROVAST CORPORATION HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR PARTICULAR PURPOSE.

Limitations of Liability

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, IN NO EVENT WILL AROVAST CORPORATION, ITS AFFILIATES, OR THEIR LICENSORS, SERVICE PROVIDERS, EMPLOYEES, AGENTS, OFFICERS, OR DIRECTORS BE LIABLE FOR:

(A) DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH PRODUCTS PURCHASED FROM AROVAST CORPORATION IN EXCESS OF THE PURCHASE PRICE PAID BY THE PURCHASER FOR SUCH PRODUCTS, OR

(B) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF Arovast CORPORATION OR ONE OF ITS SUPPLIERS HAS BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES.

AND REGARDLESS OF WHETHER CAUSED BY TORT (INCLUDING NEGLIGENCE), BREACH OF CONTRACT, OR OTHERWISE, OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL, OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

EXCEPT AS COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT, AROVAST CORPORATION SHALL NOT BE LIABLE FOR COSTS ASSOCIATED WITH THE REPLACEMENT OR REPAIR OF PRODUCTS PURCHASED FROM IT, INCLUDING, BUT NOT LIMITED TO, LABOR, INSTALLATION, OR OTHER COSTS INCURRED BY THE USER. IN PARTICULAR, ANY COSTS RELATING TO THE REMOVAL OR REPLACEMENT OF ANY PRODUCT.

OTHER RIGHTS YOU MAY HAVE

SOME JURISDICTIONS DO NOT ALLOW FOR: (1) EXCLUSION OF IMPLIED WARRANTIES; (2) LIMITATION ON THE DURATION OF IMPLIED WARRANTIES; AND/OR (3) EXCLUSION OF LIABILITY FOR CONSEQUENTIAL DAMAGES. SO THE DISCLAIMERS IN THIS POLICY MAY NOT APPLY TO YOU. IN THESE JURISDICTIONS YOU HAVE ONLY THE IMPLIED WARRANTIES THAT ARE EXPRESSLY REQUIRED TO BE PROVIDED IN ACCORDANCE WITH APPLICABLE LAW. THE LIMITATIONS OF WARRANTIES, LIABILITY, AND REMEDIES APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.

ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS IN YOUR JURISDICTION. THIS STATEMENT OF LIMITED WARRANTY IS SUBJECT TO APPLICABLE LAWS THAT APPLY TO YOU AND THE PRODUCT. PLEASE REVIEW THE LAWS IN YOUR JURISDICTION TO UNDERSTAND YOUR RIGHTS FULLY.

CHANGES TO THIS POLICY

We may change the terms and availability of this limited warranty at our discretion, but any changes will not be retroactive.

This warranty is made by:

Arovast Corporation
1775 Flight Way, Suite 150
Tustin, CA 92782, USA

SUPPORT HOURS

Mon–Fri, 9:00 am–5:00 pm PST/PDT
your new product, please contact our Customer Support Team.

Arovast Corporation

1775 Flight Way, Suite 150
Tustin, CA 92782
USA

URL: support.levit.com
Toll-Free: 1-888-726-8520

ATTRIBUTIONS

App Store® is a trademark of Apple Inc.

Google, Android, and Google Play are trademarks of Google LLC.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

iOS® is a registered trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Arovast Corporation is under license. Other trademarks and trade names are those of their respective owners.