

reMarkable

User Guide

0	Introducing reMarkable	7
0.1	About reMarkable 2	7
0.1.1	About reMarkable 2	7
0.1.2	Second-generation CANVAS display	7
0.1.3	Battery and charging:	7
0.1.4	Power button	8
0.2	reMarkable accessories	9
0.2.1	Markers and Marker tips	9
0.2.2	Folio	12
1	Getting started	13
1.1	Setting up your reMarkable	13
1.1.1	What you need to get started	13
1.1.2	Starting up	13
1.1.3	Connect to your account	16
1.1.4	Handwriting conversion	19
1.1.5	Choose right-handed or left-handed mode	21
1.2	Charging your device	22
1.3	Updating to the latest version	23
1.3.1	How to check for the latest update	23
1.3.2	How to set your reMarkable to auto-update	23
1.3.3	How to update manually	23
1.3.4	Updating the desktop app - Mac and Windows	23
1.3.4	Updating the mobile app - iOS	24
1.3.5	Updating the mobile app - Android	24
2	Content on your reMarkable	25
2.1	Notebooks	25
2.1.1	Managing your notebooks	25
2.1.2	Quick sheets	25
2.1.3	Notebook tools	26
2.2	Organizing and editing PDFs (documents)	27
2.3	Ebooks	28
2.3.1	Things to know before moving ebooks to your reMarkable	28
2.3.2	Page navigation	28
2.3.3	How to add and delete note pages in ebooks	28
2.3.4	Organize your ebooks	29
2.3.5	Text settings	29
3	Navigation	30
3.1	Navigating on your reMarkable	30
3.1.1	My files	30
3.1.2	Filtering content	30
3.1.3	Sorting your files	31
3.2	Icons	32

3.3	Swipe gestures	35
3.3.1	Navigating in a document	35
3.3.2	Navigating between documents	35
3.4	Document drawer	36
3.5	Quick browse	37
3.6	Search on reMarkable	38
3.6.1	Search for a file or a folder	38
3.6.2	Navigating search results	38
3.7	Favorites	39
3.7.1	How to favorite a file or a folder	39
3.7.2	How to unfavorite a file	40
3.8	Notification center	40
4	Organization	41
4.1	Organizing folders	41
4.1.1	Creating new folders	41
4.1.2	Renaming files or folders	42
4.2	Add and delete files or pages	43
4.2.1	How to delete a file or a folder	43
4.2.2	How to delete a page in a notebook or Quick sheets	43
4.2.3	How to add a page in a notebook	44
4.2.4	How to add note pages to PDFs and ebooks	44
4.3	Move files and pages	46
4.3.1	How to move a file	46
4.3.2	How to move a note page in a notebook, PDF or ebook	46
4.3.3	How to move a note page from a notebook, PDF or ebook to another document	46
4.4	Duplicate content and pages	47
4.4.1	How to duplicate a file	47
4.4.2	How to duplicate a page in a notebook	48
5	Tools and functionality	49
5.1	Toolbar	49
5.1.1	Showing and hiding the toolbar	49
5.1.2	Choose a writing tool	49
5.1.3	Erase or undo content	49
5.1.4	Move, scale, and copy content	49
5.1.5	Page Overview	49
5.1.6	Layers	50
5.1.7	Share files	50
5.1.8	Document settings	50
5.1.9	Left/right-handed mode	50
5.2	Templates	51
5.2.1	How to choose a template	51
5.2.2	Cornell template	51

5.2.3	Get organized with weekly and daily planners	52
5.2.4	Design and create with creative templates	52
5.3	Layers	53
5.4	Portrait and landscape mode	54
5.5	Adjust view	56
5.6	Writing tools: Pen, pencil, brush, highlighter	57
5.6.1	Ballpoint pen	57
5.6.2	Fineliner	57
5.6.3	Marker	58
5.6.4	Pencil	58
5.6.5	Mechanical pencil	59
5.6.6	Paintbrush	59
5.6.7	Highlighter	60
5.6.8	Calligraphy pen	61
5.6.9	Writing tool settings	61
5.7	Eraser, undo, and redo	62
5.7.1	Eraser tools	62
5.7.2	Undo and redo	62
5.8	Selection tool (copy and paste)	63
5.9	Zoom	63
5.10	Trash	65
5.11	Integrating with Google Drive, Dropbox and One Drive	67
5.11.1	Adding Google Drive, Dropbox, or OneDrive accounts to your reMarkable	67
5.11.2	Transferring files to your paper tablet	69
5.11.3	Things to know when using Integrations	71
5.12	Screen Share	72
5.12.1	How to present with Screen Share	72
5.12.2	A guide to the features in Screen Share	73
5.13	Send by email	74
5.13.1	Sending a file by email from your reMarkable	74
5.13.2	Sending a single page from your reMarkable	75
5.14	Read on reMarkable (Google Chrome extension)	76
5.14.1	Read this before installing	76
5.14.2	Connecting Read on reMarkable to your reMarkable account	76
5.14.3	Different reading options	78
5.14.4	Read on reMarkable PDF settings	80
5.14.5	How to set up one-click PDF transfer	81
5.14.6	How to remove the Read on reMarkable Chrome extension	81
5.15	Convert handwritten notes into text	82
5.15.1	Useful things to know before getting started	82
5.15.2	Convert in your selected language	82
5.15.3	Converting notes into text	83
5.15.4	How to convert multiple pages at once	83

6 Settings **84**

6.1 Settings	84
6.2 General settings	84
6.2.1 Flight mode	84
6.2.2 Account	84
6.2.3 Factory reset	84
6.2.4 Software	85
6.3 Wi-Fi settings	85
6.4 Battery settings	86
6.4.1 Power saving modes	86
6.4.2 Power off	86
6.4.3 Battery percentage	86
6.5 Storage settings	87
6.5.1 Device syncing	87
6.6 Security settings	87
6.6.1 How to add a passcode	87
6.6.2 How to change or remove a passcode	87
6.7 Language settings	88
6.7.1 Changing the keyboard language	88
6.7.2 Using the onscreen keyboard	88
6.8 Accessibility settings	88
6.9 Help	88
6.9.1 About	88
6.9.2 Tutorial	89
7 Connectivity & Apps	90
7.1 The reMarkable cloud	90
7.1.1 Create a reMarkable account:	90
7.1.2 Security	90
7.1.3 Import files using my.remarkable.com	90
7.2 Desktop App	91
7.2.1 Set-up	91
7.2.2 Organize your files	91
7.2.3 Transferring files using the desktop app	91
7.2.4 Export by using the desktop app	92
7.2.6 Print from reMarkable	92
7.3 Mobile application	93
7.3.1 Set-up	93
7.3.2 Organize your files	93
7.3.3 Import files	93
7.4 Transferring files using a USB cable	95
7.4.1 How to enable USB transfer on your reMarkable tablet	95
7.5 Syncing files	96
8 Regulatory Compliance and Important Safety Information	97
8.1 E-label	97

8.2 Important safety and handling information	97
8.2.1 Handling	97
8.2.2 Cleaning	97
8.2.3 Operating temperature	97
8.2.4 Repairing	98
8.2.5 Battery	98
8.2.6 Charging	98
8.2.7 Choking hazard	98
8.2.8 Distraction	98
8.2.9 Radio frequency energy exposure and interference	98
8.2.10 Medical device interference	99
8.3 Battery damage	99
8.4 EU Recycling Information (WEEE)	99
8.5 Natural Resources Canada (NRCAN)	100
8.6 EU Declaration of conformity (CE)	100
8.7 USA compliance statement (FCC)	102
8.8 Canada compliance statement (IC)	104
8.8 Australia and New Zealand compliance statement	108
8.9 Singapore compliance statement	108

0 Introducing reMarkable

0.1 About reMarkable 2

0.1.1 About reMarkable 2

Dimensions:

- Size: 188.0 x 246.0 x 4.7 mm
- Weight: 403.5 grams (0.89 lb)
- 4.7 mm (0.19 in) thin — the world's thinnest tablet

Storage and RAM

- 8 GB internal storage*
- 1 GB LPDDR3 SDRAM

*The OS uses some space, so free available space is about 6.5 GB. This is enough for 100 000 pages.

Processor

- 1.2 GHz dual core ARM

Operating system

- Codex, a custom Linux-based OS

0.1.2 Second-generation CANVAS display

Specifications:

- 10.3" monochrome digital paper display (no colors)
- 1872 x 1404 resolution (226 DPI)
- Multi-point capacitive touch
- Paper-like surface friction
- Sunlight readable
- Partially powered by E Ink technology
- 4096 levels of pressure sensitivity
- Palm rejection

Warning: Do not let the display come in contact with alcohol or any solvent containing alcohol as this may damage the device. Learn how to clean your device in [8.2 Important safety & handling information](#).

0.1.3 Battery and charging:

Specifications

- Lithium-ion (Li-ion) battery
- Rechargeable (USB type C)
- 3000 mAh

Warning: The battery in this product cannot be easily replaced by users themselves.

0.1.4 Power button

The power button is located on the top left corner of your reMarkable 2. It's used for powering on and off, as well as the sleep and wake functions.



How to use the power button:

1. Put the device in sleep mode by pressing the power button once. The **reMarkable is sleeping** message will appear on the screen.
2. Wake the device by pressing the power button once.
3. Turn off reMarkable 2 by pressing the power button for 3 seconds. You will then be asked whether you want to turn off the device or not.
4. Turn on reMarkable by holding in the power button until the screen flashes from black to white.
5. Reset the device by pressing the power button for 5 seconds.

Read more about sleep and other power-saving modes in [battery settings](#).

0.2 reMarkable accessories

0.2.1 Markers and Marker tips

MARKER

The Marker is an inseparable part of the paper-like experience. It's designed to deliver just the right friction and draws digital ink on reMarkable with incredibly low lag. An exceptionally precise tool, down to the smallest details.



Specifications

- No battery, setup, or pairing required
- Special high-friction Marker tip
- 4,096 levels of pressure sensitivity
- 50 degrees of tilt provides an exceptional writing experience
- Weight: 15 g

MARKER PLUS

Marker Plus is an unrivaled digital writing instrument. Weighted for a balanced, authentic writing experience. Along with its precise tip, the Marker Plus has a second pressure sensor built into the top end, which allows you to quickly erase whatever you're working on by flipping it upside down.



Specifications

- No battery, setup, or pairing required
- Special high-friction Marker tip
- 4096 levels of pressure sensitivity
- 50 degrees of tilt gives an exceptional writing experience

- Built-in eraser
- Weight: 19 g

USING YOUR MARKER

No charging or pairing

The marker can be used instantly, without any need for setup. It is powered by electromagnetic induction, which means that it does not require charging or Bluetooth pairing to function.

Pressure sensitivity

The marker is pressure sensitive (4,096 levels to be exact) which allows you to draw thicker and thinner lines just by adjusting your pressure on the marker.

Tilt

The marker reacts to 512 levels of tilt, which lets you draw and write with a paper-like feeling. By tilting the marker you can add shading and vary the thickness of your stroke. The tilt is only available for certain sketching tools. Read more about it [here](#).

Rest your hand on the display

The reMarkable display has palm rejection technology which enables you to draw, write and navigate while resting your palm on the display.

MARKER TIPS

The Marker tips are carefully designed to deliver a paper-like writing experience. Just like a traditional pencil, swapping out a blunt tip for a fresh one helps keep your handwriting both smooth and precise. Each Marker comes packaged with nine spare tips stored in the Marker tip card and a swapping tool.



Both the Marker and Marker Plus come with a supply of nine spares stored in a convenient Marker tip card. Changing from an old used tip to a new one requires no extra tools, and takes just a few seconds.

How do I change Marker tips?

Follow these three simple steps to swap out your used tips

1. Find the Marker tip card and nine spare tips that come with every Marker.
2. Remove the used tip by sliding it into the narrow slot at the bottom of the card.
3. Now gently bend the card in the middle to expose and fit a fresh new Marker tip.



Durability

The durability of Marker tips depends on your writing technique and is therefore individual to every person. Both the amount of pressure you apply when taking notes or drawing on the CANVAS display, and how often you use your reMarkable paper tablet will affect how often you need to replace them.

Our best estimate for an average person who writes on their reMarkable every day is anywhere between three and seven weeks. While it will wear down slowly over time, you'll still be able to write and use the Marker tip right up until it can no longer connect with the display.

However, the tip will get blunter and may feel less comfortable to use before this happens. As with any precision instrument, from a chef's knife to a carpenter's chisel, you'll get the best from your Marker if you keep it sharp.

Replacement Marker tips are available for purchase from our webshop.

0.2.2 Folio


FOLIO

The original sleeve for reMarkable 2, in polymer weave. Protection for your paper tablet and Marker.



BOOK FOLIO

The new Book Folio allows you to keep your reMarkable in its cover while you're working. Designed in conjunction with reMarkable 2, Book Folio provides smart and functional protection for your paper tablet.

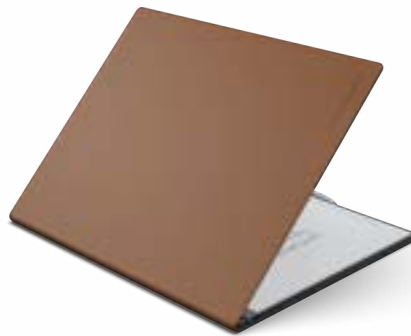

WILL THE FOLIO I GOT WITH MY REMARKABLE 1 WORK WITH REMARKABLE 2

reMarkable 2 has different physical dimensions and will not fit in a reMarkable 1 Folio.

1 Getting started

1.1 Setting up your reMarkable

Turn on your reMarkable and follow the setup assistant to guide you through the process.

The setup consists of a few simple steps that will get your reMarkable ready to go. The device arrives partially charged and doesn't need to be charged before setting up.

Warning: To avoid damage or injuries read [important safety and handling information](#) before using your reMarkable.

1.1.1 What you need to get started

What you need to get started:

- A reMarkable paper tablet.
- USB-C cable and USB power adapter/brick.
- A smartphone or computer.
- Access to a wireless (Wi-Fi) network.

1.1.2 Starting up

Step by step:

1. Press and hold the power button to get started
2. Test your writing on the display





Connect to Wi-Fi

3. Choose an available Wi-Fi network. If necessary, enter a Wi-Fi password.



4. Type the password and tap **Enter**.



You can also connect to enterprise networks by entering the following:

EAP method: PEAP

Validate CA certificate: Off

Phase 2 authentication: MSCHAPV2

Enter identity: Type your username here

Enter anonymous identity: Leave this blank

Enter password: Type your password here

Be aware that these settings are all case-sensitive

5. Tap **Enter** to connect to the Wi-Fi network. Success!



Note: You can choose to skip this step and connect to Wi-Fi from the **Settings** menu later. This is not recommended, as your reMarkable will not be connected to the reMarkable cloud and your files will not be synced and stored. Wi-Fi is also necessary to get the latest updates for your reMarkable.

1.1.3 Connect to your account

Connect your reMarkable to the reMarkable cloud to be able to seamlessly transfer documents and ebooks to your paper tablet. The reMarkable cloud also allows you to access your content from our mobile and desktop applications and functions as a backup for your notes if you lose your device.




Log in to my.remarkable.com from a mobile or desktop device and create a reMarkable account in order to connect to the reMarkable cloud. Once logged in, tap **Get code** for your reMarkable device. Note that the one-time code is only valid for five minutes.


Create a reMarkable account

1. Go to my.remarkable.com
2. Click **Create new account**, enter your email address and choose a password.



3. Click **Create account**. This will initiate an email verification process.
4. Check your email account and follow the described steps to verify your email.

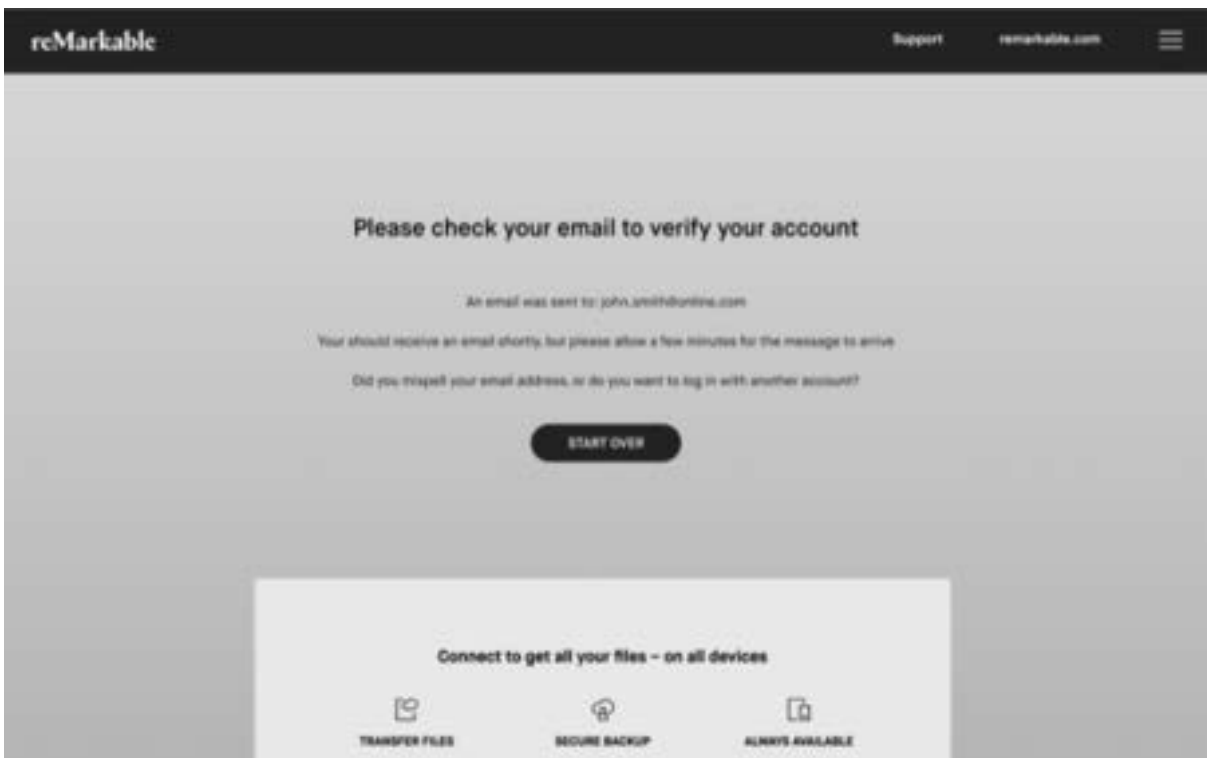

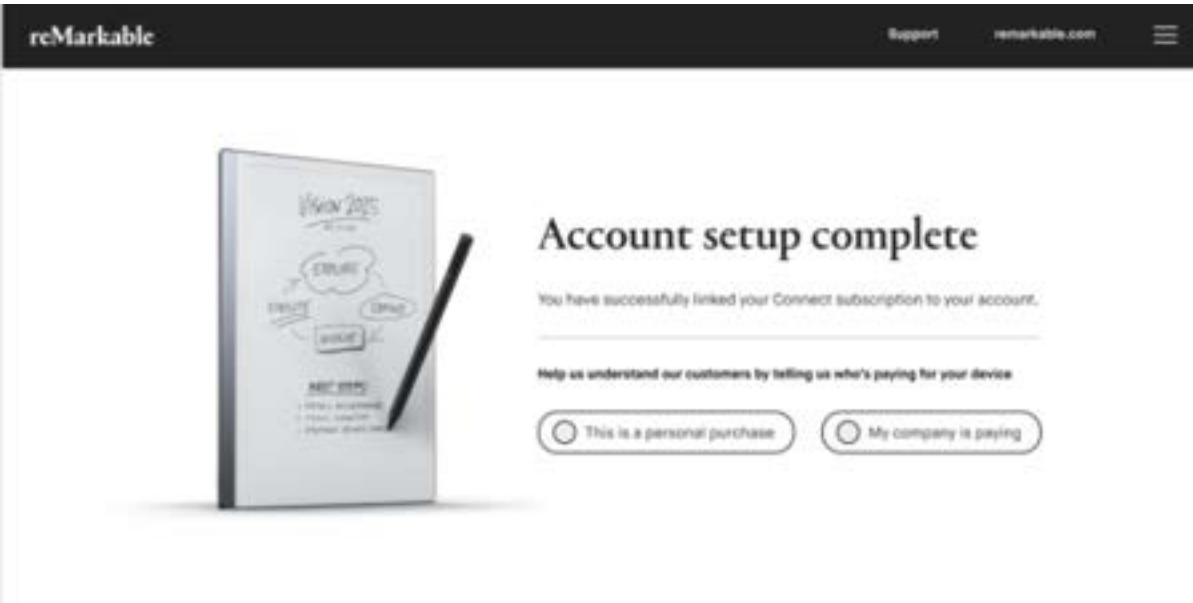

5. Click on the drop-down menu in the top right corner and select **Home**. Click on **Activate a new reMarkable** to access the one-time code.



6. Enter the one-time code on your reMarkable paper tablet, and tap **Enter**.



Success! You're connected. When connected, the device will be marked with a checkmark in your browser window at my.remarkable.com.

1.1.4 Handwriting conversion

Select the language for the **handwriting conversion** tool

4. Cloud setup

What language do you write in?

Select a language so we can convert your notes into text. You can always change this later in settings.

Handwriting conversion language

English - United States

- | | |
|---------------------------------|------------------------|
| Basque - Spain | Bosnian - Bosnia |
| Bulgarian - Bulgaria | German - Austria |
| Catalan - Spain | German - Germany |
| Chinese Traditional - Hong Kong | Greek - Greece |
| Croatian - Croatia | Hungarian - Hungary |
| Czech - Czech Republic | Icelandic - Iceland |
| Danish - Denmark | Italian - Italy |
| Dutch - Belgium | Latvian - Latvia |
| Dutch - Netherlands | Lithuanian - Lithuania |
| English - Canada | Norwegian - Norway |
| English - Philippines | Polish - Poland |
| English - United Kingdom | Portuguese - Portugal |
| English - United States | Romanian - Romania |
| Estonian - Estonia | Slovak - Slovakia |
| Finnish - Finland | Slovenian - Slovenia |
| French - Canada | Spanish - Spain |
| French - France | Swedish - Sweden |
| Irish - Ireland | |

1.1.5 Choose right-handed or left-handed mode

Choose between right-handed or left-handed mode. This can be changed later in **Accessibility Settings**.



After setting up, you will be guided through a tutorial. This tutorial is always available in **Help** under **Settings**. Check if there are any software updates waiting for you in **General settings**.



1.2 Charging your device

Use the USB-C cable from the reMarkable box to charge your reMarkable.

Plug the USB-C cable end to the USB-C charging port and the USB end to a USB power plug (max 5V, 1.5A), or to your computer.

There are two ways of checking whether your reMarkable is charging when turned on:

- The **Battery indicator** on the home screen will change from a battery icon to a charging icon.
- **Power settings** in **Settings** will indicate that the charger is connected while the device is charging.



Battery Status



Battery charging

The device will flash white if it is turned off when it starts charging.

1.3 Updating to the latest version

It is critical to have the latest version for reMarkable to work as intended and for you to get the latest functionality. You find which software version you are running in **Device Settings**.

Read about reMarkable's latest software updates on our blog or check out the [Release log](#) for a detailed list of released functionality.

1.3.1 How to check for the latest update

Your device is by default set to auto-update, which is recommended for you to always have the latest updates and the newest functionality.

Step-by-step instructions:

1. Look for a notification in the bottom corner of the home screen.
2. The notification will ask you to restart your device.
3. Restart your device to complete the installation.

1.3.2 How to set your reMarkable to auto-update

Step-by-step instructions:

1. Tap **Menu** in the top right corner.
2. Tap **Settings** in the sidebar menu.
3. Under **Software**, tap **Version**.
4. Here you'll be able to turn automatic updates on or off. Your device is set to auto-update by default.

1.3.3 How to update manually

Step-by-step instructions:

1. Tap **Menu** in the top right corner.
2. Tap **Settings** in the sidebar menu.
3. Under **Software**, tap **Version**.
4. Tap **Check for updates** to see if there are any new updates available.
5. Tap **Download version** to update to a new version.
6. When the download is finished, click **Restart device** to complete the update.

1.3.4 Updating the desktop app - Mac and Windows

When a new software update is available for the desktop app, you'll see a notification to update. You can also update the desktop app by going to my.remarkable.com and clicking Manage apps under Desktop app.

1.3.4 Updating the mobile app - iOS

If you've got auto-updates enabled on your iPhone, your app will be updated automatically.

How to turn on automatic updates:

1. Go to **Settings**.
2. Tap **App Store**.
3. Switch updates on.

How to update manually:

1. Open the **App Store**.
2. Tap your profile icon at the top of the screen.
3. Find reMarkable, and tap **Update**.

If the reMarkable app isn't listed, you have the latest version installed on your phone.

1.3.5 Updating the mobile app - Android

If auto-updates are enabled, your app will be updated automatically.

How to turn on automatic updates:

1. Open **Google Play Store**.
2. Tap your profile icon at the top of the screen.
3. Tap **Manage apps & device**.
4. Tap **Manage** and find reMarkable.
5. Tap the app, then open **Details** by tapping **More**.
6. Select **Enable auto update**.

You can also update the app manually in Google Play Store:

1. Open **Google Play Store**.
2. Tap your profile icon at the top of the screen.
3. Tap **Manage apps & device**.
4. Tap **Update**. If "Update" isn't an available option, you've got the latest version of the app installed.

2 Content on your reMarkable

2.1 Notebooks

Notebooks are a place to take notes, draw, and sketch. Access pens, markers, and other writing tools in your notebooks by tapping the toolbar.

You can easily add pages, rename, and move notebooks into folders. View all your notebooks in **My files** by tapping **Menu** in the top-left corner and selecting **Notebooks**.



2.1.1 Managing your notebooks

- Add a new notebook by tapping the **plus icon** (⊕) in the menu at the top of the display when you're in **My Files** or a folder.
- Add pages by swiping right when you're on the last page in your notebook. You can also add a page by tapping **page overview** (☐☐) in the toolbar, then **Add page** (☐+). New pages are automatically added to the end of your notebooks unless you add them in **page overview**.
- View all pages in a notebook by tapping **page overview** (☐☐) in the toolbar. Go back to the page you were viewing by tapping **Back**, or tap a page to open it.

Setting a cover page for your notebook

Make it easier to browse through your content by setting a cover page for your notebooks. You can either choose the first or last used page of your document as the cover.

- Tap the **notebook icon** (☐) at the bottom of the toolbar.
- Tap **Notebook settings** (⚙️).
- Tap **Last page visited** or **First page**. Here you can also rename your notebook.
- Tap **Save** to set the cover page.

2.1.2 Quick sheets

Quick sheets are notebooks for taking notes on the go, without having to create a new notebook.


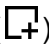
You can access quick sheets from **My files**. Quick sheets can't be moved or deleted, but you can delete single pages.

Deleting pages in quick sheets

1. Tap **page overview** (☐☐) in the toolbar.

2. Long-press the pages you want to delete.
3. Tap **Delete** in the menu at the top of the display.


Adding pages in quick sheets:

- Add a page by tapping **page overview** () in the toolbar, then **Add page** (.
- You can also add pages by swiping to the right when you're viewing the last page in quick sheets.

2.1.3 Notebook tools

Page overview

View all the pages inside a notebook by tapping **page overview**. Here, you can also convert handwritten notes to text, share by email, and add or delete pages.

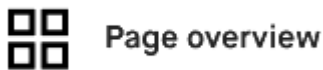

Layers

Use **layers** to make more complex drawings or sketches, or to show and hide sections of your work. Add or remove layers by tapping the layers icon in the toolbar.




Share files

Tap **Export** to share the file you're viewing by email, convert handwritten notes to text, or use the **Screen Share** feature.



Document settings

Tap **document settings** at the bottom of the toolbar to access **notebook settings**, add pages, or switch between landscape and portrait view.

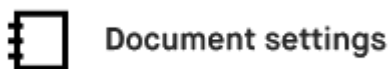


2.2 Organizing and editing PDFs (documents)


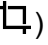
You can easily read and take notes directly on your documents with your reMarkable tablet, then share them by email directly from your device or export them through the desktop app.

The PDF filter shows PDFs imported through the desktop or mobile app and onto your device*.

How to view all pages inside a document

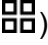- Tap the **page overview** icon ().
- Go back to the single page view by selecting a page, or tapping **Back** in the top left corner.

How to adjust PDF view

- Under the **PDF options** icon () , you can also tap **Adjust view** () for a cropped view of your PDF. The new view will apply to the entire document.

How to turn PDF pages

- Turn pages within a PDF by swiping left or right, and make annotations with your chosen writing tool from the side toolbar.

How to organize PDFs

- You can organize your PDFs by moving them into folders, under **My files**. All your PDFs will appear in the filtered **PDFs** section on your reMarkable, regardless of how they're organized.

*You can't open files with DRM (Digital Rights Management) restrictions on your reMarkable.

2.3 Ebooks

Ebooks are digital books imported through the desktop or mobile apps to your reMarkable.

2.3.1 Things to know before moving ebooks to your reMarkable

- Your reMarkable paper tablet supports the ebook format EPUB, a format available with many ebook retailers
- Some ebooks are DRM (digital rights management) protected, which is not supported on reMarkable at this time
- You can't read Kindle books directly on reMarkable

2.3.2 Page navigation

View all the pages inside an ebook by tapping **page overview** (☰☰). Go back to a specific single page by tapping a page in the overview layout, or by tapping **Back** in the top left corner.

Turn pages by swiping left or right. Navigate to a specific page in an ebook by tapping **Go to page** in page overview, and entering the page number you want to go to.

You can also use quick browse to navigate through pages in your ebooks. Quick browse was included in software version 2.9.

2.3.3 How to add and delete note pages in ebooks

Here's how you can add a blank note page directly after the page you're currently reading:

1. Tap the **Document settings** icon in the toolbar menu.
2. To add a new blank page, tap **Add note page**.
3. A new page will appear after the page you were viewing.

If you want to add a blank note page somewhere else in your ebook:

1. Open an ebook.
2. Tap **page overview** (☰☰).
3. To add a new page, tap **Add page** in the top menu bar.
4. A new page will appear after the page you were viewing.

How to delete note pages in ebooks

1. Open an ebook.
2. Tap **page overview** (☰☰).
3. Long-press on the page you want to delete. If you want to delete more pages, simply tap them.
4. Tap **Delete** and confirm.

Pages that are part of the original ebook can't be deleted or moved out to other documents.

2.3.4 Organize your ebooks

Ebooks can be organized by moving them into folders under **My files**. All your ebooks will be displayed in the ebook section on your home screen, regardless of where they are located.

2.3.5 Text settings

Tailor the ebook view to your preferences using the **Text settings** menu, where you can adjust text size, font, justification, page margins, and line spacing.

Please note: text settings are only available for ebooks, and not PDFs, or other files.

How to change text settings

1. Open the ebook you want to read.
2. Tap the **Ebook options** icon, in the side menu bar.
3. Tap **Text settings**.
4. Tap directly to adjust the settings.
5. Tap **Done** to close the settings.


What to do if an ebook isn't displaying text properly

- Go to **Text settings** while you have the ebook open. Change the justification and the line spacing. You can also try to change the page margins and the size of the text.
- If changing the text settings doesn't make a difference, you can try to delete the ebook from your reMarkable and import it again using our apps.

3 Navigation

3.1 Navigating on your reMarkable

3.1.1 My files

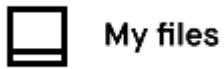

When you're in a folder, access **My files** by tapping **Menu** in the top-left corner, then **My files**.



3.1.2 Filtering content

The sidebar menu lets you filter by notebooks, PDFs, ebooks, or favorites, providing a detailed overview of your content.


Notebooks will show all your notebooks.




PDFs will show all your imported PDF files.



Ebooks will show all your imported EPUB files.

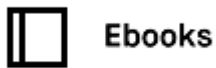

Favorites will show all your favorited files.

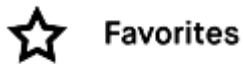

Your notebooks, PDFs, or ebooks will always appear in the filtered view, even if you move your files into folders.

Use our document drawer feature to easily access your favorite notebooks and documents. Read more about [document drawer](#).

3.1.3 Sorting your files







- You can sort your files by last updated, size, alphabetically, or by recently opened. Change how your files are sorted by tapping Sort by in the top-right corner of My files. Sorting by Recently opened will display newly opened files, whether or not you've modified them.
- You can view your content in grid view or as a list. Change this by tapping **Menu**, then **List**, or **Grid**.



- Scroll up and down while viewing files by swiping with your Marker or your finger.







3.2 Icons

General

	Power		Wi-Fi
	Battery		Syncing from reMarkable
	Search		Syncing to reMarkable








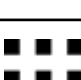
The basics






Open the main menu by tapping **Menu** in the top-left corner. Use the main menu to filter your files and easily find the document or PDF you're looking for.

	My files		PDFs
	Notebook		Ebooks
	Folder		Single page

Organize your reMarkable

Add a new folder, notebook or quick sheets by tapping the **plus icon** in the menu at the top of the display. You can move, rename, duplicate or send files by long-pressing on a document, then tapping on your preferred option in the top menu.









	Duplicate		Delete
	Rename		Favorite / Favorited
	New folder, notebook, quicksheet		Share
	New page		Grid view

	New notebook		Download
	New folder		Move
	Convert to text		

Views









When reading or writing, you can change the screen orientation by tapping the portrait/landscape icon in the **toolbar**.






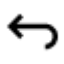
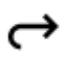





In **My files**, the sidebar menu allows you to filter your documents, providing you with a detailed overview of your content. You can also view your documents as a list or in grid view.

	Portrait view		List view
	Landscape view		Grid view
	Hide toolbar		Page overview
	Show toolbar		Adjust view

Tool overview






In a notebook, PDF or ebook, tap the **Show toolbar** icon to access writing tools, add layers, send pages, or navigate your document. Use the toolbar in notebooks or **Quick sheets** to convert handwritten notes into text and share by email.

	Ballpoint pen		Fineliner
	Marker		Pencil
	Mechanical pencil		Paintbrush
	Highlighter		Calligraphy pen

	Tool settings		
	Eraser		Erase selection
	Eraser all		
	Selection tool		
	Undo		Redo
	Export and share		Screen share
	Layers		Templates
	Document settings		

Settings

You can access your device settings from the homepage by tapping **Menu** in the top left corner, then **Settings** at the bottom of the sidebar. In settings, you can update to the latest software version, log into your reMarkable account, connect to Wi-Fi, find tutorials, and more.

	Storage		Language
	Security		Accessibility
	Update		

3.3 Swipe gestures

In this article, you'll find an overview of all the gestures you can use to navigate the files and folders and notebooks on your reMarkable paper tablet. Navigate within your documents, hop between menus, and quickly access the files you need by swiping.

3.3.1 Navigating in a document

When working in your notebooks, PDFs, or ebooks, you can use gestures to quickly browse between pages, turn them individually or add a new one, and zoom in and out.

Swipe down

Swipe down from the top of the screen to close your notes, PDFs, or ebooks. Simply drag your finger downwards from the top, towards the middle of the screen.

Swipe left and right

Swipe left to go to the next page, or to add a new page if you're on the last page of your notebook.

Swipe right to go to the previous page. When browsing inside a folder, you can now swipe to the right to go back a step, or home to **My files**.

Pinch to zoom

Use two fingers to zoom in on the part of the page you want to see. Once you've zoomed in, you can easily move around the magnified area. Just hold two fingers on the display and move them together in the same direction to pan around the page after zooming in.

Read more about [pinch to zoom](#).

Quick browse

Swipe up from the bottom of any document to bring up the scrollbar. Use the scrollbar to quickly browse through page previews in a document. Drag the cursor left or right to scroll between pages, or tap the bar to jump to a specific page.

Read more about [quick browse](#).

3.3.2 Navigating between documents

You can use swipe gestures to open, close, and easily navigate between documents on your reMarkable tablet.

Swipe to scroll

Swipe with one finger to scroll down and find the file or document you're looking for once you have a lot of different content on your device. You can use this swipe gesture to navigate through files stored in your folders, or in the **My files** main menu.

Document drawer

Swipe down with two fingers from the top of the display to easily view or switch between documents. This menu shows your recent and favorited files. Swipe right to browse them, or tap a file to open it.

Read more about using document drawer [here](#).

3.4 Document drawer

Document drawer is the best place to store your recent and favorite files. It keeps your most-used documents and notebooks close to hand, saving you time navigating between different notebooks and files on your reMarkable.



How it works

- Swipe down with two fingers from the top of the display to open up your document drawer
- Swipe right to scroll through your recent and favorite documents
- Tap on the previews to open them and begin working there

3.5 Quick browse

Quick browse is a handy scrollbar that lets you flip through page previews within a notebook or document to find old notes or a favorite passage in a much-loved ebook.

This feature also allows you to navigate seamlessly within a document or check something on a previous page without needing to leave the one you're currently working on (if you don't want to.)




How it works

- Swipe up from the bottom of any document to reveal the quick browse scrollbar
- Drag the cursor left or right to browse through pages quickly and find what you're looking for
- Lift your finger off the cursor to switch to the page in the preview window
- When scrolling, a black dot appears to show you where you started – tap this to go back to your original page without losing your place
- You can still use **Page overview** to easily move, duplicate, or delete pages

3.6 Search on reMarkable

Use search to find specific folders, notebooks, PDFs, or ebooks on your reMarkable.

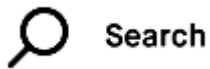

3.6.1 Search for a file or a folder

Step-by-step instructions:

1. Tap the **Search** icon at the top-right of the home screen.
2. Type in the name or parts of the name of the file you want to find.
3. Your search result will be displayed. Tap on the item you want to go to, or go to the next or previous search result.



3.6.2 Navigating search results

When searching for content in PDFs and ebooks, you're able to go to the next or previous search result within that document, and see where your search result is on the page.

Handwritten notes are not searchable.

3.7 Favorites


Use favorites to label notebooks, PDFs, ebooks, or folders that you want easy access to. All your favorites are collected in the Favorites section on the home screen.



3.7.1 How to favorite a file or a folder

Step-by-step instructions:

1. **Long-press** on the item you want to favorite.
2. Tap the **Favorite** icon in the top action bar. The favorite icon becomes visible next to the file name on the file you have favorited. It can now be found in the **Favorites** section.

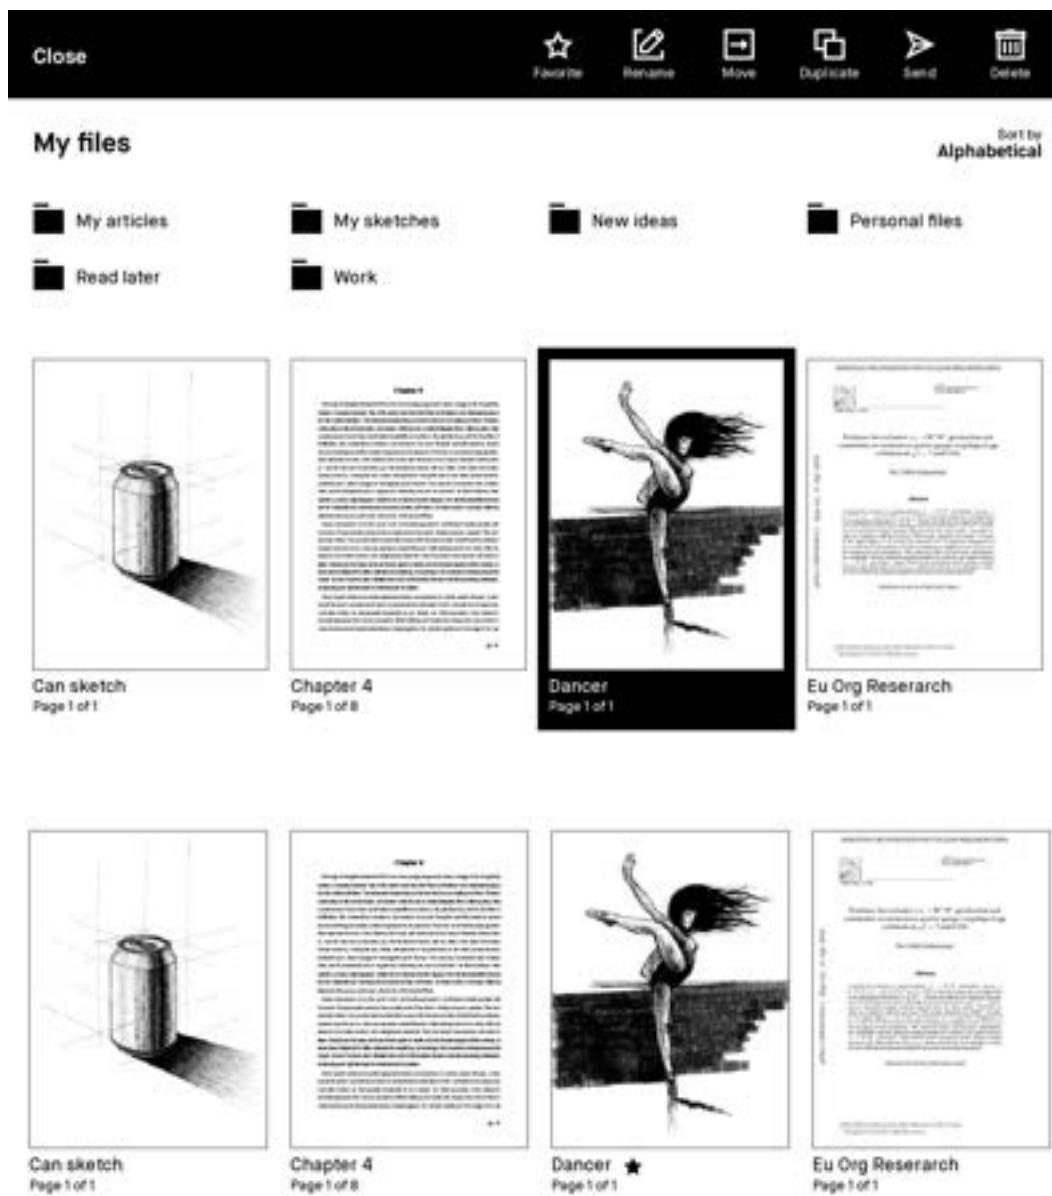

3.7.2 How to unfavorite a file

Step-by-step instructions:

1. **Long-press** on the item you'd like to unfavorite.
2. Tap the **Favorite icon** in the top action bar. The favorite icon will disappear on your file, and the file will no longer be in the favorites section on the home screen.

3.8 Notification center

The notification center on the home screen lets you know the status of your reMarkable and when an action is required. A battery indicator and the Wi-Fi connection status is always available on your home screen. The battery indicator will also indicate when your device is being charged.

Here are the notifications you might see on your device:

- **Disk Full - Not enough free disk space** (clickable). You'll see this message if you use more than the available storage capacity on your device. File sync will be turned off until free disk space is available. You can delete files directly on your device or via the desktop or mobile apps.
- **Disconnected - Wi-Fi disconnected**. Your device is not connected to Wi-Fi, and you need to connect to a Wi-Fi network for files to be synced. This notification can also appear for a few seconds when you turn on your reMarkable after it's been powered off.
- **Disconnected - Connecting to cloud**. Your reMarkable is connecting to a Wi-Fi network.
- **Update installed - Click to restart** (clickable). If you've turned on automatic updates, this notification will let you know when it's time to restart your device to complete the update.
- **Disconnected - Cloud disconnected**. Your reMarkable is not connected to the cloud and files won't sync until your device has been reconnected.

4 Organization

4.1 Organizing folders

Folders help you organize your notebooks, PDFs, and ebooks on your reMarkable. You can create your own file structure with folders and subfolders under My files in whichever way suits you best.

4.1.1 Creating new folders

Step-by-step instructions:

1. Create a new folder from **My files** by tapping the new folder icon.
2. Add content to a folder by long-pressing a notebook, PDF, or ebook, then tapping **Move** and choosing the intended folder. Confirm the action by tapping **Move here**.



Note that when one of your folders has content the folder icon changes from white to black. In this example "Work" is empty, and "Summer 19" has notes or files inside.



4.1.2 Renaming files or folders

Step-by-step instructions:

1. Long-press the file or folder you want to rename.



2. Tap **Rename** (✎).
3. Use the on-screen keyboard to write your new file/folder name.
4. Tap **Save** to save the changes. If you want to discard your changes, just tap **Cancel**.

4.2 Add and delete files or pages

In this article you'll find information about how to add or delete pages and files, and add blank note pages to your PDFs and EPUB files when you need extra room for your ideas.

Note that your **Quick sheets** notebook can't be deleted, but individual pages in Quick sheets can be moved, added or deleted as required.

4.2.1 How to delete a file or a folder

Step-by-step instructions:

1. Long-press on the file or folder you want to delete.
2. Tap **Move** to trash.

If you want to restore your file, go to **Menu**, then **Trash**. Long-press on the file and tap **Restore**.

4.2.2 How to delete a page in a notebook or Quick sheets

Step-by-step instructions:

1. Tap **page overview** (☐☐).
2. **Long-press** on the page you want to delete. If you want to delete more pages, simply tap them.
3. Tap **Delete** and confirm.




4.2.3 How to add a page in a notebook

Step-by-step instructions:

1. Tap **page overview** (☰☰).
2. To add a new page, tap **Add page** in the top menu bar.
3. A new page will appear after the page you were viewing.

In notebooks, you can also add a page by swiping to the right on the last page.

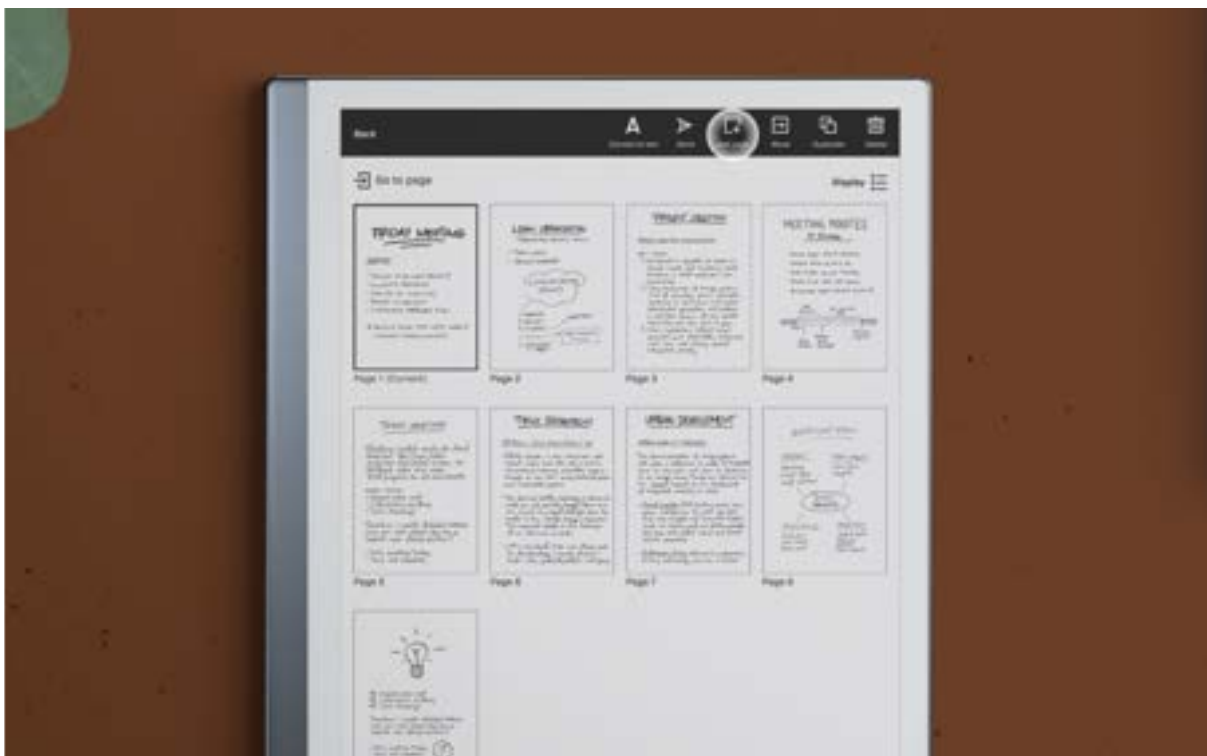

4.2.4 How to add note pages to PDFs and ebooks

It's possible to add, delete, duplicate, and move blank note pages within PDFs and ebooks.

So if you need more space for your thoughts or ideas, an extra page is now just a tap away.

Any added pages will become part of the PDF or ebook they've been added to, but can also be moved around the document, or out to other notebooks; just like regular notebook pages.

Pages that were part of the original PDF or EPUB can't be moved to other documents.

There are two different ways to do this:

If you want to add a blank note page directly after the page you're currently reading:

1. Tap the **Document settings** icon in the toolbar menu.
2. To add a new blank page, tap **Add note page**.
3. A new page will appear after the page you were viewing.

If you want to add a blank note page somewhere else in the document:


1. Tap **Page overview** in the toolbar menu.
2. Select where you'd like to place the new page.
3. To add a new page, tap **Add page** in the top menu bar.

To delete, move, move out to another notebook or document, or duplicate (copy) a note page, simply tap **Page overview**, long-press it, and use the action bar at the top to complete.

4.3 Move files and pages

Keep yourself organized by moving your notebooks, ebooks, and PDFs into folders. You can also move note pages within notebooks, EPUBs or PDFs.

Note that Quick sheets can't be moved from **My files**.

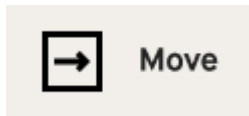

4.3.1 How to move a file

Step-by-step instructions:


1. **Long-press** on the item you want to move.
2. Tap **Move** on the top action bar.
3. Choose your destination folder.
4. Tap **Move here** to confirm the action.

Tapping **Move** in a notebook will allow you to either move pages within that notebook, or from one notebook to another. In PDFs or ebooks, you can move note pages within the document or into an existing notebook.

4.3.2 How to move a note page in a notebook, PDF or ebook

Step-by-step instructions:

1. Open your document.
2. Tap **Page overview**.
3. Select **Move** in the top-right menu.
4. Tap on the area you want to move the page to.
5. Tap either **Place before** or **Place after** at the top of your screen.

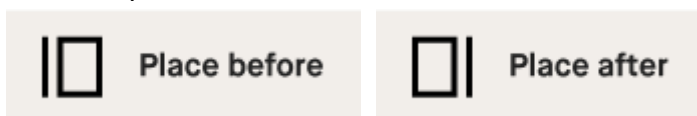

4.3.3 How to move a note page from a notebook, PDF or ebook to another document

Step-by-step instructions:

1. Open your document.
2. Tap **Page overview**.
3. Select **Move** in the top-right menu.
4. Select **Move out** in the top-right menu.
5. Select an **existing notebook** or tap **New notebook**.

You can move note pages between notebooks, PDFs and ebooks.


4.4 Duplicate content and pages

Files (notebooks, PDFs, and ebooks) can be duplicated without any changes being made to the original file.

4.4.1 How to duplicate a file

Step-by-step instructions:

1. Long-press on the file you want to copy.
2. Tap **Duplicate** in the top menu.

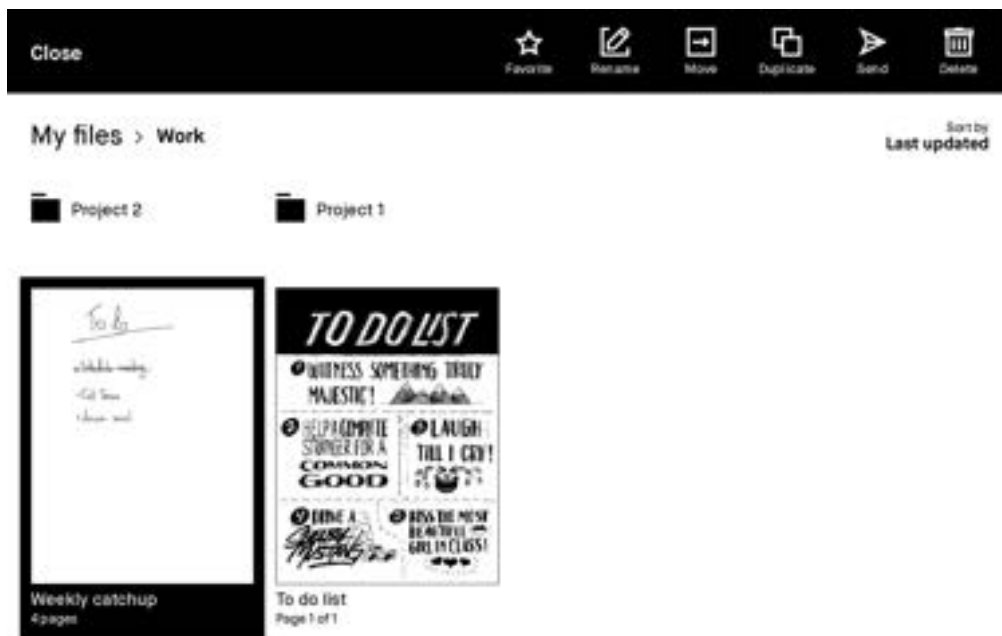


3. The new file will be named with the ending **copy**.



4.4.2 How to duplicate a page in a notebook

Step-by-step instructions:

1. Tap the **notebook options** icon, then **Page overview**.
2. Tap **Duplicate** (📄) in the top action bar. An exact copy will appear immediately after the page you chose in the notebook.

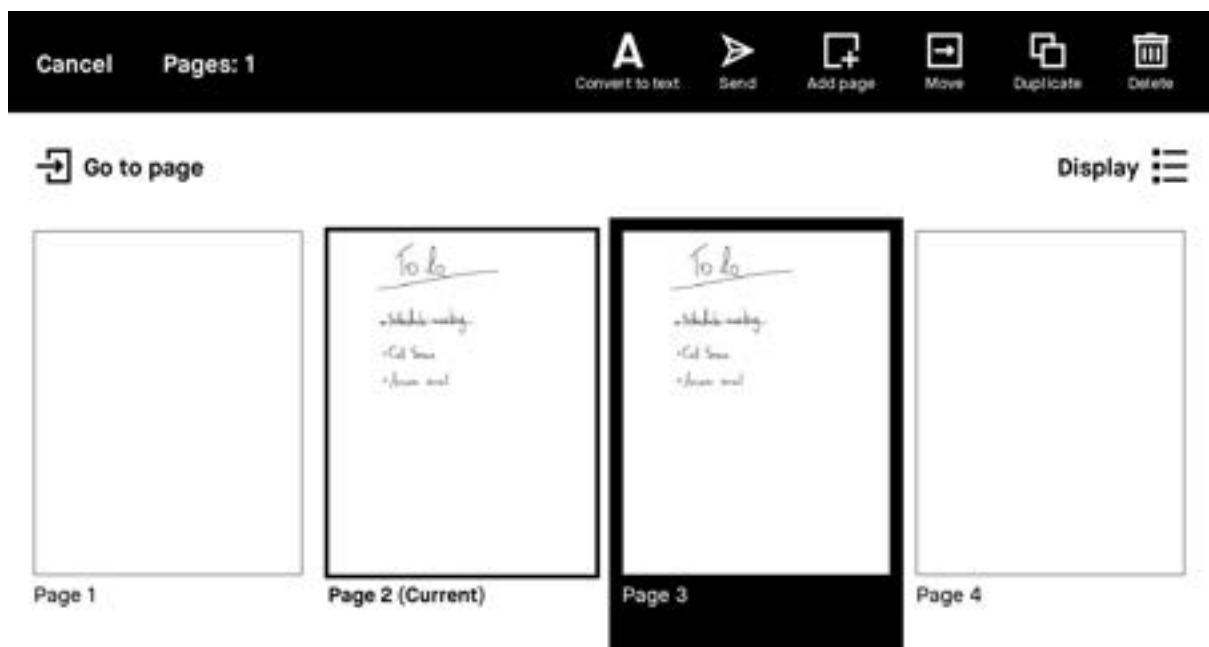


5 Tools and functionality

5.1 Toolbar

5.1.1 Showing and hiding the toolbar

Tap the **Show toolbar** button to show the toolbar. Tap the **Hide toolbar** button to hide it.

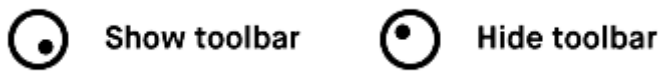

5.1.2 Choose a writing tool

Tap the toolbar to choose between writing tools, like the marker, pencil or highlighter. You can also adjust the line thickness and color.

Read more about [writing tools](#).



5.1.3 Erase or undo content

Tap the toolbar to find the eraser, or to use the undo and redo buttons if you need to make changes.

Read more about the [eraser tools](#).



5.1.4 Move, scale, and copy content

Use the selection tool to rotate, move, scale, copy, and paste content.

Read more about the [selection tool](#).



5.1.5 Page Overview

View all the pages inside a notebook, PDF, or ebook by tapping **page overview**. In notebooks, you can also [convert handwritten notes to text](#), [share by email](#), and [add pages](#) from page overview.

Read more about [page overview](#).



Page overview

5.1.6 Layers

You can use **Layers** to make more complex drawings or sketches, or to show and hide sections of your work. Add or remove layers by tapping the layers icon in the toolbar.

Read more about [layers](#).



Layers

5.1.7 Share files

Tap **Export** to share the file you're viewing by email, or to use the [Screen Share](#) feature.



Export

5.1.8 Document settings

Tap **document settings** at the bottom of the toolbar to search your document or adjust reading settings. In PDFs and notebooks, you can also switch between [landscape and portrait view](#).



Document settings

5.1.9 Left/right-handed mode

Head to **Settings**, then **Accessibility**, to change between left- and right-handed mode. The toolbar will appear on the side you've selected.

5.2 Templates

Your reMarkable tablet has several templates for writing or drawing in your notebooks. Choose the ruled template if you want to have lined paper for writing, the music template if you're writing music, or the weekly schedule if you're planning your week.

Templates are only available for notebooks, not PDFs or EPUBs.



Templates



Layers

5.2.1 How to choose a template

Step-by-step instructions:

1. Open a notebook.
2. Tap the **layers** icon in the toolbar.
3. Tap **Template**.
4. Tap the template you want to use.

The selected template will be used for all new pages within that notebook. You can change templates at any time.

Set the template when creating a new notebook:

- Tap the **plus icon** in the menu at the top of the display when you're in My Files or a folder.
- Choose one of your recently used templates, or tap **View all templates**.
- Tap **Create** to create the new notebook with the selected template.

Templates are organized under five categories: **All**, **Creative**, **Grids**, **Life/Organize**, and **Lines**. You can also filter between portrait and landscape templates.

Note: Custom templates aren't supported on reMarkable 1 or 2.

5.2.2 Cornell template




Our Cornell template is named after a top university and memory aid. The Cornell Method, developed in the 1950s but popular today, is a note-taking system that's deceptively simple, adding a structure to your notes to help you learn quicker.

Originally for students, it promotes clarity and reflection, so is perfect for anyone with a lot to memorize. Each page is divided into three clear sections with a specific role.

How to use the Cornell Method


1. In the left-hand column, write the topic that ties your notes together. Include any keywords you want to look up and 'cue' questions to jog your memory.
2. Record the key facts on your subject using short sentences, bullets, and abbreviations in the large area on the right-hand side of the page.
3. Use the bottom section to write a few sentences capturing the main points. When scanning your notes, reading this summary saves time.

5.2.3 Get organized with weekly and daily planners

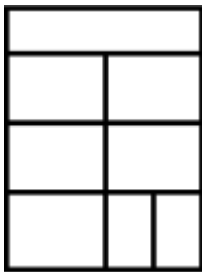

Choose from our weekly and daily planners to get organized and plan ahead. You'll find the planner templates under **Life/organize** in the template overview.

5.2.4 Design and create with creative templates

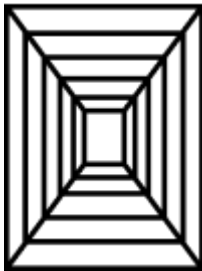

Use templates to sketch out and share your designs. Creative templates help you visualize your ideas, and sharing your artwork is much easier with our **Share** feature.

Head to **Creative** in the template overview to select your template.

5.3 Layers

Layers can be used to make more complex drawings or sketches, or to show and hide sections of your work. Layers allow you to draw on different levels, and you can hide, delete, or rearrange the layers for more creative control and freedom when you're drawing or taking notes.

In notebooks the background layer consists of the selected template. Even if your notebook has a blank background, it still has the default blank template as its background layer. The background layer can't be deleted or moved.

Note It's also possible to add layers of annotations to PDFs and ebooks, although you can't use templates in this context.



How do I...:

- **Create a new layer** by tapping **Add layer** while in the side menu bar's layer menu.



- **Hide a layer** by tapping the visibility icon (an eye). When the eye is closed, your layer is hidden.



- **Merge layers** by tapping the merge layers icon in the side menu, next to trash. You can add up to five active layers. If you need to make some changes, use the undo button to reopen the individual layers.



- **Delete a layer** by clicking the trash icon.



- **Rearrange layers** by tapping the arrows in the list of layers. You can't rearrange the template layer.



5.4 Portrait and landscape mode

When reading, writing, or sketching, you can change the screen orientation by tapping the portrait/landscape icon.

How to change screen orientation:

Open a file.


1. Tap the notebook options icon, then the portrait/landscape icon.
2. The option displayed is dependent on your current screen orientation.




Set to portrait view



Set to landscape view

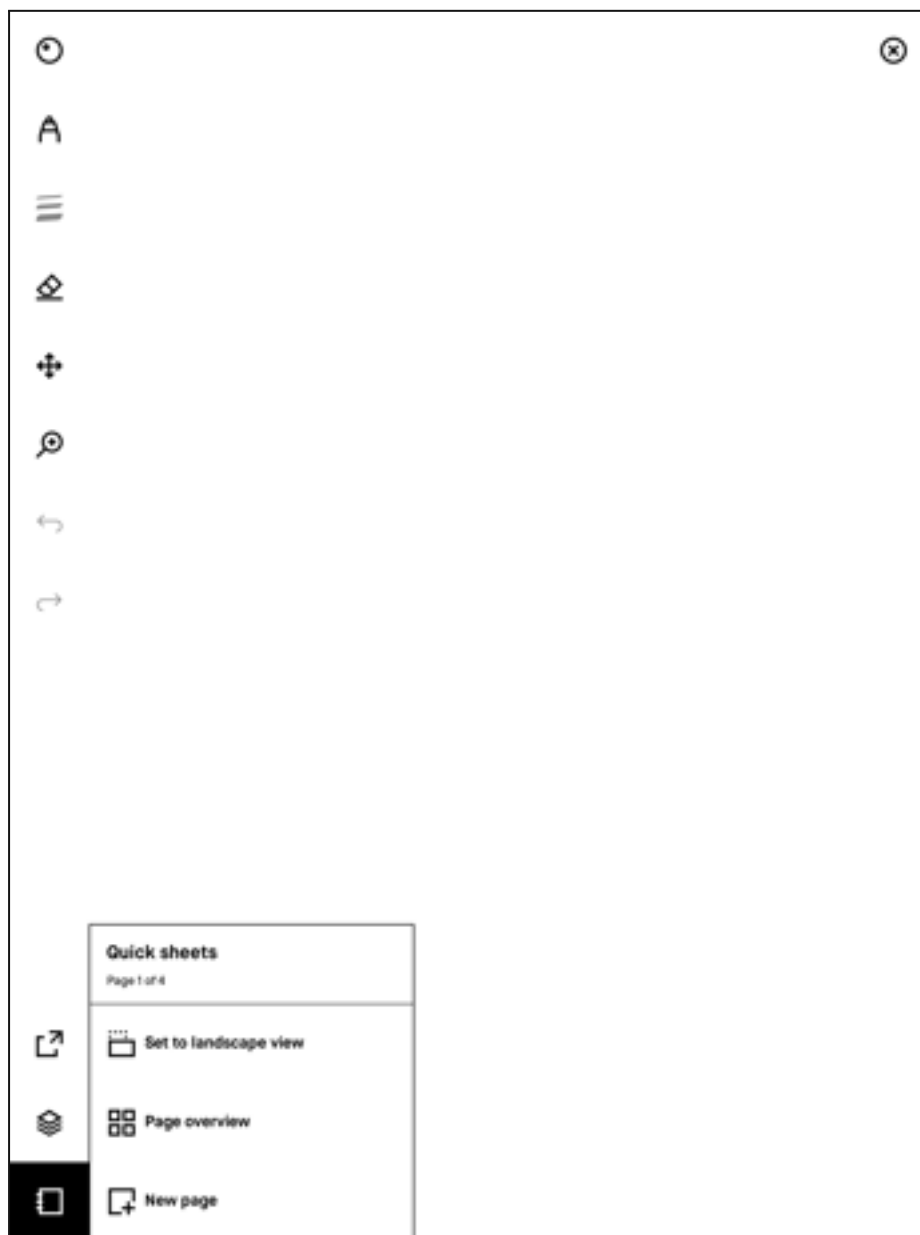

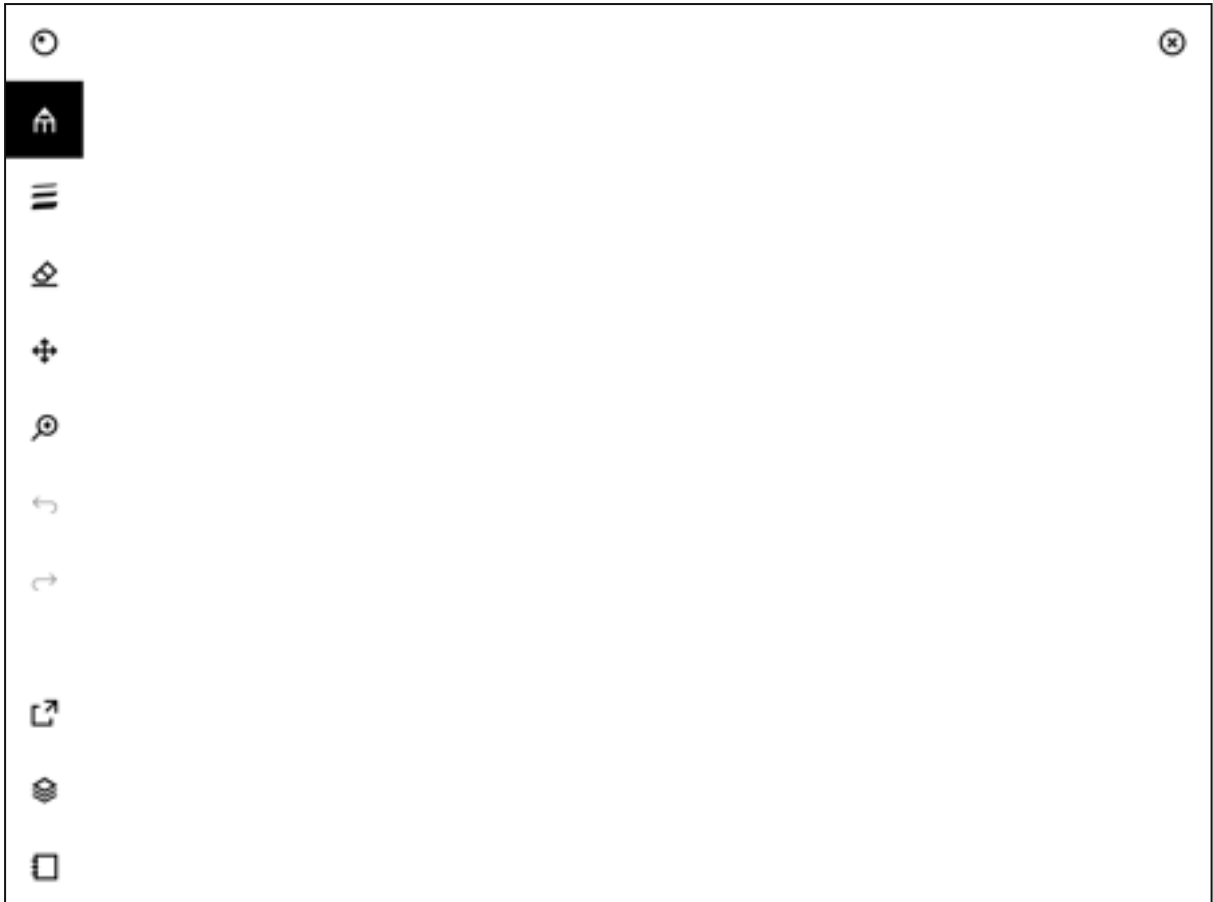


5.5 Adjust view

Use the **Adjust view** tool to hide margins for an improved reading experience in documents (PDFs). All pages in the document will be cropped when using the tool. No edits will be made to your file, and you can adjust and remove the crop whenever you want. Adjust view is only available for PDF documents.



How to adjust view in a document

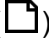1. Open the PDF you want to crop.
2. Open up the toolbar and tap the PDF options icon (.
3. Tap **Adjust view**.
4. Adjust the box to include everything you want to be visible. Tap **Adjust view** in the top action bar, to save the changes.

Tap **Reset view** in the top action bar, to restore the view to default.

5.6 Writing tools: Pen, pencil, brush, highlighter

There's a wide range of writing tools to choose from when creating content on your reMarkable. To access the tools, tap the writing tools icon in the sidebar.

5.6.1 Ballpoint pen

The ballpoint pen is your typical pen. It's sensitive to different levels of pressure, but won't change thickness if you tilt your Marker. Choose between red and blue when you're using the ballpoint pen while presenting with [Screen Share](#).



The ballpoint pen is great for:

- Writing notes
- To-do lists
- Journaling

5.6.2 Fineliner

The fineliner provides a rounded, even stroke with the same thickness on the display, regardless of the angle that you hold your Marker. The annotator's best friend. Choose between red and blue when you're using the fineliner while presenting with Screen Share.



The fineliner is great for:

- Adding annotations to PDFs or ebooks
- Scheduling your time using our planner templates
- Refining your drawings

5.6.3 Marker

The marker has different line textures depending on the pressure and speed you write with. It comes in five colors (black, white, red, blue, and gray). When you're writing with the marker while using Screen Share, you can choose between red and blue color.



The marker pen is great for:

- Writing bold notebook headers
- Making cover pages for notebooks
- Creating shapes in mind maps

5.6.4 Pencil

The pencil functions much like a traditional pencil when drawing or writing. It responds to the amount of pressure and tilt you use, changing the thickness of the line being drawn on the display. Use lighter or firmer pressures and draw several layers to create shading when sketching on your paper tablet.



The pencil is great for:

- Taking quick notes
- Sketching and drawing
- Adding new layers to your artwork

5.6.5 Mechanical pencil

The mechanical pencil features the same continuous stroke thickness while drawing or writing, regardless of how you hold the Marker.



The mechanical pencil is great for:

- Drawing precise lines
- Writing equations
- Checking off your task list

5.6.6 Paintbrush

The paintbrush is sensitive to the speed and pressure you apply to the display and will respond accordingly. For example, a lighter pen stroke will be thinner than a heavier one, while moving the Marker more quickly will give a lighter texture. A slower, heavy stroke will produce a thicker line.



The paintbrush is great for:

- Drawings and illustrations
- Adding depth to sketches
- Adding a dark background layer

5.6.7 Highlighter

The highlighter lets you highlight text in PDFs, EPUBs, or in your own notebooks. Choose between yellow, green, or pink for highlighting. The highlighter will show as different shades of grey on your paper tablet, but appears in color on exported documents and in Screen Share.

You can highlight entire paragraphs by making a vertical line across the text in your notebooks and documents.



The highlighter is great for:

- Making headings that stand out
- Highlighting key points in PDFs
- Adding a new visual element to your drawings



5.6.8 Calligraphy pen

The calligraphy pen is perfect for adding an extra flourish or style to your handwriting, and for working on your cursive. It's sensitive to direction, which means as you write, the line's shape and thickness will change based on the Marker's up and down strokes.




The calligraphy pen is great for:

- Practicing your handwriting
- Adding personality to your notes
- Writing eye-catching titles

5.6.9 Writing tool settings

Adjusting stroke thickness or color

To adjust the stroke thickness or color, tap the tool settings icon, then select the stroke thickness and color you want to use.

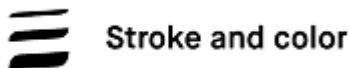

Pencils can only write in black, and you can't change the highlighter's thickness.

When using the ballpoint, fineliner or marker pens, you can choose between blue or red ink. This will show up in Screen Share, our apps, and in exported PDFs. The colors will show as different shades of grey on your paper tablet.




5.7 Eraser, undo, and redo

This tool enables you to erase whatever you have drawn or written. It is not possible to erase templates or imported content such as documents or ebooks.


5.7.1 Eraser tools

There are three different tools for erasing.

Regular eraser. Lets you use the Marker as an eraser. Choose between three different sizes in the left menu bar.

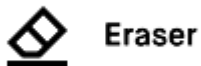

Erase selection. Use the Marker to draw around the area you want to erase.

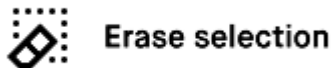

Erase all. Tap this icon to clear the whole page.



5.7.2 Undo and redo

Tap **Undo** to reverse your last action.



Tap **Redo** to redo the action undone by the undo button.

Note that undo works across layers.



5.8 Selection tool (copy and paste)

Use this tool to rotate, move, scale, copy, cut, and paste text or a drawn object. Note that all strokes of an object must be within the marked area for you to be able to perform an action.



Rotate, Move, Scale & Copy

Move an object by using the marker to draw a boundary around the text or object you want to move. Tap inside the boundary box and drag the object to the desired position. Tap outside the marked area to complete the action.


Scale an object by using the marker to draw a boundary around the text or object you want to scale. Tap one of the corners and drag the corners to adjust the size. Tap outside the marked area to complete the action.

Rotate an object by using the marker to draw a boundary around the text or object you want to rotate. Tap the circle on top of the boundary box and drag in the direction you want it to be rotated. Tap outside the marked area to complete the action.

Copy or cut an object by using the marker to draw a boundary around the text or object you want to copy. Note that you can only copy content you have produced on the device. Tap the plus-icon on the boundary box to create a copy of the object and drag the object to the desired location. Complete the action by tapping outside the marked area. To cut, follow the same procedure and simply tap the scissors icon instead of the plus icon. **To paste**, tap to place your cut or copied object on the relevant page with the marker. After it has been pasted, your content will remain selected so that you can adjust it to fit with the rest of your work.

After you have copied or cut a selection you can **paste** it on any page, within any notebook or document. You'll know your content has been copied or cut from the clipboard notification that appears at the bottom of the screen.

A selection will remain on your clipboard and can be pasted repeatedly, until you tap the **Clear clipboard** button, or restart your reMarkable. **Clear clipboard** is shown as an option whenever the **selection tool** is active.

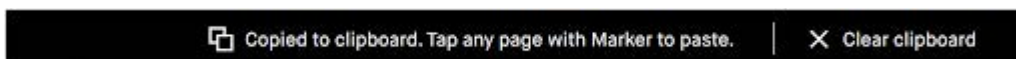

To mirror, just grab a corner of your selection and resize it past its opposite border to flip the content over. This can be done both horizontally and vertically

5.9 Zoom

Pinch to zoom lets you magnify any area of a notebook. Use this feature to focus on the part of the page you're working on.

How to zoom in and out

- Pinch with two fingers to zoom in on the part of the page you want to see. Pinch out to zoom out.

Navigate the page

Once you've zoomed in, you can move around the magnified area by using two fingers. Use the [selection tool](#) while zoomed in for making precise changes.

5.10 Trash


Long-pressing an item allows you to select **Move to trash**. From trash, items can either be restored or permanently deleted.



Trash is found in the sidebar menu down the bottom. Long-pressing files or folders in the trash will give you the option to either restore or delete permanently. It's also possible to tap **Empty Trash** in the top right corner to permanently delete everything currently in the trash.

The addition of trash reduces the likelihood of files or documents getting deleted accidentally, while also making it easier to retrieve deleted files if you happen to change your mind.

NOTE: At this point in time it isn't possible to send individual pages within documents to the trash.

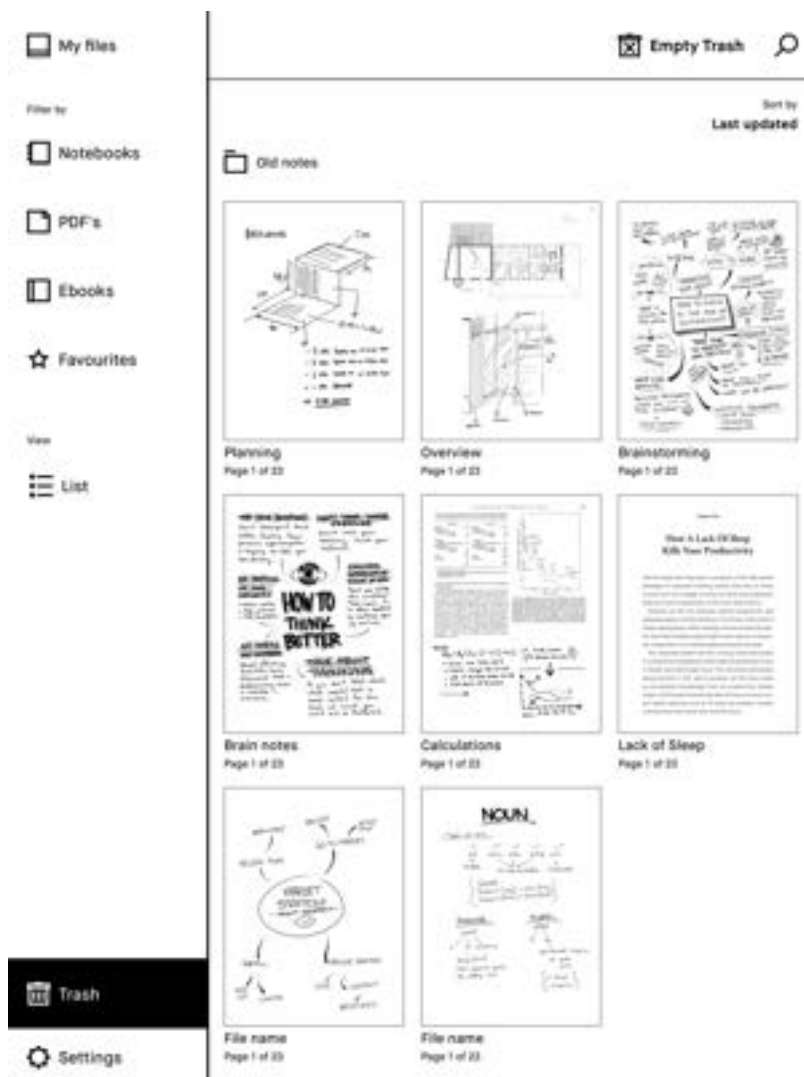

Close

Restore

Delete

Trash

Sort by
Date removed

Work_OLD

Old notes



FRIDAY MEETING

AGENDA:

- FOLLOW UP ON WEB-PROJECT
- ALLOCATE RESOURCES
- DEFINE THROUGH
- BUDGET ALIGNMENT
- DETAILED PLAN FOR NEXT WEEK

RESOURCE PLANNING WILL BE IN PLACE THIS WEEK.
CONTACT FREELANCERS?

Test file
Page 1 of 23

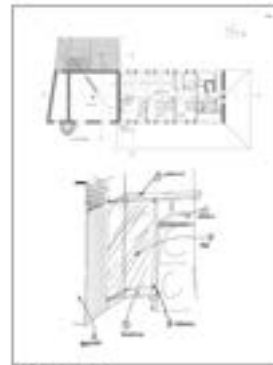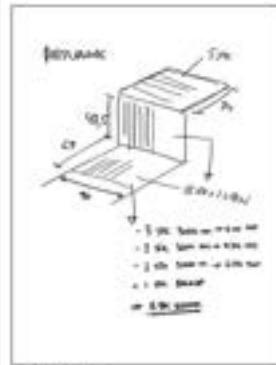


5.11 Integrating with Google Drive, Dropbox and One Drive

Integrate the most popular cloud storage services with your paper tablet using our Integrations feature. Browse stored files, copy them to your reMarkable, and upload notes and documents directly to your Google Drive, Dropbox, or OneDrive accounts from your paper tablet.


5.11.1 Adding Google Drive, Dropbox, or OneDrive accounts to your reMarkable

Step-by-step instructions:


1. Sign in to my.remarkable.com
2. Go to **Add integrations**.

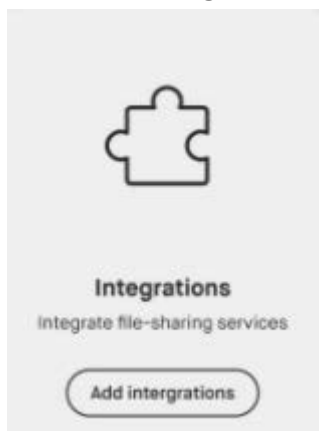


3. To get started, accept the terms and conditions, then select **Confirm**.
4. Click **Add** next to the Google Drive, Dropbox, or OneDrive icon, then sign in using the password for the email address linked to the account you want to integrate.
5. If you want, you can name this service, such as "Work". This will help you differentiate if adding more than one. To skip this step, click the **X** in the corner. The name you give to the service you're adding is also how it will appear in the menu and on-boarding on your reMarkable paper tablet.

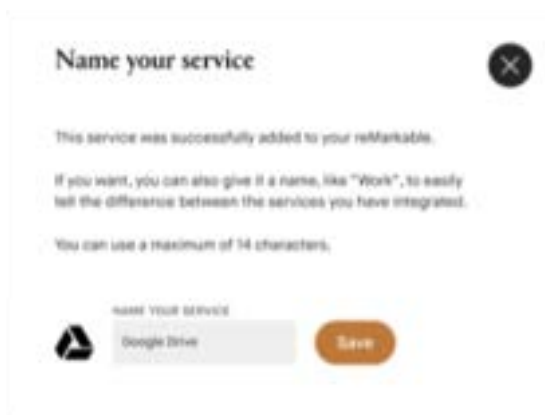

6. Your Google Drive, Dropbox, or OneDrive account is now active on your device.
7. You can connect new accounts (up to five) by clicking **Add** under **Manage integrations**.

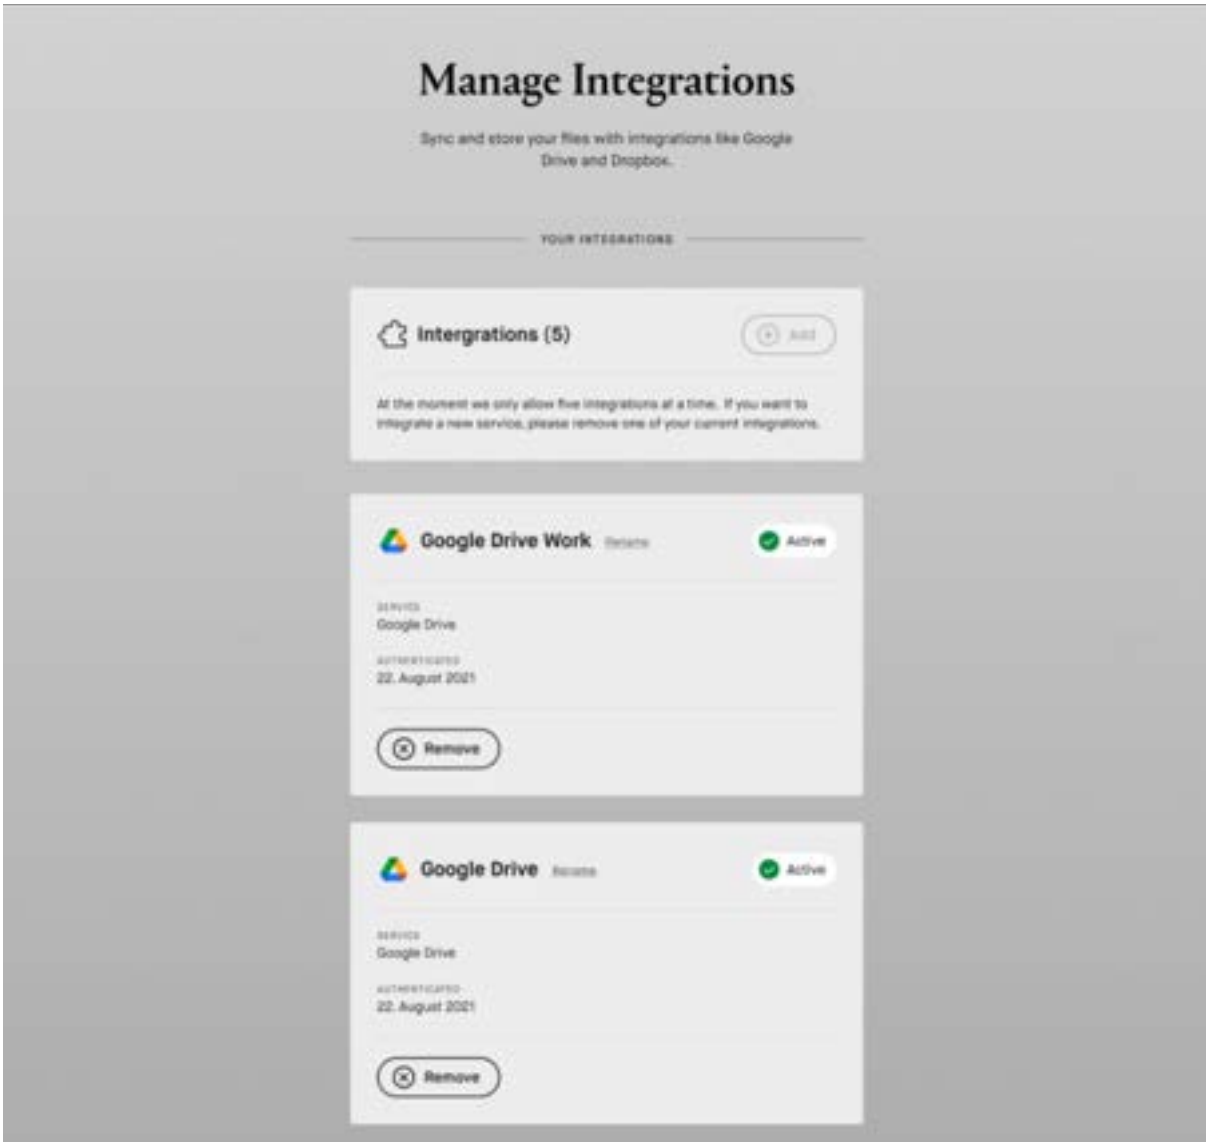

To remove an account from your device, go to **'Manage Integrations'** and choose **Remove** under the account you want to disconnect. You can add or remove accounts at any time.

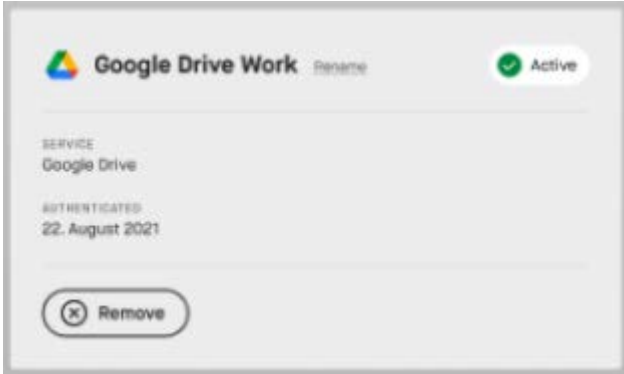

5.11.2 Transferring files to your paper tablet

Step-by-step instructions:

1. Tap **Menu** in the top left-hand corner.



2. Select **Google Drive, Dropbox, or OneDrive** in the sidebar menu. Here you'll be able to browse and copy compatible files from the selected service directly to your device.



3. Long-press on a file in Google Drive, Dropbox, or OneDrive.
4. Tap **Copy** in the top-right corner to copy the file to My files.
5. To select multiple files, long-press on one, then tap the other documents you want to include.



Upload a file from **My files** to your cloud storage service by long-pressing on the file, then selecting **Upload** in the black action bar menu along the top of the display.





5.11.3 Things to know when using Integrations

- reMarkable 1 and 2 are compatible with PDF files and EPUB ebooks. Unfortunately, you can't transfer other file types to your paper tablet.
- Docs, Slides, and Sheets from Google Drive can be viewed as PDFs on your reMarkable paper tablet. These files can also be copied to **My Files** as PDFs to work on or annotate.
- You can sort files saved in Google Drive, Dropbox, or OneDrive to show compatible files first, making it easier to view and copy documents across to your paper tablet
- Filter your files by tapping **Sort by**, and then **Compatibility** in the top right-hand corner, you can also choose to sort by file size, last updated, file type, or alphabetical order by tapping this text.

5.12 Screen Share

Use **Screen Share** to instantly present what you're writing or sketching on your computer.

Here are a few things to check before you start:


You'll need to be connected to the reMarkable cloud with an active account

Make sure you have the reMarkable desktop app installed (Version 2.8.1 or newer)

Check that both your device and desktop are connected to the same Wi-Fi network

If you don't have a Wi-Fi connection, you can share your screen using a USB cable

Log in to your desktop app (update to the newest version if necessary).

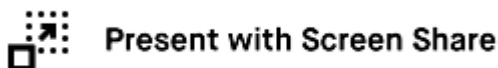

5.12.1 How to present with Screen Share

Step-by-step instructions:

1. Open the file you want to present. (Screen Share works in notebooks, PDFs, and ebooks)
2. From the sidebar menu, tap on the **share** (🔗) icon.
3. Select **Present with Screen Share** to get started.
4. A window will appear in your desktop app asking you to accept the **Screen Share** invite.
5. Tap **Accept** to start presenting from your reMarkable.
6. You can now share this window in digital meetings or on an external monitor of your choice.

To stop Screen Share tap on the share icon in the sidebar menu, then tap **Stop sharing your screen**.



5.12.2 A guide to the features in Screen Share

You have a pointer functionality in Screen Share for drawing attention to different parts of the page. To use it, hold your Marker tip just above the display and a red dot will appear in your desktop app window.

Screen Share will not show the **My files** home screen on your device, only one document at a time. This means that you can switch between documents while sharing your screen without showing your audience any of your private files or notebooks.

You can switch from portrait to landscape view from your device while Screen Share is active.

Highlighting with colors

When you're presenting with Screen Share, you can use the highlighter tool to highlight text in yellow, green, or pink. The highlighter will show as different shades of grey on your reMarkable, but appears in color on exported documents and in Screen Share.

Choose between red and blue when you're using the fineliner, marker or ballpoint pen while presenting with Screen Share.

5.13 Send by email

You can share notebooks (and notebook pages), files, PDFs, and ebooks by email from your device as PDF, PNG, or SVG files.



5.13.1 Sending a file by email from your reMarkable

Step-by-step instructions:

1. Long-press on the file you want to share.
2. Tap **Send** in the top action bar.
3. Add an email recipient under **Recently used**, or **Send to**. Add more email addresses by tapping **Add email address**.
4. Add a message by tapping **Add message**, and using the keyboard to enter your text.
5. Tap **Confirm** when you've added your message.
6. Add a filename by tapping **Set filename**.
7. Choose whether to share the file as a PDF, PNG, or SVG file.
8. If you only want to send certain pages, tap **Edit** and tap the pages you want to share.
9. Tap **Send** to share the file.

Note: You must be connected to Wi-Fi to share files from your reMarkable. You won't see an option to send a file if you're not connected to Wi-Fi and signed into an account.

5.13.2 Sending a single page from your reMarkable

Step-by-step instructions:

1. Open a PDF or notebook.
2. Tap **Page overview** in the toolbar.
3. Long-press on the page you want to share.
4. Tap **Send** in the top action bar.
5. Add the email address you want to use under **Recently used**, or **Send to**. Add more email addresses by tapping **Add email address**.
6. Add a message by tapping **Add message**, and using the keyboard to enter your text.
7. Add a filename by tapping **Set filename**.
8. Choose whether to share the page as a PDF, PNG, or SVG file.
9. Tap **Send** to share the page.

You can also send the page you're currently viewing by tapping **Send by email** in the toolbar.


5.14 Read on reMarkable (Google Chrome extension)

You can send web content and PDFs to your paper tablet with our Google Chrome extension, [Read on reMarkable](#). They'll be sent in a simplified text format, so you can read and annotate them without any unwanted distractions, but you can also send them to your device in PDF format.

[Download Read on reMarkable here](#)

5.14.1 Read this before installing

- Currently, **Read on reMarkable** only works with the Google Chrome web browser.
- You'll also need a reMarkable account to use this feature.

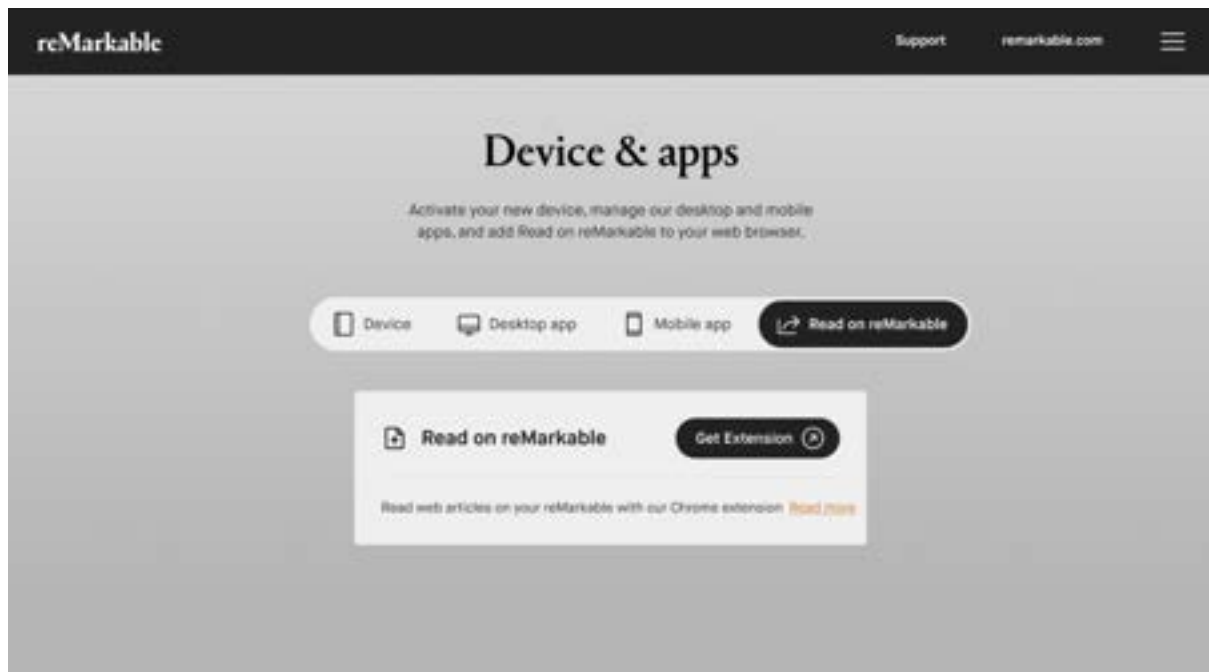

- Once installed, you'll find the Read on reMarkable icon at the top right of your Chrome browser window (next to the address bar).
- Each website has its own way of displaying content, which may change the formatting of the page when it appears on your reMarkable.
- You can send web articles as PDFs by using the print function on your computer.

5.14.2 Connecting Read on reMarkable to your reMarkable account

Step-by-step instructions:

1. Open Chrome.
2. Go to the Chrome Web Store.
3. Click **Add to Chrome** in the top right-hand corner.
4. Read reMarkable and Google's terms and conditions, then click **Accept**.
5. A new tab will open, giving you the option to connect Read on reMarkable to your account.



6. Click **Get one-time code**. A new tab will open and you'll be taken to my.remarkable.com.



7. Copy the one-time code, **go back** to the reMarkable page in the Chrome Web Store, and paste the code.



8. Click **CONNECT** and wait a few seconds.
9. The Read on reMarkable extension is now installed and will appear in the top-right corner.



5.14.3 Different reading options

Read on reMarkable as text

- Click the rM icon and the content on the page you're viewing will be sent to your reMarkable as text within a few seconds.
- You can adjust the text settings in the document on your reMarkable tablet.



- Images won't be included.

Read on reMarkable as PDF

Here are four ways to send a web page to your reMarkable as a PDF:

- Use the keyboard shortcuts Ctrl+P (PC) or Command+P (Mac).
- Right-click on the rM icon, then click **Read on reMarkable as PDF**.
- Right-click on the page and choose **Print**.
- Click the three dots next to the Chrome extension icon, and choose **Print**.

Note: If you send articles as PDFs to your reMarkable, you won't be able to adjust the text.


5.14.4 Read on reMarkable PDF settings

Step-by-step instructions:

1. Click **Read on reMarkable as PDF**. A print dialog box will open.
2. Change the destination to **Read on reMarkable (PDF)**. Note, this is required for your content to appear on your reMarkable device. (If you don't see Read on reMarkable, click **See more**, then select Read on reMarkable).
3. Select the pages you want to send.
4. Click More settings and select your preferred option before sending the PDF to your reMarkable account.
5. Click Print.

How to create more space for note-taking

1. Right-click the rM icon and select Read on reMarkable as PDF (or use the keyboard shortcuts Ctrl+P (PC) or Command+P (Mac)).
2. Click **More settings**.
3. Click Margins, and choose Customized.
4. Move the margins to make extra space for notes.
5. Click Print to finish.

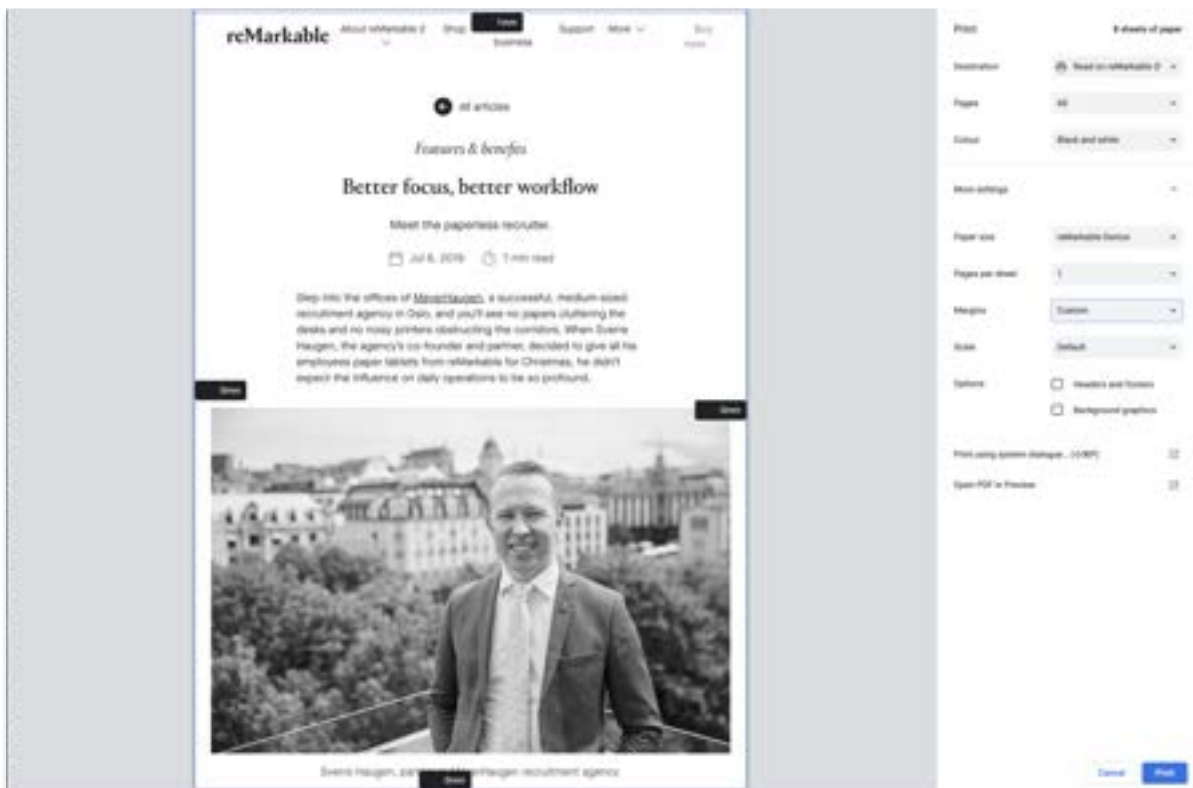

5.14.5 How to set up one-click PDF transfer

Step-by-step instructions:

1. Right-click the rM icon
2. Click **Options**
3. Select your preferred default option
4. Close the tab



5.14.6 How to remove the Read on reMarkable Chrome extension

Step-by-step instructions:

1. Right-click the rM icon
2. Select Remove from Chrome



5.15 Convert handwritten notes into text

Make your notes easy to reuse in emails, reports, or presentations by converting them into text. You can then edit and share the converted text by email directly from your reMarkable.

You can also convert multiple pages into typed text, use either portrait and landscape mode to write, and do quick edits to the converted text afterwards with the on-screen keyboard.



Export



Convert to text and send

5.15.1 Useful things to know before getting started

- **Supported content:** You can convert handwritten notes from your notebooks, and in note pages you've added to your PDFs or ebooks.
- **Wi-Fi connection and cloud account are required:** You need to be connected to a Wi-Fi network and logged into a reMarkable account (my.remarkable.com) with an active Connect Plan in order to use handwriting conversion.
- **Exporting converted notes:** You can edit and share your converted notes via email (see below), but they won't be stored on your device. This is to save space in your cloud storage.
- **Supported text and symbols:** If you write at an unnatural angle (i.e not horizontal to the page), handwriting conversion won't work as it should. Symbols (like mathematical symbols and diagrams) won't be converted into text, but bullet points will be recognized – and some smiley faces too.

Notes written in cursive and block letters are also supported.

5.15.2 Convert in your selected language

For the best results when converting to text, please specify which language your notes are written in. We currently support 33 languages.

Here's how to select your language:

1. Go to **Settings**.
2. Tap **Language**.
3. Choose a new language under **Handwriting conversion language**.

The handwriting conversion feature currently supports the following languages:

Basque, Bulgarian, Catalan, Croatian, Czech, Danish, Dutch, English (Canada), English (United Kingdom), English (United States), Estonia, Finnish, French (Canada), French (France), Galician, German (Austria), German (Germany), Greek, Hungarian, Icelandic, Irish, Italian, Latvian, Lithuanian, Norwegian, Polish, Portuguese, Romanian, Slovak, Slovenia, Spanish and Swedish.

Note: Handwriting conversion doesn't currently learn or adjust to your writing style over time.

5.15.3 Converting notes into text

Step-by-step instructions:

1. Open your document.
2. To convert your handwriting into text, tap the **Share** icon, then **Convert to text and send**.
3. You can edit the converted text with the on-screen keyboard. This won't affect your handwritten notes. Tap the text to bring up the keyboard.
4. To send the current page, tap **Send**.
5. To convert more pages, tap **Select pages** and tap on the extra pages that you'd like to add.
6. Tap **Convert**.
7. Once all the pages are converted, tap **Send** in the black action bar at the top.
8. To add a subject line, tap **Set subject**.
9. Enter the email address you want to use and tap **Send**.

The converted document will be sent as the body text in the email.

5.15.4 How to convert multiple pages at once

Step-by-step instructions:

1. Tap the sidebar menu, then tap **Page overview**.
2. Long-press to select the first page, then tap to add any additional pages.
3. Tap **Convert to text**.
4. Tap **Send**.

6 Settings

6.1 Settings

Settings can be reached from the home screen by tapping Menu in the top left corner, then Settings at the bottom of the menu bar. On the settings page, you can update to the latest software, log into your reMarkable account, and more.

6.2 General settings

General settings enable you to update to the latest software and turn auto-update on or off. Here you can also find your account details and log in to your account to transfer files between your connected apps.

6.2.1 Flight mode

Some airlines are very strict when it comes to Flight mode, and it is not necessarily sufficient to show that Wi-Fi is turned off. Flight mode can be enabled or disabled under General settings. You'll see an icon on the home screen when flight mode is turned on.

6.2.2 Account

Connect your device to a reMarkable account to import files to your device via the reMarkable cloud.

If you didn't connect your device to your reMarkable account in the setup process, you can do this manually in account settings. Your reMarkable must be connected to Wi-Fi in order to connect.

How to connect your device to your account:

1. Create a new account or log in to an existing reMarkable account at my.remarkable.com.
2. Get a one-time code and enter it on your reMarkable.
3. You're now connected to the reMarkable cloud.

You can find a guide on setting up your reMarkable [here](#).

You can log out of your account at any time by tapping **Log out**.

Note that your account can only be connected to one device at the time

6.2.3 Factory reset

By doing a factory reset all your files and settings on your reMarkable will be erased. Performing a factory reset is an easy step-by-step process that can be found in **Account settings**.

If you log back in with a one time code, all the files that are synced to the cloud will be synchronized and made available again. After the factory reset is done, your reMarkable will start up with the setup and onboarding procedures.

Like with any other operating system, we cannot guarantee that files are erased permanently, since all files can be restored by using specialized tools.

6.2.4 Software

Under Software you'll find information about which software version that's installed on your device and download the latest version.

How to update to the latest version:

1. Under **Software**, tap **Version**.
2. Tap **Check for updates** to see if there are any new updates available.
3. Tap **Download version** to update to a new version.
4. When the download is finished, click **Restart device** to complete the update.

Your device is by default set to auto-update, which is recommended for you to always have the latest updates and the newest functionality. With auto-update enabled you'll get a notification on the home screen to restart the device when a new version has been downloaded. You can turn auto-update off by tapping the on/off switch.

6.3 Wi-Fi settings



All available Wi-Fi networks will appear in Wi-Fi Settings. Switch Wi-Fi on/off in the top right corner.

How to connect to Wi-Fi

1. Connect to Wi-Fi by choosing the network you want to connect to, and enter a password if required. The lock icon indicates that a password is required to connect to the Wi-Fi network.
2. The device will say **Connecting to ---** when your device is connecting to the selected network.
3. When you are successfully connected a white dot will appear next to the Wi-Fi name, as well as the text **Connected to ---**. The signal strength is indicated by the icon next to the Wi-Fi name.

Your reMarkable will automatically reconnect to a known Wi-Fi network.

Please note that it's not possible to connect to Wi-Fi networks that require a browser window to open.

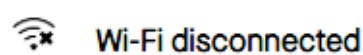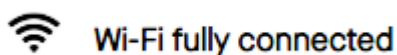

6.4 Battery settings

Battery settings allows you to enable or disable automatic sleep and automatic power off. Read more about the different power saving modes below.



Battery Status



Battery charging

6.4.1 Power saving modes

Light sleep

Light sleep allows you to see your content while preserving battery life. Your reMarkable will enter light sleep automatically after 20 minutes of inactivity.

- **Wake the device** from light sleep by pressing the home button or the prev/next buttons on the device
- Light sleep can't be activated manually.

Sleep

reMarkable uses a minimum amount of power when sleep mode is enabled. If automatic sleep is activated, your reMarkable will go into sleep after 2 hours, 40 minutes in light sleep or after 3 hours of inactivity. The device is not connected to Wi-Fi while in sleep mode.

- **Enter sleep mode** by pressing the power button once
- **Wake the device** by pressing the power button

6.4.2 Power off

- **Turn off** your reMarkable by holding down the power button and tapping Turn off
- **Enable or disable auto power off** in Power Settings. If automatic power off is enabled, your reMarkable will turn off after 12 hours of inactivity.

If both auto sleep and auto power off are disabled, your device will stay on until the battery is empty.

6.4.3 Battery percentage

Tap the **On/Off** button in the Power settings to display or hide the battery percentage.

6.5 Storage settings

Storage gives an overview of how much free space is left on your device. The reMarkable paper tablet offers 8 GB of internal storage.

6.5.1 Device syncing

A cloud icon in the bottom toolbar indicates the status of the connection to the reMarkable cloud.

How to check the status of the connection to the cloud:

- Go to **Settings** and select **Storage**.
- Select **Check sync**.
- A status of the cloud connection will be displayed. In the case of sync issues, try restarting your device.

6.6 Security settings

Add extra security by enabling a passcode for your device. You'll be asked for your passcode when the device is turned on or woken from sleep mode. The passcode can only be reset from Security settings, but you have an unlimited number of trials to unlock your device.

After several failed password attempts, you'll get a lockout timer. The lockout timer will increase for every failed attempt. You're able to factory reset your device if you forget your passcode. If you try the wrong passcode too many times, you'll be able to reset your device by following the instructions on the device and visiting my.remarkable.com.

6.6.1 How to add a passcode

Step-by-step instructions:

1. Go to **Settings**.
2. Tap **Security** and toggle Passcode to **On**.
3. Enter the new passcode.
4. Verify the new passcode.

Note: If the passcodes don't match, you have to try again.

6.6.2 How to change or remove a passcode

Step-by-step instructions:

1. Go to **Settings** and tap **Security**
2. Tap on **Change passcode** or toggle Passcode to **Off**
3. Enter your old passcode

6.7 Language settings

Go to **language settings** to choose between keyboard languages and set the language for handwriting conversion. You can access language settings from the homepage by tapping **Menu** in the top left corner, **Settings** at the bottom of the sidebar, then **Language**.

Your reMarkable tablet has an onscreen keyboard that appears when you need to type in information. You can find your default keyboard in language settings.

6.7.1 Changing the keyboard language

- Tap the language currently displayed to change to another keyboard language.
- You can also change the keyboard language by tapping the language icon (🌐) in the onscreen keyboard.

6.7.2 Using the onscreen keyboard

- Tap the number key **123** to enter numbers or symbols.
- Tap the (☰) key for additional symbols.
- Tap the letter key **abc** to return to the regular keyboard.
- Tap the shift key (⇧) to activate uppercase letters, and hold down shift to turn on caps lock.
- Long press on a letter to add accented characters.
- Change the keyboard language by tapping the language icon (🌐).

6.8 Accessibility settings

Accessibility settings enable you to switch between right- and left-handed mode, and alter the text size on your device.

AA [Accessibility / Text Size / Settings](#)

6.9 Help

Help is where you can find copyright, licensing, and compliance information. Here you can also find the option of replaying tutorials, and reactivating the introductory tooltips.

6.9.1 About

The **About** section contains general information about the reMarkable, copyright notices, the End User License Agreement (EULA), as well as information about licenses for different parts of the reMarkable software.

The GPLv3 Compliance section contains information about how to access the device via SSH, and the password needed to do so.

Note that any changes made to the reMarkable through SSH access is done at the users own risk.

You will also find the IP addresses available to connect to the reMarkable. In order to find the IP addresses, select the "Copyrights and licenses" tab. The IP addresses are found in the bottom right corner.

6.9.2 Tutorial

The **Tutorial** section of the settings menu contains two introductory tutorials. The **Getting started tour and tooltips** allow you to refresh your knowledge of essential tools and features on the reMarkable.

The tutorials can be reset as though you were using your device for the first time.

Tap **Getting started tour and tooltips** to repeat the onboarding and reset the tooltips.

7 Connectivity & Apps

7.1 The reMarkable cloud

The reMarkable cloud is a cloud service you can use to sync all your files. The cloud stores up to 8 GB of data, which is the same amount you can store on your device. The reMarkable cloud service is included in the price of the reMarkable paper tablet.

You connect your device to the reMarkable cloud by setting up a reMarkable account. By connecting to the cloud you can access your files in the mobile and desktop application, and import files to your reMarkable device. All changes on any platform are instantly synchronized when connected to Wi-Fi.

7.1.1 Create a reMarkable account:

Step-by-step instructions:

1. Go to my.remarkable.com
2. Click **Sign up to create a new account**. Choose whether you want to sign up with a Facebook or Google account, or up by using your email. The latter will initiate an email verification process.
3. Check your email account and follow the described steps to verify your email.
4. Click **sign up**. You now have a reMarkable account. Use this to connect your device and apps to your reMarkable account

***Note:** If you choose to sign up with your email address, you have to confirm your account with the link received via email before you can proceed.*

7.1.2 Security

The reMarkable cloud is hosted on Google's Cloud Platform. The reMarkable cloud is secured with Google's encryption at rest, trusted boot and physical security. All data is also encrypted on rest and on transfer.

For more information about our privacy policy, please read our Terms and conditions - Cloud Subscription.

7.1.3 Import files using my.remarkable.com

At my.remarkable.com you can import files from any web browser to your reMarkable. This feature works with PDFs, EPUBs, JPGs, and PNGs. The size limit for files that you can transfer is 100 MB.

Here's how to send files to your device:

1. Go to my.remarkable.com and log in to your account.
2. Click on **Import your files**.

3. Drag and drop the file you want to send, or click **Browse files** to select your document.
4. The files you've sent will appear in the **My files** menu on your reMarkable.

If you don't have access to Wi-Fi, you can also transfer files by using a USB cable.

7.2 Desktop App

The reMarkable desktop application enables you to view, liveview, organize, import and download files.

Once you have set up the desktop and/or mobile application your device is connected to the reMarkable cloud. All your notebooks, documents and ebooks will be synced across your devices when connected to a Wi-Fi.

The desktop app supports the following versions:

- Windows 7 and newer
- MacOS

7.2.1 Set-up

Step-by-step instructions:

1. Go to my.remarkable.com and log into your account.
2. Download the desktop app.
3. Open the application and click **Get a one-time** code to connect to your reMarkable account. You will be redirected to a browser window to receive a one-time code.
4. Enter the one-time code on your desktop app and click **Log in**.
5. You are now set up!

Note that you must first connect to a reMarkable device before connecting to the desktop app.

7.2.2 Organize your files

The desktop app enables you to organize your files and folders, as well as to copy, move, bookmark and delete files. Tap the specific menu on a file or a folder, and select one of the options in the side menu, or use drag and drop to move your files.

7.2.3 Transferring files using the desktop app

Import through the desktop app to get documents and ebooks onto your device. Once imported, your files will be synced across your connected devices.

Step-by-step instructions:


1. Open the reMarkable desktop app.
2. Click the **import** button at the top.

3. Select a file from the browser menu, and click **open**. You can also import a file by using drag and drop.
4. The file will sync automatically to your device if you are connected to Wi-Fi. Only files in the supported file formats (PDF and ePUB) will be transferred onto your device.

7.2.4 Export by using the desktop app

Step-by-step instructions:

1. Open the reMarkable desktop app.
2. Select the file you want to export to your computer.
3. Right-click on the file.
4. Select **Export as PDF**.
5. Choose the destination for the file on your computer.

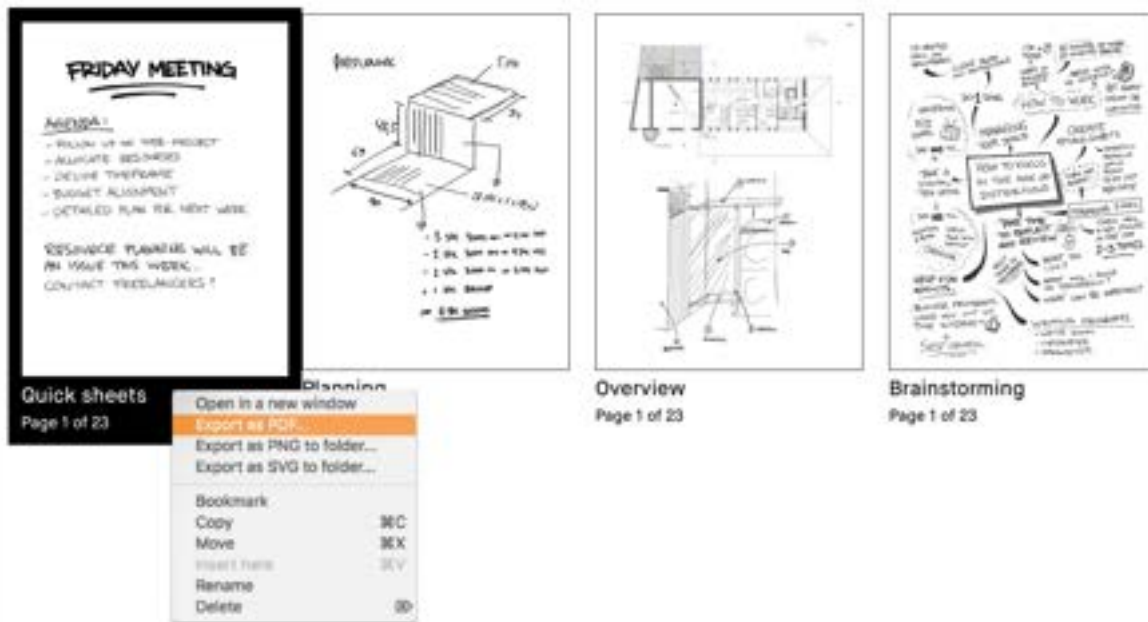

7.2.6 Print from reMarkable

Printing directly from the reMarkable is currently not an available option. Files can be transferred to a computer by using the desktop app, by email or by using a USB cable.

7.3 Mobile application

The reMarkable mobile application enables you to view, organize and import files to reMarkable.

Log in with your reMarkable account to connect to the reMarkable cloud and enable your files to be synced across your devices when connected to Wi-Fi.

The mobile app "The reMarkable Companion" is available in the App Store and Google Play. Use the Desktop app to view and organize your documents on your computer.

Note: If you don't find your files, make sure you've logged in using the same method and credentials.

Files can't be exported via the mobile app.

7.3.1 Set-up

Step-by-step instructions:

1. Download the app "The reMarkable Companion" from the App Store or Google Play.
2. Open the app and click **Get a one-time code** to connect to your reMarkable account. You will be redirected to a browser window where you need to log into your reMarkable account.
3. Enter the one-time code on your mobile app and tap **Log in**.

Note that you must first be connected to a reMarkable device to be able to connect to the mobile app.

7.3.2 Organize your files

The mobile app enables you to organize your files and folders, as well as to copy, move, bookmark and delete files on your mobile. Tap the specific menu on a file or a folder and select one of the options in the side menu.


7.3.3 Import files

Import through the mobile app to get documents and ebooks onto your device. Once imported, your files will be synced across your connected devices. The reMarkable supports PDF and EPUB file formats.

The reMarkable does not support DRM-protected files. Make sure that the files you want to import are not DRM-protected.

Import on iPhone


1. Open a PDF or EPUB file.
2. Tap the share icon in the Apple menu.
3. Choose **Import with reMarkable**.

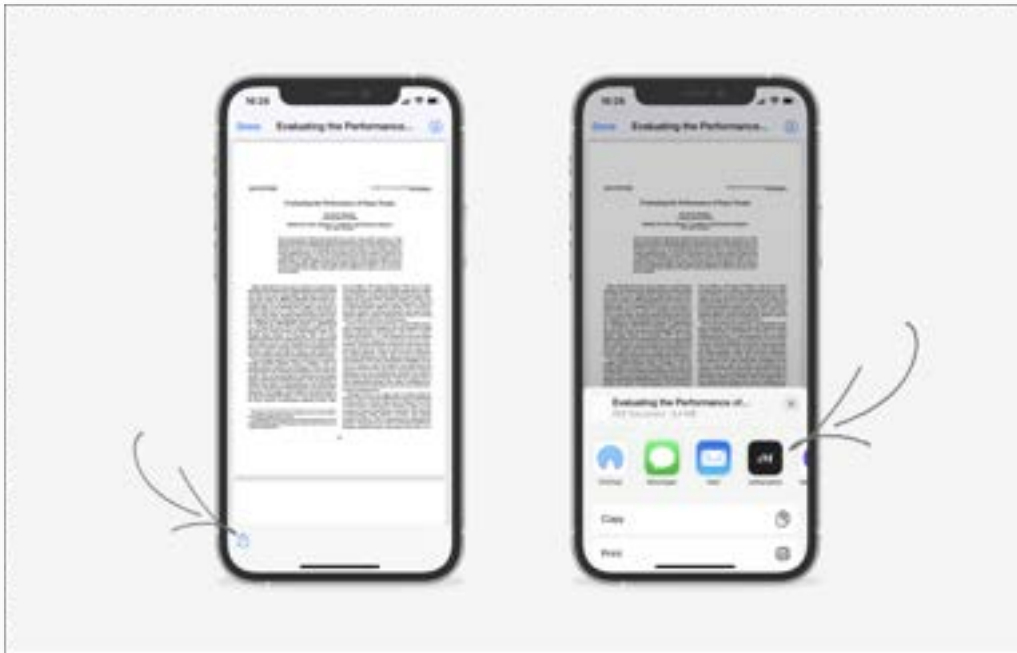

Import on Android

Files can be imported with the Android app, either by importing in-app or by sharing a file to the app. See below.

1. Tap the main menu
2. Tap **Import**
3. Choose from your downloaded PDFs and EPUB files.
4. Tap **Accept** to agree to give the app access to your files.

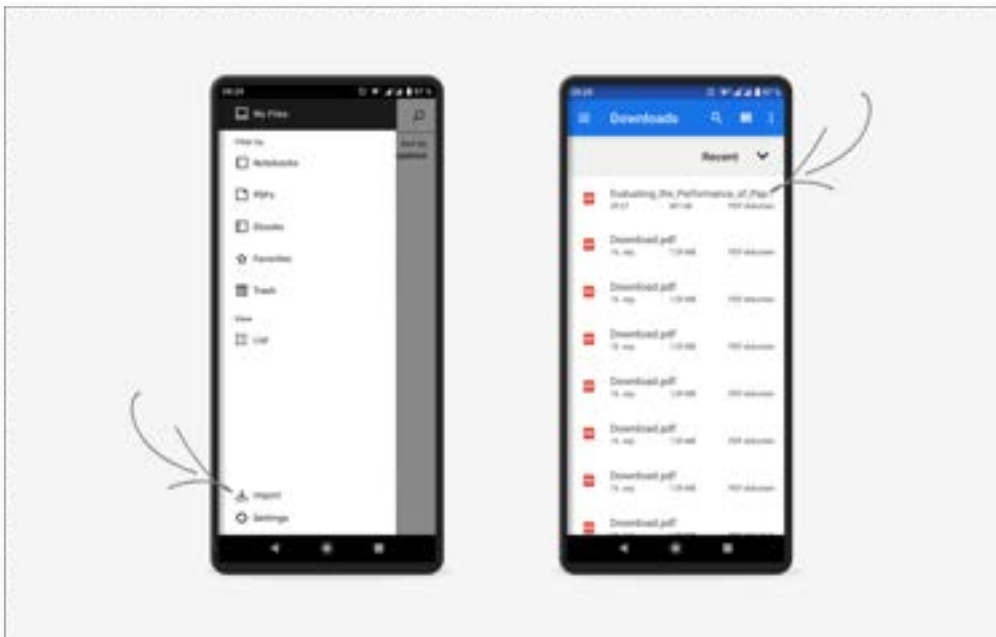

7.4 Transferring files using a USB cable

Transfer files through a USB cable with reMarkable (without Wi-Fi)

7.4.1 How to enable USB transfer on your reMarkable tablet

1. Connect the reMarkable with a USB cable to your computer.
2. Open **Settings**, and then **Storage settings**.
3. Here you'll see the choice Enable USB web interface. Enable this.
4. Open a browser window on your computer and enter the address 10.11.99.1.

Note: The reMarkable must be connected with the USB cable before the USB web interface can be toggled on.

This will show you a web window of the content on your device, and you can drag and drop content into this window to transfer epub and PDF files onto the device.


Even though this happens in a browser window, the file transfer happens through the USB cable, and not over Wi-Fi. You don't need to be connected to the cloud to use this functionality.

7.5 Syncing files

Once imported, your files will be synced across all devices (in the mobile and desktop app, and My files menu of your reMarkable when it's connected to Wi-Fi). There's a progress bar that monitors sync progress and a **'Check sync'** option that's available through the **Settings > Storage menu**.


Progress bar

A progress bar will appear while your files are being synced or exported. You will also see a cloud connection status icon.

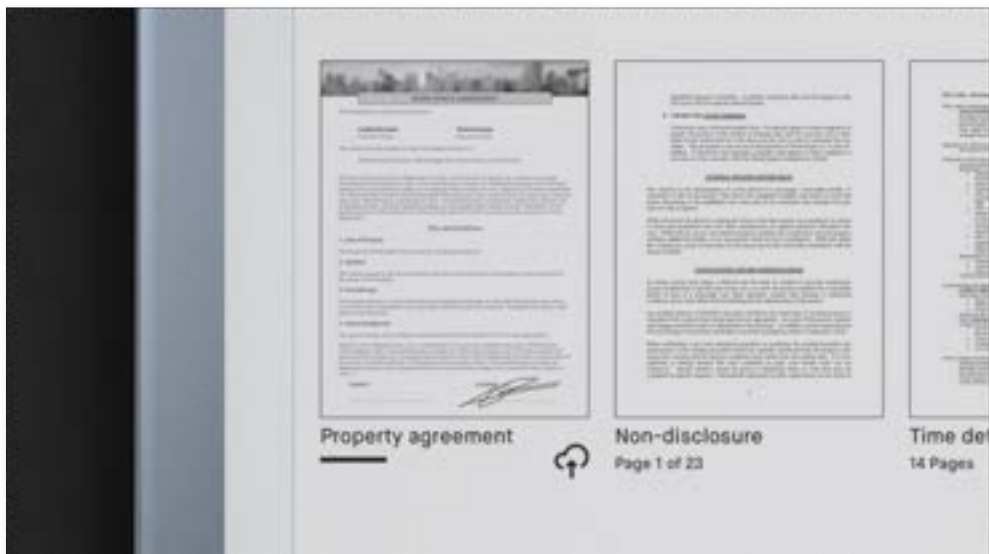

Check sync

In the event of a sync issue when backing up your files, there's an option to force them to update. A **'Check sync'** option in the settings menu will help diagnose any sync issues you may be experiencing.

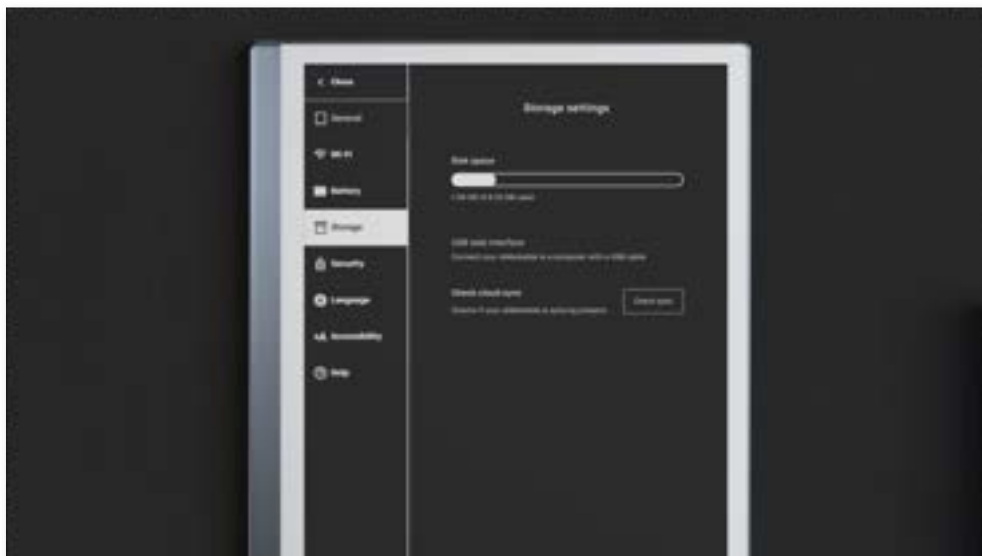

8 Regulatory Compliance and Important Safety Information

Regulatory Certification and Approval Marks for your device can be found in Settings, Help, Compliance statement.


8.1 E-label

Follow these steps to find the E-label on the reMarkable paper tablet:

1. Select **Settings** in the side menu.



2. Select **Help** in the side menu.

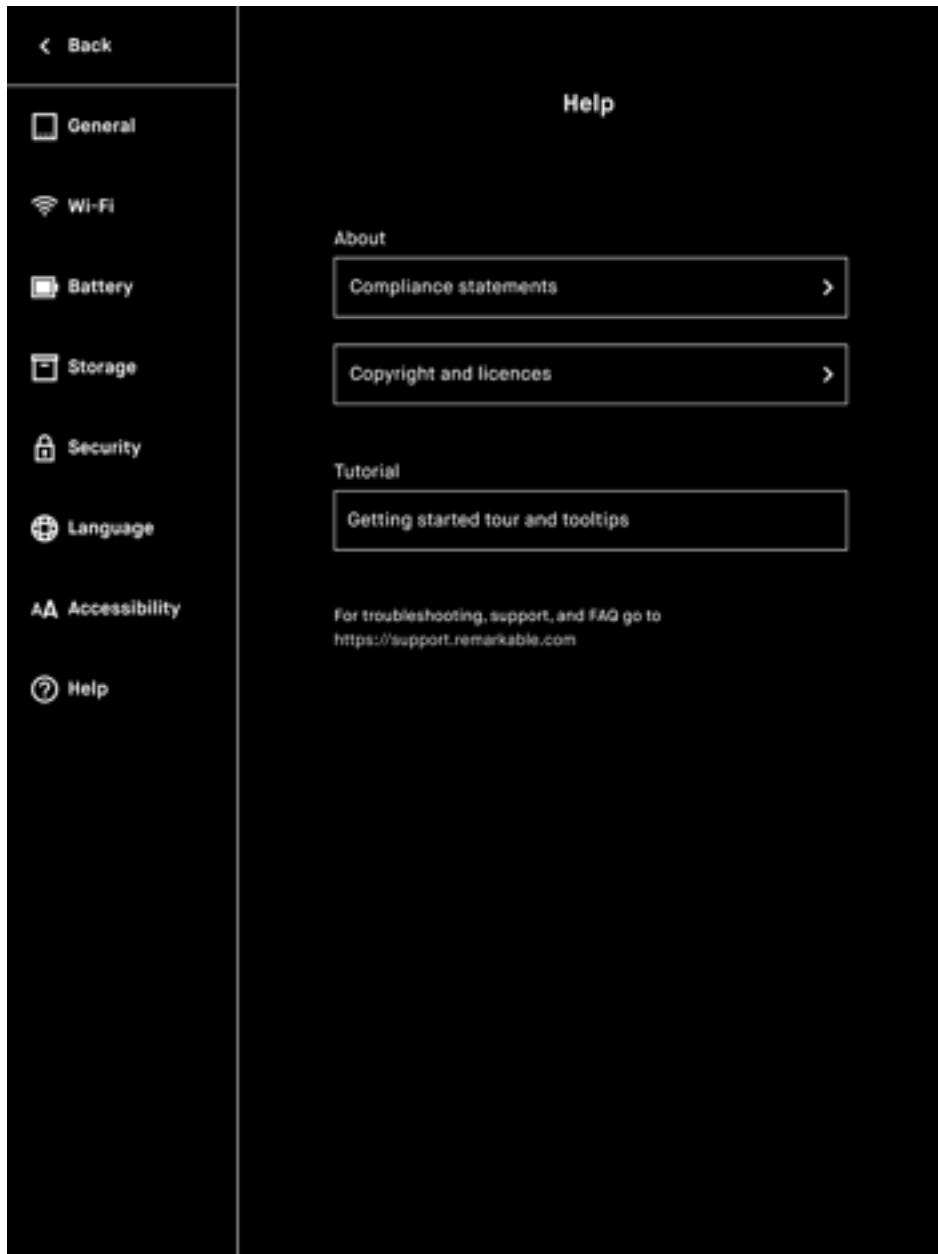

Don't use the reMarkable device or its accessories in rain or near other wet locations, as it contains electrical components that can be damaged if it comes in contact with liquid. If your device gets wet, unplug all cables and let the device go into sleep mode. Let the device dry completely before turning it on by pressing the power button. Do not attempt to dry your reMarkable with an external heat source, such as a microwave oven or hairdryer.

8.2.2 Cleaning

Before cleaning reMarkable and its accessories, unplug all cables and turn off the device (press the power button for 4 seconds and tap 'Turn off'). Slightly dampen a soft and lint-free cloth with water. Do not use window cleaners, solvents, aerosol sprays, household cleaners, alcohol, ammonia, or abrasives as this may damage the device permanently. Avoid getting moisture into any of the openings.

8.2.3 Operating temperature

Don't expose the reMarkable device to extreme heat or cold. The device is designed to be used in temperatures between 0° and 35° C (32° and 95° F) and stored in temperatures between -10° and 45° C (14° and 113° F).

8.2.4 Repairing

If your reMarkable needs service, do not open the device or attempt to repair it yourself. Disassembling the device may damage the device or cause injury to you. Please contact our customer support for more information.

8.2.5 Battery

The battery in the reMarkable should only be repaired or replaced by qualified personnel. Please contact our customer support for more information.

Note: Damaged batteries should be treated as hazardous materials. Do not return the device if the battery is swelling, leaking, or if you in any other way suspect that the battery is damaged. In this case, please document it with a picture or a video and make sure you dispose of or recycle the reMarkable and its accessories according to local laws and regulations. Do not puncture, drop or incinerate the battery.

8.2.6 Charging

The USB cable included with the device is certified to meet the criteria of the USB-IF Compliance Program. Charge the device with the cable included with the device or with cables and power adapters that are compatible with USB 2.0 or later and meets the requirements of USB-IF Battery Charging Spec, Rev 1.2.

8.2.7 Choking hazard

The device and accessories contain small parts that may present a choking hazard and must be kept away from small children.

8.2.8 Distraction

Using the reMarkable device can be distracting and may possibly cause dangerous situations. Avoid using the device while operating a vehicle.

8.2.9 Radio frequency energy exposure and interference

The reMarkable uses radio signals to connect to Wi-Fi. It is designed and manufactured not to exceed the exposure limits for radio frequency energy as set by the Federal Communications Commission of the United States (FCC). For more information read the FCC Compliance Statement or input your device's FCC ID (which can be found on the back of your device) into the FCC ID search form available at <https://www.fcc.gov/oet/ea/fccid>.

Although the reMarkable complies with the regulations governing RF emission, the energy exposure from the device may negatively affect the operation of other electronic equipment. To prevent possible interference or danger, Wi-Fi on the device should be turned off in areas where a wireless connection is forbidden, such as within an aircraft system. Be aware that RF signals could constitute a hazard in areas such as health care facilities or construction sites, and use of Wi-Fi may be restricted. The device should not be used or charged with potentially explosive atmospheres.

8.2.10 Medical device interference

The reMarkable contains magnets, as well as components and radios that emit electromagnetic fields. These may interfere with personal medical devices, such as pacemakers or defibrillators, that are sensitive to magnetic and electromagnetic fields.

Ensure to maintain a safe distance between the reMarkable and your medical device, and consult with a physician if interference is observed.

Note that objects with magnetically-stored data may be sensitive to magnetic or electromagnetic fields. Hence, items such as credit cards and hard drives should not be placed near the device.

8.3 Battery damage

Damaged batteries should be treated as hazardous materials. Do not return the device if the battery is swelling, leaking, or if you in any other way suspect that the battery is damaged. In this case, **please document it with a picture or a video** make sure you dispose of or recycle the reMarkable and its accessories according to local laws and regulations. Do not puncture, drop, or incinerate the battery.

8.4 EU Recycling Information (WEEE)



In accordance with the European Union's directive (2012/19/EU) on the Waste of Electrical and Electronic Equipment (WEEE), this symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

8.5 Natural Resources Canada (NRCAN)



The device is certified for Natural Resources Canada Energy Efficiency.

8.6 EU Declaration of conformity (CE)



reMarkable declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU

Requirements in

AT/BE/BG/CZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/CY/LV/LI/LT/LU/HU/MT/NL/NO/PL/PT/RO/SI/SK /TR/FI/SE/CH/UK/HR. 5150MHz~5350MHz is for indoor use only

SAR is measured with the device at 0 mm to the body, while transmitting at the highest certified output power level in all frequency bands of the device. The maximum SAR value is 0.713 W/kg (head/body) averaged over 10 grams of tissue.

Operation Frequency	Max RF output power
2.4G Wi-Fi:802.11b/g/n(20MHz):2412~2472MHz 5G Wi-Fi: 5.15-5.25GHz; 5.725-5.845GHz, 802.11a; 802.11n(HT20/HT40), 802.11ac(VHT20/ VHT40/VHT80)	2.4G: 11.57 dBm 5G: 9.61 dBm

RM110A

reMarkable declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU

Requirements in

AT/BE/BG/CZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/CY/LV/LI/LT/LU/HU/MT/NL/NO/PL/PT/RO/SI/SK /TR/FI/SE/CH/UK/HR. 5150MHz~5350MHz is for indoor use only

SAR is measured with the device at 0 mm to the body, while transmitting at the highest certified output power level in all frequency bands of the device. The maximum SAR value is 0.698 W/kg (head/body) averaged over 10 grams of tissue.

Operation Frequency	Max RF output power
---------------------	---------------------

2.4G Wi-Fi:802.11b/g/n(20MHz):2412~2472MHz 5G Wi-Fi: 5.15-5.25GHz; 5.725-5.845GHz, 802.11a; 802.11n(HT20/HT40), 802.11ac(VHT20/ VHT40/VHT80)	2.4G: 12.56 dBm 5G: 10.33 dBm
-------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------

RM110B

reMarkable declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU

Requirements in

AT/BE/BG/CZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/CY/LV/LI/LT/LU/HU/MT/NL/NO/PL/PT/RO/SI/SK /TR/FI/SE/CH/UK/HR. 5150MHz~5350MHz is for indoor use only

SAR is measured with the device at 0 mm to the body, while transmitting at the highest certified output power level in all frequency bands of the device. The maximum SAR value is 0.387 W/kg (head/body) averaged over 10 grams of tissue.

Operation Frequency	Max RF output power
2.4G Wi-Fi:802.11b/g/n(20MHz):2412~2472MHz 5G Wi-Fi: 5.15-5.25GHz; 5.725-5.845GHz, 802.11a; 802.11n(HT20/HT40), 802.11ac(VHT20/ VHT40/VHT80)	2.4G: 11.60 dBm 5G: 9.93 dBm

8.7 UK Declaration of conformity (UKCA)



reMarkable declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio Equipment Regulations 2017

5150MHz~5350MHz is for indoor use only

SAR is measured with the device at 0 mm to the body, while transmitting at the highest certified output power level in all frequency bands of the device. The maximum SAR value is 0.713 W/kg (head/body) averaged over 10 grams of tissue.

Operation Frequency	Max RF output power
---------------------	---------------------

2.4G Wi-Fi:802.11b/g/n(20MHz):2412~2472MHz 5G Wi-Fi: 5.15-5.25GHz; 5.725-5.845GHz, 802.11a; 802.11n(HT20/HT40), 802.11ac(VHT20/ VHT40/VHT80)	2.4G: 11.57 dBm 5G: 9.61 dBm
-------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------

RM110A

reMarkable declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio Equipment Regulations 2017

5150MHz~5350MHz is for indoor use only

SAR is measured with the device at 0 mm to the body, while transmitting at the highest certified output power level in all frequency bands of the device. The maximum SAR value is 0.698 W/kg (head/body) averaged over 10 grams of tissue.

Operation Frequency	Max RF output power
2.4G Wi-Fi:802.11b/g/n(20MHz):2412~2472MHz 5G Wi-Fi: 5.15-5.25GHz; 5.725-5.845GHz, 802.11a; 802.11n(HT20/HT40), 802.11ac(VHT20/ VHT40/VHT80)	2.4G: 12.56 dBm 5G: 10.33 dBm

RM110B

reMarkable declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio Equipment Regulations 2017

5150MHz~5350MHz is for indoor use only

SAR is measured with the device at 0 mm to the body, while transmitting at the highest certified output power level in all frequency bands of the device. The maximum SAR value is 0.387 W/kg (head/body) averaged over 10 grams of tissue.

Operation Frequency	Max RF output power
2.4G Wi-Fi:802.11b/g/n(20MHz):2412~2472MHz 5G Wi-Fi: 5.15-5.25GHz; 5.725-5.845GHz, 802.11a; 802.11n(HT20/HT40), 802.11ac(VHT20/ VHT40/VHT80)	2.4G: 11.60 dBm 5G: 9.93 dBm

8.8 USA compliance statement (FCC)



Remarkable 2 (Model RM110) FCC ID: 2AMK2-RM110

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.164W/kg.

Remarkable 2 (Model RM110 Variant A) FCC ID: 2AMK2-RM110A

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.376 W/kg.

Remarkable 2 (Model RM110 Variant B) FCC ID: 2AMK2-RM110B

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.343 W/kg.

8.9 Canada compliance statement (IC)

Remarkable 2 (Model RM110) IC: 22859-RM110

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

1. The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems; (For devices installed in vehicles point i. is not required.)

2. For devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits as appropriate; and
1. Les dispositifs fonctionnant dans la bande de 5 150 à 5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux⁴;
2. Pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5 725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée, selon le cas;

This equipment complies with Innovation, Science and Economic Development Canada's radiation exposure limits set forth for an uncontrolled environment. The End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device is designed to meet the requirements for exposure to radio waves established by the Innovation, Science and Economic Development Canada's. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.164 W/kg.

Ce matériel répond à l'innovation, science et développement économique Canada est l'exposition maximale fixée pour un autre environnement. L'utilisateur final doit suivre les instructions d'exploitation de l'exposition aux radiofréquences spécifiques pour satisfaire la conformité. Cet émetteur ne doit pas être situées ou opérant conjointement avec toute autre antenne ou l'émetteur.

Le dispositif est conçu pour répondre aux exigences de l'exposition aux ondes radio créée par la science et l'innovation, développement économique Canada. Ces exigences limite de sar de 1.6 W / kg en moyenne pour un gramme de tissu. La valeur de r - s en vertu de cette norme plus élevée au cours de la certification de produits déclarés pour une utilisation bien portés sur le corps est 1.164 W/kg.

Remarkable 2 (Model RM110 Variant A) IC: 22859-RM110A

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;

2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
1. The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems; (For devices installed in vehicles point i. is not required.)
 2. For devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits as appropriate; and
1. Les dispositifs fonctionnant dans la bande de 5 150 à 5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux4;
 2. Pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5 725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée, selon le cas;

This equipment complies with Innovation, Science and Economic Development Canada's radiation exposure limits set forth for an uncontrolled environment. The End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device is designed to meet the requirements for exposure to radio waves established by the Innovation, Science and Economic Development Canada's. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.376 W/kg.

Ce matériel répond à l'innovation, science et développement économique canada est l'exposition maximale fixée pour un autre environnement. L'utilisateur final doit suivre les instructions d'exploitation de l'exposition aux radiofréquences spécifiques pour satisfaire la conformité. Cet émetteur ne doit pas être situées ou opérant conjointement avec toute autre antenne ou l'émetteur.

Le dispositif est conçu pour répondre aux exigences de l'exposition aux ondes radio créée par la science et l'innovation, développement économique Canada. Ces exigences limite de sar de 1.6 W / kg en moyenne pour un gramme de tissu. La valeur de r - s en vertu de cette norme plus élevée au cours de la certification de produits déclarés pour une utilisation bien portés sur le corps est 1.376 W/kg.

Remarkable 2 (Model RM110 Variant B) IC: 22859-RM110B

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
-
1. The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems; (For devices installed in vehicles point i. is not required.)
 2. For devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits as appropriate; and
-
1. Les dispositifs fonctionnant dans la bande de 5 150 à 5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
 2. Pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5 725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée, selon le cas;

This equipment complies with Innovation, Science and Economic Development Canada's radiation exposure limits set forth for an uncontrolled environment. The End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device is designed to meet the requirements for exposure to radio waves established by the Innovation, Science and Economic Development Canada's. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.343 W/kg.

Ce matériel répond à l'innovation, science et développement économique Canada est l'exposition maximale fixée pour un autre environnement. L'utilisateur final doit suivre les instructions d'exploitation de l'exposition aux radiofréquences spécifiques pour satisfaire la conformité. Cet émetteur ne doit pas être situées ou opérant conjointement avec toute autre antenne ou l'émetteur.


Le dispositif est conçu pour répondre aux exigences de l'exposition aux ondes radio créée par la science et l'innovation, développement économique Canada. Ces exigences limite de sar de 1.6 W / kg en moyenne pour un gramme de tissu. La valeur de r - s en vertu de cette norme plus élevée au cours de la certification de produits déclarés pour une utilisation bien portés sur le corps est 1.343 W/kg.

8.10 Australia and New Zealand compliance statement



This device complies with the requirements of the electrical and EMC regulations of Australia and New Zealand in accordance with AS/NZS 4417 Parts 1, 2, 3, and 4

8.11 Singapore compliance statement

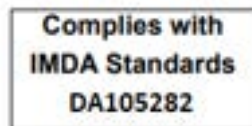

8.12 Japan compliance statement



Operation in the 5.15-5.25 bands is restricted to indoor use only
電波法により5.15-5.25 GHz帯は屋内使用に限ります

8.13 South Korea compliance statement (KC-R and KC Safety)



R-C-rMS-RM110

안전인증번호 : XU101555-20002A

제 품 명 : tablet PC

모 델 명 : RM110 (RM111, RM112, RM113, RM114, RM115, RM116)

정 격 : 5VDC, 1.5A Max

제 조 자 : Dongguan Kaifa Technology Co., Ltd.

제 조 국 : China

A/S연락처 : 82-70-7826-4808

8.14 Mexico compliance statement (NOM)



reMarkable 2

Número de modelo: RM110

Potencial eléctrico: 5V

Corriente Nominal: 1.5 A

LA OPERACIÓN DE ESTE DISPOSITIVO ESTA SUJETA A LAS SIGUIENTES CONDICIONES:

- a) Es posible que este equipo o dispositivo no cause interferencia perjudicial.
- b) Este equipo o dispositivo debe aceptar cualquier tipo de interferencia, incluyendo la que pueda causar su operación no deseada

8.15 Thailand compliance statement (Sdoc)

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.

เครื่องวิทยุคมนาคมนี้มีอัตราการดูดกลืนพลังงานจำเพาะ (Specific Absorption Rate - SAR) อันเนื่องมาจาก

เครื่องวิทยุคมนาคมเท่ากับ 1.376 W/kg ซึ่งสอดคล้องตามมาตรฐานความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้เครื่อง

วิทยุคมนาคมที่คณะกรรมการกิจการโทรคมนาคมแห่งชาติประกาศกำหนด

8.16 South Africa compliance statement (ICASA)

Remarkable 2 (Model RM110)



Remarkable 2 (Model RM110 Variant A)



Remarkable 2 (Model RM110 Variant B)



8.17 UAE compliance statement (TRA, ECAS)



Models: RM110, RM111, RM112, RM113, RM114, RM115, RM116

Voltage: 5 VDC

Max. Current: 1.5 A Max

TRA:

TRA RTTE REGISTERED No.: ER82789/20 for RM110

TRA RTTE REGISTERED No.: ER01444/21 for RM110 variant A

TRA RTTE REGISTERED No.: ER01445/21 for RM110 variant B

Dealer ID: DA88552/20