


VTOMAN

TOOLS & BATTERIES

Jump 600X Portable Power Station

User Manual

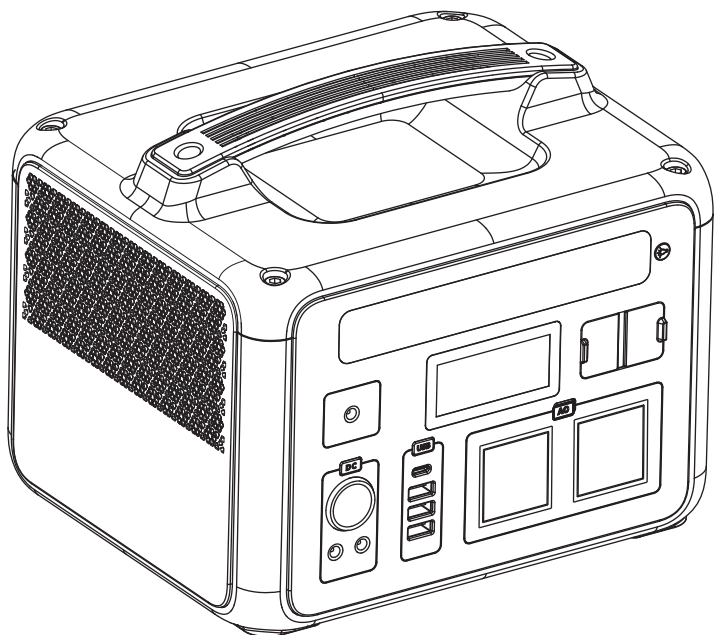

Model: Jump 600X

- Thank you for choosing Vtoman portable power station.
- Please read the user manual carefully and follow the instructions in the manual to use the product correctly.

CONTENTS

1.Specifications	1
2.Package List	2
3.Safety Instructions	
3.1 Usage	2
3.2 Personal Precautions	3
3.3 Disposal Guide	4
4.Product Features	
4.1 Product Details	5
4.2 LCD Screen Introduction	5
5.Product Operating Instructions	
5.1 Power & Function On/Off	6
5.2 Recharge Methods & Recharge Time	7
5.3 Battery Capacity Expansion	8
5.4 Use of LED Flashlight	8
6.FAQs	9
7.Troubleshooting	11
8.Storage & Maintenance	11
9.Warranty	12
10.Contact Us	13

1.Specifications

General Info

Model	Jump 600X
Net Weight	6.7kg
Dimensions	26x22x21.5 cm
Certification	FCC, RoHS, UN38.3, CE, UL, UKCA

Battery Info

Capacity	299Wh
Cell Chemistry	LiFePO4
Cycle Life	3000 cycles to 80%

Output Ports

AC (x2)	600W(Peak 1200W), 230V~50Hz, Pure Sine Wave
USB-A (x2)	5V=2.4A, 12W Max per port
USB-A QC 3.0 (x1)	5V=2.4A, 9V=2A, 12V=1.5A, 18W Max
Type-C (x1)	5V=3A, 9V=3A, 12V=3A, 15V=3A, 20V=3A, PD 60W
DC5521 (x2)	12V=10A, total 120W for all DC ports
Car Charger (x1)	12V=10A, total 120W for all DC ports


Input Ports

DC5521 (x1)	DC12-30V (Max 65W)
-------------	--------------------

Environment Operating Temperature

Operating Temperature	-20°C~55°C(-4°F~131°F)
Charging Temperature	0°C~55°C(32°F~131°F)


2.Package List

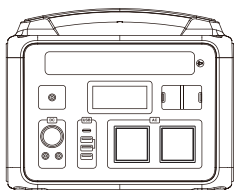


Jump 600X Power Station



Car Charger Cable

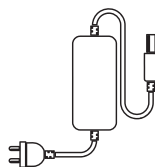

AC Charger & Charging Cable



Type-C to Type-C Cable



USB-A to Type-C Cable



User Manual

No.	Item	Qty.	Specification
1	Jump 600X Power Station	1	230V/600W
2	AC Charger & Charging Cable	1	19V/3.2A, 60W Max
3	Type-C to Type-C Cable	1	/
4	USB-A to Type-C Cable	1	/
5	Car Charger Cable	1	Cigarette lighter to DC5521
6	User Manual	1	English version

Please kindly check all accessories are complete. If any parts missing, please feel free to contact us at **service.eu@vtoman.com**.

3.Safety Instructions

3.1 Usage

When using this product, basic precautions should always be followed, including the following:

- 1.Read all the instructions before using the product.
- 2.To reduce the risk of injury, close supervision is necessary when the product is used near children.

3. Do not put fingers or hands into the product.
4. Use of an attachment not recommended or sold by power pack manufacturer may result in a risk of fire, electric shock, or injury to persons.
5. To reduce risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the power pack.
6. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
7. Do not operate the power pack with a damaged cord or plug, or a damaged output cable.
8. Do not disassemble the power pack, take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
9. To reduce the risk of electric shock, unplug the power pack from the outlet before attempting any instructed servicing.

3.2 Personal Precautions

1. Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
2. Wear complete eye protection and clothing protection. Avoid touching eyes while working near battery.
3. If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with running cold water for at least 10 minutes and get medical attention immediately.
4. NEVER smoke or allow a spark or flame in vicinity of battery or engine.
5. Be extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause explosion.
6. When charging the internal battery, work in a well ventilated area and do not restrict ventilation in any way.
7. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.

Liquid ejected from the battery may cause irritation or burns.

8. Do not expose a power pack to fire or excessive temperature. Exposure to fire or temperature above 265°F(130°C) may cause explosion.

9. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

3.3 Disposal Guide


1. If conditions permit, make sure that the battery is fully discharged before disposing it in a designated battery recycling bin. The product contains batteries with potentially dangerous chemicals, so it is strictly prohibited to dispose of it in ordinary trash cans. For more details, please follow the local laws and regulations on battery recycling and disposal.

2. If the battery cannot be fully discharged due to a product failure, please do not dispose of the battery directly in the battery recycling box. In such case, you should contact a professional battery recycling company for further processing.


3. Please dispose of over-discharged batteries that cannot be recharged.

4.Product Features

4.1 Product Details

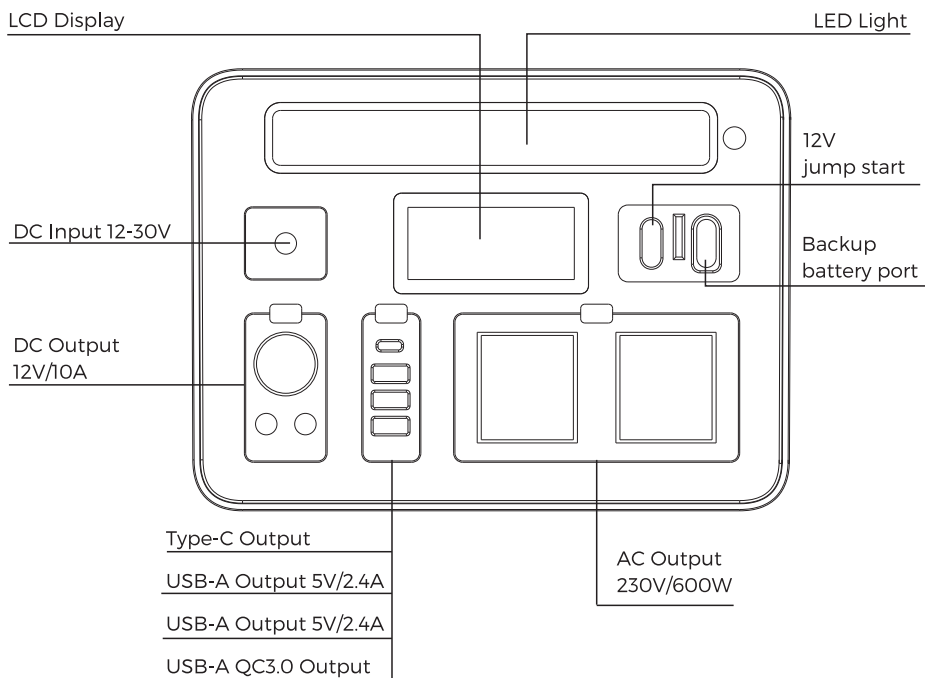

4.2 LCD Screen Introduction

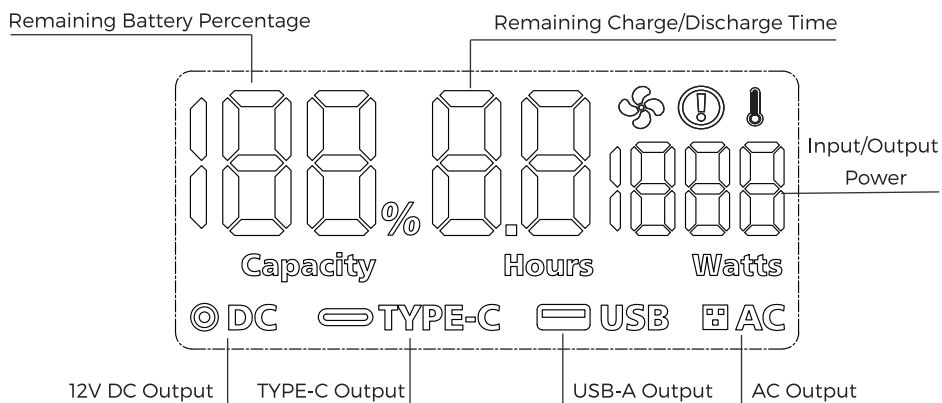

5.Product Operating Instructions

5.1 Power & Function On/Off

1.Power On: Short press any button to power on the product and enter the standby state, the LCD Screen will light up and the battery level indicator icon will display.

2.Power Off: Turn off all outputs manually, then the product enters the standby state and will shut down after 30 minutes.

3.AC Output On/Off: Short press the AC Button to use the AC output; Short press the AC Button again to turn if off.

4.DC Output On/Off: Short press the DC Button to use the 12V DC output; Short press the DC Button again to turn if off.

5.USB-A & Type-C On/Off: Short press the USB Button to use the USB-A & Type-C output; Short press the USB Button again to turn if off.

Warm Tips:




1.Auto Shut-off Feature: When any output switch of the battery is turned on, the battery will maintain continuous output for 6 hours. After 6 hours, the battery starts to detect the load current and lasts for 2 hours. There are three situations as follows:

- 1) If no load is detected within 2 hours, the battery will automatically shut down;
- 2) When the load is detected within 2 hours, the battery will continue to output;
- 3) If it is detected that the load is turned on and then turned off within 2 hours, the load detection will be restarted for 2 hours after the load is turned off.

2.600W Constant-power Feature: When the total operating power of the devices connected to the battery's AC socket exceeds the battery's 600W rated power, Jump 600X will not automatically disconnect the AC output, but will continue to output at a constant power of 600W. However, it's not applicable for all electric appliances, some appliances with strict voltage requirements may not function.

5.2 Recharge Methods & Recharge Time


1.Recharge Time

 Wall Charger	 Car Charger	 100W Solar Panel
5-6 Hours	5-6 Hours	8-10 Hours

Warm Tips: Before use, please plug your Jump 600X power station into the wall until it is fully charged.


2.Recharge by Wall Charger

You can use the wall charger that comes in the package to recharge the Jump 600X power station. The recharging time is about 5-6 hours.

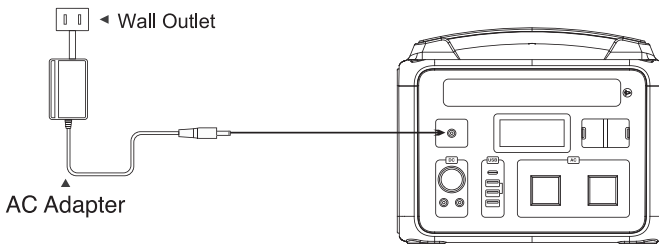


3.Recharge by Car Charger

You can recharge the Jump 600X power station through the DC Input Port with a car charger. Jump 600X supports 12V car chargers, and the recharging time is about 5-6 hours.

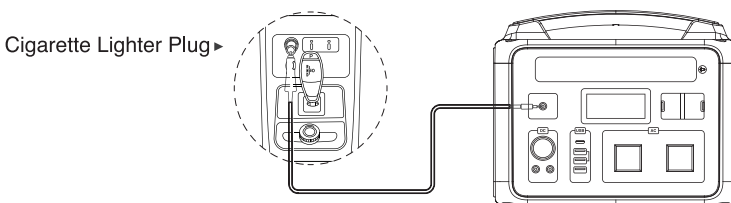

4.Recharge by Solar Panel


You can connect a 100W Vtoman solar panel as shown in the figure to recharge the Jump 600X power station, the recharge time is about 8-10 hours(depending on sunlight).

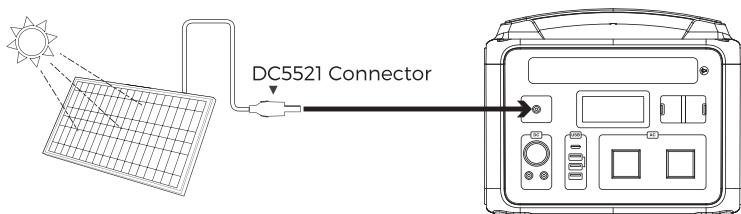

Before connecting the solar panel, please ensure that the output voltage of your solar panel is within 30V to avoid product damages.

5.3 Battery Capacity Expansion

Vtoman Jump 600X Portable Power Station can expand its battery capacity from 299Wh to 939Wh with Jump 600X Extra Battery(Sold separately), so that it can power your devices for a longer time.

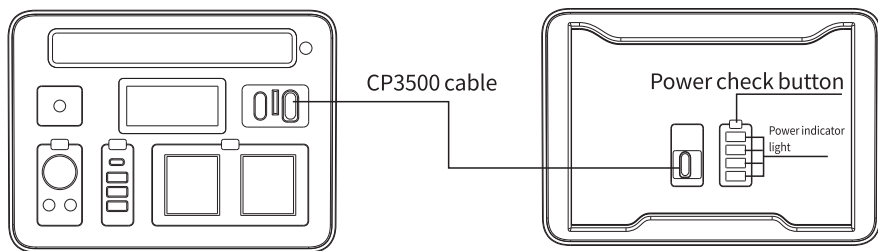

Jump 600X Portable Power Station

Jump 600X Extra Battery

To expand the battery capacity, you just need to connect the Jump 600X Portable Power Station to the Jump 600X Extra Battery with a CP3500 cable.



The CP3500 cable will get hot during work, please DO NOT touch the CP3500 cable in avoid of scalding!

5.4 Use of LED Flashlight

The Jump 600X Power Station features a LED flashlight with 5 mode. Please follow the instructions below to enter different modes:

(1)Weak Light Mode: Short press the LED button on the power station to turn on the light, it enters the weak light mode;

(2)Medium Light Mode: Press the LED button twice to enter medium light mode;

(3)Strong Light Mode: Press the LED button three times to enter strong light mode;

(4)Strobe Mode: Press the LED button four times to enter strobe mode;

(5)SOS Mode: Press the LED button five times to enter SOS mode. Press the LED button again to turn the light off.

6.FAQs

1. What devices can the Jump 600X power?

With 600W rated power and 1200W peak power, the AC output ports can normally power devices and appliances with a rated power less than 600W. Besides, if the total operating power of the devices connected to the battery's AC socket exceeds the battery's 600W rated power, Jump 600X will not automatically disconnect the AC output, but will continue to output at a constant power of 600W. However, it's not applicable for all electric appliances, some appliances with strict voltage requirements may not function.

2.How to know the working time for my device?

Working time= $299\text{Wh} \times 0.85$ / operating power of your device.

3.How long can Jump 600X charge my devices?

The charging time is shown on the product's LCD Screen, which can be used to estimate the charging time of most appliances with stable power usage.

4.Can the Jump 600X be charged while using?

Yes, Jump 600X supports pass-through charging. But we don't suggest that, cause it will make damage to battery life.

5.Can the Jump 600X be used as a UPS?

No, the Jump 600X can't be used as UPS, because you need to press the button manually to turn on the AC/DC/USB output, it cannot turn on automatically.

6.Are the DC output ports regulated 12V?

Yes, 2 DC5521 output ports and 1 cigarette lighter are regulated 12V voltage, the specifications are 12V/10A, the maximum output power is 120W in total (single port is 120W Max; 3 ports are also 120W Max in total).

7.How many watts solar panel can Jump 600X support?

There is no limit to the maximum power of the solar panel, as long as the solar panel meets the following two conditions:

1) The open circuit voltage is 12-30V;

2) The solar panel has a DC5521 connector(male), or it can be converted to DC5521 interface. For example, some solar panels come with MC4 interface, then you just need to use an MC4 to DC5521 adapter cable.

8. Does Jump 600X has MPPT feature?

Yes, all Vtoman power stations are built-in MPPT feature. You don't need to use an extra MPPT controller to connect the Jump 600X power station with your solar panel.

7.Troubleshooting

Problem	Cause	Solution
No output power	Your device is not connected to the power station well.	Connect your device to the power station well.
	Output switch is not turned on.	Turn on the output switch manually.
	Battery is low.	Recharge the power station fully before use.
Output breaks down during use	Your device's operating power is too low, causing the product turns off automatically.	Please turn on the power again.
Product cannot charge	Charger is not well connected to the power station or wall outlet .	Please make sure all connections are well.
	Connection is well, but the charger indicator is off. Charger is broken.	Please contact with Vtoman customer service.

8.Storage & Maintenance

- 1.Before storing, please turn off the product first, and then store it in a dry, ventilated place at room temperature, away from water, heat, and other metal objects.
- 2.For long-term storage, please discharge the battery to about 60%-80% before storing, and recharge it every 2 to 3 months to extend its battery life.
- 3.When using the battery every day, it is recommended to charge the battery to about 90% when charging, and leave about 10% when discharging.

4. Please use or store the product in an environment temperature between 68°F to 86°F. For safety, please do not store the product in an environment temperature higher than 113°F or lower than 14°F for a long time.

5. To clean the product, please gently wipe it with a dry, soft, clean cloth or paper towel.

9. Warranty

Note: We only provide the warranty for the consumer who purchased our products through Amazon or Vtoman website.

VTOMAN warrants to the original consumer that Vtoman products will be free from defects in workmanship and materials under normal use during the applicable warranty period as determined in the "Warranty Period" section below, subject to the "Exclusions" clause below.

Warranty Period

The warranty period of the VTOMAN portable power station is 24 months. Consumers need to provide a sales receipt for the first purchase or other reasonable documentary proof to determine the start date of the warranty period. Under normal circumstances, the warranty period is calculated from the date of purchase by the original consumer.

Exchange

If VTOMAN products cannot be operated due to defects in workmanship or materials during the applicable warranty period, Vtoman will provide free replacement, and VTOMAN will bear the freight. In addition, the replacement product will bear the remaining warranty period of the original product.

Refund

VTOMAN provides a 30-day money-back guarantee for products purchased directly from VTOMAN. If you are not satisfied for any reason, just let us know within 30 days. Once we receive the product and confirm its validity, we will refund the full amount. Please check before returning: (1) You purchased the product directly from VTOMAN ; (2) You contact Vtoman and start the return process within 30 days of the original delivery date; (3) The product is returned in its original packaging, including all materials, in a new or as-new state.

Exclusions

VTOMAN's warranty does not apply to:

1. Misuse, abuse, modification, accidental damage, or use for any other purpose other than those authorized in the current product information of VTOMAN;
2. Attempt to repair by anyone outside the authorized organization;
3. Appearance damage due to using;
4. Non-original consumer purchasers;
5. The VTOMAN warranty does not apply to battery cells.

Contact Us

If you have any questions during using Vtoman products, please feel free to contact with us at service.eu@vtoman.com.

You can also contact us via WhatsApp +86 136-423-37684, or follow us on Facebook by searching Vtoman Global.



華佳商事 株式会社



RoHS



UK
CA



MADE IN CHINA