


nuwave®

INFINITY™ BLENDER

Owner's Manual

Model: 28202

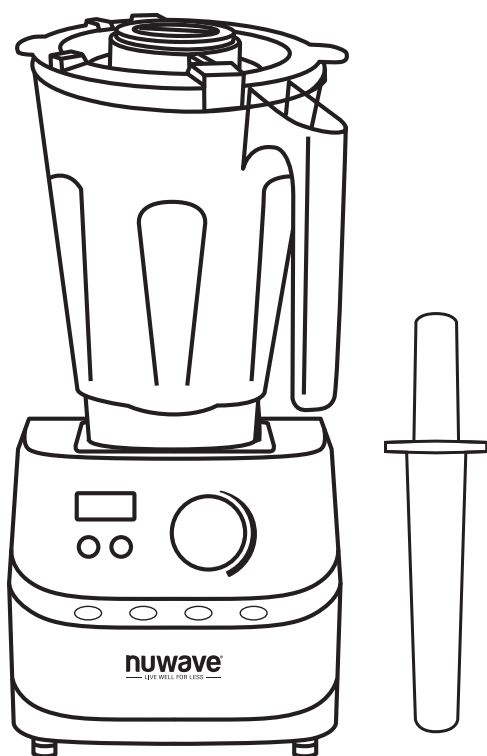

Questions or Concerns?

Customer Service: support@nuwavenow.com

1-888-502-7805

Mon-Fri 7:30am-4:30pm CST

THANK YOU!

Congratulations on your Nuwave® purchase. We know there are many options available and sincerely appreciate the trust you have placed in us.

For the last 30 years, we have committed to introducing products that promote healthy living at affordable prices. By combining the highest quality designs with cutting edge technology, we have always strived to blend feature, function, and innovation into every product we make. We hope you will agree.



Register Today!

Use your smartphone or device to **scan the QR code** located on the back of your unit to register your product, or **visit nuwavenow.com/register**.

Connect with Us!



#nuwavenow

Visit nuwavenow.com to see other great products and accessories.

TABLE OF CONTENTS

Owner’s Manual

Important Safeguards 4-7

Parts & Accessories 8

Assembly Guide 9-10

Quick Start 11-12

Instructions 13-15

Cleaning & Maintenance 16

Troubleshooting Guide 17-18

Lifetime Limited Warranty 19-21

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

WARNING: When using the Infinity™ Blender, basic safety precautions should always be followed:

1. To protect against risk of electrical shock, do not immerse the Blender Base, cord, plug, or any part of the main unit in water or any other liquid.
2. Close supervision is necessary when any appliance is used near children. The Infinity™ Blender is not intended for use by children, persons with reduced physical, sensory, or mental capabilities or those with lack of expertise or knowledge of this unit.
3. Avoid contact with moving parts.
4. Do not operate the Infinity™ Blender with a damaged cord or plug, if the appliance malfunctions, is dropped, or damaged in any manner. Contact Customer Service at 1-888-502-7805 or email support@nuwavenow.com for information on examination, repair, or adjustment.
5. NOT INTENDED FOR OUTDOOR USE. FOR HOUSEHOLD USE ONLY. This appliance is intended for normal household use. It is not intended to be used in environments such as staff kitchens/cafeterias in shops, offices, farms, or other work environments, nor is it intended to be used by guests in hotels, motels, bed and breakfasts, or any other non-residential environment.
6. Do not let the cord hang over the edge of any table or counter. Do not let the cord contact hot surfaces, such as a stove.
7. Discard the protective plastic covering the power plug before use.
8. Do not place the unit on or near a hot gas or electric burner, a stovetop, or in a heated oven.
9. Keep hands, utensils, and foreign objects out of the Jar while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used, but only when the blender is NOT running.
10. CAUTION! The blades are sharp. Handle the blender carefully and do not handle the blades.
11. ALWAYS operate the blender with the Lid and Jar correctly in place. The Plunger Lid should be firmly closed with the dot properly lined up with the handle.
12. Alteration or modification to any part of the blender, or the use of attachments not recommended by the manufacturer, may cause fire, injury, or damage to property.

13. Do not use the unit for anything other than its intended purpose.
14. Do not add hot or boiling liquids to the Jar.
15. NEVER knock the Jar against any surface to loosen stuck-on ingredients. Always remove the Jar from the Infinity™ Blender Base first, then use a rubber spatula to remove the stuck-on ingredients from the bottom of the Jar. Do not use metal utensils as doing so can damage the Jar.
16. Do not shake or rattle the Jar while it is in use.
17. Never remove the Jar before the Infinity™ Blender's blades have come to a complete stop.
18. Turn off, then unplug, the Infinity™ Blender from outlet when not in use, before putting on or taking off parts, and before cleaning.
19. Keep this manual handy for future reference.

ADDITIONAL SAFEGUARDS

SEE CLEANING & MAINTENANCE BEFORE USE

Electrical Information

A short power-supply cord is provided to reduce the risk of becoming entangled in, or tripping over, a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it could be pulled on or tripped over unintentionally. The Infinity™ Blender should be operated on a separate electrical outlet from other operating appliances due to wattage limitations.
3. If the appliance has a polarized plug (one blade is wider than the other to reduce the risk of electric shock) it is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
4. If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

SAVE THESE INSTRUCTIONS

Read and understand the entire manual before using the Infinity™ Blender.

Note: Put the Infinity™ Blender on a surface that is horizontal, even, and stable.

NOTICE: THE FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS, ADDITIONAL SAFEGUARDS, OR THE INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR INFINITY™ BLENDER THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS INJURY.



WARNING

In case of malfunction, immediately unplug and contact Customer Service at 1-888-502-7805 (Mon - Fri 7:30am to 4:30pm CST) • support@nuwavenow.com

1. Do not operate the Infinity™ Blender close to flammable materials, heating units, or in wet environments.
2. It is normal for some smoke to escape the Infinity™ Blender when blending for the first time.
3. If a lot of smoke is escaping from the air vent during operation, unplug the Infinity™ Blender immediately and contact Customer Service.*
4. DO NOT remove the blades in any way or attempt to remove for cleaning.
5. Extreme caution must be exercised when operating the Infinity Blender™ or any other appliance.
6. Do not move the Infinity™ Blender while in operation. Only after the Infinity™ Blender has finished blending and has completely cooled should moving be attempted. Always wait for the Infinity™ Blender to cool down prior to handling it.

7. If any trouble arises during operation, service **MUST** be done by Nuwave® LLC or authorized by the manufacturer for repairs.
8. Do not disassemble the Infinity™ Blender or replace any parts without prior written consent from the manufacturer.
9. Make sure the Infinity™ Blender is always clean prior to use.
10. Turn the power off and unplug the Infinity™ Blender **BEFORE** touching movable parts or reaching in with a utensil. Turn the power OFF and unplug the Infinity™ Blender if leaving it unattended.
11. Do not operate the Infinity™ Blender if abnormal sounds or motion are detected. If a hard or foreign object comes into contact with blades in Jar, do not serve.
12. Inspect the Infinity™ Blender's blade assembly after each use, and if there are loose, damaged, or missing parts, contact Customer Service at 1-888-502-7805 or email support@nuwavenow.com.
13. Always use extreme caution when inspecting or maintaining the Infinity™ Blender or any appliance.
14. The Infinity™ Blender is not intended to be operated by means of an external timer or separate remote-control system.


***Customer Service Department: 1-888-502-7805 (Mon - Fri 7:30am to 4:30pm CST) • support@nuwavenow.com**




CAUTION

Never use the Infinity™ Blender's blade assembly with loose, damaged, or missing parts.

PARTS & ACCESSORIES

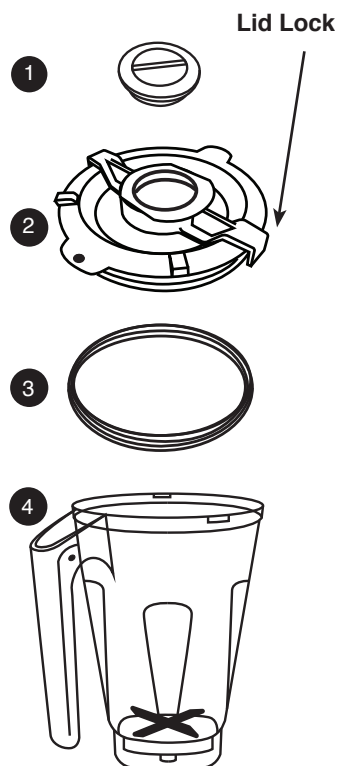


- 1 **Plunger Cap**
Part #: MXA4
- 2 **Plunger Lid**
Part #: MXA3
- 3 **Plunger Lid Seal Ring**
(comes assembled onto Lid)
Part #: MXP2
- 4 **Jar with Blade**
Part #: MXA1
- 5 **Blender Base**
Part #: MXA15
- 6 **Plunger**
Part #: MXA6
- 7 **Silicone Pad**
Part #: MXA21



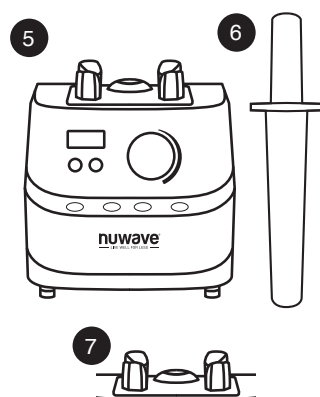


To order replaceable parts, head over to the Replaceable Parts section and then to [NuwaveNow.com](https://www.NuwaveNow.com).

ASSEMBLY GUIDE

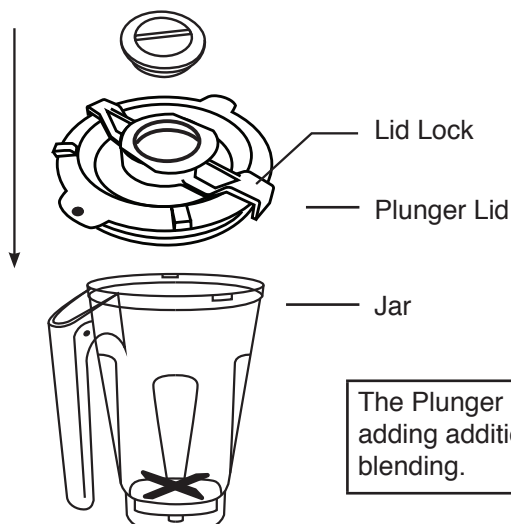

The Plunger Cap is removed when adding additional ingredients while blending.

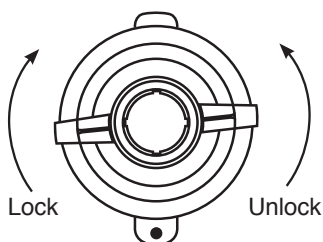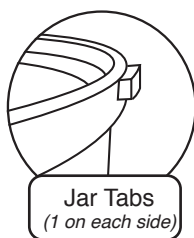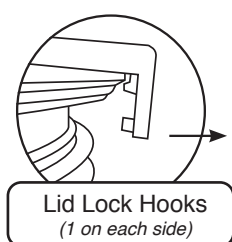

Plunger Lid Assembly

1. Line up the red dot on the Lid with the handle.
2. Push down on the Lid until it sits firmly in place.
3. The Lid Lock has two Lock Hooks that will lock the Lid in place. Make sure the two Lock Hooks line up with the Jar Tabs.
 - Turn the Lid Lock clockwise to close and lock.
 - To unlock, turn the Lid Lock counterclockwise.



CAUTION

Make sure all parts are securely attached.

ASSEMBLY GUIDE




WARNING


WARNING: As with most electrical appliances, electrical parts are live even when the Infinity™ Blender is off. Make sure the Infinity™ Blender is unplugged when assembling.

Using the Plunger

Remove the Plunger Cap from the Plunger Lid before inserting the Plunger. The Plunger Lid is designed with the hole opening so that the Plunger does not come into contact with the blades when moving ingredients around. When not using the Plunger, place the Plunger Cap in the Plunger Lid by pressing down.

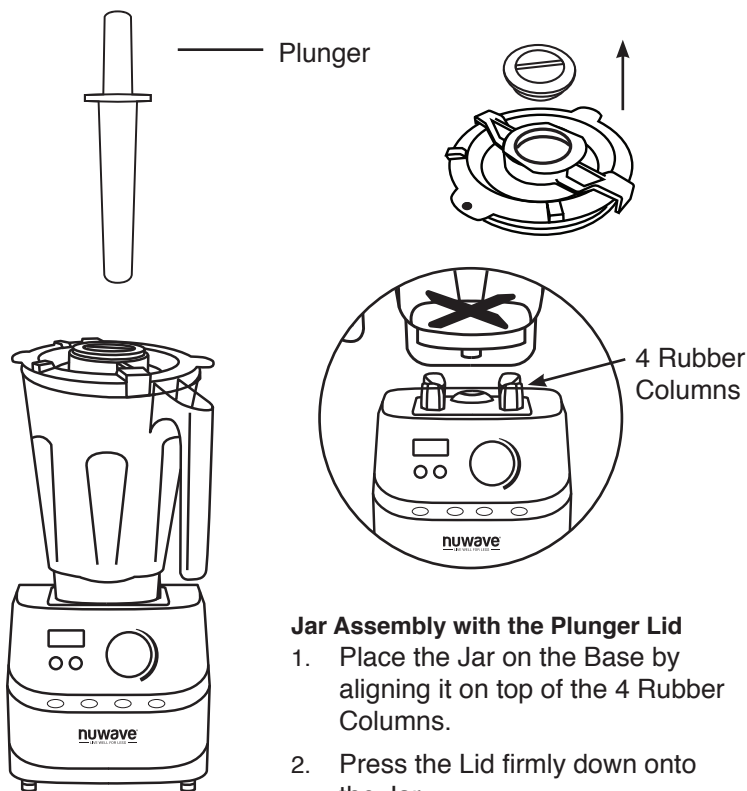

QUICK START

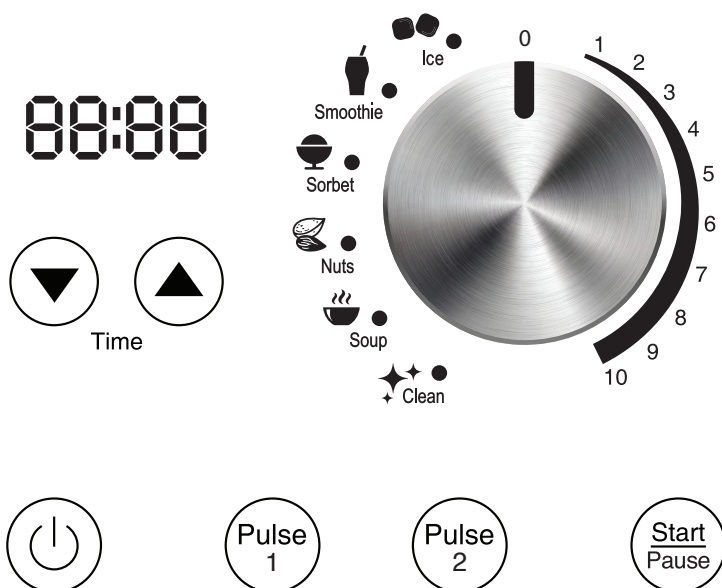

Blending times and speeds can be adjusted before and during the blending process. Press the Up and Down arrows or turn the Dial to set or adjust.

Turn the Infinity™ Blender ON and OFF.

Turn the red main Base Power Switch ON. Switch is located on the right side of Blender Base. Press **Power** once to turn your Infinity™ Blender on. Press the **Power** again and press the red main Base Power Switch OFF to turn your Infinity™ Blender off.

Start blending. The LED display will show the default time for your selected setting.

Turn the **Dial** to choose your appropriate blending function. Press **Start/Pause** to start blending. Press **Start/Pause** again to stop blending.

Note: Do not fill Jar above $\frac{3}{4}$ capacity. For best results, do not fill more than 1.5 liters (51 fl oz) of liquid. Refer to “**Instructions**” for more.

Set your time. Press the Up and Down arrows to increase or decrease the time on the display.

Times are displayed in minutes and seconds. Adjustments can be made on all settings.

QUICK START

Note: When blending for a long period of time liquids may become hot and steam may escape from the Plunger Cap.

Use the numbered settings. Default time is 3 min.

For standard blending you can select one of the numbered speed settings between 1 and 10. Adjust to the desired time, then press **Start/Pause** to begin blending.

Note: The lowest setting is #1 (5,000 RPM). The highest setting is #10 (17,000 RPM).

Icon settings are for specialized blending tasks. Each icon setting has default time and RPM built in.

Turn the **Dial** to the desired icon setting and press **Start/Pause** to begin blending.

Note: Always start with cold liquids when blending. DO NOT add hot liquids to the Infinity™ Blender.

Cleaning your Infinity™ Blender Jar:

Add water and 1-2 drops of liquid dish soap to your Jar, place it on the Base, and close the Lid. Turn the dial to Clean. 00:15 will be shown on the LED display. Adjust the time if desired, and then press **Start/Pause**. Once finished, remove the Jar, rinse thoroughly, and dry before using.

Note: For detailed instructions on cleaning, refer to “**Cleaning & Maintenance.**”

INSTRUCTIONS

Getting Started

1. Turn the red main Base Power Switch ON. Switch is located on the right side of Blender Base.
 - The **Power** button will flash.
2. Press **Power** once to turn your Infinity™ Blender on. The LED display will show the default time for the selected setting.
3. Turn the **Dial** to choose the appropriate blending function.
4. Press **Start/Pause** to start blending.
5. Press **Start/Pause** again to stop blending.
6. Press the **Power** button again and press the red main Base Power Switch OFF to turn your Infinity™ Blender off.


Time Setting

Press the **Up** and **Down** arrows on your Infinity™ Blender to increase or decrease the time on the display.

- Times are displayed in minutes and seconds.
- Blending times can be adjusted when using any setting.

Example:

Press **Power**. Turn the **Dial** to Ice. 00:15 (15 seconds) will be displayed. Press the **Up** and **Down** arrows to adjust the time. Press **Start/Pause**.

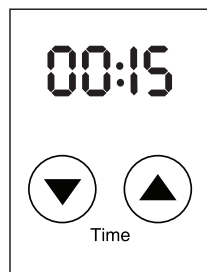

Numbered Settings

For standard blending you can select your blending speed from one of the numbered settings.

1. Turn the **Dial** to your desired setting from 1 to 10.
2. Adjust the time, if desired, then press **Start/Pause** to begin blending with your selected settings.
3. Adjust the number setting using the **Dial** at any point while blending, if needed.

Pulse Function

The Infinity™ Blender offers two Pulse functions where the power settings are fully adjustable.

1. Press **Pulse 1** for short bursts of blending at 25% Power.
 - Press and hold **Pulse 1** for continuous blending. Once the button is released, blending will end.


INSTRUCTIONS INSTRUCTIONS

- The percentage of power used can be adjusted by holding **Pulse 1** and pressing the **Up** and **Down** buttons.
 - The percentage will change in 10% increments. Hold the **Up** and **Down** buttons to move the percentage points faster.
2. Press **Pulse 2** for short bursts of blending at high power (100% Power).
 - Press and hold **Pulse 2** for continuous blending. Once the button is released, blending will end.
 - The percentage of power used can be adjusted by holding **Pulse 2** and pressing the **Up** and **Down** buttons.
 - The percentage will change in 10% increments. Hold the **Up** and **Down** buttons to move the percentage points faster.

Icon Settings

For more specialized blending tasks you can use the **Dial** to select one of the preset functions built into your Infinity™ Blender. Each preset has a default time and blade speed suited to its specific task.

1. Turn the **Dial** to your desired preset. The LED display will show the default time.
2. Adjust the time, if needed, then press **Start/Pause** to begin blending with your selected settings.
 - If desired, increase or decrease the blending time at any point in the process.

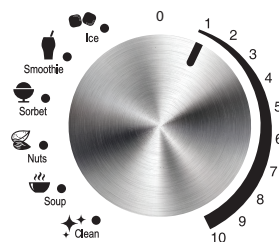

Note:

- When blending for a long period of time, steam may escape from Plunger Cap.
- Always start with cold liquids when blending. DO NOT add hot liquids to the blender.
- Do not fill the Jar above $\frac{3}{4}$ capacity. For best results, do not fill more than 1.5 liters (51 fl oz) of liquid.

INSTRUCTIONS

Icon	Default Min. : Sec.	Min. Sec.	Max. Min.	Notes
1-10*	03:00	00:05	05:00	Adjustable speed
 Ice	00:15	00:05	02:00	Ice-based drinks
 Smoothie	00:35	00:05	02:00	Frozen drinks
 Sorbet	00:30	00:05	02:00	Frozen desserts
 Nuts	01:30	00:05	02:00	Jams and spreads
 Soup	03:00	00:05	05:00	Soup and hot chocolate
 Clean**	00:15	00:05	02:00	Self-cleaning

CLEANING & MAINTENANCE

**Tips for Cleaning Your Infinity™ Blender Jar:

- Add water and 1-2 drops of liquid dish soap to your Jar, place on the Base, and close the Lid.
- Turn the **Dial** to Clean. 00:15 will be displayed. Adjust the time, if desired, then press **Start/Pause**.
- Once finished, remove the Jar, rinse thoroughly, and dry before using.

For detailed instructions on cleaning your Infinity™ Blender see Cleaning and Maintenance.



CAUTION

Moving parts may become hot with extended use.
DO NOT TOUCH.




CAUTION

The power cord needs to be unplugged from the power source before inserting or removing any parts or attachments and before cleaning.

CLEANING & MAINTENANCE

Before First Use

Wash all removable parts in warm, soapy water or in the dishwasher, top rack only. The Jar can be washed using the **Clean** function. See “Instructions” for details.

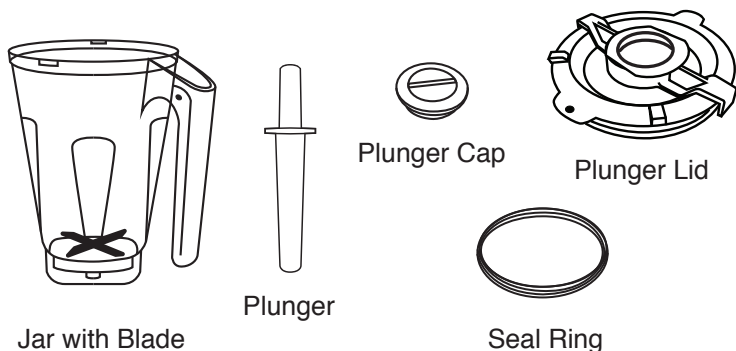


Lid Seal Ring Assembly

It may be necessary to remove the Lid Seal Ring for occasional cleaning or to replace the part if it becomes worn or damaged.

To assemble:

1. Line the inside of the Lid Seal Ring into the rim.
2. Press the Seal Ring into the rim to ensure it is properly sealed.
3. Make sure the lower part of the Seal Ring lines up with the bottom side of the rim.

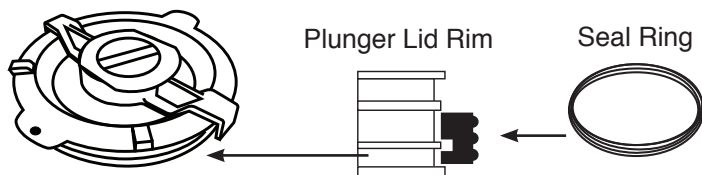

Do not immerse the Infinity™ Blender Base in water. Clean it with a damp sponge or cloth and wipe dry.



TROUBLESHOOTING GUIDE

Silicone Pad Removal

It may be necessary to remove the Silicone Pad for occasional cleaning or to replace the part if it becomes worn or damaged.

To remove:

1. Lift up one corner of the Silicone Pad.
2. The Silicone Pad is tightly secured so make sure to carefully pull out the Pad until it is removed.

Silicone Pad Cleaning

The Silicone Pad is dishwasher-safe, top rack only. It can also be hand washed with warm soapy water.

TROUBLESHOOTING GUIDE

The Infinity™ Blender was engineered with an automatic shut-off feature to prevent overheating during use. If the Infinity™ Blender shuts off to cool itself down, an odor may be detected. Unplug the Infinity™ Blender and wait for it to completely cool down. To prevent overheating, do not process at speeds not recommended.

The Infinity™ Blender is not turning on or working.

1. Plug may not be in the outlet. Plug the Infinity™ Blender into an appropriate power source.
2. The Red Power Switch on right side of the Base may not be on. Check to see if the Power Switch is on.

The Infinity™ Blender does not work when plugged in and the Power button and Power Switch are both ON.

The Lid is not on the Jar properly. Line up the red dot on top of the Lid with the Jar's handle and press the Lid down firmly to secure it to the Jar.

The Infinity™ Blender is not running at a high enough speed for the recipe.

1. The **Dial** is not on the correct setting. Turn the **Dial** to the proper setting based on the recipe.
2. The Jar is overloaded. Reduce the amount of your ingredients.

TROUBLESHOOTING GUIDE

The Infinity™ Blender is becoming clogged and not operating efficiently.

1. Certain ingredients can cause clogging. When using the Plunger Lid, remove the Plunger Cap from the Lid and insert the Plunger through hole. Press the ingredients down and around until the mixture loosens around the bottom of the Jar.
2. Higher ingredient amounts than specified are being used. Do not fill the Jar above $\frac{3}{4}$ capacity (1.5 liters, 51 fl oz).
3. Large pieces of ice are not mixing properly. Use smaller pieces of ice.

The blended mixture has lumps or the texture is not even.

An air pocket has formed (cavitation) and the mixture is too cold or has solidified in areas, and the blades are spinning in a cavity. Increase the temperature by reducing ice in the recipe.

Noises or motions unusual for the normal operation of the Infinity™ Blender are detected.

1. The Blade assembly may be loose, missing a part, or possibly damaged. Turn the Infinity™ Blender OFF and unplug it immediately. DO NOT disassemble the Blade assembly. Call Customer Service: 1-888-502-7805 or email support@nuwavenow.com.
2. Foreign objects from the ingredients may have been put into the Jar and are making unusual sounds. Prior to adding your ingredients to the Jar and blending, clean fruits/other ingredients and remove all debris or any objects.

LIFETIME LIMITED WARRANTY

THE MANUFACTURER WARRANTIES

Nuwave, LLC warrants that the Nuwave® Infinity Blender will be free from manufacturer defects for 1 YEAR from the date of purchase, under normal household use, and when operated in accordance with the Manufacturer's written instructions. This Limited Warranty covers for the Original Purchaser only. The Manufacturer will provide the necessary parts and labor to repair the product at the Nuwave LLC Service Department. After the expiration of the warranty, the cost of the parts and labor will be the responsibility of the owner.

THE WARRANTY DOES NOT COVER

The Limited Warranty is voided if repairs are made by an unauthorized dealer, or the serial number data plate is removed or defaced. Normal deterioration of finish due to use or exposure is not covered by this Warranty. This Limited Warranty does not cover failure, damages or inadequate performance due to accident, acts of God (such as lightning), fluctuations in electric power, alterations, abuse, misuse, misapplications, corrosive-type atmospheres, improper installation, failure to operate in accordance with the Manufacturer's written instructions, failure to regularly clean and maintain the unit and reusable filters in accordance with the Manufacturer's written instructions, abnormal use, commercial or rental uses, or resold units. Nuwave LLC reserves the right to void the Limited Warranty, where allowable by law, for products purchased from an unauthorized dealer.

TO OBTAIN SERVICE

The owner shall have the obligation and responsibility to pay for all services and parts not covered by the warranty; prepay the freight to and from Service Department for any part or system returned under this warranty; and carefully package the product using adequate padding material to prevent damage in transit. The original container is ideal for this purpose. Include in the package the owner's name, address, daytime telephone number, a detailed description of the problem, and RGA (Return Goods authorization number). To obtain the RGA number, email us at: help@nuwavenow.com

Provide the product, model, & serial number and proof of date of purchase (a copy of the receipt) when making claims under this warranty.

MANUFACTURER'S OBLIGATION

The Manufacturer's obligation under this Limited Warranty is limited, to the extent allowable by law, to repairing or replacing any part covered by this Limited Warranty which upon examination is found to be defective under normal use. The Limited Warranty is applicable only within the continental United States and only to the original purchaser of the manufacturer's authorized channels of distribution. THE LIMITED WARRANTY MAY NOT BE ALTERED, VARIED OR EXTENDED EXCEPT BY A WRITTEN INSTRUMENT EXECUTED BY THE MANUFACTURER. THE REMEDY OF REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS EXCLUSIVE. IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES TO ANY PERSON, WHETHER OR NOT OCCASIONED BY NEGLIGENCE OF THE MANUFACTURER, INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOSS OF USE, COSTS OF SUBSTITUTION, PROPERTY DAMAGE, OR OTHER MONEY LOSS.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation exclusions may not apply. This Limited Warranty gives specific legal rights, and there may also be other rights which vary from state to state. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED ABOVE, THE MANUFACTURER MAKES NO WARRANTIES EXPRESSED OR IMPLIED ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE TO ANY OTHER PERSON. READ YOUR OWNER'S MANUAL. IF YOU STILL HAVE ANY QUESTIONS ABOUT OPERATION OR WARRANTY OF THE PRODUCT, PLEASE CONTACT NUWAVE LLC.

LIFETIME LIMITED WARRANTY

DISPUTE RESOLUTION PROCEDURE

For disputes relating to use of the website or use or purchase of a Nuwave product or service (collectively "Disputes"), you agree to first contact Nuwave LLC at legal@nuwavenow.com. If we cannot resolve your dispute informally, any and all disputes shall be submitted to final and binding arbitration. You may start the arbitration process by submitting in writing a demand to the American Arbitration Association ("AAA") and sending a copy to Nuwave. Nuwave will pay all filing costs. A single arbitrator of the AAA will conduct the arbitration in a location convenient to you or by phone. The arbitrator's award will be binding and may be entered as a judgment in a court of competent jurisdiction. The arbitration will be conducted in accordance with the provisions of AAA's Commercial Arbitration Rules and Mediation Procedures in effect at the time of submission of your demand for arbitration. See https://www.adr.org/sites/default/files/CommercialRules_Web.pdf. Except as may be required by law as determined by an arbitrator, no party or arbitrator may disclose the existence, content, or results of any arbitration hereunder without prior written consent of both parties.

A. WAIVER OF RIGHT TO SUE. By agreeing to arbitration, you understand that, to the maximum extent permitted by law, you are agreeing to waive your right to file suit in any court, to a court hearing, a judge trial, or a jury trial.

B. CLASS ACTION WAIVER. To the maximum extent permitted by law, you expressly agree to refrain from bringing or joining any claims in any representative or class-wide capacity, including but not limited to, bringing or joining any claims in any class action or class-wide arbitration.

C. OPT OUT PROCEDURE. To request to opt out of arbitration you must contact Nuwave LLC at legal@nuwavenow.com, Nuwave LLC, 560 Bunker Ct., Vernon Hills, IL 60061, U.S.A. You will have thirty (30) days from the date of product delivery to opt out of arbitration with respect to any dispute arising out of or relating to use or purchase of any Nuwave product. If more than 30 days have passed, you are not eligible to opt out of arbitration and will have waived your right to sue or participate in a class action with respect to the dispute arising out of your purchase or use of a Nuwave product. For any dispute arising out of your use of Nuwave's website, you have thirty (30) days from the date you provided information to the website to opt out of arbitration. If more than 30 days have passed, you are not eligible to opt out of arbitration and you will have waived your right to sue and participate in a class action with respect to the dispute arising out of your use of Nuwave's website.

D. SOME MATTERS ARE NOT SUBJECT TO ARBITRATION. Notwithstanding the foregoing, the following shall not be subject to arbitration and may be adjudicated only in the state and federal courts of Illinois: (i) any dispute, controversy, or claim relating to or contesting the validity of our intellectual property rights and proprietary rights, including without limitation, patents, trademarks, service marks, copyrights, or trade secrets; (ii) an action by a party for temporary, preliminary, or permanent injunctive relief, whether prohibitive or mandatory, or other provisional relief; or (iii) interactions with governmental and regulatory authorities. You expressly agree to refrain from bringing or joining any claims in any representative or class-wide capacity, including but not limited to, bringing or joining any claims in any class action or any class-wide arbitration.



Questions or Concerns?

Customer Service: support@nuwavenow.com

1-888-502-7805

Mon-Fri 7:30am-4:30pm CST

FOR HOUSEHOLD USE ONLY

120V, 60Hz, 1800 Watts

Model:

28202

Rev.1

For patent information please go to:

www.nuwavenow.com/legal/patent

Designed in France & Developed in USA

Nuwave LLC

560 Bunker Ct.

Vernon Hills, IL 60061, U.S.A.

Made in China

©2024 Nuwave LLC • All Rights Reserved.

Item No: BM28202

Rev.1•V11-CB

08/07/24