



britax



ONE4LIFE™
CLICKTIGHT®


User Guide

Guía del Usuario

Table of Contents


Features Overview	2
Safety Information	4
Warnings	4
Important Notes	5
Register Your Child Restraint	6
Certification	6
Child Fit Guidelines	8
Vehicle Compatibility Guidelines	9
Features	12
Harness and Headrest Adjuster	12
Buckle	12
Recline Button and Recline Indicator for Harnessed Mode	14
Infant Insert Pillow	16
Headrest Cover	16
Cup Holders	16
Anti-Rebound Bar (ARB) (For models with anti-rebound bar)	17
Installation	18
REAR-Facing Installation Harness Mode	18
Installation with Vehicle Lap-Shoulder Belt (Preferred Method)	18
Installation with Lower Anchor Connectors (LATCH)	20
Installation with Vehicle Lap Belt Only	22
FORWARD-Facing Installation Harness Mode	24
Installation with Vehicle Lap-Shoulder Belt (Preferred Method)	24
Installation with Lower Anchor Connectors and Top Tether (LATCH)	27
Installation with Vehicle Lap Belt Only	29
BOOSTER Mode Installation	31
Securing Your Child	34
Harness Mode	34
Booster Mode	36
Switching between Harness and Booster Mode	37
Harness Mode to Booster Mode	37
Booster Mode to Harness Mode	40
Removing and Installing Seat Cover	42
Cleaning	49
Warranty	50

Features Overview

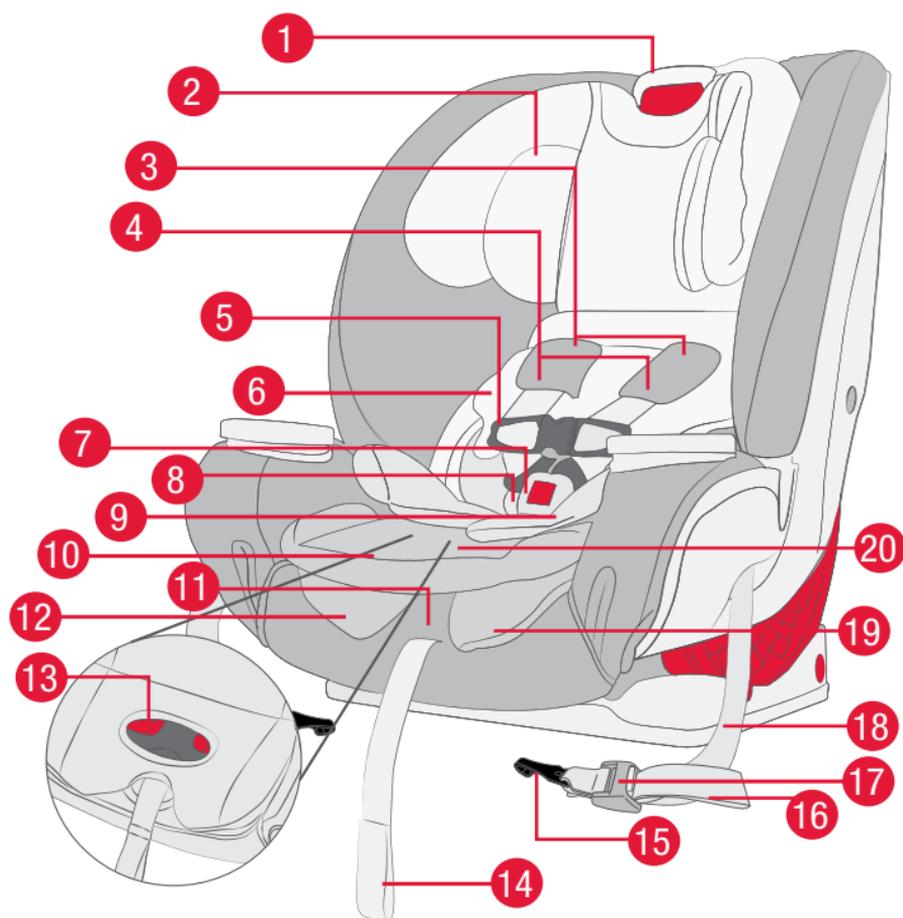

Front

- | | |
|---|---|
| 1. Harness and Headrest Adjuster | 14. Harness Adjuster Strap |
| 2. Headrest Insert | 15. Lower Connectors (LATCH component) |
| 3. Comfort Pads | 16. Lower Connector Adjuster (LATCH component) |
| 4. Harness Straps | 17. Lower Connector Adjuster Release Button (LATCH component) |
| 5. Chest Clip | 18. Lower Connector Strap (LATCH component) |
| 6. User Guide Storage | 19. Serial Number & Manufactured Date Label (under cover) |
| 7. Buckle | 20. Buckle Position Slots (under cover) |
| 8. Belly Pad | |
| 9. Infant Insert Pillow | |
| 10. Front Cover Flap | |
| 11. Harness Release Button | |
| 12. CLICKTIGHT Mechanism (under cover) | |
| 13. CLICKTIGHT Release Buttons (under front cover flap) | |

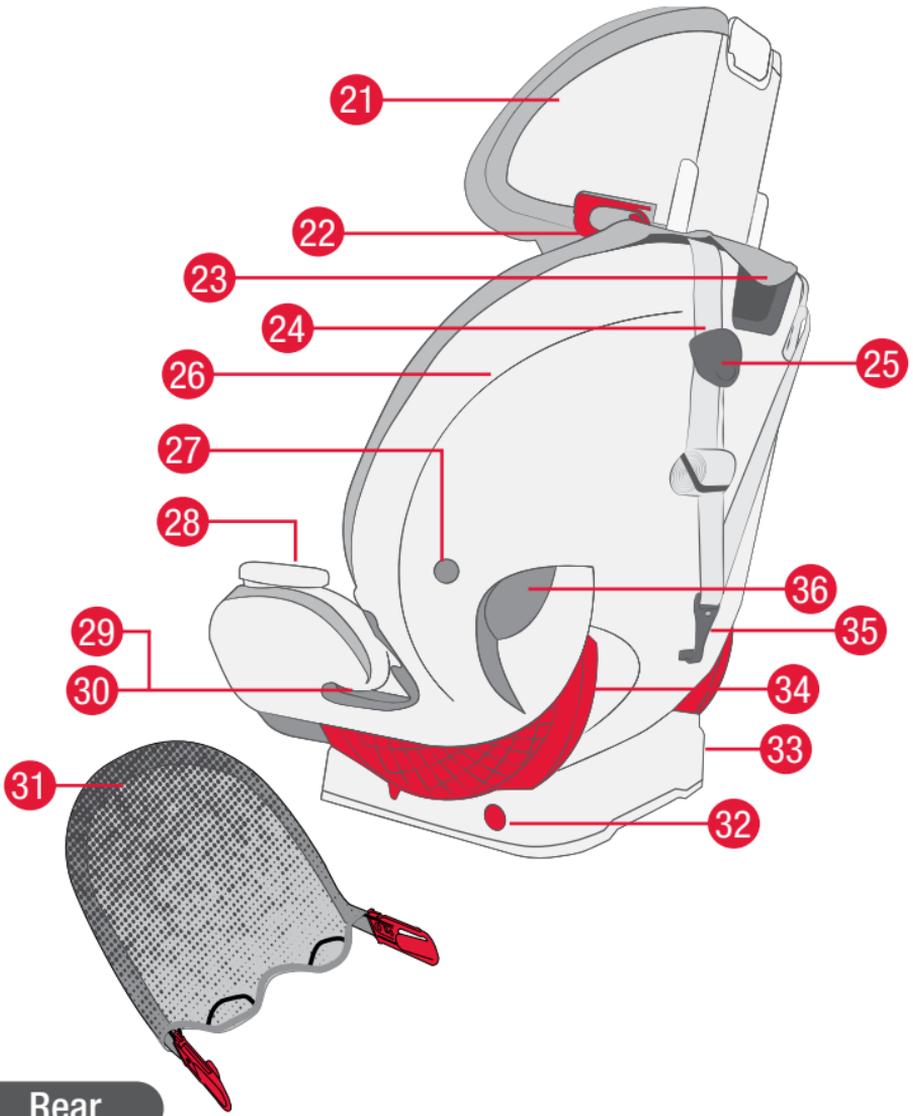

Rear

- 21. Headrest
- 22. **BOOSTER** Mode Shoulder Belt Guide
- 23. Carry Handle
- 24. Top Tether Strap
- 25. Top Tether Adjuster
- 26. Shell
- 27. Recline Indicator for Harnessed Mode
- 28. Cup Holder (2)
- 29. **REAR**-Facing Belt Path
- 30. **BOOSTER** Mode Belt Guide
- 31. Anti-Rebound Bar (ARB)
(For models with anti-rebound bar)
- 32. Recline Button
- 33. Car Seat Base
- 34. Safecell Impact Protection
- 35. Top Tether Hook
- 36. **FORWARD**-Facing Belt Path

Safety Information

Warnings

WARNING!

Failure to follow all warnings and instructions on the restraint system could result in **SERIOUS INJURY** or **DEATH**.

Carefully read all the instructions in this user guide and on the child restraint before using this product. Keep this user guide in the user guide storage pocket under the seat cover for future use.

FIT REQUIREMENTS

- Use **ONLY** in **REAR**-facing position when using it with an infant weighing less than 22 lb (10 kg).
- Use in harness mode **ONLY** with children who weigh between 5 and 65 lb (2.3 and 29.5 kg) and whose height is 49 in (124.5 cm) or less.
- Use **REAR**-facing for children who weigh between 5 and 50 lb (2.3 and 22.7 kg).
- Use **FORWARD**-facing with a harness for children who weigh between 22 and 65 lb (10 and 29.5 kg).
- Use in **BOOSTER** mode only with children who weigh between 40 and 120 lb (18.1 and 54.4 kg) and whose height is between 44 and 63 in (111.8 and 160 cm).

INSTALLATION

- Secure the top tether strap provided with this child restraint for **FORWARD**-facing harness mode.
- Car seat base **MUST** be flat on vehicle seat and **MUST** be parallel to vehicle seat.
- Snugly adjust the belts provided with this child restraint around your child.
- Use only the vehicle's lap and shoulder belt system when restraining the child in this **BOOSTER** seat. Never secure a child with a lap belt only in **BOOSTER** mode.
- Use only the "B" recline position when using child restraint in **BOOSTER** mode.
- For models with anti-rebound bar, the anti-rebound bar **MUST** be removed for **FORWARD**-facing.

GENERAL USE

- Secure this child restraint with the vehicle's child restraint anchorage system, if available, or with a vehicle seat belt.
- Register your child restraint with the manufacturer.
- The headrest cover **MUST** be unfolded for children weighing 9.1 kg (20 lb) or more.
- The provided infant position pillow **MUST** be removed for children weighing 9.1 kg (20 lb) or more.
- **For models WITH storage pouch only:** When not in use, the lower anchor adjuster and strap **MUST** be stored in the storage pouch inside of the seat.
- **For models WITHOUT storage pouch only:** When not in use, the lower anchor adjuster and strap **MUST** be rolled and secured.

- The primary protection for occupants of a vehicle in a collision is the body of the vehicle itself; a child seat will not protect a child when a vehicle is seriously impacted. However, correctly installed, a child seat will substantially improve chances for survival in most crashes. Make sure all users fully understand the correct ways to use this child seat in a vehicle.

Important Notes

- Britax strongly recommends that children should remain in a child seat with a 5-point harness until reaching the maximum weight or height allowed.
- To prevent injury due to deterioration or hidden damage, discontinue use of this child restraint if it is older than ten (10) years. See the Serial Number and Manufactured Date Label on the child restraint.
- Before each use, check this child restraint and its components to make sure they are in good condition and good working order.
- Discontinue use of this child restraint if it has been in a moderate or severe crash. It is not necessary to replace a child restraint after a **minor** crash, defined by the US National Highway Traffic Safety Administration (NHTSA) as:
 - a. The vehicle is drivable from the crash site; **and**
 - b. The vehicle door nearest to the child restraint was not damaged; **and**
 - c. No vehicle occupants were injured; **and**
 - d. There is no visible damage to the child restraint; **and**
 - e. The airbags (if present) did not deploy.
- ALWAYS make sure the child restraint system is secured to the vehicle, even when unoccupied, since in a crash, an unsecured child restraint system may injure occupants.
- Verify that the child restraint and child restraint belts or straps do not interfere with the opening and closing of the vehicle door.
- Consult vehicle user guide to ensure child restraint installation does not interfere with function of vehicle seats.
- Snugly adjust the belts provided with the child restraint around your child.
- Ensure the lower harness (waist) straps are firmly adjusted in a position so that the child's pelvic area is secure.
- Ensure the upper harness (shoulder) straps are firmly adjusted so that the child is secure.
- The use of non-Britax covers, inserts, toys, accessories or tightening devices is not approved by Britax. Their use could cause this child restraint not to perform as intended in a crash.
- Cover the child restraint when the vehicle is parked in direct sunlight. Metal parts of child restraint could become hot enough to burn a child.

- Store the child restraint in a cool and dry place when it is not being used. Avoid placing heavy objects on top of it.
- Do not attempt to disassemble any part of the child restraint or change the way the harness or vehicle's seat belts are used, except as described in this booklet.
- NEVER use the harness adjuster strap to lift or carry this child restraint. Doing so could cause damage to harness adjuster and webbing. Always carry this child restraint by its shell or carry handle.
- In a vehicle with rear designated seating positions, vehicle owners should be alerted that, according to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. To ensure your child's safety, please study Vehicle Seating Positions on page 9 and consult your vehicle owner's manual.
- Third party recommendations are subject to change, so we recommend you visit their websites for the most up to date recommendations.

Register Your Child Restraint

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, e-mail address if available and the restraint's model number and manufacturing date to Britax Child Safety, Inc. P.O. Box 91167 Allentown, PA 18109-9925, or call 1-888-427-4829 or 1-704-409-1699, or register online at us.britax.com/registration. For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY 1-800-424-9153), or go to <http://www.NHTSA.gov>.

For your convenience, record all the information about your child restraint below. Refer to the *Serial Number & Manufactured Date Label* for all information (see page 2).

Model Name and Number: _____

Serial Number: _____

Batch Number: _____

Date of Manufacture: _____

Certification



Certified for
Aircraft Travel

This Restraint is Certified for Use in Motor Vehicles and Aircraft when used in Harness Mode. This Restraint is Not Certified for Use in Aircraft when used in Booster Mode because belt-positioning Boosters require lap-shoulder belts not available in aircraft.

Motor Vehicles


This child seat system conforms to all applicable Federal motor vehicle safety standards (FMVSS 213).

Aircraft

For aircraft installation the top tether cannot be used.


For REAR-facing aircraft installation:

1. Recline this child restraint (see page 15) and place **REAR**-facing on the aircraft seat.
2. Slide the aircraft lap belt into the **REAR**-facing belt path **over** the cover with the **CLICKTIGHT** in the **closed** position.
3. Ensure the lap belt is not twisted, buckle, and remove all slack.

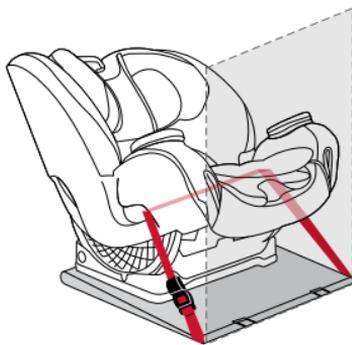

For FORWARD-facing aircraft installation:

1. Place this child restraint **FORWARD**-facing on the aircraft seat.
2. Slide the aircraft lap belt into the **FORWARD**-facing belt path **under** the cover with the **CLICKTIGHT** in the **closed** position.
3. Ensure the lap belt is not twisted, buckle, and remove all slack.

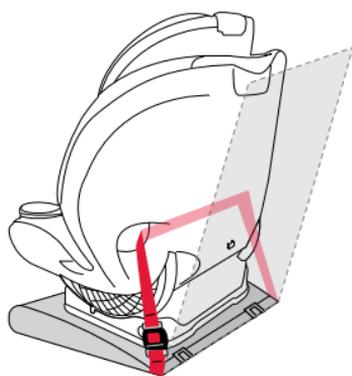

NOTES:

- For further instructions on securing your child and adjusting fit see page 34.
- Install your child restraint in a window seat to avoid blocking the aisle.
- If the aircraft lap belt is too short, ask a flight attendant for a belt extender.
- Your child may experience discomfort if the buckle is located in the seating area of the child restraint after installation.
- Inflatable aircraft lap belts are not compatible with this child restraint.
- This seat may not fit all aircraft. Contact your airline prior to travel to verify fit.

Child Fit Guidelines

Britax strongly recommends that children ride **REAR**-facing to the highest weight or height specified.

NOTE: Infants weighing less than 22 lb (10 kg) **MUST** use the child restraint **REAR**-facing.

No child restraint can guarantee protection from injury in every situation, but proper use helps reduce the risk of serious injury and death.



REAR-FACING WITH HARNESS

Use only:

- with harness straps in closest position below the child's shoulders, and
- with children weighing 5 - 50 lb (2.3 - 22.7 kg), and
- when the top of child's head is at least 1 in (2.5 cm) below the top edge of headrest.



FORWARD-FACING WITH HARNESS

Use only:

- with harness straps in closest position above the child's shoulder, and
- with children weighing 22 - 65 lb (10 - 29.5 kg), and
- who are 49 in (124.5 cm) or less in height, and
- when the top of the ears are below the top of headrest.



BOOSTER MODE

Use only:

- in recline position "B", and
- with children who weigh 40 - 120 lb (18.1 - 54.4 kg), and
- when top of child's ears are **BELOW** the top of headrest, and
- when the lap belt sits low across child's upper thighs when routed through the belt guide, and
- when the vehicle shoulder belt lays straight across the child's chest, and
- when the shoulder belt guides are positioned above the child's shoulders.


Vehicle Compatibility Guidelines

Vehicle Buckle Positions

⚠ WARNING!

The position of the vehicle belt buckle can adversely affect the stability of the child restraint.

If the vehicle buckle lies near the incorrect position (✗) when the vehicle belt is tightened, try fitting the child restraint in another seating position in the vehicle. If it is not possible to achieve the correct position (✓) for the vehicle buckle, then another seating position **MUST** be used.

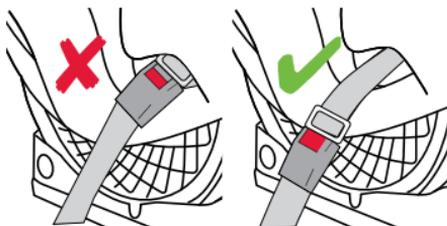

Vehicle Seating Positions


⚠ WARNING!



DO NOT place child seat **REAR**-facing in the front seat of a vehicle with a passenger air bag. **DEATH** or **SERIOUS INJURY** can occur. Owners of vehicles with front passenger side airbags should refer to their owner's manual for child restraint installation instructions. The back seat is the safest place for children 12 and under.

Some vehicles have no seating positions which are compatible with this child seat. If in doubt, contact the vehicle manufacturer for assistance.

Forward-facing vehicle seats **MUST** be used with this child seat. Side-facing or rear-facing seats **CANNOT** be used. See the diagram below.

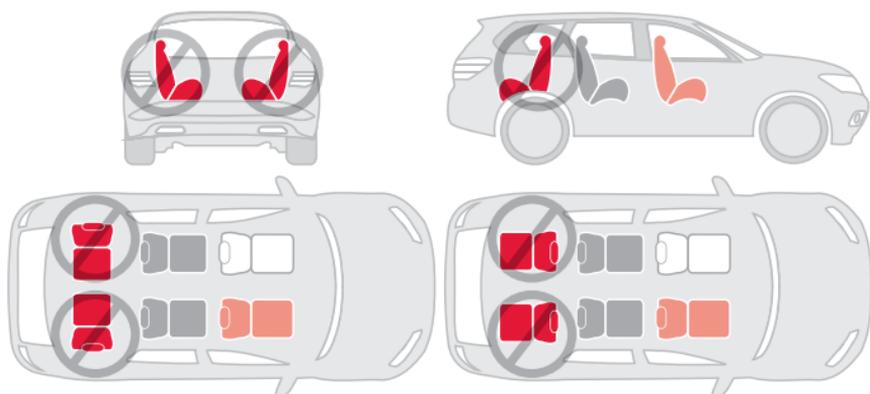

Vehicle Headrest

⚠ WARNING!

In some cases, the vehicle headrest can prevent the child restraint headrest from being raised high enough to properly adjust the harness for the fit of your child when using a **FORWARD**-facing reclined position. **DO NOT** force the child restraint headrest past the vehicle headrest.



Doing so could cause the child restraint not to perform as intended. If the location of the vehicle headrest interferes with the child restraint headrest, raise or remove the vehicle headrest. If the vehicle headrest can not be removed, move the child restraint to the upright position or try a different seating location.

Incompatible Vehicle Seat Belts

⚠ WARNING!

The following types of vehicle seat belts are **NOT** compatible with this child restraint. If any of the belt types listed below are in the chosen seating position, choose another vehicle seating position or check your vehicle owner's manual for information on installing a car seat in your vehicle.



Lap belts with a sewn-in latch plate that have a retractor that locks only in case of a sudden stop.



Lap belts forward of the vehicle seat bight.




Lap-shoulder belts with top or bottom anchor points on the vehicle door.



Motorized, automatic vehicle seat belts.

NOTE: This Britax child restraint may not be compatible with every inflatable lap-shoulder belt. See FAQs in the support section of the Britax website (us.britax.com/faqs) for additional instructions.


Using the Lower Anchors and Tethers for Children (LATCH)

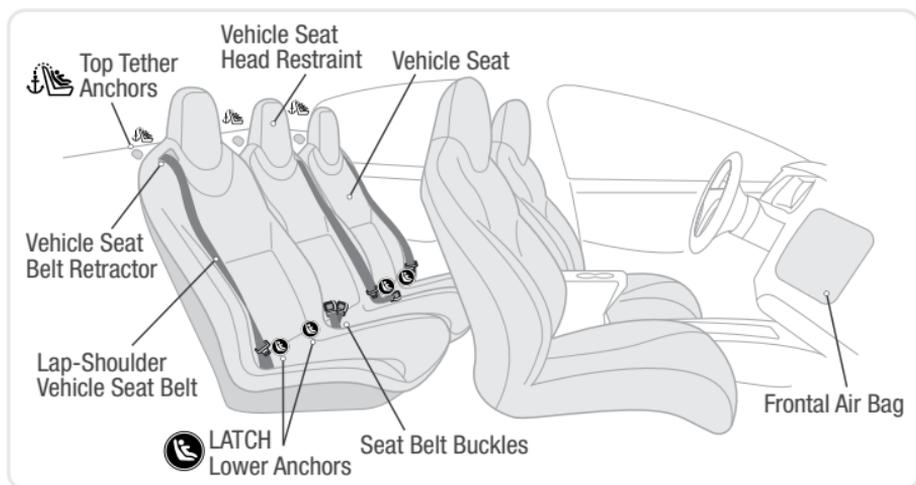

The Lower Anchors and Tethers for Children or LATCH, is a system available on this child restraint that offers an alternative to vehicle seat belt installation methods. The figure above shows typical locations for lower anchors and tether anchors in a vehicle. See pages 2 - 3 for LATCH components on this child restraint.

Check your vehicle owner's manual to learn if it is equipped with LATCH, the maximum weight rating for the lower anchors, tether anchors capacities, and information on the lower anchor locations and designated seating positions available for use with this child restraint.

Tether anchor locations vary from vehicle to vehicle. Check your vehicle owner's manual and look for the tether anchor symbol shown in the diagram to help identify where the top tether anchor point is located in your vehicle.

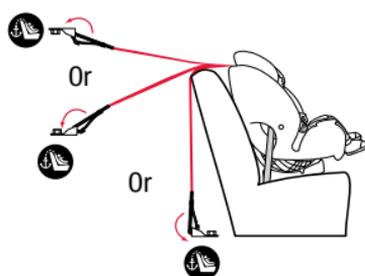

Overhang from Vehicle Seat

Harness Mode

It is important that the base of the child restraint rests completely flat on the vehicle seat with no side overhang. It is permissible to allow up to 3 in. (7.5 cm) of the base to hang over the front edge of the vehicle seat. If the vehicle seat does not allow enough of the child restraint base to make contact, adjust the recline angle to a more upright position. Not doing so could cause the child restraint to not perform as intended.

IMPORTANT: Car seat base **MUST** be flat on vehicle seat and **MUST** be parallel to vehicle seat.


Booster Mode

Overhang is not allowed in **BOOSTER** mode. In **BOOSTER** mode, the base of the child restraint must fit completely on the vehicle seat.




3 in

Acceptable
REAR-Facing
Harness Mode

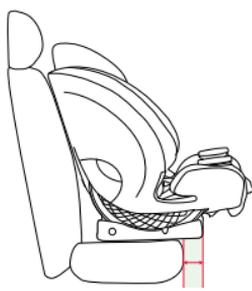

3 in

Acceptable
FORWARD-Facing
Harness Mode

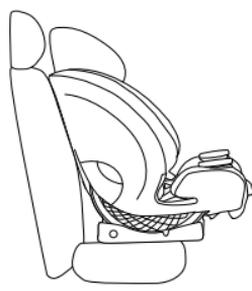

Not Acceptable
Overhang
BOOSTER Mode


Features

Harness and Headrest Adjuster

The headrest and the harness heights adjust together.

Adjusting Headrest and Harness Positions


1. Squeeze the harness and headrest adjuster at the top of the headrest and raise or lower it into desired position.
2. Ensure the headrest has locked into position.

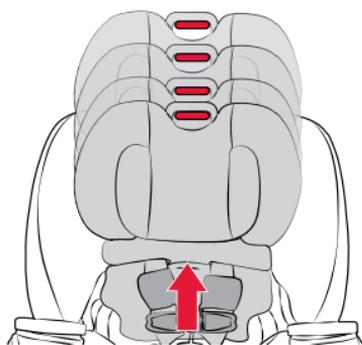

Buckle


There are three different buckle position slots. Adjust the buckle to the position closest to but not under the child. Never leave the buckle in the adjustment slot.

NOTE: If your child eats and drinks while in the child restraint, check the buckle periodically and clean out any accumulated debris (see page 49).

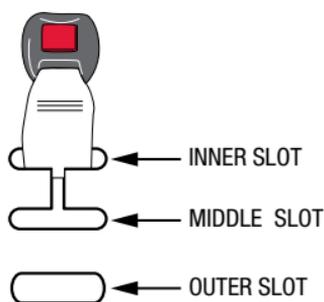


Adjusting the Buckle Position


1. Unbuckle the harness.

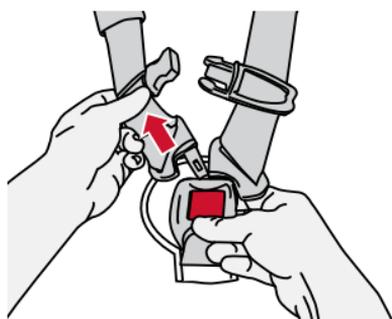


2. **Open the CLICKTIGHT.** Squeeze the CLICKTIGHT release buttons underneath the front cover flap and lift to open.

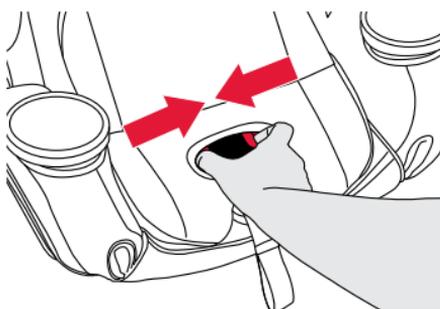


3. **Lift the front of the seat cover off the CLICKTIGHT.**

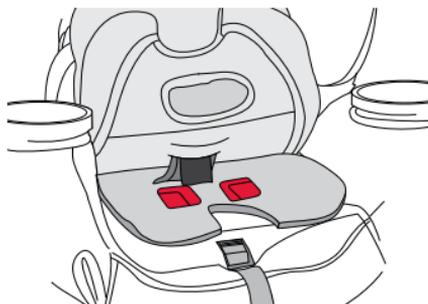


4. **Locate the metal bracket on the underside of the CLICKTIGHT.**

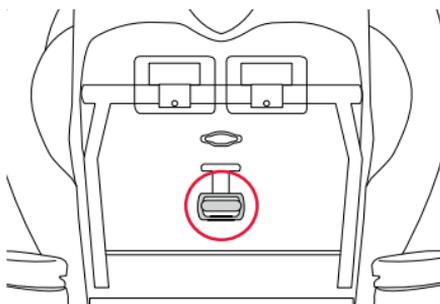

5. **Turn the metal bracket sideways and push it up through the slot in the CLICKTIGHT and the slot in the seat cover.**

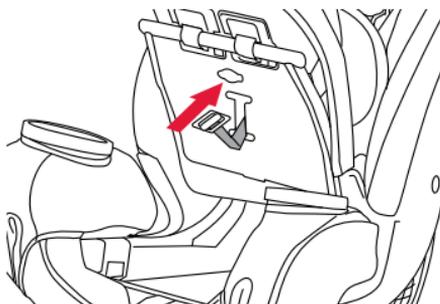

6. **Route the buckle strap through the desired seat cover and slots, reaching on the other side of the open to pull the metal bracket through completely.**

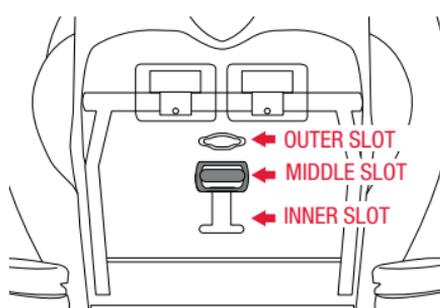


7. **Pull gently on the buckle to sit the metal bracket flat.**

8. **Replace the front of the seat cover.**



Recline Button and Recline Indicator for Harnessed Mode

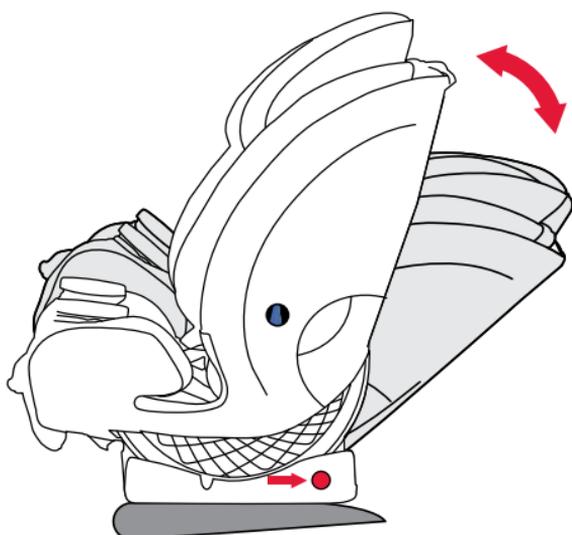



NOTES:

- The seat has nine (9) recline positions.
- Set the recline position before installing.
- The vehicle **MUST** be on level ground.
- A pool noodle or rolled towel should **ONLY** be used if the child does **NOT** have head and neck control and you are unable to achieve proper installation **REAR**-facing with the base flat and parallel to the vehicle seat with the recline indicator arrow tip in the solid blue section. When using a pool noodle or towel to place the recline indicator arrow tip in the solid blue section, you must ensure the car seat is **REAR**-facing in recline position 1.

IMPORTANT: Car seat base **MUST** be flat on vehicle seat and **MUST** be parallel to vehicle seat.

Reclining the Seat in Harness Mode

1. **Push** the recline button on either side of the base and rotate the child restraint until it is in the desired recline position.
2. **Check** the recline indicator on the side of child restraint for correct angle. Look straight on at the recline indicator window and check that the tip of the recline indicator arrow is in the correct position (see next page).
3. **Release** the recline button and verify the restraint has locked into position.

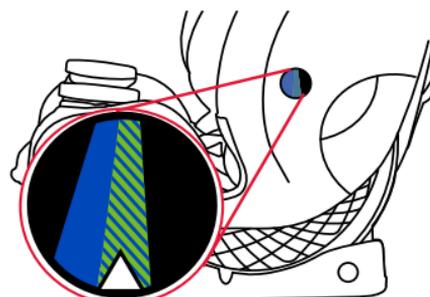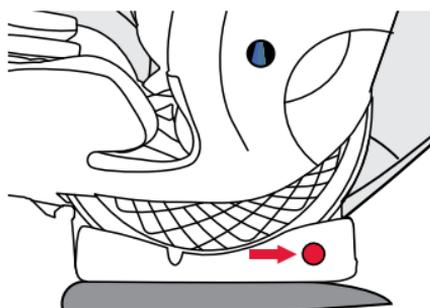

REAR-FACING HARNESS INSTALLATION

✓ YES




✗ NO



For infants with NO head and neck control:

Recline indicator arrow tip must be in solid blue section.

Recline indicator arrow tip can NOT be in the stripe blue-green or black sections.

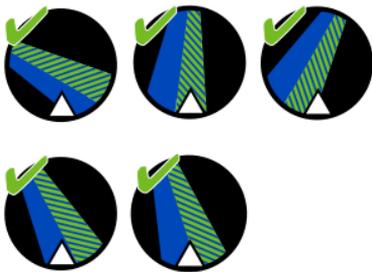


For children with head and neck control:

Recline indicator arrow tip must be either in solid blue section or striped blue-green section.

Recline indicator arrow tip can NOT be in the black sections.


FORWARD-FACING HARNESS INSTALLATION

✓ YES

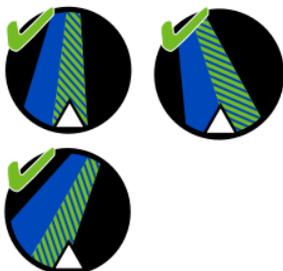

Recline indicator arrow tip must be in striped blue-green section.

✗ NO

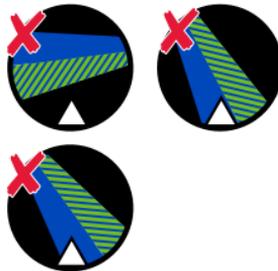

Recline indicator arrow tip can NOT be in the solid blue or black sections.


NOTE: Do Not use “B” position when using the seat in harness mode.

BOOSTER MODE INSTALLATION

Reclining the Seat in **BOOSTER** Mode


Push the recline button on either side of the base and rotate the child restraint to position “B”. Recline indicator does not need to be used in **BOOSTER** mode.

IMPORTANT: Recline **MUST** be in position “B” when seat is used in **BOOSTER** mode.

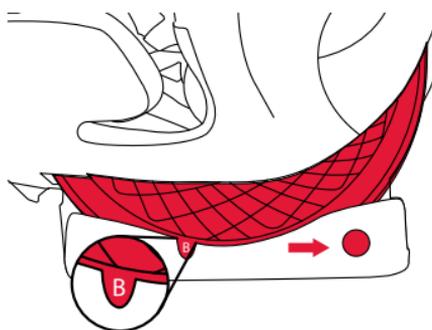

Infant Insert Pillow

The infant insert can be used with infants weighing 20 lb (9.1 kg) or less. Do not use with infants more than 20 lb (9.1 kg).

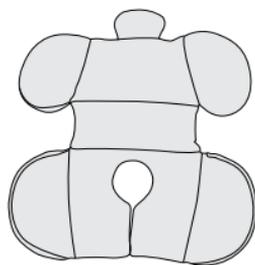

Headrest Cover


The headrest cover must be unfolded for infants weighing 20 lb (9.1 kg) or more.



Cup Holders

The cup holders are removable and dishwasher safe.

- To **remove**, grasp the top lip, twist 90 degrees and pull up and away from the seat.
- To **insert**, line up the tabs on the cup holder to the slots on the seat, and insert inside. Twist 90 degrees.

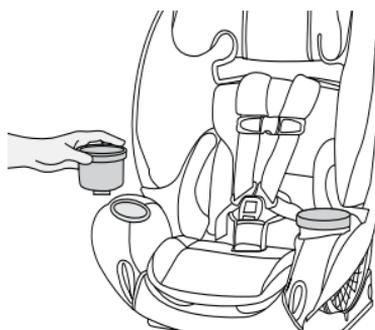

Anti-Rebound Bar (ARB) (For models with anti-rebound bar)


Installing the Anti-Rebound Bar

⚠ WARNING!


The anti-rebound bar is not intended for use as a carry handle. Do not use the anti-rebound bar to carry this child seat.

IMPORTANT: The anti-rebound bar **MUST** be removed for **FORWARD**-facing installation.


1. **Open the CLICKTIGHT.** Squeeze the CLICKTIGHT release buttons underneath the front cover flap and lift to open.

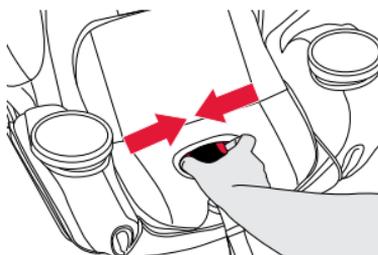

2. **Insert** the anti-rebound bar into the two openings at the front of the seat.


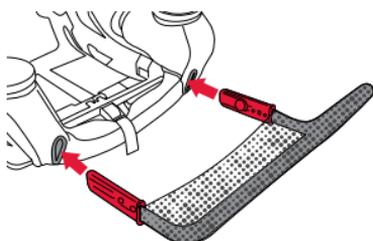


3. **Attach** elastic bands from the cover to the hooks on the shell.
4. **Pull** the anti-rebound bar away from child restraint on both sides to confirm connections.

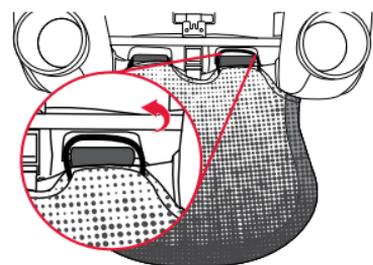

Removing the Anti-Rebound Bar

1. **Open the CLICKTIGHT.**
2. **Unhook** elastic bands from the front of the seat.
3. **Push** the inner red button. **Pull** the anti-rebound bar away on one side. Repeat on the other side.

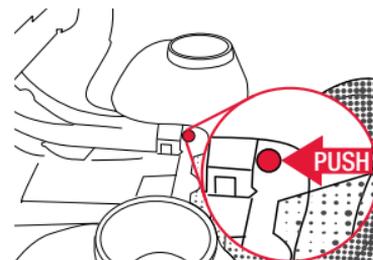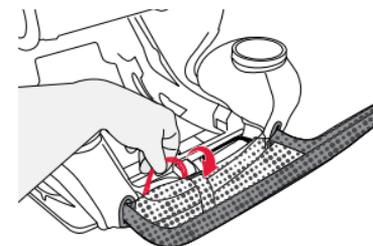

Installation

REAR-Facing Installation Harness Mode

Britax strongly recommends that children should ride **REAR**-facing until they exceed the weight or height limits specified.


Use **REAR**-facing only:

- with harness straps in closest position below the child's shoulders, **and**
- with children weighing 5 - 50 lb (2.3 - 22.7 kg), **and**
- when the top of child's head is at least 1 in (2.5 cm) below the top edge of headrest.




For models with anti-rebound bar:

Follow the instructions on page 17 to attach the anti-rebound bar to the child restraint before installing.

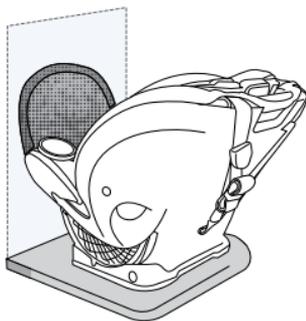


Installation with Vehicle Lap-Shoulder Belt (Preferred Method)


1. **Place** child restraint **REAR**-facing on the vehicle seat so that the car seat base is flat on the vehicle seat and is parallel to vehicle seat.
2. **Recline** child restraint to the appropriate position. Refer to page 15 to determine appropriate recline position.
3. **Ensure** that no more than 3 in (7.5 cm) of base hangs over front edge of vehicle seat.

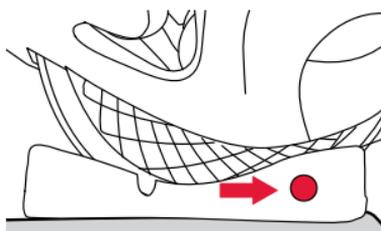


4. **Open the CLICKTIGHT.**
Squeeze the CLICKTIGHT release buttons underneath the front cover flap and lift to open.

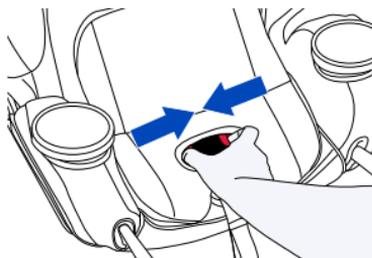


5. **Route the vehicle lap-shoulder belt through the REAR-facing belt path** marked by blue labels.

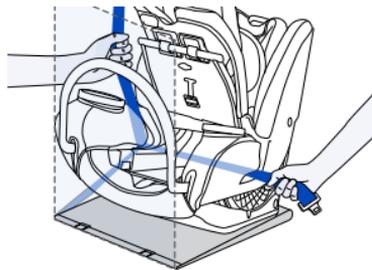

6. **Ensure the belt is not twisted, then buckle the vehicle seat belt.**
7. **Remove slack from the lap part (A), then the shoulder part (B) of the vehicle seat belt.**


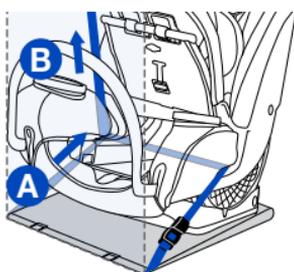


8. **Close the CLICKTIGHT** over the vehicle seat belt.

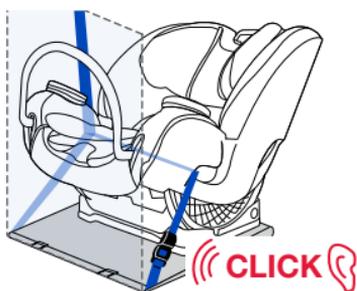

9. **Ensure both red CLICKTIGHT release buttons are visible.**

NOTE: If it is difficult to close you may have locked your vehicle seat belt or removed too much slack.

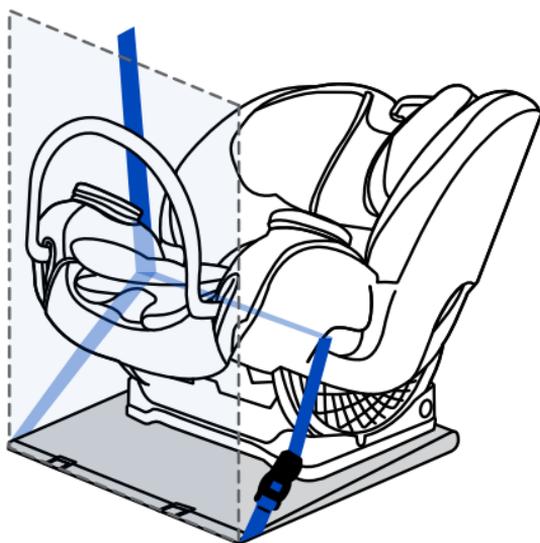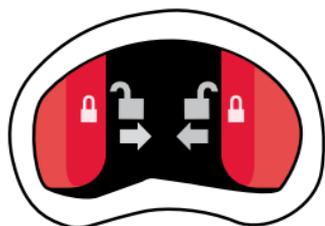

✓ CHECKLIST


- ✓ Both red CLICKTIGHT release buttons are visible after installation.
- ✓ All connections are secure and vehicle belt is not twisted.
- ✓ Car seat base **MUST** be flat on vehicle seat and **MUST** be parallel to vehicle seat.
- ✓ Recline indicator is still within the correct section for **REAR**-facing, after child is secured.
- ✓ Child restraint cannot be moved front to back or side to side more than 1 in. (2.5 cm) at the belt path.
- ✓ Both vehicle lap and shoulder belts are routed through the CLICKTIGHT.
- ✓ Excess top tether webbing is contained within your vehicle and secured.

NOTE: If the child restraint does not meet the above criteria, repeat the installation steps or use a different seating location in your vehicle.

Installation with Lower Anchor Connectors (LATCH)



Do not install by this method for a child weighing more than 30 pounds (13.5 kilograms).

- 1. Open the CLICKTIGHT.** Squeeze the CLICKTIGHT release buttons underneath the front cover flap and lift to open.
- 2. For models WITH storage pouch only: Open the storage pouch.**

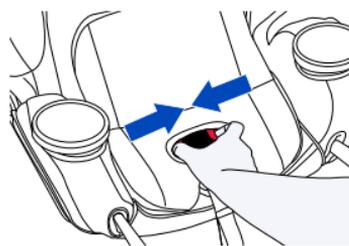

Remove the lower connectors by pressing the spring tab, pushing the connector back while rotating down and forward off the anchor point.


- 3. Extend lower connector strap to its longest length** by pressing grey button on the lower connector adjuster.
- 4. Place the child restraint REAR**-facing on vehicle seat so that the car seat base is flat on the vehicle seat and is parallel to vehicle seat.
- 5. Recline child restraint to the appropriate position.** Refer to page 15 to determine appropriate recline position.

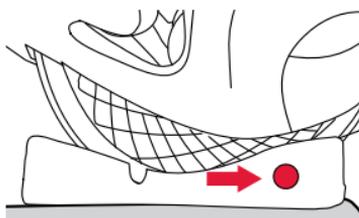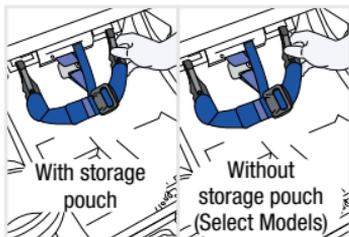


6. Ensure that no more than 3 in (7.5 cm) of the base hangs over the front edge of the vehicle seat.




7. Slide the lower connector strap into the REAR-facing belt path marked by blue labels.

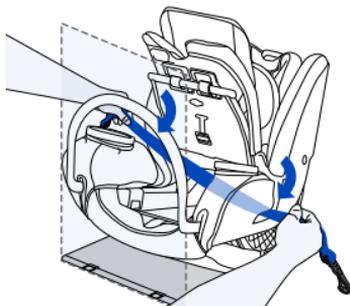

8. Firmly press the lower connectors onto their adjacent lower anchors.

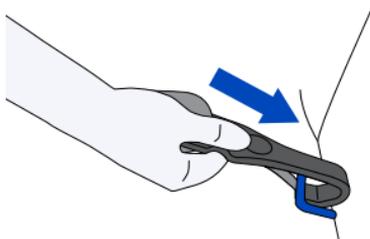



9. Ensure the connector strap is not twisted. Pull the end of the lower connector strap to remove slack.

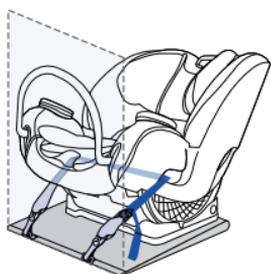

10. Close the CLICKTIGHT over the lower connector strap.

11. Ensure both red CLICKTIGHT release buttons are visible.

NOTE: If it is difficult to close, you may have removed too much slack.

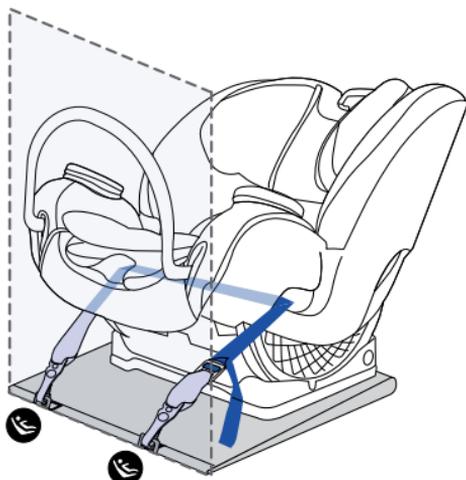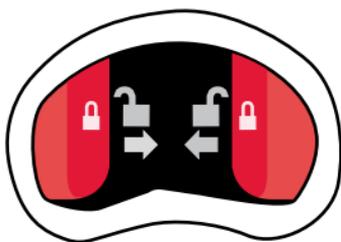

NOTE: Do not install by this method for a child weighing more than 30 pounds (13.5 kilograms).

✓ CHECKLIST

- ✓ Both red CLICKTIGHT release buttons are visible after installation.
- ✓ All connections are secure and strap is not twisted.
- ✓ Car seat base **MUST** be flat on vehicle seat and **MUST** be parallel to vehicle seat.
- ✓ Recline indicator is still within the correct section for **REAR**-facing, after child is secured.
- ✓ Child restraint cannot be moved front to back or side to side more than 1 in. (2.5 cm) at the belt path.
- ✓ Excess top tether webbing is contained within your vehicle and secured.


NOTE: If the child restraint does not meet the above criteria, repeat the installation steps or use a different seating location in your vehicle.

Installation with Vehicle Lap Belt Only


1. Place child restraint **REAR**-facing on the vehicle seat so that the car seat base is flat on the vehicle seat and is parallel to vehicle seat.




2. Recline child restraint to the appropriate position. Refer to page 15 to determine appropriate recline position.

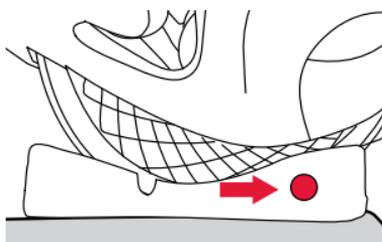


3. Ensure that no more than 3 in (7.5 cm) of the base hangs over front edge of the vehicle seat.

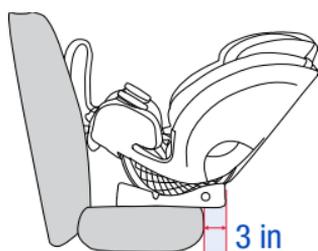


4. Open the CLICKTIGHT. Squeeze the CLICKTIGHT release buttons underneath the front cover flap and lift to open.

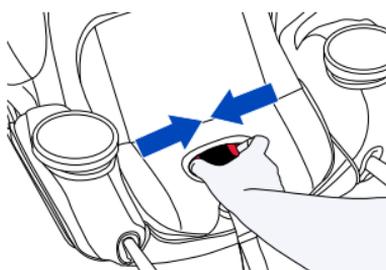

5. Route the lap vehicle seat belt through the **REAR**-facing belt path marked by blue labels.

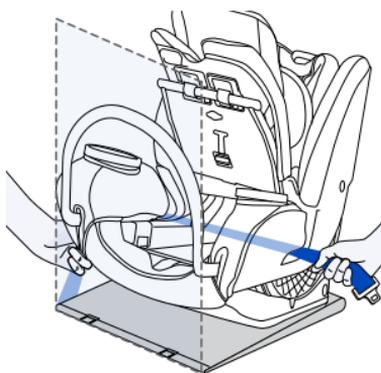


6. Ensure the belt is not twisted then buckle the vehicle seat belt.
7. Lock and remove slack from vehicle seat belt.

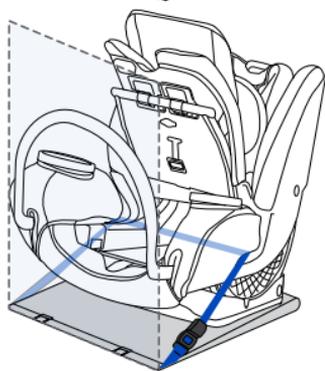



NOTE: Make sure that the vehicle seat belt is locked as directed by your vehicle owner's manual.

8. Close the **CLICKTIGHT** over the vehicle seat belt.

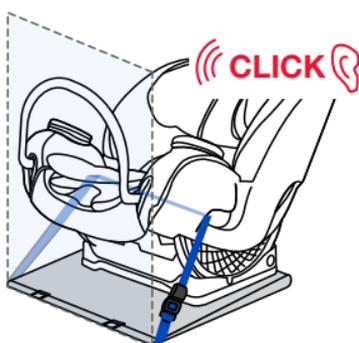

9. Ensure both red **CLICKTIGHT** release buttons are visible.

NOTE: If it is difficult to close, you may have removed too much slack.

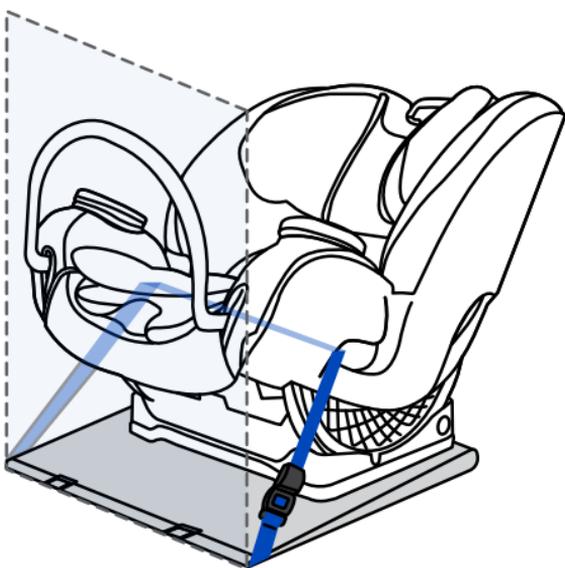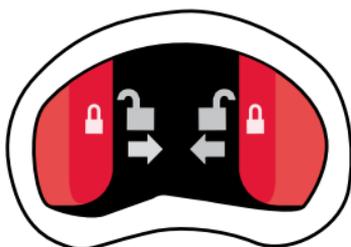

✓ CHECKLIST

- ✓ Both red CLICKTIGHT release buttons are visible after installation.
- ✓ All connections are secure and vehicle belt is not twisted.
- ✓ Vehicle belt is locked as directed by your vehicle owner's manual.
- ✓ Car seat base **MUST** be flat on vehicle seat and **MUST** be parallel to vehicle seat.
- ✓ Recline indicator is still within the correct section for **REAR**-facing after child is secured.
- ✓ Child restraint cannot be moved front to back or side to side more than 1 in. (2.5 cm) at the belt path.
- ✓ Excess top tether webbing is contained within your vehicle and secured.

NOTE: If the child restraint does not meet the above criteria, repeat the installation steps or use a different seating location in your vehicle.

FORWARD-Facing Installation Harness Mode

Britax strongly recommends:

- children should ride **REAR**-facing until they exceed the weight or height limits specified.
- the top tether be used at **ALL** times when installing the child restraint **FORWARD**-facing. Using the top tether will improve the stability of your child restraint and reduce the risk of injury.

Use **FORWARD**-facing only:


- with harness straps in closest position above the child's shoulder, **and**
- with children weighing 22 - 65 lb (10 - 29.5 kg), **and**
- who are 49 in (124.5 cm) or less in height, **and**
- when the top of the ears are below the top of headrest.




IMPORTANT: Anti-rebound bar **MUST** be removed **FORWARD**-facing.

Installation with Vehicle Lap-Shoulder Belt (Preferred Method)


1. Extend the top tether strap by lifting on the top tether adjuster.

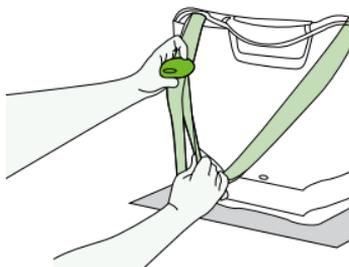


2. Unhook the top tether hook from the back of the child restraint and place it up and over the seatback.

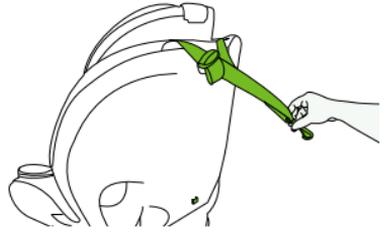


3. Recline child restraint to the appropriate position. Refer to page 15 to determine appropriate recline position.

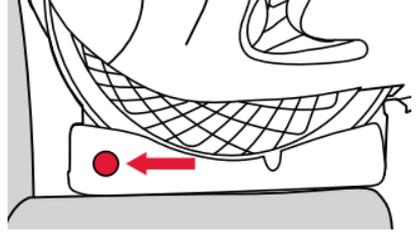


4. Place the child restraint FORWARD-facing on the vehicle seat so that the car seat base is flat on the vehicle seat and is parallel to vehicle seat.

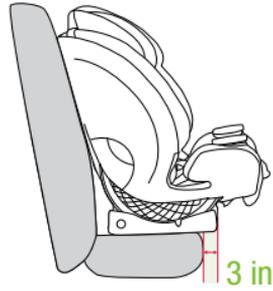


5. Ensure that no more than 3 in. (7.5 cm) of the base hangs over the front edge of the vehicle seat.

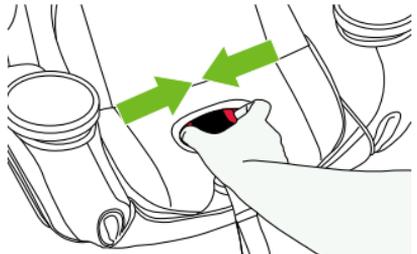


6. Open the CLICKTIGHT. Squeeze the CLICKTIGHT release buttons underneath the front cover flap and lift to open.

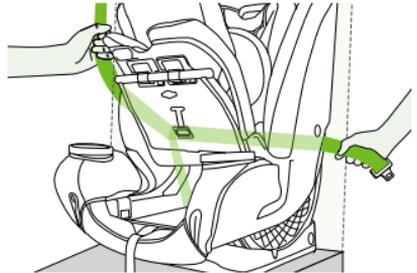

7. Route the vehicle lap-shoulder belt through the FORWARD-facing belt path marked by green labels.

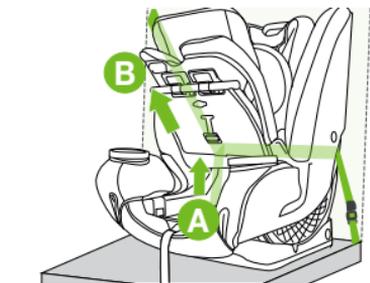


8. Ensure the belt is not twisted, then buckle the vehicle seat belt.
9. Remove slack from the lap part (A), then the shoulder part (B) of the vehicle seat belt.

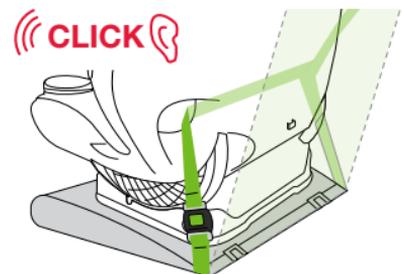

11. Ensure both CLICKTIGHT release buttons are visible.


NOTE: If it is difficult to close, you may have locked your vehicle seat belt or removed too much slack.

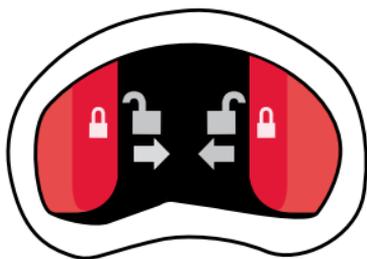

12. Connect the top tether hook to the vehicle's top tether anchor (check the vehicle owner's manual for location).



13. Pull the loose tether strap end to remove slack and secure excess webbing with the elastic band attached.

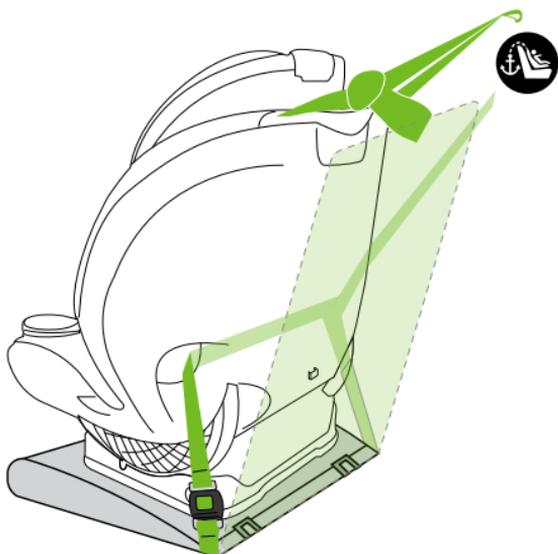

✓ CHECKLIST


- ✓ Both red CLICKTIGHT release buttons are visible after installation.
- ✓ All connections are secure and vehicle belt is not twisted.
- ✓ Car seat base **MUST** be flat on vehicle seat and **MUST** be parallel to vehicle seat.
- ✓ Recline indicator is still within the correct section for **FORWARD**-facing, after child is secured.
- ✓ Child restraint cannot be moved front to back or side to side more than 1 in. (2.5 cm) at the belt path.
- ✓ Both vehicle lap and shoulder belts are routed through the CLICKTIGHT.
- ✓ Excess top tether webbing is contained within your vehicle and secured.
- ✓ The anti-rebound bar **MUST** be removed.

NOTE: If the child restraint does not meet the above criteria, repeat the installation steps or use a different seating location in your vehicle.


Installation with Lower Anchor Connectors and Top Tether (LATCH)

Do not install by this method for a child weighing more than 35 pounds (15.9 kilograms).


1. **Extend** the top tether strap by lifting on the top tether adjuster.

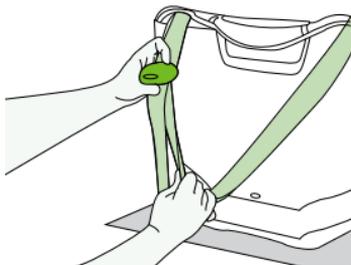

2. **Unhook** the top tether hook from the back of the child restraint and place it up and over the seatback.

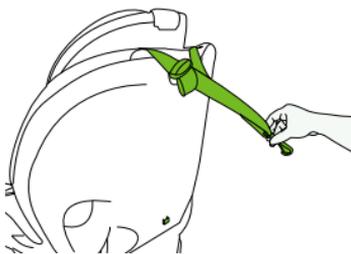


3. **Open the CLICKTIGHT.** Squeeze the CLICKTIGHT release buttons underneath the front cover flap and lift to open.

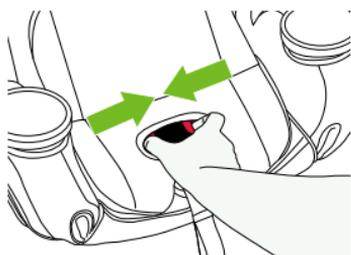


4. **For models WITH storage pouch only:** Open the storage pouch.


Remove the lower connectors by pressing the spring tab, pushing the connector back while rotating down and forward off the anchor point.

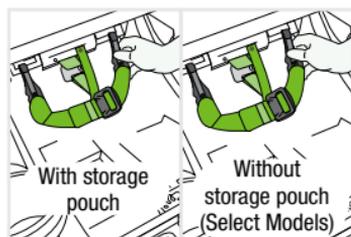


5. **Extend** lower connector strap to its longest length by pressing grey button on adjuster.
6. **Recline** child restraint to the appropriate position. Refer to page 15 to determine appropriate recline position.
7. **Place** child restraint **FORWARD**-facing on the vehicle seat so that the car seat base is flat on the vehicle seat and is parallel to vehicle seat.

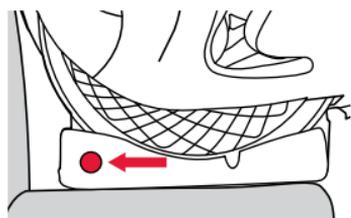


8. **Ensure** that no more than 3 in. (7.5 cm) of the base hangs over the front edge of the vehicle seat.

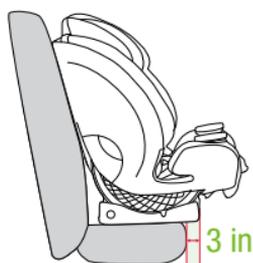

9. Route the lower connector strap through the **FORWARD**-facing belt path marked by green labels.

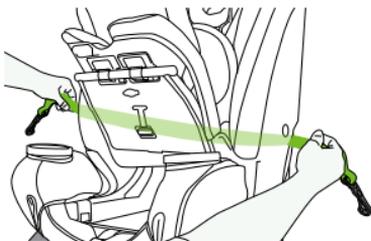


10. Firmly press lower connectors **onto** their adjacent lower anchors.

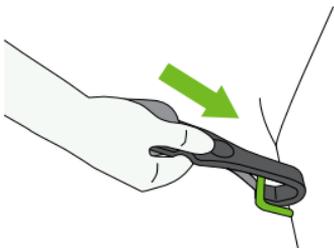


11. Ensure the connector strap is not twisted. Pull the end of the lower connector strap to remove slack.

12. Close the **CLICKTIGHT** over the lower connector strap.

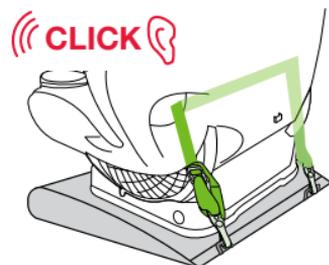



13. Ensure both **CLICKTIGHT** release buttons are visible.

NOTE: If it is difficult to close, you may have removed too much slack.

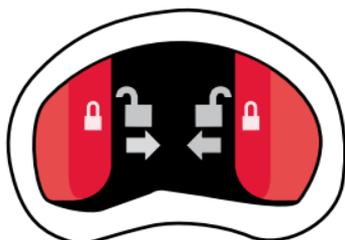

14. Connect the top tether hook to the vehicle's top tether anchor (check the vehicle owner's manual for location).

15. Pull the top tether strap to remove slack and secure excess webbing with the elastic band attached.

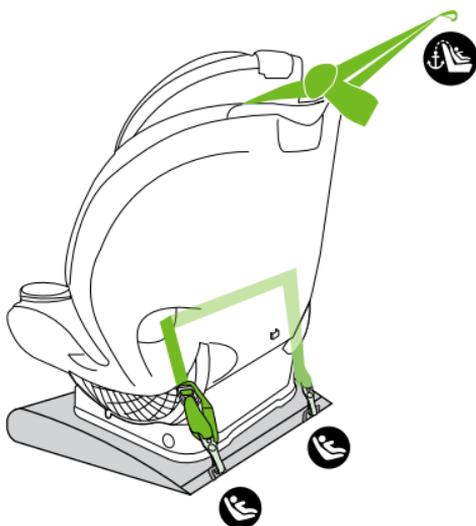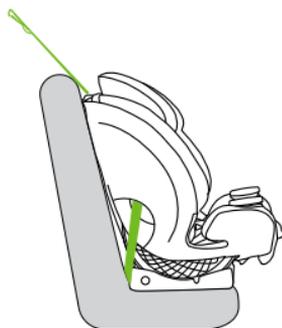

NOTE: Do not install by this method for a child weighing more than 35 pounds (15.9 kilograms).


✓ CHECKLIST

- ✓ Both red CLICKTIGHT release buttons are visible after installation.
- ✓ All connections are secure and strap is not twisted.
- ✓ Car seat base **MUST** be flat on vehicle seat and **MUST** be parallel to vehicle seat.
- ✓ Recline indicator is still within the correct section for **FORWARD**-facing, after securing the child.
- ✓ Child restraint cannot be moved front to back or side to side more than 1 in. (2.5 cm) at the belt path.
- ✓ Excess top tether webbing is contained within your vehicle and secured.
- ✓ The anti-rebound bar **MUST** be removed.


NOTE: If the child restraint does not meet the above criteria, repeat the installation steps or use a different seating location in your vehicle.

Installation with Vehicle Lap Belt Only


1. **Extend** the top tether strap by lifting on the top tether adjuster.

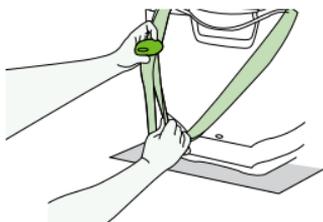


2. **Unhook** the top tether hook from the back of the child restraint and place it up and over the seatback.

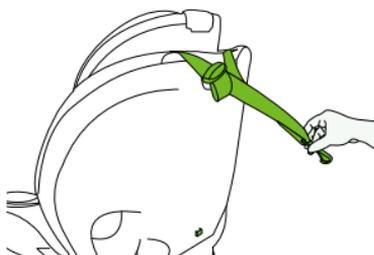

3. **Recline** child restraint to the appropriate position. Refer to page 15 to determine appropriate recline position.

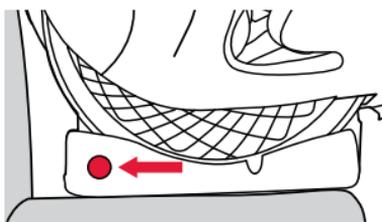


4. **Place** child restraint **FORWARD**-facing on the vehicle seat so that the car seat base is flat on the vehicle seat and is parallel to vehicle seat.

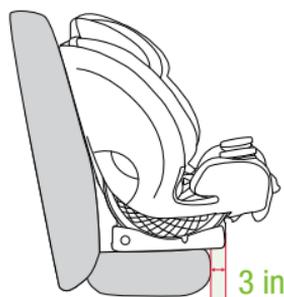


5. **Ensure** that no more than 3 in. (7.5 cm) of the base hangs over the front edge of the vehicle seat.


6. **Open** the CLICKTIGHT. **Squeeze** the CLICKTIGHT release buttons underneath the front cover flap and lift to open.

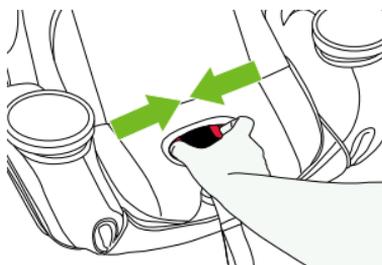

7. Route the lap vehicle belt through the **FORWARD-** facing belt path marked by green labels.

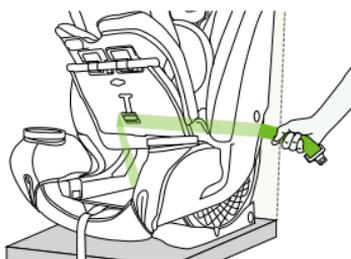

8. Ensure the belt is not twisted and fasten the seat belt.

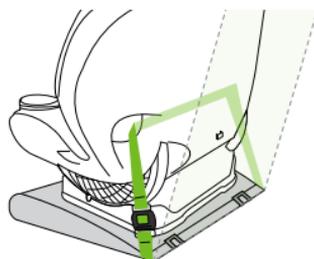


9. Push down into the middle of the child restraint with moderate force (approximately 20.5 kg/45 lb), compressing the vehicle seat while tightening the vehicle belt.

NOTE: Make sure the vehicle belt is locked as directed by your vehicle owner's manual.


CLICK

10. Close the **CLICKTIGHT** over the vehicle seat belt.

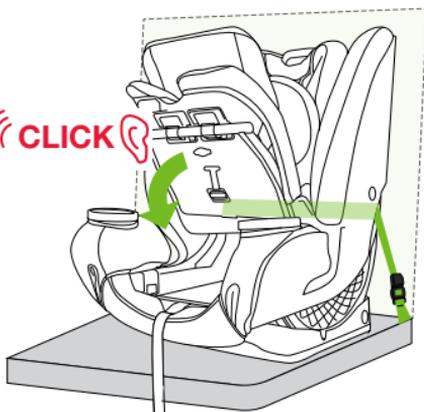


11. Ensure both **CLICKTIGHT** release buttons are visible.


NOTE: If it is difficult to close, you may have removed too much slack.

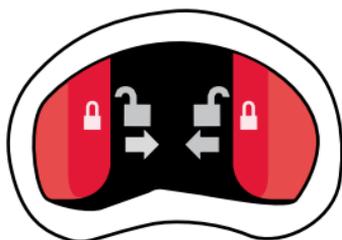

12. Connect the top tether hook to the vehicle's top tether anchor (check the vehicle owner's manual for location).

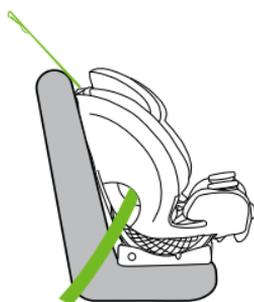

13. Pull the top tether strap to remove slack and secure excess webbing with the elastic band attached.

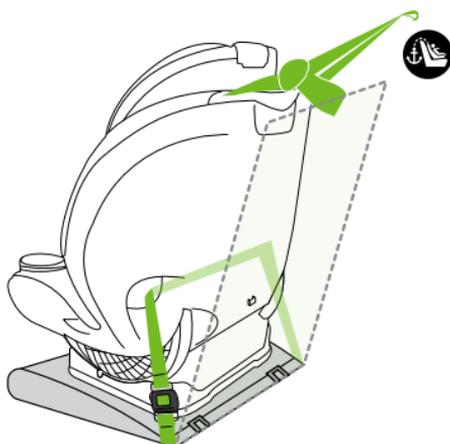

✓ CHECKLIST

- ✓ Both red CLICKTIGHT release buttons are visible after installation.
- ✓ All connections are secure and vehicle belt is not twisted.
- ✓ Vehicle belt is locked as directed by your vehicle owner's manual.
- ✓ Car seat base **MUST** be flat on vehicle seat and **MUST** be parallel to vehicle seat.
- ✓ Recline indicator is still within the correct section for **FORWARD**-facing, after child is secured.
- ✓ Child restraint cannot be moved front to back or side to side more than 1 in. (2.5 cm) at the belt path.
- ✓ Excess top tether webbing is contained within your vehicle and secured.
- ✓ The anti-rebound bar **MUST** be removed.

NOTE: If the child restraint does not meet the above criteria, repeat the installation steps or use a different seating location in your vehicle.

BOOSTER Mode Installation

IMPORTANT: Britax strongly recommends that children should remain in a child seat with a 5-point harness until reaching the maximum weight or height allowed.

Use in **BOOSTER** mode only:

- in recline position "B", **and**
- with children who weigh 40 - 120 lb (18.1 - 54.4 kg), **and**
- when top of child's ears are **BELOW** the top of headrest, **and**
- when the lap belt sits low across child's upper thighs when routed through the belt guide, **and**
- when the vehicle shoulder belt lays straight across the child's chest, **and**
- when the shoulder belt guides are positioned above the child's shoulders.




Using Lower Anchors and Top Tether (LATCH) in BOOSTER Mode

Use of lower anchors and top tether is not required for booster seat installation. However, lower anchors and top tether can be used to secure child restraint in **BOOSTER** mode. **ALWAYS** make sure the child restraint system is secured to the vehicle, even when unoccupied, since in a crash, an unsecured child restraint system may injure occupants.


To use this seat in **BOOSTER** mode without lower anchors, see instructions for *Securing Your Child in BOOSTER Mode* on page 36.

1. Refer to page 37 to convert from harness to **BOOSTER** mode.

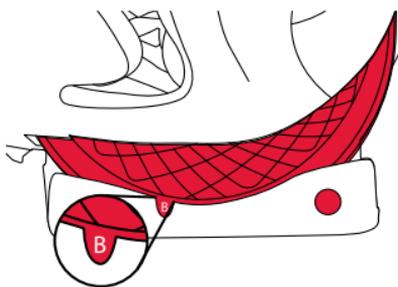


2. Adjust the child restraint to position “B” by pushing the red recline button on either side of the base.


3. Extend the top tether strap by lifting on the top tether adjuster.

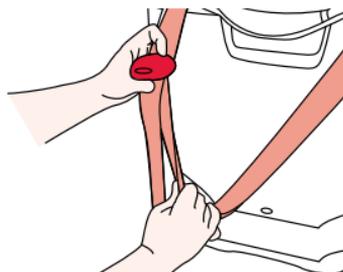

4. Unhook the top tether hook from the back of child restraint and place it up and over the seatback.

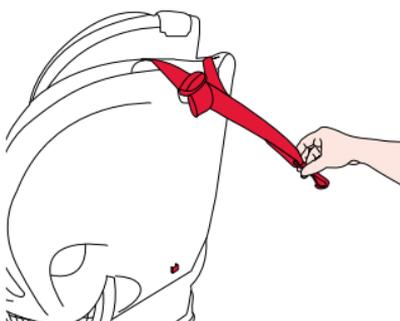


5. Open the CLICKTIGHT. Squeeze the CLICKTIGHT release buttons underneath the front cover flap and lift to open.

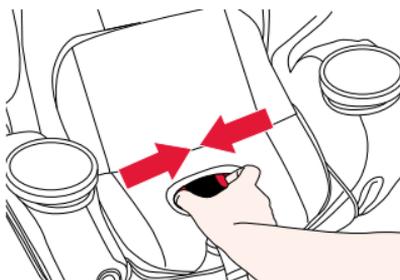

6. For models **WITH** storage pouch only: Open the storage pouch.

Remove the lower connectors by pressing the spring tab, pushing the connector back while rotating down and forward off the anchor point.

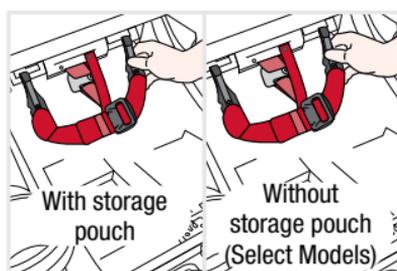

7. Extend lower connector strap to its longest length by pressing the grey button on adjuster.



8. Place child restraint on the vehicle seat so that the car seat base is flat on the vehicle seat and is parallel to vehicle seat.

NOTE: If your vehicle seat back is adjustable, ensure it is in the upright position before placing the child seat on the vehicle seat.

9. Ensure the base does not hang over front edge of vehicle seat.

10. Route the lower connector strap through the **FORWARD**-facing belt path marked by green labels. Firmly press the lower connectors **onto** their adjacent lower anchors.

11. Ensure the connector strap is not twisted and remove slack.






12. Close the CLICKTIGHT over the lower connector strap.


13. Ensure both CLICKTIGHT release buttons are visible.

NOTE: If it is difficult to close, you may have removed too much slack.

14. Connect the top tether hook to the vehicle's top tether anchor (check the vehicle owner's manual for location).

15. Pull the top tether strap to remove slack and secure excess webbing with the elastic band attached.

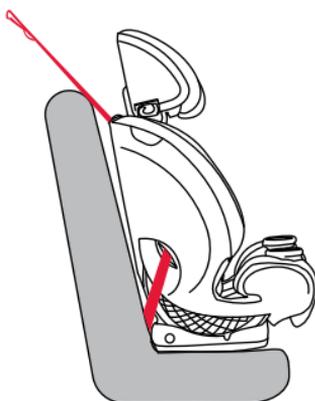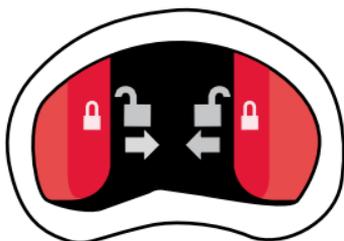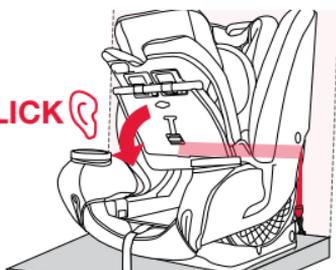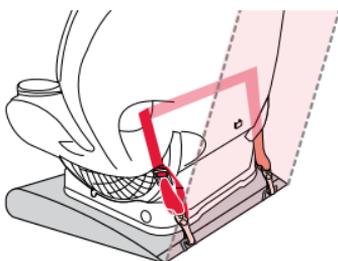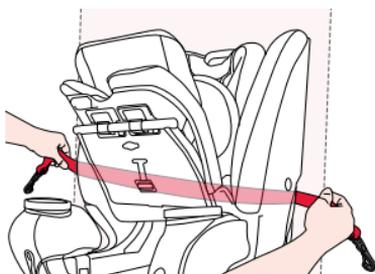

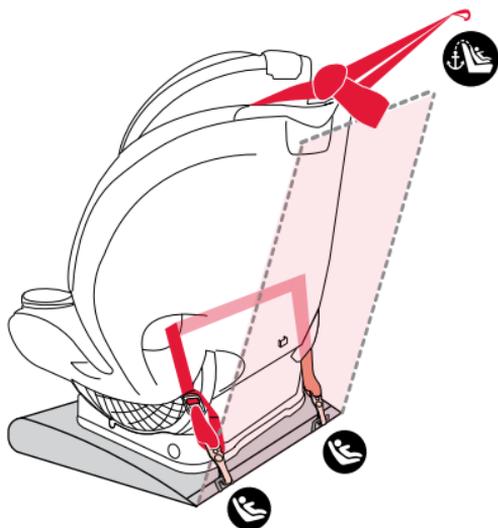

✓ CHECKLIST

- ✓ Child restraint is in recline position “B”.
- ✓ Child restraint is in a vehicle seat that has a lap-shoulder belt.
- ✓ All connections are secure and strap is not twisted.
- ✓ Car seat base **MUST** be flat on vehicle seat and **MUST** be parallel to vehicle seat.
- ✓ That any excess top tether webbing is contained within your vehicle and secured.
- ✓ If your vehicle seat back is adjustable, ensure it is in the upright position before placing the child seat on the vehicle seat.


NOTE:

- If the child restraint does not meet the above criteria, repeat the installation steps or use a different seating location in your vehicle. Ensure that the LATCH system does not interfere with the vehicle belt function and alignment when securing your child.
- Please see section *Securing Your Child in **BOOSTER** Mode* on page 36 to properly secure your child.


Securing Your Child

Harness Mode


1. Make the proper adjustments to the harness and buckle (page 12).
2. Loosen the harness. Press the harness release button (A) and pull both harness straps forward (B).

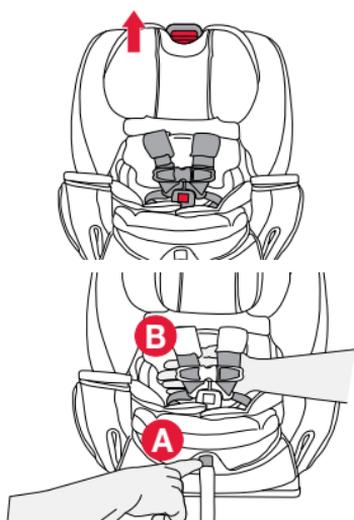

3. Open the chest clip by squeezing the tabs (A) and pull apart (B).

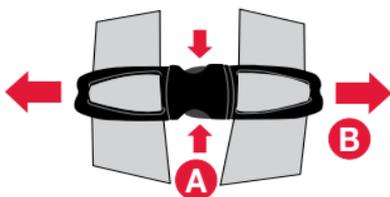

4. Release the buckle and place the harness straps to the side.

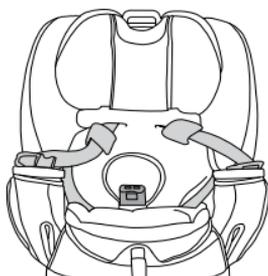

5. Place child in the child restraint. Ensure the child is positioned upright in the child restraint and not slouching. Their bottom must touch the child restraint, and their back must rest flat against the back of the child restraint.



6. Position the harness straps around the child.

NOTE: Remove bulky coats, jackets, and/or bulky sports equipment before putting the child in the child restraint.




7. Fasten the buckle. Proper connection is confirmed with a click after inserting each buckle tongue.



8. Check the proper harness height and pull any excess slack up to the child's shoulder area before tightening.

9. Pull the harness adjuster strap to tighten the harness.

NOTE: The harness should have a snug fit around the child. A snug strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position. You should not be able to pinch excess webbing.

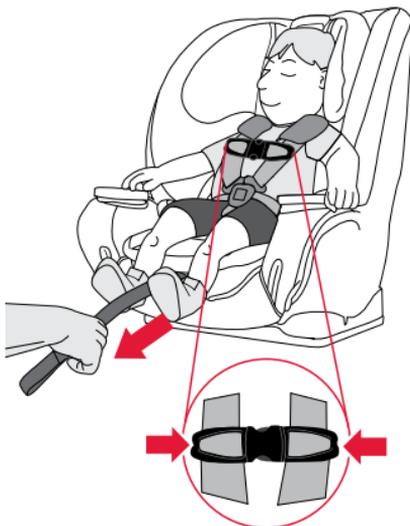

10. Fasten the chest clip and place at armpit level.

✓ CHECKLIST

Before traveling, verify that the:


- ✓ Recline indicator is still in acceptable range.
- ✓ Harness straps are not twisted.
- ✓ Harness is snug.
- ✓ Buckle is fastened.
- ✓ Chest clip is at the child's armpit level.
- ✓ Bulky coats, jackets, and/or bulky sports equipment are removed.

Booster Mode

IMPORTANT: Warning! Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.



1. **Adjust** the headrest to the highest position.

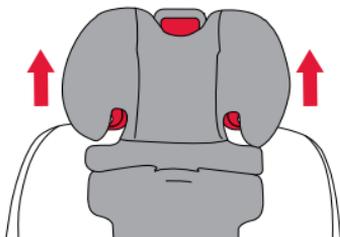

2. **Place** child in the child restraint with child's back flat against the seat.




3. **Pull** the vehicle belt out and route the shoulder part through the red **BOOSTER** mode shoulder belt guide.



4. **Adjust** the headrest so that the vehicle shoulder belt lays straight across the child's chest.
NOTE: The shoulder belt guides **MUST** be above the child's shoulders.




5. **Route** the vehicle belt through the **BOOSTER** mode lap belt guide and across the child.

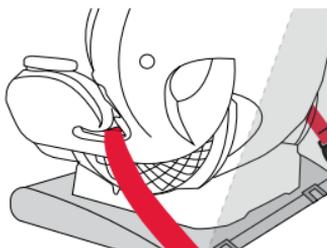

6. **Fasten** the vehicle belt. Remove slack from the belt.

7. **Ensure** the shoulder part lays across the center of the child's chest, above the child's shoulder and does not contact the child's neck (A). The lap part of the vehicle belt is routed low across the child's upper thighs (B).

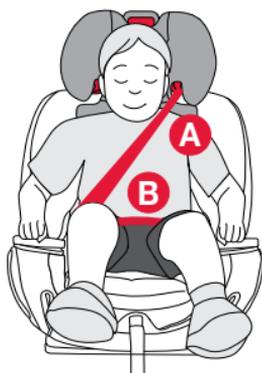

✓ CHECKLIST

Before traveling, verify that the:


- ✓ Vehicle belt is not twisted.
- ✓ Shoulder part of vehicle belt is routed through the shoulder belt guide above the child's shoulder, lies across the center of the child's chest and does not contact the child's neck.
- ✓ Lap part of the vehicle belt is routed low across the child's upper thighs.

Switching between Harness and Booster Mode


Harness Mode to Booster Mode

NOTE: It is not necessary to use lower anchors and top tether to position this child restraint in **BOOSTER** mode. If using the lower anchors and top tether to position this child restraint in **BOOSTER** mode, it is recommended to follow **BOOSTER** Mode Installation before storing the harness. Refer to page 31 *Using Lower Anchors and Top Tether (LATCH) in BOOSTER Mode.*


1. **Raise** the headrest to the highest position.

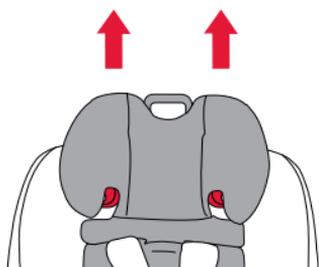


2. **Loosen** the harness. Press the harness release button (A) and pull both harness straps forward (B).

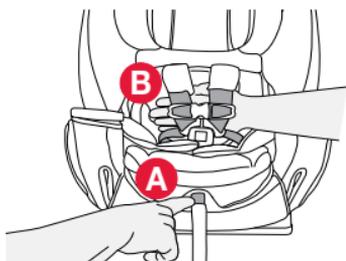


NOTE: Make sure enough harness adjuster strap is left hanging from the front of the seat. Use the inner slot as a reference point to measure how much harness strap can be left hanging from the front of the seat.

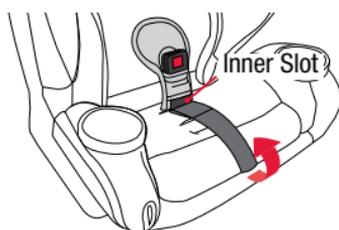

3. (A) Open the chest clip.
(B) Open the fasteners on the headrest cover and remove the harness straps.

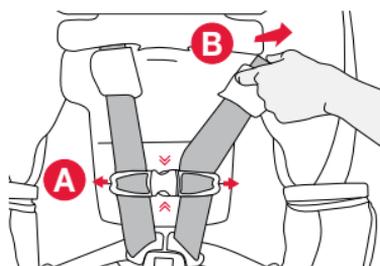


4. Flip up the headrest cover.

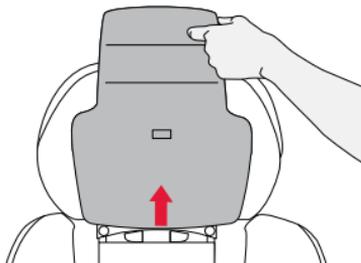


5. Release the buckle.

6. Position the harness straps behind the seat pan cover.


NOTE: Located under the fasteners near the bottom of the harness straps.

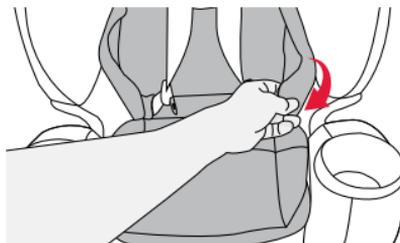

7. Fold the top of the seat pan cover with the vented side over. Position the harness straps behind the seat pan cover.

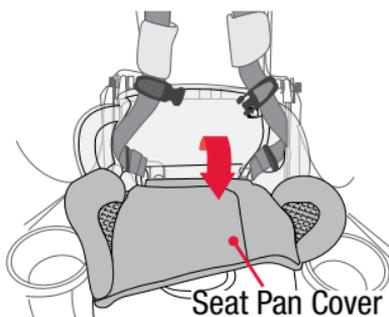


8. Fasten the chest clip.
Move the chest clip to the middle of the back rest.

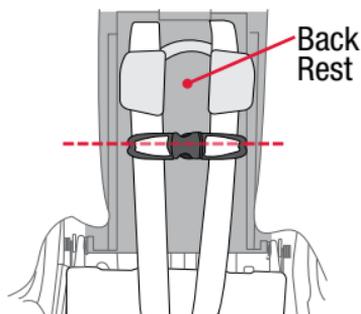


9. Remove the comfort pads.
a. Tuck each buckle tongue inside the comfort pads. Folding them closed.




- b. Move both pieces together towards the chest clip.

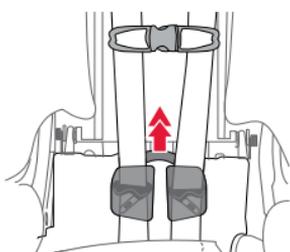


- 10. Locate the space in-between the back of the shell and the back-top part of the seat pan.**

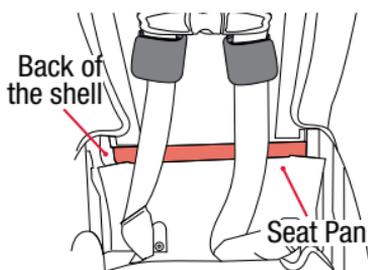


- 11. Tuck in the buckle tongues and comfort pads, pushing them with force down into the gap until the chest clip and excess webbing are no longer visible.**

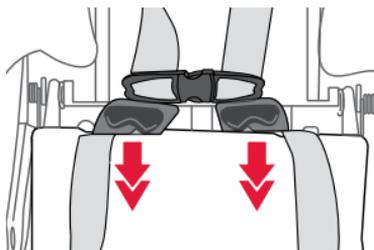


NOTE: Make sure the harness straps lay flat.

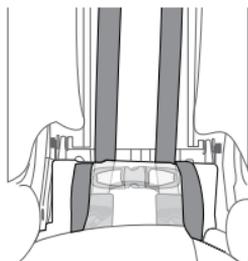


- 12. Flip up the seat pan cover. Reattach the fasteners near the bottom of the harness straps.**

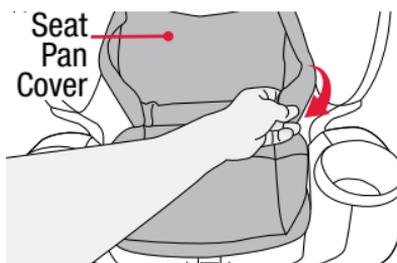


- 13. Open the CLICKTIGHT.**

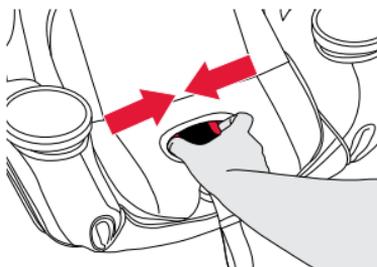


- 14. Remove the buckle by turning the metal bracket sideways and pushing it up through the slot in the CLICKTIGHT and the slot in the seat cover.**

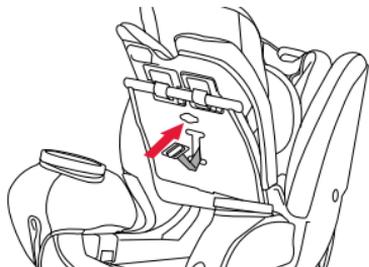


- 15. Place the buckle horizontally on top of the raised section of the seat shell (in the center) that guides the harness adjuster strap.**

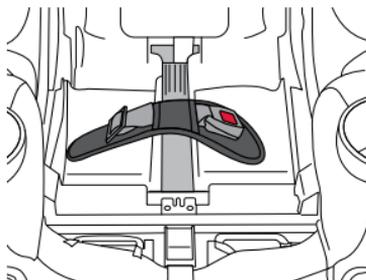

- 16. Roll the remaining harness adjuster strap.**

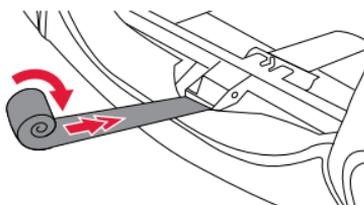


- 17. Tuck the remaining harness adjuster strap into the front of the cover.**

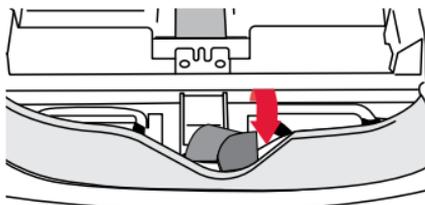


- 18. Close the CLICKTIGHT.**

- 19. Flip down the headrest cover back and reattach fasteners.**

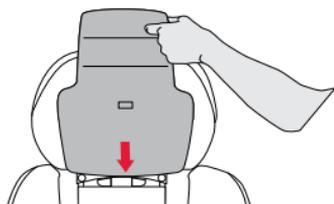


Booster Mode to Harness Mode


- 1. Flip the headrest cover up.**

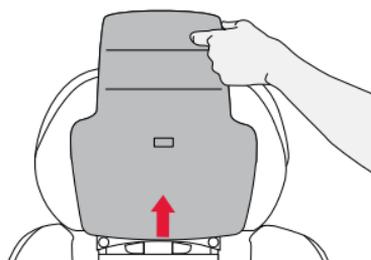

- 2. Fold top of the seat pan cover with vented side over.**

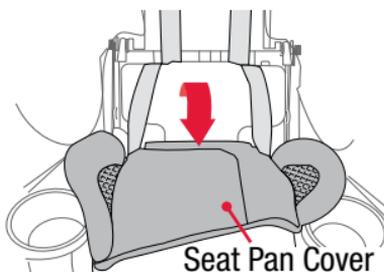

- 3. Pull the harness straps from the space in-between the back of the shell and the back-top part of the seat pan.**

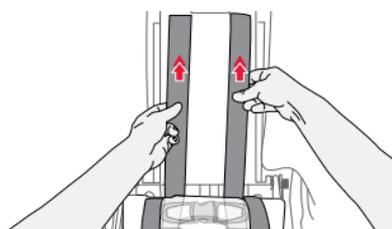


4. **Remove** buckle tongues from comfort pads. **Reattach** comfort pads above chest clip.




5. **Open** the chest clip.

6. **Flip** the seat pan cover up. **Pull** the harness strap from underneath the seat pan cover and route the harness straps through the seat pan cover slots and reattach fasteners.

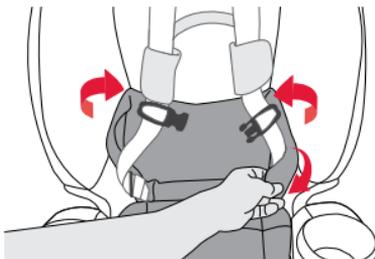


7. **Flip** the headrest cover back down.

8. **Pull** the harness straps from underneath the headrest cover and route them through the headrest cover slots. **Reattach** fasteners from headrest cover.

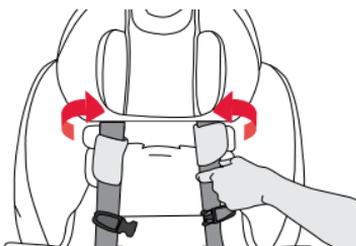


9. **Open** the CLICKTIGHT.


10. **Remove** belpad and buckle from storage.

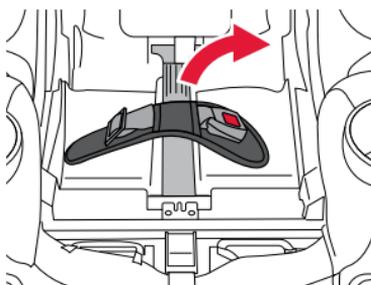

11. **Install** the buckle by turning its metal bracket sideways and routing it through the desired seat cover and slot in the CLICKTIGHT. Refer to adjusting buckle position page 12.

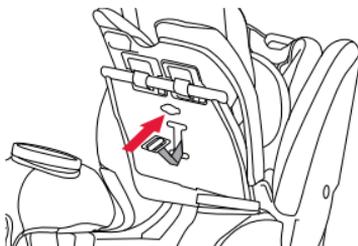

12. **Remove** harness adjuster strap from the front seat cover.

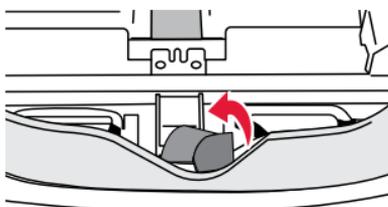

13. **Close** the CLICKTIGHT.


Removing and Installing Seat Cover

NOTE: If removing cover to wash, see Cleaning section on page 49.


Removing the Cover

Removing the Headrest Cover


1. Loosen the harness. Press the harness release button (A) and pull both harness straps forward (B).

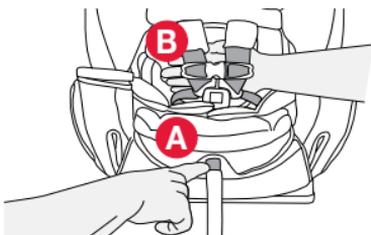


2. Release the buckle.

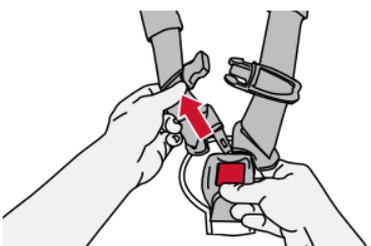


3. If applicable, remove infant insert pillow from child restraint.

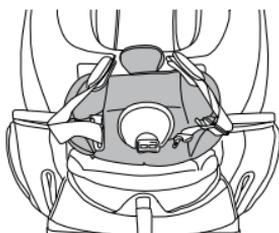


4. Lift the elastic strap up and away from the rear of headrest adjuster.

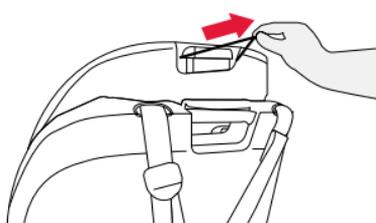

5. For select covers only: Undo the two elastic straps from the back of the headrest.





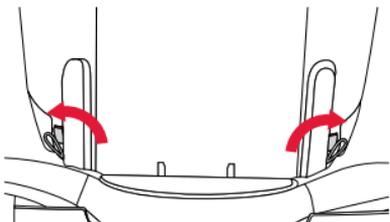


6. Open hook and loop fasteners in headrest cover and pull cover away from the child restraint.

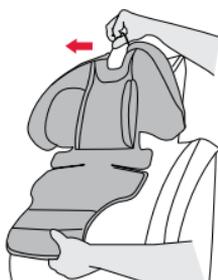



Removing the CLICKTIGHT Cover

1. **Open the CLICKTIGHT.** Unhook the elastic bands connecting the cover to the CLICKTIGHT.
2. **Pull the cover up** from around the front of the CLICKTIGHT and close the CLICKTIGHT.
3. If applicable, **remove infant insert pillow** from child restraint.
4. **Undo the hook and loop fasteners** near the bottom of the harness straps.
5. **Pull the cover away** from the harness and child restraint. **Separate the belly pad** from the rest of the cover (if needed).

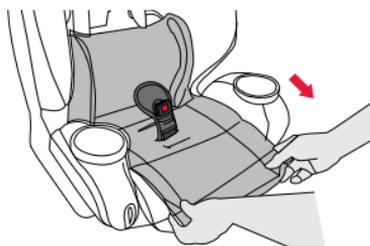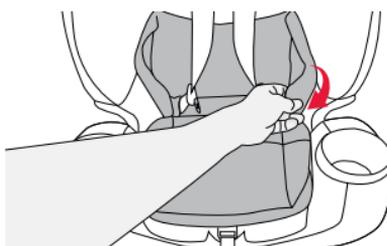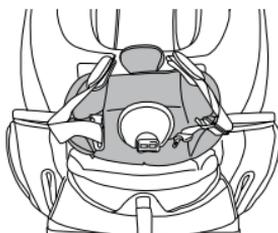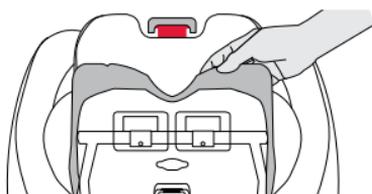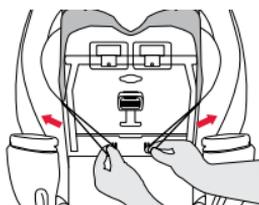


Removing the Side Protection Top Cover


1. **Lower the headrest.**
2. **Unhook elastic** from around the carry handle.

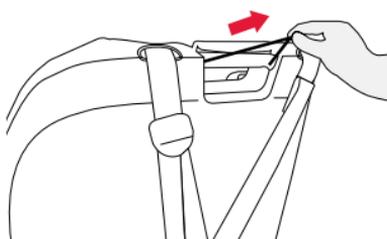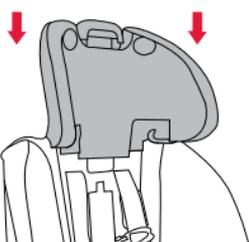


3. For select covers only: Unhook the hook and loop fasteners from around the tether straps.

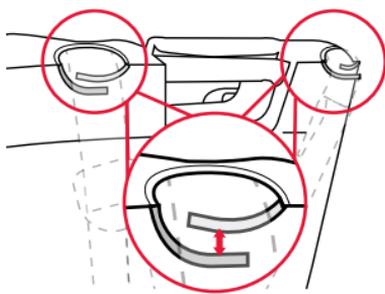

4. Unhook the elastic from the backrest.

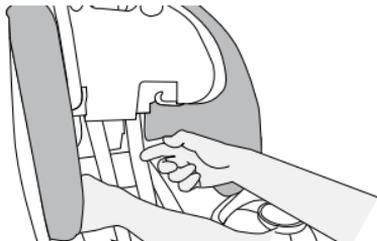


5. Pull cover away from the child restraint.

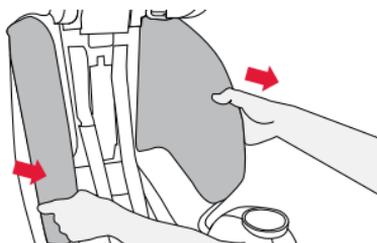


Removing the Side Protection Bottom Cover


1. Open the CLICKTIGHT. Unhook elastic from the front of the seat.

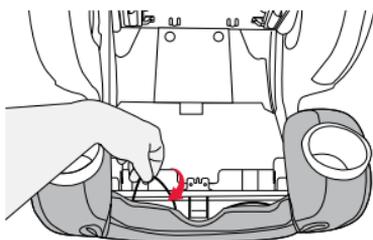

2. For select covers only: Undo elastic from under the front of the seat.

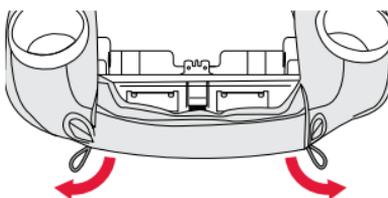


3. Pull the cover away from the belt path area.

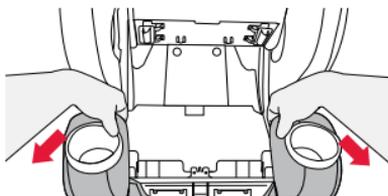


4. Pull the cover up and over the cup holders.

Removing the Anti-Rebound Cover (For models with anti-rebound bar)


1. Open the CLICKTIGHT.
2. Unhook elastic bands from the front of the seat.

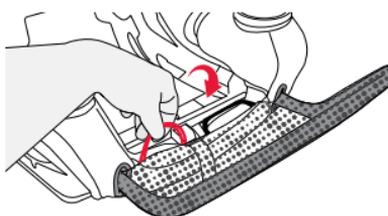

3. **Remove** the anti-rebound bar. **Push** the inner red button. **Pull** the anti-rebound bar away on one side. Repeat on the other side.

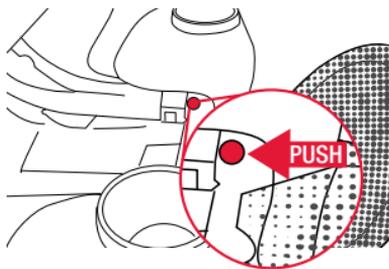


4. **Unhook** the two small elastic loops from the plastic tabs.
5. **Pull** the cover away.

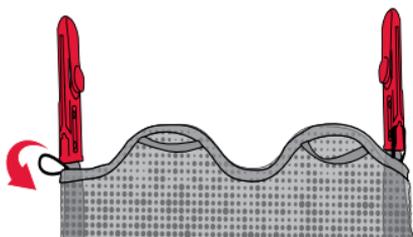


Installing the Cover

Installing the Side Protection Bottom Cover


1. **Tuck** the cover in by the **REAR**-facing belt path.

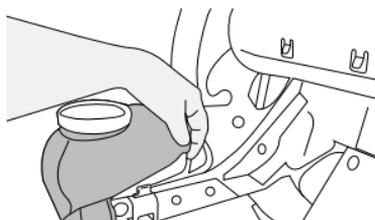


2. **Pull** over the cup holders so that the cover tucks under the cup holders.

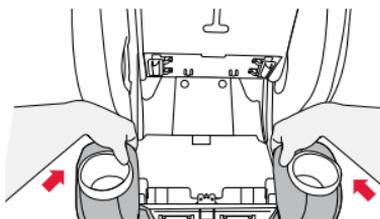


3. **Pull** the cover around the front of the shell.

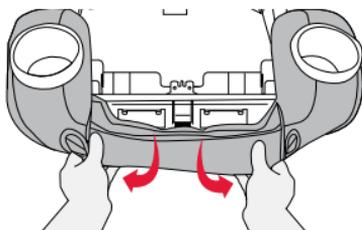

4. **For select covers only:** Attach elastics around the hooks under the shell.



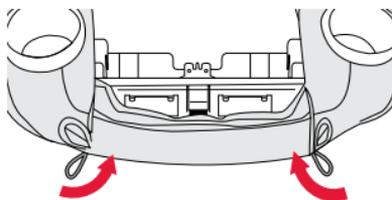


5. **Attach** elastics to the hooks on the shell.

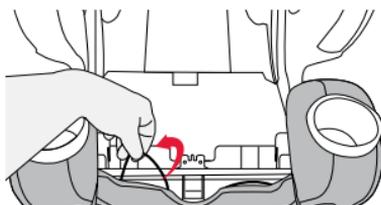


Installing the Side Protection Top Cover

1. **Route** the elastic up and around the carry handle.
2. **For select covers only:** **Fasten** the hook and loop fasteners around the tether straps.
3. **Tuck** cover into the remainder of the child restraint.
4. **Attach** the elastic loops to the hooks on the backrest.

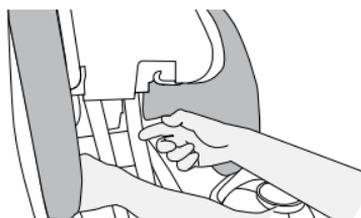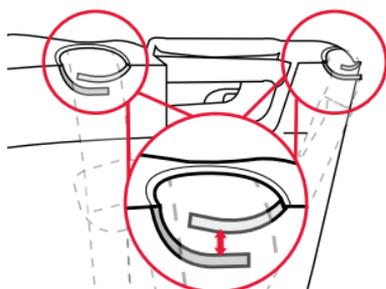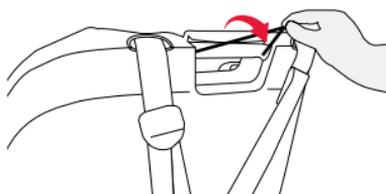


Installing the CLICKTIGHT Cover

1. **Open** the CLICKTIGHT and slide the buckle through the belly pad.
2. **Route** buckle through the appropriate cover and CLICKTIGHT slot. Refer to *Adjusting Buckle Position* page 12.
3. **Pull** cover over the front edge of CLICKTIGHT.
4. **Attach** the elastic bands to the hooks on the bottom of the CLICKTIGHT.
5. **Close** the CLICKTIGHT.

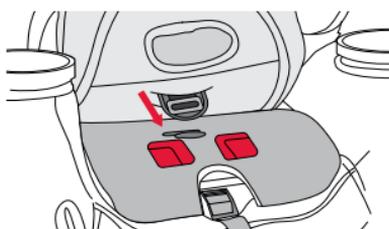


6. **Route** the bottom of the harness through the slots and reattach hook and loop fasteners.

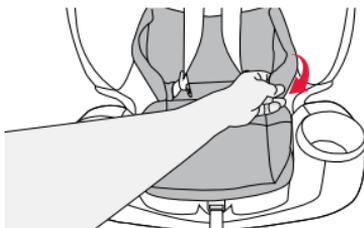


Installing the Headrest Cover


1. **Raise** the headrest to the highest position. **Tuck** the headrest cover under and around the headrest foam.

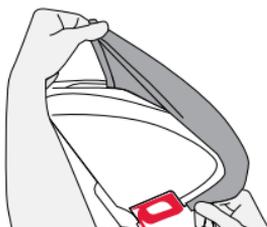


2. **Route** the elastic strap around headrest adjuster.

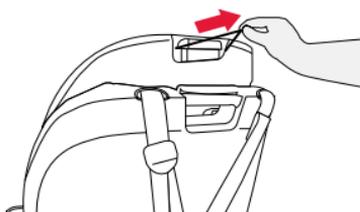


3. **Slide** harness straps through the cover slots and close fasteners.

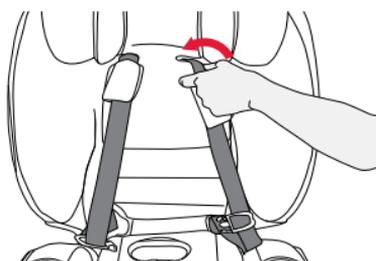

4. **For select covers only:** Attach elastic loops around hooks at the back of the head restraint.

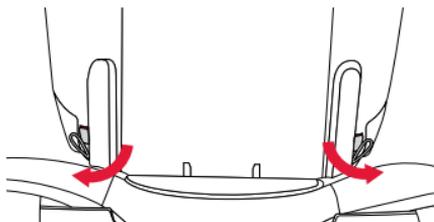


5. If applicable, **place** the infant insert pillow around the buckle.

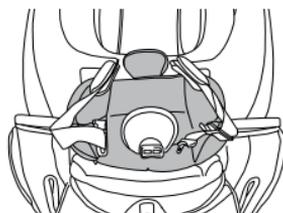


Installing the Anti-Rebound Bar Cover (For models with anti-rebound bar)

1. **Slide** the cover on the black portion of the anti-rebound bar.

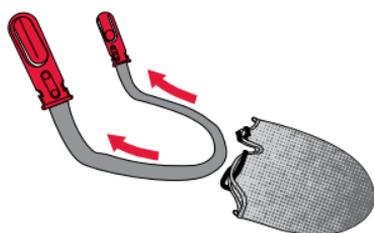


2. **Attach** the small elastic loops to the plastic tabs.

3. **Install** the anti-rebound bar. **Insert** the anti-rebound bar into the two openings at the front of the seat.

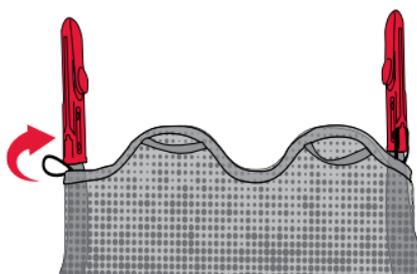

4. **Attach** elastic bands from the cover to the hooks on the shell.

5. **Pull** the anti-rebound bar to ensure it is properly set.

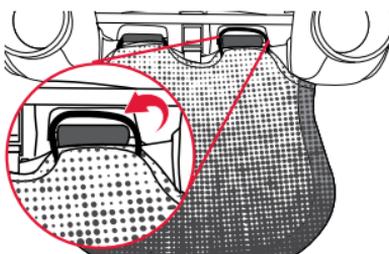

Cleaning

Shell	SPONGE CLEAN the shell using warm water and mild soap. TOWEL DRY	DO NOT <ul style="list-style-type: none">• Use abrasive cleaners
Cover	Refer to product care label for wash instructions If care label indicates machine washable, always refer to us.britax.com/faqs for important care information. Before washing, ensure all the hook and loop fasteners are secured.	DO NOT <ul style="list-style-type: none">• Bleach• Iron
Harness	SPONGE CLEAN the harness using warm water and mild soap. TOWEL DRY	DO NOT <ul style="list-style-type: none">• Disassemble the harness• Bleach• Machine wash• Machine dry• Iron
Harness Buckle	THOROUGHLY RINSE the buckle using warm water. TEST THE BUCKLE by fastening and unfastening until a click is heard after inserting each buckle tongue. If clicks are not heard, repeat the cleaning procedure. TOWEL DRY	DO NOT <ul style="list-style-type: none">• Soak• Lubricate• Use solvents• Use soap or household detergents

Warranty

This child restraint was manufactured by Britax Child Safety, Inc. (“Britax”). To the extent allowed by law, Britax warrants this product to the original retail purchaser as follows:

LIMITED ONE-YEAR WARRANTY

This product is warranted against defective materials or workmanship for one year from the date of original purchase. Proof of purchase is required. Your exclusive remedy for this warranty is that Britax will, at its option, provide repair or replacement components for this product. Britax reserves the right to discontinue or change fabrics, parts, models or products, or to make substitutions. Britax products purchased from unauthorized retailers, online auction sites, or as second hand items are not covered under warranty.

To make a claim under this warranty, you must contact Britax Consumer Services at **1-888-427-4829** or **1-704-409-1699**, or write to us using the address on the back cover of this booklet.

PLEASE COMPLETE AND MAIL THE OWNER REGISTRATION CARD WITHIN (30) DAYS OF PURCHASE

You may also register online at us.britax.com/registration.

WARRANTY LIMITATIONS

This warranty does not include damages which arise from negligence, misuse or use not in accordance with the product instruction.

The use of non-Britax covers, inserts, toys, accessories, or tightening devices is not approved by Britax. Their use could cause this child restraint to fail Canadian Motor Vehicle Safety Standards or not perform as intended in a crash. Their use may void the Britax warranty.

LIMITATION OF DAMAGES

The warranty and remedies as set forth above are exclusive and in lieu of all others, oral or written, express or implied. In no event will Britax, or the retailer selling this product, be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

LIMITATIONS OF WARRANTIES AND OTHER WARRANTY TERMS AND STATE LAWS

Any implied warranties, including implied warranties of merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow certain exclusions or limitations on warranties, so the above may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither Britax, nor the retailer selling this product, authorizes any person to create for it any other warranty, obligation, or liability in connection with this product.