GENERAL INSTALLATION INSTRUCTIONS

LONGVIEW™ Towing Mirror

Patent No. 4892.401 Made In USA

www.longviewtm.com

The **Original** Towing Mirror

Standard Items in Kit: Different style of hooks may vary for each model



1 pair of mirror shells
1 Standard kit of accessories: 2 knobs, and 2 hooks.
Instructions

Models with standard kits enclosed: LVT-1700, 1800, 2000, 2200A, 2300B, 2300C, 3100C, 3300A, 3400, & 3400A


Models with Standard Kits that contain LH & RH Hooks: LVT-2300 and LVT-3300

To view a video of the assembly visit our web site at www.longviewtm.com


Custom kits will contain additional accessories for required models, which will include standard items with either universal or RH/LH hooks. See specific instructions for custom fitting of individual models.


This section is for the General Instructions is for ALL Models

1. **Put the hook through the hole on the mirror shell and twist the knob on a few turns.**
2. Slide towing mirror gently over existing mirror until it seats. (Check inside mirror body for indication of a RH or LH model) **then pull the hook over the front edge of your vehicle mirror by pushing forward on the back of the knob.**
3. While steadying the towing mirror in position, tighten knob (B) on hook (A) until the towing mirror is snug and does not move.
4. Repeat steps for the right (Passenger) side
5. To remove mirrors, unscrew knob a few turns, push forward on knob to release hook and slide mirror off.

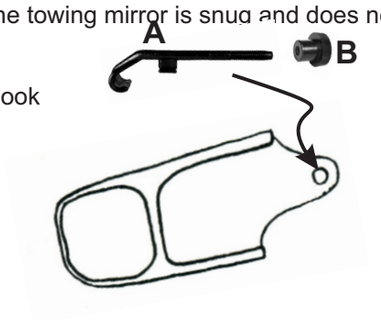

Left Side Mirror Shown (Drivers)
Just Slip the Mirror Shell on.

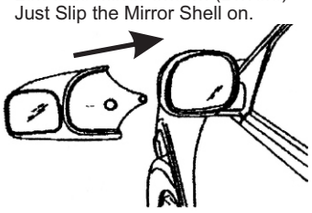

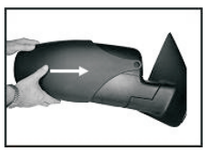

Model LVT-1200






Follow General Instructions
NOTE: 1996 Chevy and GMC vehicles will require a supplied short hook for the driver's side instead of the standard hook.
Place a Felt Pad in the centered middle of the shell (one each for Left and Right Hand mirrors).

Model LVT-1300

Please follow the diagrams and instructions below for the proper mounting of your Model LVT-1300 towing mirrors.

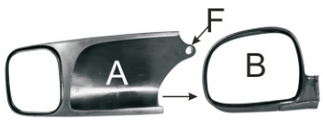


1. Slip towing mirror (A) over your existing vehicle mirror (B) until it seats, taking care to match right and left hand mirrors.




2. Slide one of the two supplied hooks (C) thru one of the two supplied Right Angle Spacers (D) as shown.

3. Insert both (C) & (D) into the gap between the outside of your existing mirror and the inside of your towing mirror, taking care to slip the hook over the lip of your existing mirror as shown.

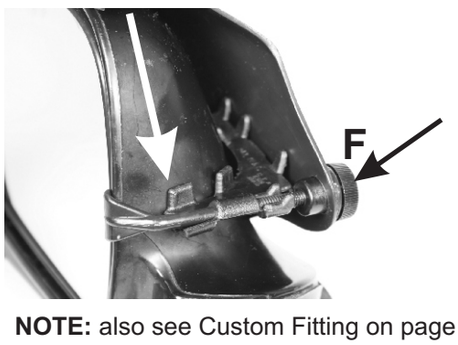

4. While holding the towing mirror in position, insert one of the supplied knobs through the receiving hole (F) in the towing mirror and onto the threaded end of the hook (C). Tighten this knob until the towing mirror is solid and does not move with firm pressure.

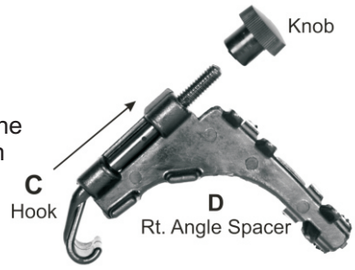






NOTE: also see Custom Fitting on page 2 for pads.


To view a video of the assembly visit our web site at www.longviewtm.com

Model LVT-2600

Instructions Continued

1. Slip the mirror shell over your vehicle mirror
2. Place the threaded end of the Disk Hook through the hole in the shell, with the disk end on the inside of the shell.
3. Place the Right Angle brackets hole end over the treaded end of the Disk Hook.
4. Screw the Knob at least three turns onto the Disk Hooks threaded end.
5. Slip the hooked end of the right angle bracket over the top edge of the vehicles mirror and slide down until it is over the inside edge of your vehicles mirror.
6. Press your vehicle mirror inward on the inside edge and you will see two openings in your vehicle mirror housing.
7. Continue sliding the hook end of the Right Angle Hook down until it is over the bottom opening of your vehicle mirror housing. Push the hook toward the mirror face until it snaps into the vehicle mirror housings bottom hole.
8. Slide the right angle hook downward and tighten the knob.

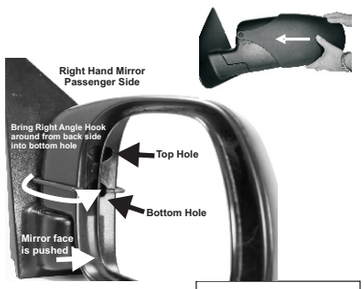

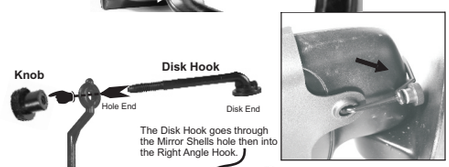

To view a video of the assembly visit our web site at www.longviewtm.com

Model LVT-3100B








Felt Pad-Installation to Hook
Peel backing from felt pad half way off
Place tacky side on hook
After you have the pad on the hook remove the remainder of the backing and secure the felt to the hook.


Mounting Mirror
1. Insert the threaded end of the Hook though the hole in the mirror shell and Pre-thread the knob at least three turns on to the hook**.(A)**
2. Be sure that the shaft of the nut is completely in the hole of the mirror shell to keep the shell tight to front of mirror**.(B)**
3. Slip the hooked end **(D)** over your vehicles mirror edge **(C)** and then tighten down the knob.

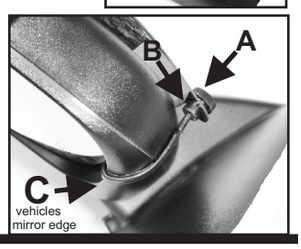



To view a video of the assembly visit our web site at www.longviewtm.com

LVT-1600 & LVT-4000 Installation Instructions



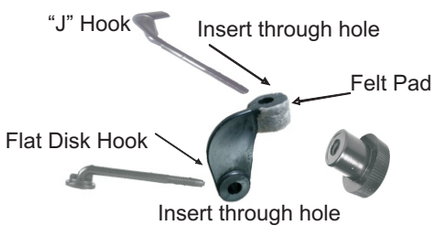

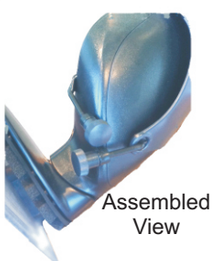

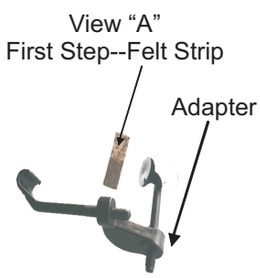


1. First step for installation is to adhere the felt strips to the adapters as shown in View "A". Peel adhesive backing off and place felt strip on adapter as shown be sure to cover entire outer rim.
2. Insert Flat Disk Hook through the hole in the Longview Shell from the inside making sure flat disk is on INSIDE of Shell housing.
3. Slide adapter over Threaded end of Flat Disk hook that you just put through the hole in the Mirror Shell & screw a knob on 3 turns--Insert "J" hook through opposite hole of adapter with the felt strip on it and screw a knob on 3 turns.
4. Slide Longview Mirror Shell over your vehicle--Once in place turn "J" hook so that it faces toward vehicle mirror.
5. Push forward with thumb pressure on the knob that is attached to the "J" hook through the adapter to allow the hook to slip over lip on your vehicle mirror housing.
6. Tighten knob on Flat disk hook first then tighten knob attached to "J" hook to completely secure assembly.
7. Mirror should now be secure and tight--Adjust the mirror glass for optimal viewing

Custom fitting your mirrors to your vehicle when required.

Special Foam Pads or Additional accessories are enclosed for specific model numbers
1. Be sure surface is clean prior to applying pads (use rubbing Alcohol).
2. Expose adhesive backing accessories and place as shown on inside shell of towing mirror prior to installing on vehicle.

Models:

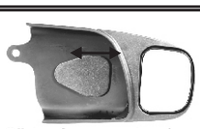

LVT-1000
LVT-1300
LVT-1400 (Pad is 6" in from edge)
LVT-2100
LVT-3000 (*)
LVT-3100

* May require double ¼" pads

Models



LVT-1200
LVT-1500
LVT-2300A
LVT-2400 (LH & RH HOOKS)
LVT-3100A
LVT-3200

Model:

LVT-2500



LONGVIEW™
Towing Mirror

For warranty & replacement parts visit our web site at www.longviewtm.com
email: longviewtm@gmail.com phone: (248)844-1400

Rev 9.0