Necchuizo

Necchuizo Beck Series Smart Door Lock Manual

NO.K050103

Please read this manual carefully before using the product, and keep it

01 APPEARANCE INTRODUCTION

Necchuizo Beck Series Smart Lock has multiple ways to open the door: face, fingerprint, passcode, ICcard, remote, key.

The remote function needs *USmart Go* app

(Outdoor) Front Panel

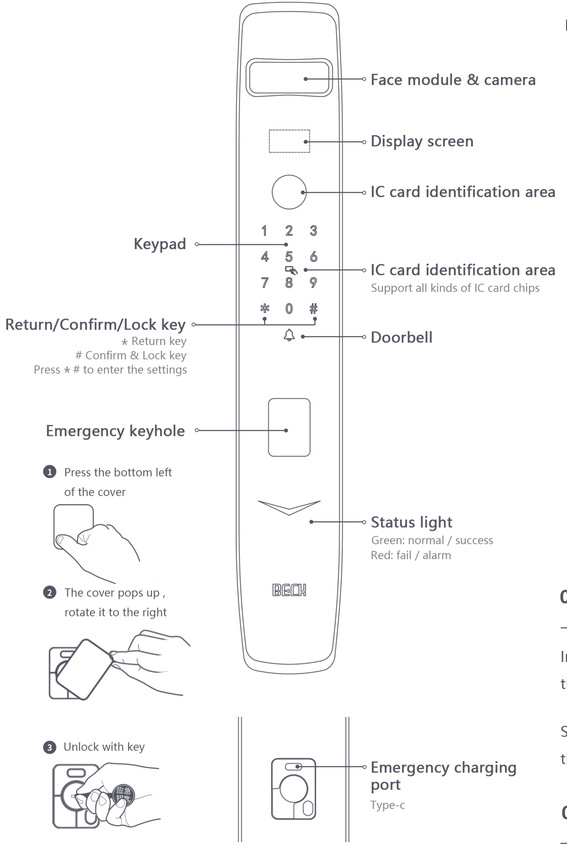

❶ Press the bottom left of the cover

❷ The cover pops up , rotate it to the right

❸ Unlock with key

(Indoor) Rear Panel

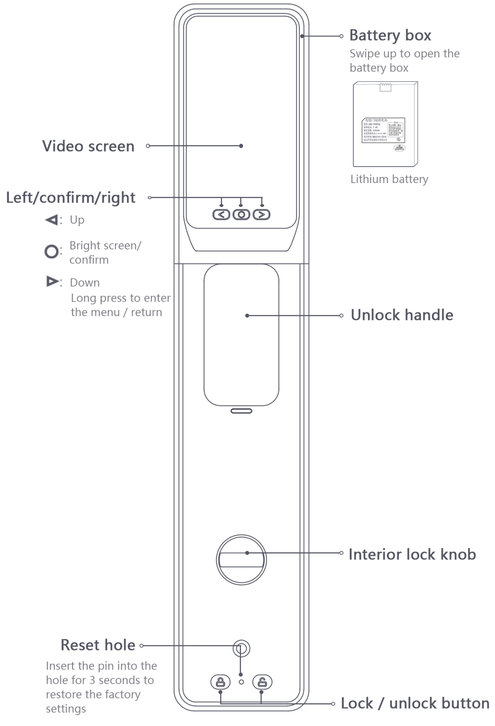

02 INSTALL

Installation can be carried out by referring to the installation instructions in the attached drilling diagram.

Some components may be too long and need to be tailored according to the thickness of your door.

03 READY TO USE

Insert lithium battery, the lock will automatically power on.

04 SETTING

Initial state:
In this state, any fingerprint, face, password can open the door

Set according to the voice prompt and display

Setting
Press * + # to enter menu

- Press 1: create a new user
  - Press 1: register fingerprint/password/card — Press 1: Please enter the key ("User 00" is the administrator, the administrator can register 10. Users 01-99 are ordinary users)
  - Press 2: register face — Please register face
- Press 2: delete user — Press 2: Please enter the user number (user 00 administrator, the system has no permission to delete, the administrator can be deleted after initialization)
- Press 3: System Settings
  - Press 1: time setting — Press 1: Please enter two-digit year, month and day
  - Press 2: volume adjustment — Press 1/2
  - Press 3: verification mode — Press 1/2
  - Press 4: language setting — Press 1/2
- Press 4: Install Settings
  - Press 1: reverse setting — 1: left; 2: right
  - Press 2: self-spring lock body setting — 1: NO; 2: YES
  - Press 3: automatic lock setting — 1:ON; 2: OFF
  - Press 4: automatic lock time — 3-30s

  The default is 10s, (you must first press 3 to lock, and then press 4 to set successfully.)
- Press 5: record query — Press 4 & 6 :You can query the unlocking user's fingerprint, password, card and number, and time
- Press 6: restore factory settings — Press 6: whether to restore factory settings

Shortcut key settings:

Start the network configuration: 1# enter the administrator authorization, and complete the operation according to the voice prompt
Clear network configuration: 2# enter the administrator authorization, and complete the operation according to the voice prompt
Anti-pry settings: 4# input administrator authorization, press 1 to turn off anti-pry, press 2 to open anti-pry
Human body induction setting: 5# input administrator authorization, press 1 to turn on the radar, press 2 to turn off the radar

*Combined mode: two unlocking methods need to be verified at the same time before the lock can be unlocked, such as fingerprint + password