upHere user manual

A
B
C
D
E
F
G
H
I
J

Confirm the M/B slot type before INSTL.

1366/2011
1700
115X/1200
775

AM3/AM2
AM4

INTEL
A

AMD
B
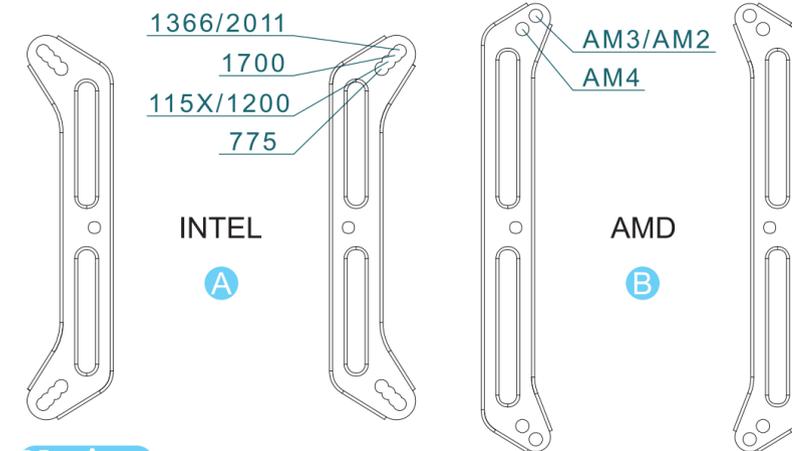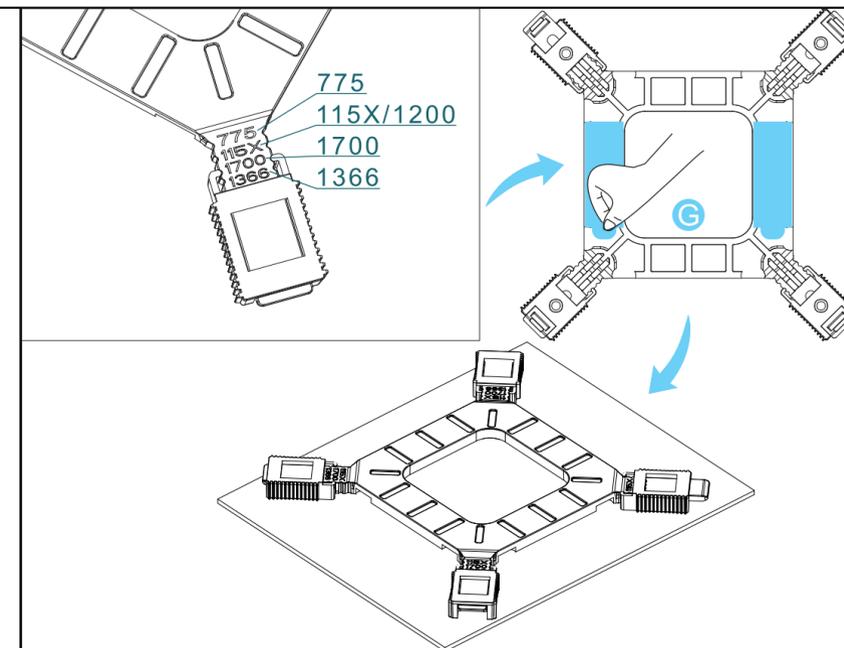
Notice:

INTEL: use A + D to install from step 1

AMD: use B + E to install from step 3
(AMD M/B with backplate)

LGA2011: use screw I to install from
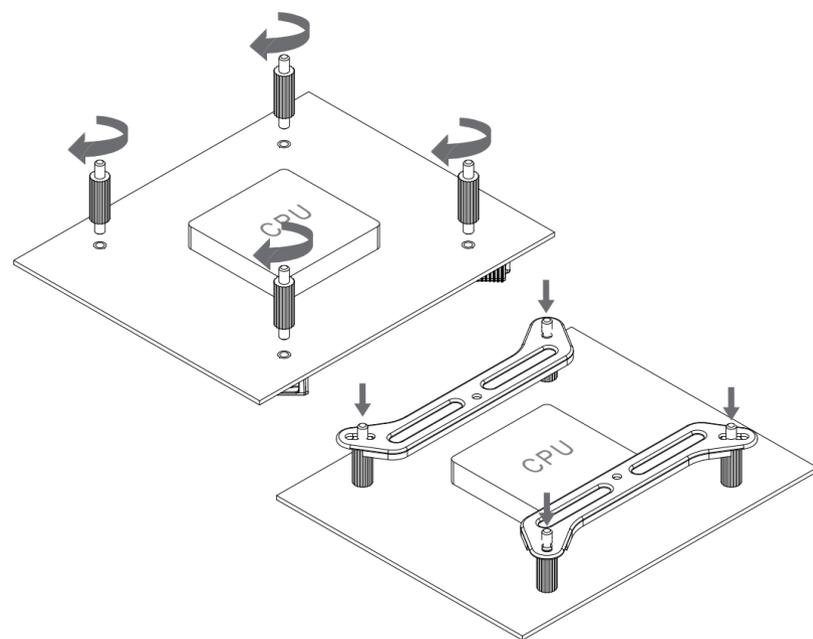step 3 (2011 M/B with backplate)
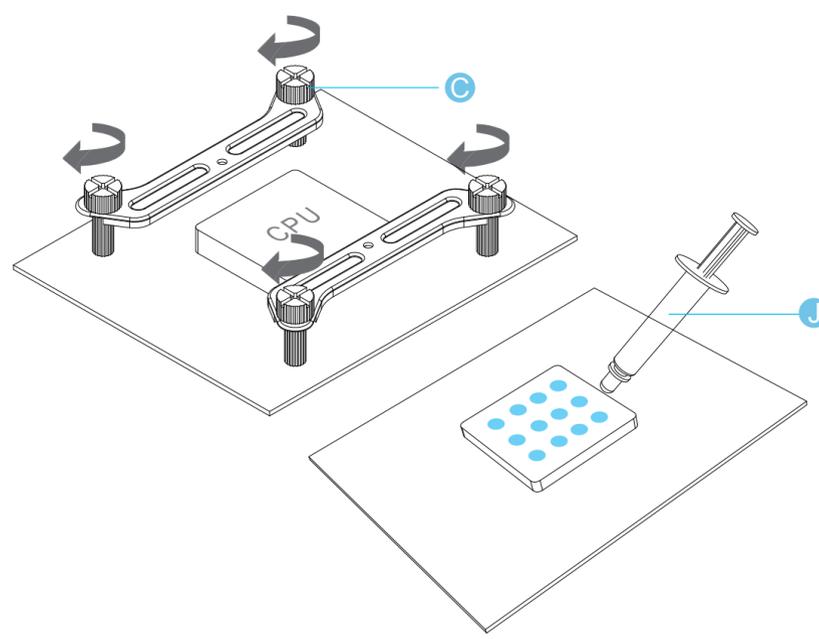

775
115X/1200
1700
1366

775
115X
1700
1366

G

1. Adjust the backplate G to the appropriate
M/B slot, peel off the adhesive protective film

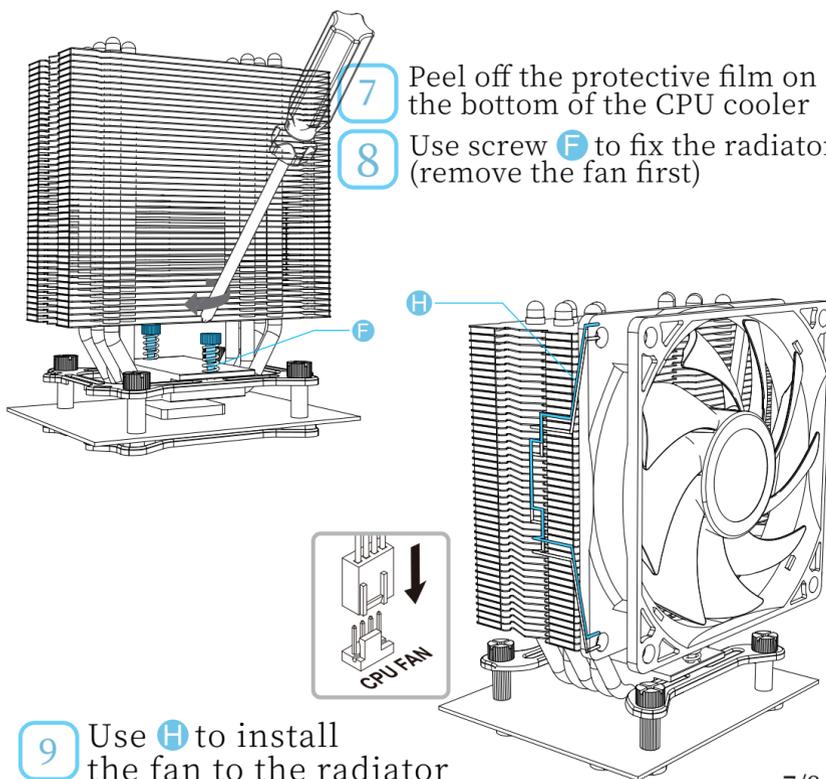2. Align the backplate G with the holes from the
back of the M/B to fix it

CPU
CPU

3. Lock the screws on the M/B

4. Place the bracket on the screw

C
CPU
CPU
J

5. Use nut C to fix bracket
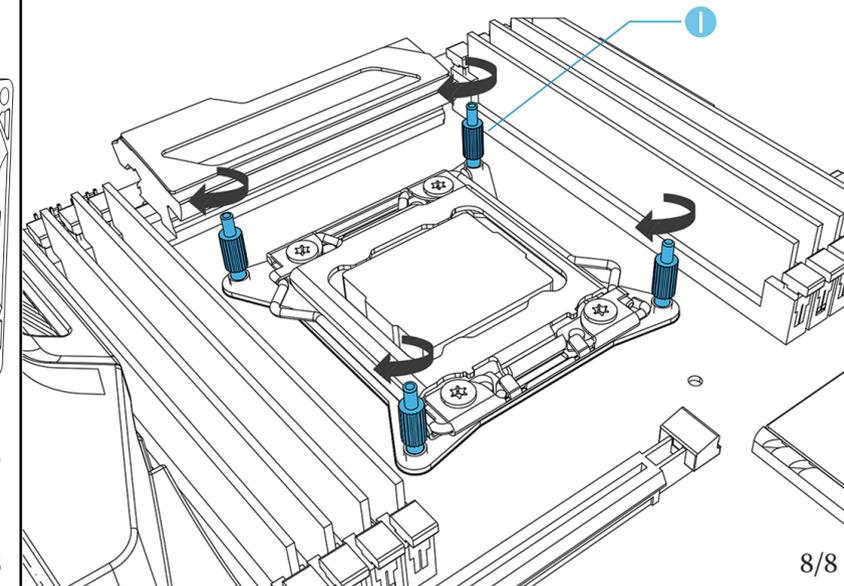
6. Apply thermal paste J on the CPU surface

---

7. Peel off the protective film on
the bottom of the CPU cooler

8. Use screw F to fix the radiator
(remove the fan first)

H
F

CPU FAN

9. Use H to install
the fan to the radiator

LGA2011 INSTALLATION

1. Install the I on the motherboard

2. Repeat steps 3 — 9

I