

# Thank you for your purchase!

Enjoy real-time translation, voice assistant features, music playback and more with your new **Vital Smart Glasses**!


## What's in the box

- AI Smart Glasses and USB Charging Cable
- Protective Cloth Pouch & Cleaning Cloth
- Factory User Manual & Ear Dance App Manual
- Temple Grip Sleeves





## Do more with AI-powered assistance

- Unbox and charge up:** Remove the glasses from the cloth pouch, then remove the protective film from both temples. Attach the magnetic charging leads to the charging contacts on the inside of each temple, then plug into a USB port. Glasses are fully charged in about 1.5 hours.
- Pair your glasses via Bluetooth:** Turn on Bluetooth in your device Settings. Then, open the glasses and put them on – they'll power on automatically and enter pairing mode. In your device's Bluetooth list, select **W100** under Available Devices. Once paired, you can connect them in the app.  
**Note:** You must pair the glasses with your device **before** pairing them with the app. Be sure to complete this step first, then download and connect them to the app.
- Download the app & set up your account:** Scan the QR code or search the Apple App Store or Google Play Store for the **Ear Dance** app.
  - Open the app and on the welcome screen, tap Register below the password field to create your account.
  - On the Home screen, tap Connect to pair your glasses with your app.
- Explore AI-powered features:** Real-time language translation, voice notes, listen to music through your glasses and more.

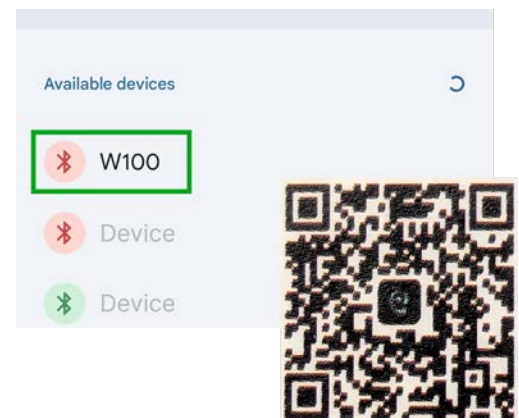

## Smart Glasses Features

- **Live Voice Translation:** Use your glasses with the app to hear real-time translations through your temple speakers.
- **Open-ear Audio / Discreet Bluetooth Speaker:** Answer and hang up calls with one touch on either temple button, listen to music, or hear app notification sounds through the built-in speakers in the temples. Stay aware of your surroundings while staying connected. Glasses will remain paired within 20 feet of your device, but connection may drop beyond that range.
- **One-touch call answer:** Tap the side button on either temple just once to answer a call. The built-in mic lets you talk hands-free and you'll hear the caller clearly through the discreet open-ear speakers without blocking out the world around you. Tap either side button once again to end the call.
- **Smart Auto Power Management:** Sensors detect wear status and auto-power the glasses on or off to conserve energy. Take them off and close the temples to turn them off. Put them on and they automatically power up.
- **Weather Resistant:** Built to perform in any conditions, resistant to rain, sweat or snow. Perfect for travel and outdoor adventures.
- **Quick Charging & Long Battery Life:** Get up to 7 hours of use per charge and recharge quickly as needed.
- **Customizable Fit:** Use the included temple grip sleeves for added comfort and improved grip. Just slide onto the temples up to where you need additional grip.

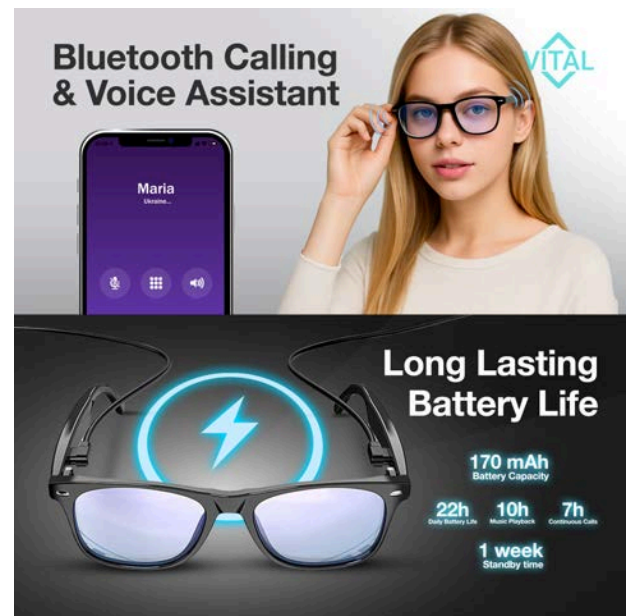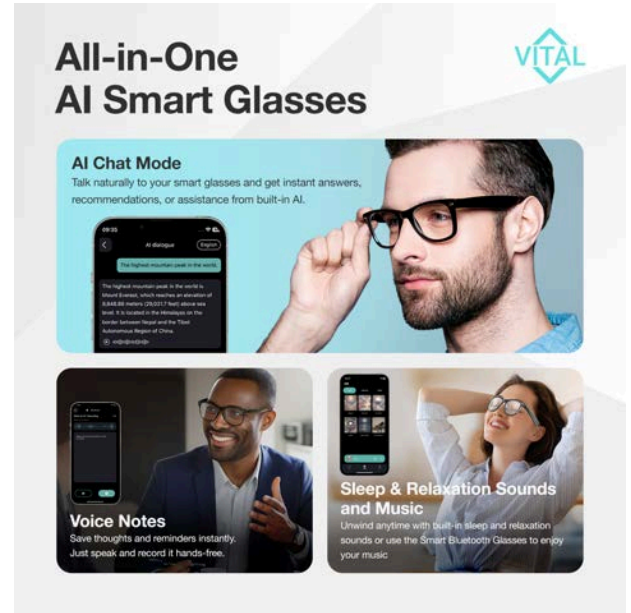

## Care and Maintenance





- **Cleaning:** Wipe lenses and frames with the included soft cloth. Avoid abrasive cleaners or solvents.
- **Storage:** Use the included soft cloth pouch to protect them from scratches and dust.
- **Charging:** Use the included USB charging cable with a standard USB port adapter. A full charge takes approximately 1.5 hours. Built-in rechargeable battery is 170mAh, lithium polymer.
- **Avoid:** Excessive heat, submersion in water, or rough handling.

# Ear Dance App Setup & Features

1. **Download the app & set up your account:** Scan the QR code or search the Apple App Store or Google Play Store for the **Ear Dance** app.




- Open the app and on the welcome screen, tap **Register** below the password field to create your account. You cannot log in until you register.
- On the Register screen, enter your email address, create and confirm a password, then tap **Register**. Now you can log in with your email address and password.
- On the Ear Dance app Home screen, tap **Connect** to pair your glasses with your app.

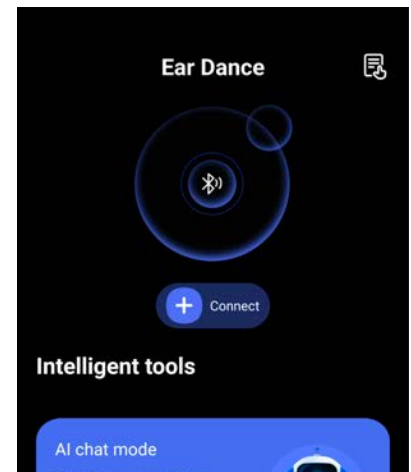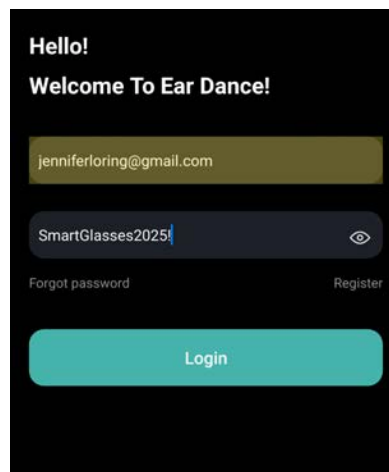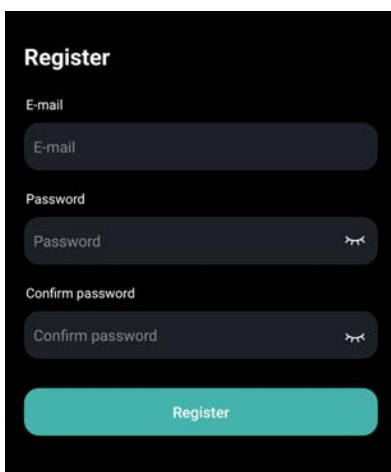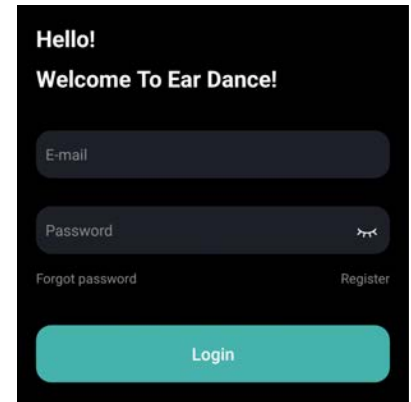

## App features include:

- AI chat mode.** Tap the **Click and Speak** button to use your voice to talk to the AI agent through the mic in your glasses and hear responses via the temple speakers. You can also tap the keyboard icon to use texting mode. Tap the microphone icon to return to voice mode.
- Translation machine mode.** Select the language to translate, then tap your language and speak. The app translates in real time. You can read and hear the translation on your device. **This feature works exclusively in the app.** If you don't have your glasses on or they're not charged, you can still use the app to translate almost any language. Great for traveling and practicing your favorite foreign languages.
- Glasses + phone mode.** In this mode, select the language you need translated and your language to translate to, then wear your glasses while someone else is speaking to see and hear real-time translation into your language. In this mode, you can read the translation on the app and hear it through the temple speakers.

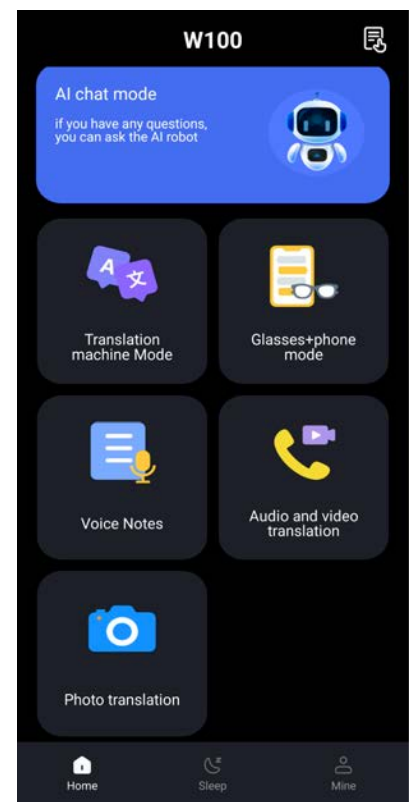

- **Voice Notes.** Tap the **Recording** button to create a new session. Select your recording language and enter a title for the recording, if desired. Tap **Confirm** to start your recording. Tap **Start >** and speak your voice note out loud. Tap the button again to pause recording. When you're finished, tap the circle/complete button. See all your voice notes in your Recording List.
- **Audio and video call translation.** See live, on-screen translations during any voice or video call.
  - Start by selecting your language and the other language you'd like to translate.
  - Choose **Video Call** or **Voice Call**, then tap **Invite friends to call** to get a link you can share. That invite link allows them to join your call and also see live, real-time translation of the conversation. They don't need the Ear Dance app, all they need is that invite link.
  - Share that invite link via text message, email, WhatsApp, etc., then tap back into the Ear Dance app to start your conversation. You'll hear the other person through the temple speakers, while real-time translations appear on the screen so you can follow the conversation without missing a thing.
- **Photo Translation.** Select Auto to auto detect the language, or tap to select any language supported in the app, then select the target language. Point your camera at what you want to translate, tap the capture button, and see the app translate it. You can also upload a photo from your device and have the text translated.
- **Sleep/Relaxation Sounds.** Tap **Sleep** in the main navigation at the bottom of the app to listen to relaxing sounds right through the temple speakers that can help you wind down for the night, or for soothing focus while working or meditating. Choose from many options: **Sleep**, **Natural**, and **Relax**.
- **Account Settings.** Tap **Mine** in the main navigation to find your account information, language setting, user agreement, privacy policy, help feedback, and operation guide.



## Troubleshooting

Here are some quick solutions to common issues with AI glasses.

- **Not pairing with app:**
  - Make sure Bluetooth is enabled on your mobile device.
  - Pair the glasses to your device first, then connect to them in the app.
  - Restart both your glasses and your phone/device.
  - Make sure you're using the Ear Dance app as noted above.
- **Translation not working:**
  - Confirm that you have a stable internet/Wi-Fi connection.
  - Make sure your microphone permissions are enabled on your device.
  - Update the app to the latest version.
- **No sound or low volume:**
  - Check the volume settings in the app or on your phone.
  - Ensure the open-ear speakers on the temples of the glasses are not blocked.
- **Battery is draining quickly:**
  - Turn off the glasses when not in use by folding the temples closed.
  - Lower the brightness and volume settings if needed.