

I68

I68 SMART WATCH

USER MANUAL

PLEASE READ THE USER MANUAL BEFORE USE




Physical Button:

Press 5seconds: power on/off

Short Press: turn back

01 Install the watch app

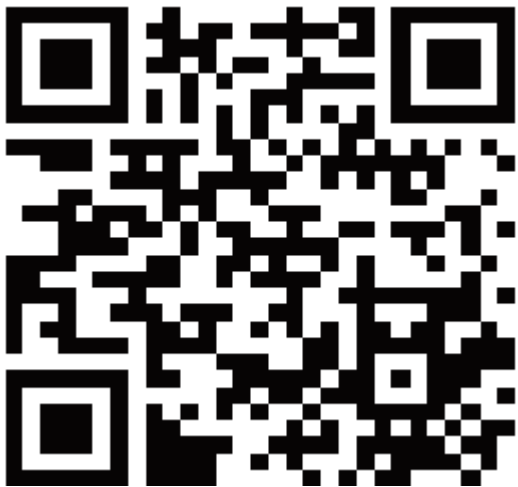

- ① Search “FitCloudPro” in the APP store (Apple store/Google store).
- ② Scan QR code to download.


Equipment requirements: iOS 7.1 and above;
Android 4.4 and above, supporting Bluetooth 5.2

User tips

- * For the first time use, please make sure the battery is fully charged with the magnetic charging cable. The charging time is about 2 hours.
- * Please do not use the fast charging head to avoid damaging the battery.
- * When installing the APP, it will be prompted to access the phone permissions. Please allow all permission:
 - ① Bluetooth
 - ② Notification (including alerts /sounds/ icon badges)
 - ③ Local network in the “FitCloudPro” APP.


02 Connect Smart Watch on the App

- Turn on phone's Bluetooth
- Open the APP FitCloudPro
- Login and set your personal information
- Click "Bind Device" and connect "I68"
- The devices get successfully connected via Bluetooth.
- Then the time, date, language of watch syncs accordingly.

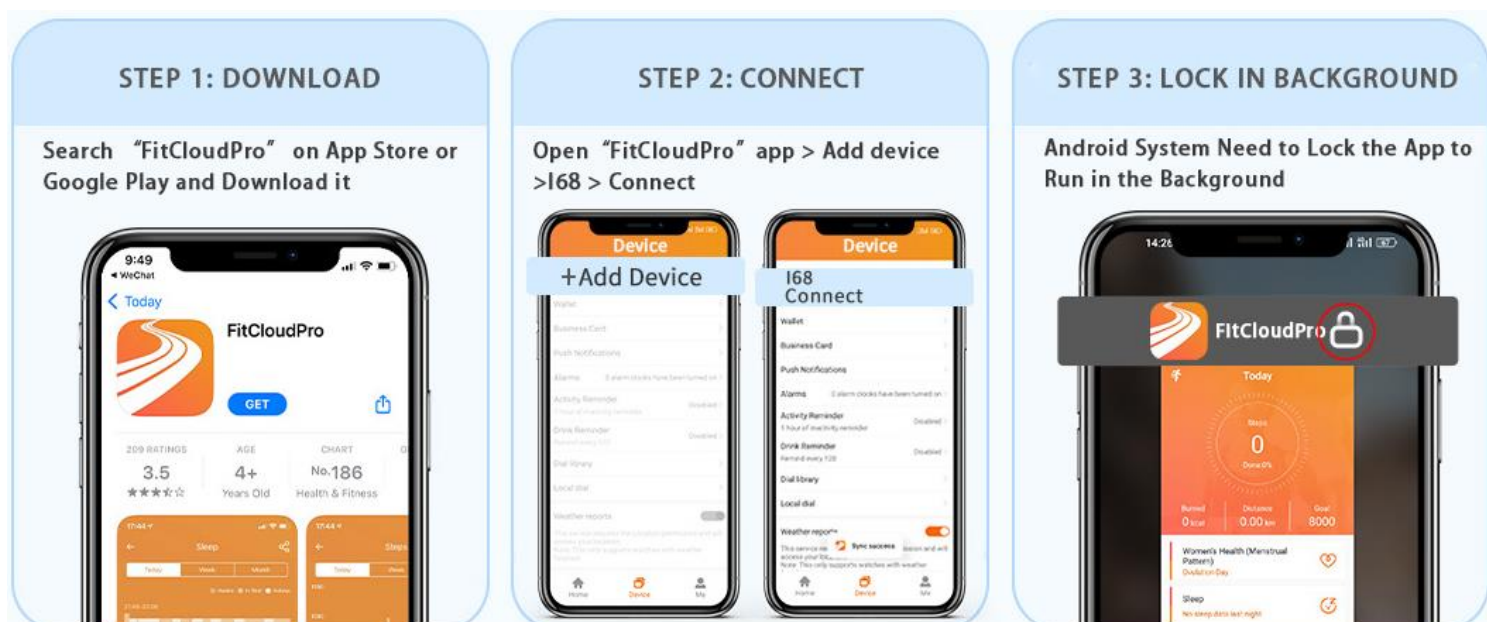


03 Connect Bluetooth Call

- Turn on audio mode: Swipe down the watch screen and turn on the Audio Mode function
- Connect Bluetooth "Watch Call": Goes to Bluetooth and find "Watch Call" and connect.
- You can make and answer calls on your watch anytime, anywhere

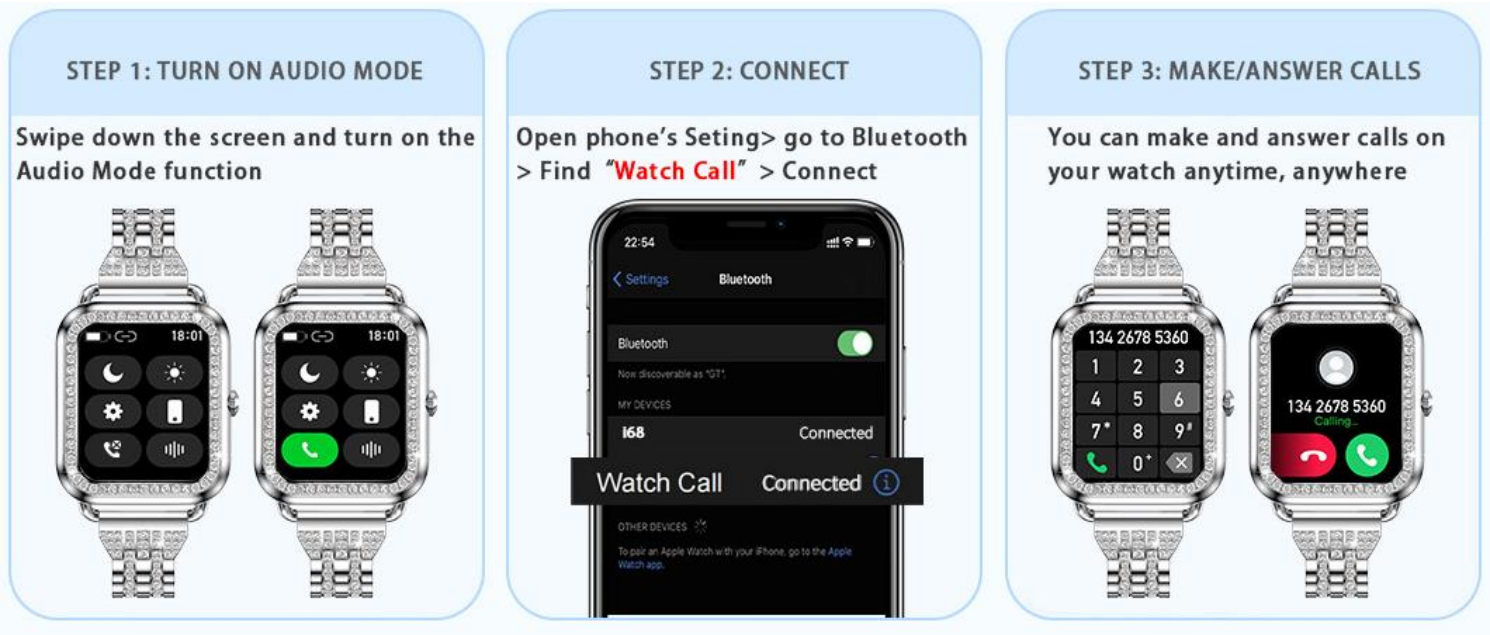

Tips

- * After **Android phone** is correctly paired and connected to the watch, it will automatically connect to the Bluetooth "Watch Call".
(No need to manually connect "Watch Call")
- * Android phone does not display bluetooth "I68"

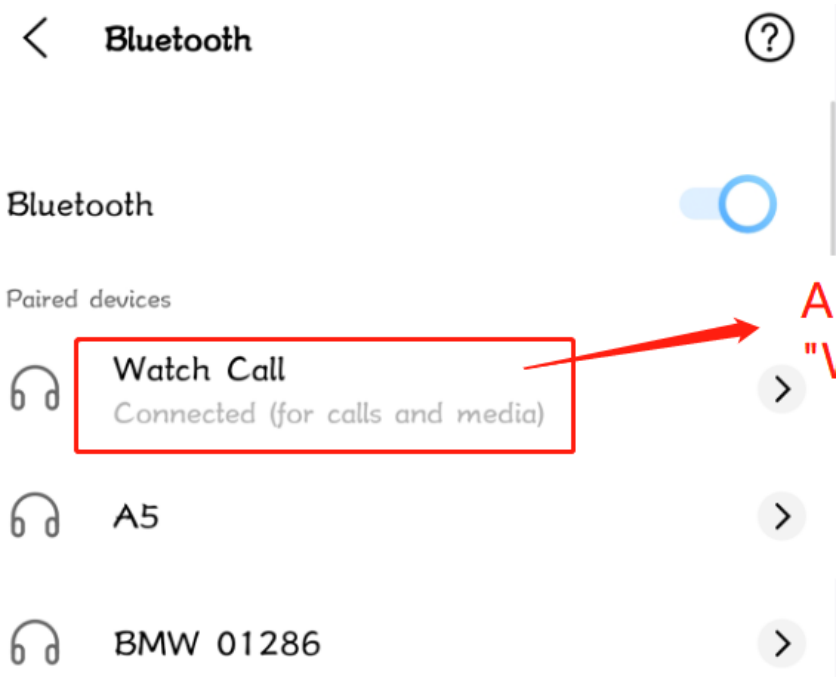


Android phone only shows "Watch Call"

* The **iPhone** needs to be connected to the "watch call" before you can use the watch to make Bluetooth calls




04 Message Notifications

Keep the Bluetooth connected, once this notifications function is enabled, the bracelet will vibrate when there are incoming calls or new messages from Whatsapp, Facebook, Twitter and so on. (Please allow all the permissions needed.)

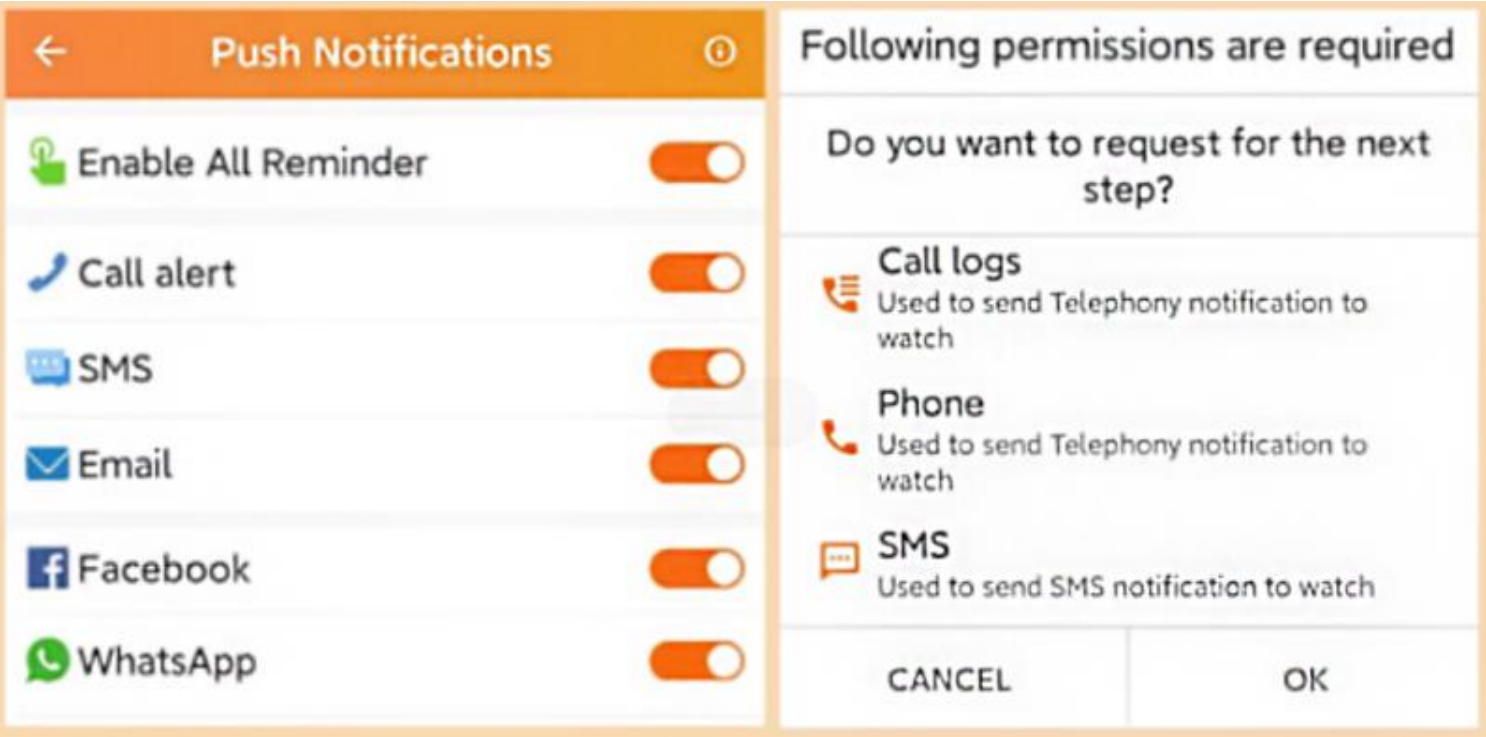


05 Main interface / dial

Customize dials on the APP FitCloudPro: Device - Dial Library, click the first icon to customize. Discover more dials on the APP, select your favorite from 190+ dials and download it to watch for free.

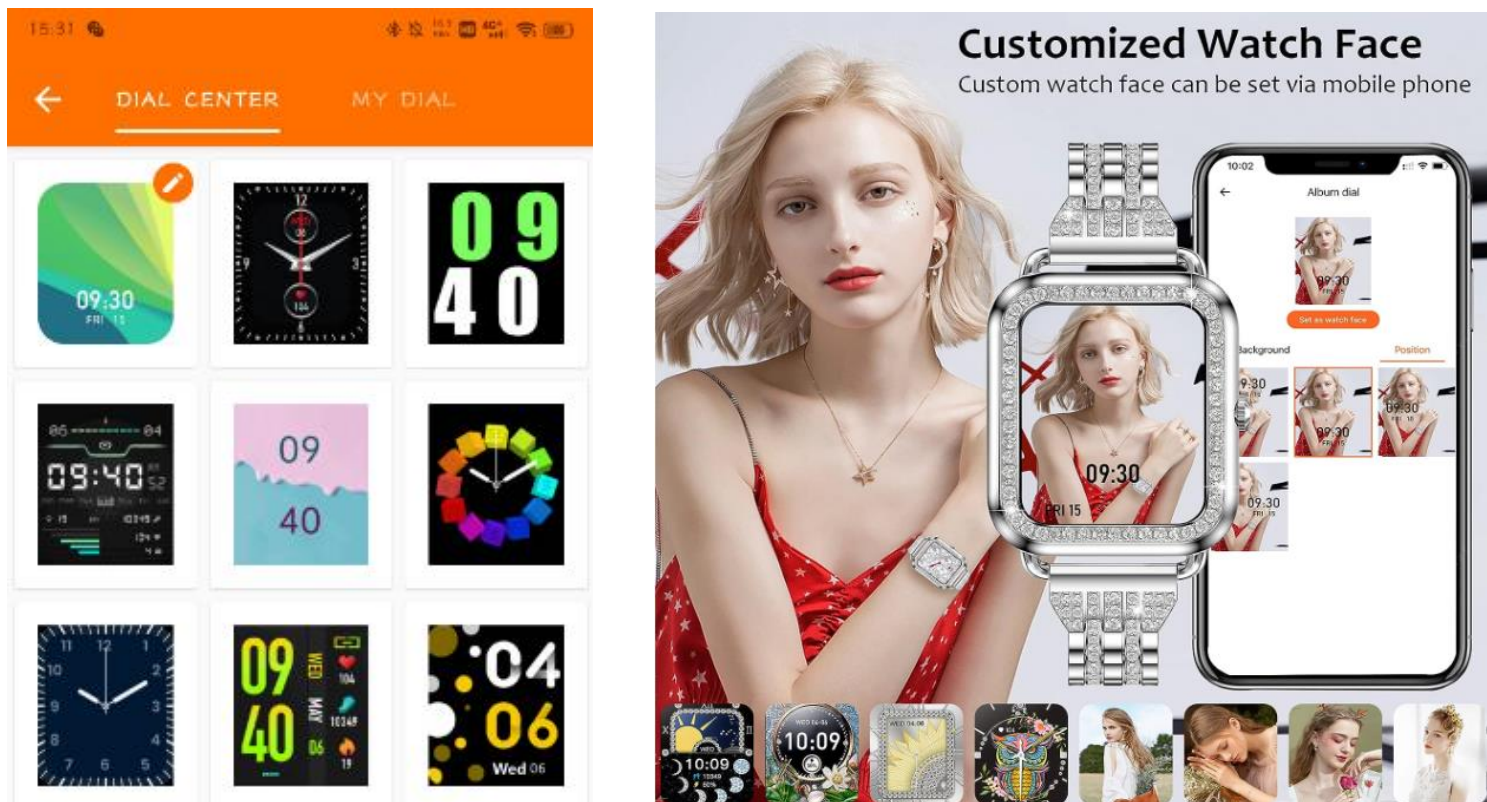

06 Health Monitor

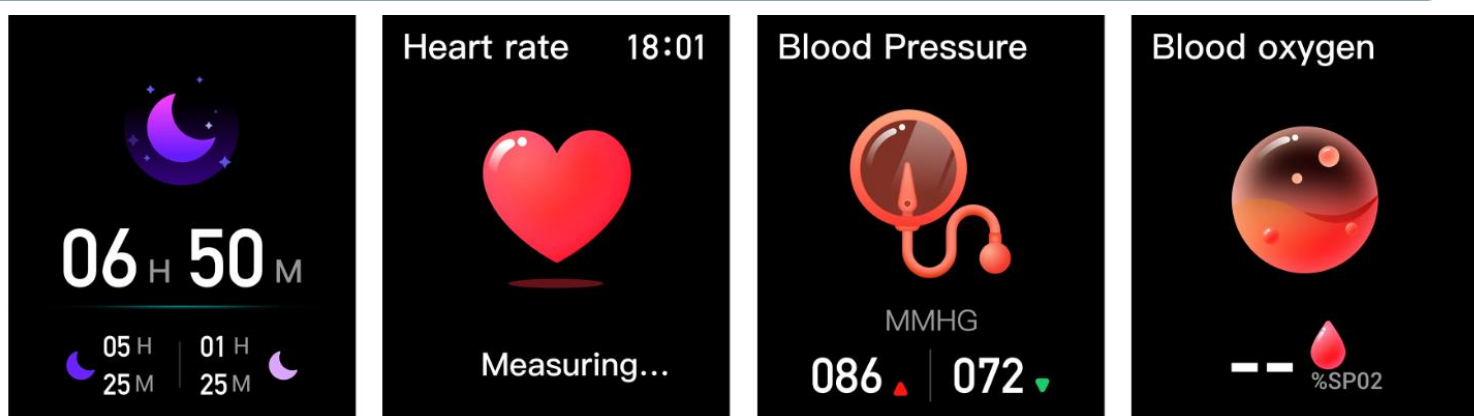

Sleep Monitor: Auto check your sleep time and quality at night.

Blood Oxygen: Click to measure for 30-60s to analyze your SpO2.

Heart Rate: Click to analyze your heart rate in real time.

Blood Pressure: Click to analyze your blood pressure.

Note: Health data is only for reference, not for medical use.

07 Excellent Customer Service

If you have any questions about the Efolen smart watch or during use, please feel free to contact us!

Note: Customer service is within 24 hours, due to time difference.

Path 1: Go to the product page. Under "Add to Cart" click "sold by" > ask a question.

Path 2: Just send an email to Efolen@163.com