



User guider of capture video by Amcap


Step 1: Please Run Amcap in the computer(make sure you exit the Portable IWB server first), and choose Device---Interactive(IND).

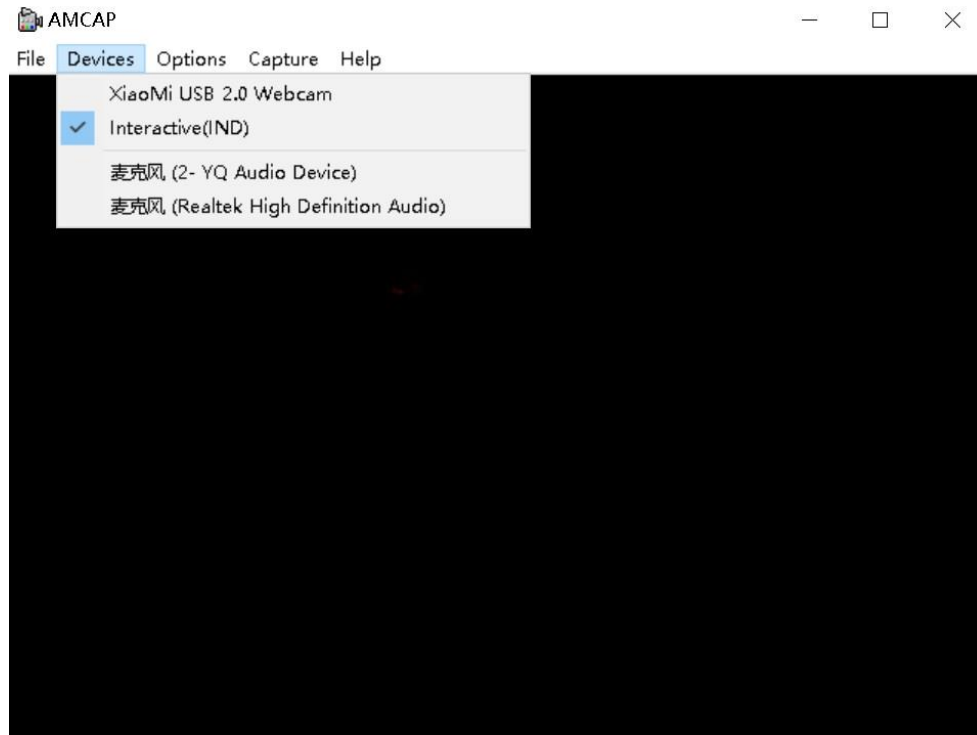

Step 2: Choose the Option---Video Capture Filter as the photo below shows:

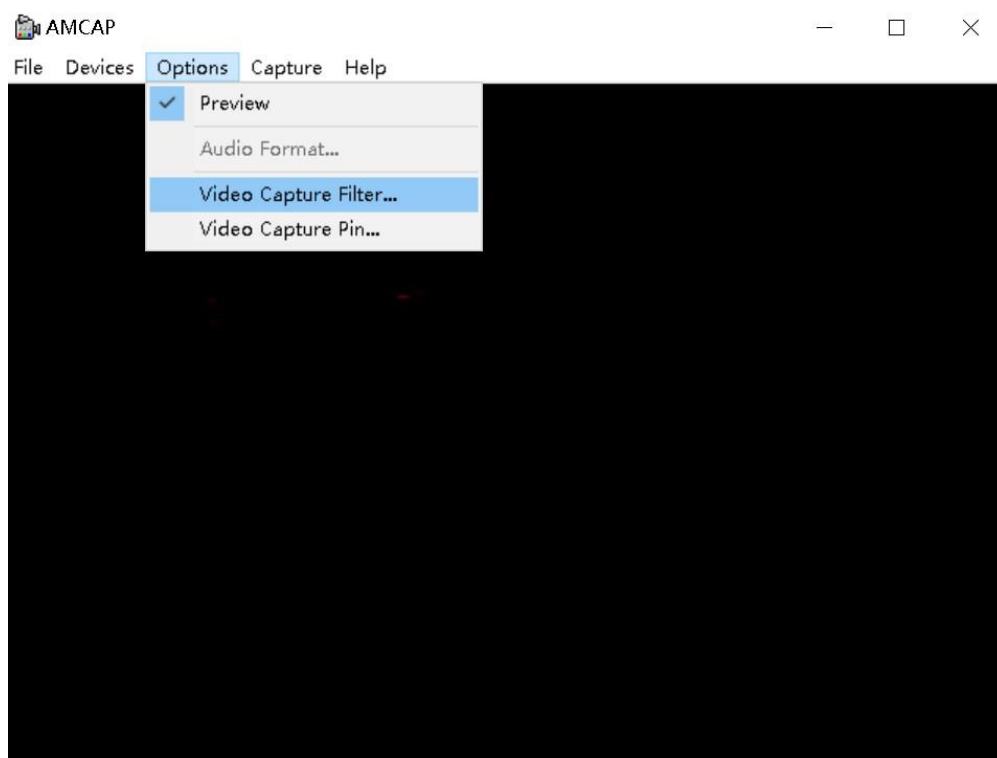

Step 3: Choose “照相机控制”---Write“-12 “ and choose it, then choose “确定”as the photo below shows

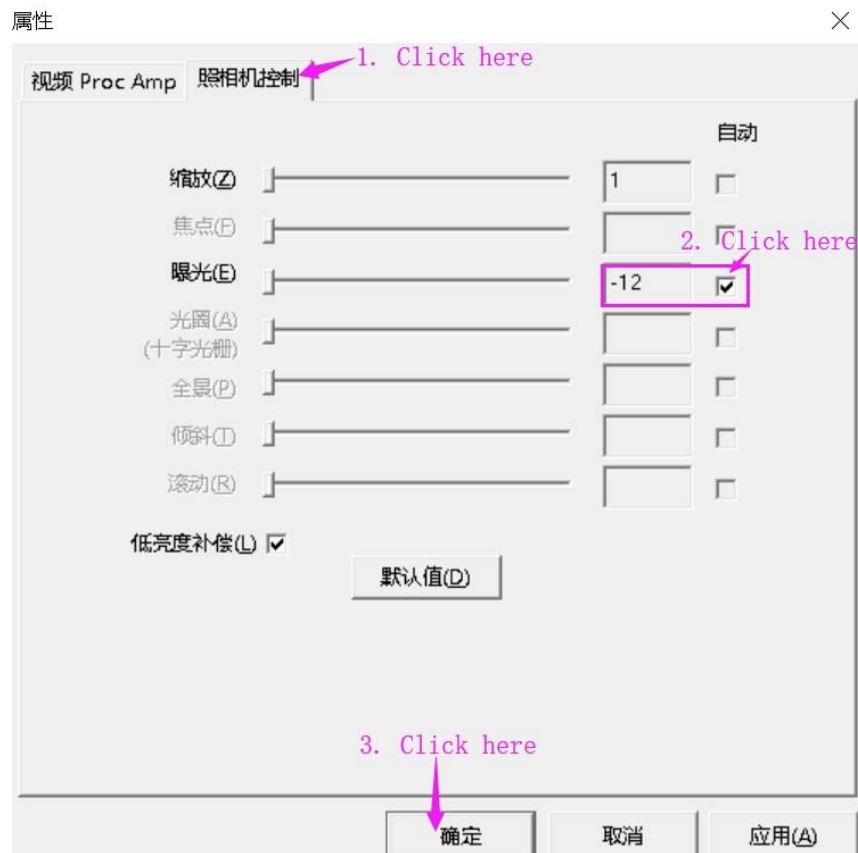

Step 4: Then you will see what the portable IWB see, use the E-pen to write on the screen/projection area. And make a video of your pen cursor/light going. Because we need to see if the pen is working right.

Stop 5: Send me the video. Then we can know where the problem is.