Keepsmile

User Manual

Package Includes


LED Strip Light	Υ	
Remote Control	Υ	
Controller Box	Υ	
User Manual	Υ	
Power Adapter	Υ	

Specifications

Voltage	24V
LED Chipset	5050 SMD
Light Color	RGB
Power Supply	AC/DC
Control Method	App&Remote
Working Temperature	-10°C -45°C (14°F- 113°F)

Installation Introduction

Choose a flat, dry and clean wall
Itear the plastic sheet bit by bit
stick the led strip on suitable surface
Connect power and controller
Connect the controller and the light strip. Note that the arrow must be arrow-to-arrow when connecting.
For the best use effect, the connection at each end should not exceed 32.8ft, otherwise the power supply and controller will be damaged.

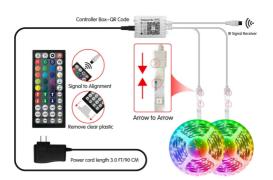

Installation Tips

please use the power adapter that we equipped or the same specification adapter as ours.

The input voltage must meet the voltage required by the light

The output power of the adapter (KW value) must be equal to or greater than the power of the Led strip lights

4 Check whether the controller and the light are connected. correctly.

Check whether the remote control is open, remove the insulation sheet, and whether the remote control battery is charged.

6. Ensure that is being used within 5 meters and aligned to the infrared receiver of the controller



WARNING

- The battery case and receiver do not immerse in water.
- The LED sriip light kit do not immerse in fire.
- Childern unde age of 16 should use this product adult supervision









DIY Remote Control

44 Key name		ey name	Function details
1	(U)	Power	Turn on/off
2	P	Pause/Run	Using under below mode only: JUMP3, JUMP7, FADE3, FADE7, FLASH, AUTO
3	<u> </u>	Regulating switch	You can adjust the brightness level of the 20 static colors from bright to dim (8 levels)
4	٥		You can adjust the brightness level of the 20 static colors from dim to bright (8 levels)
5	B G B W	Static mode key	20 static colors
6	0 0 0 0 0 0	Brightness adjustment key	The strengthen and weakening key of red, Green and Blue,works under DIY Mode, Invalid by other mode
7	UPY 0072 0P13	DIY mode key	Press DIY 1 then press 6 the arrow key of Red, Green and blue to adjust color preferences then press any other keys to save automatically, DIY2-DIY empathy operation
8	QUICK	QUICK key	Under the modes: JUMP3、JUMP7、FADE3、FADES7、 FLASH、AUTO、can speed up the change(8 levels)
9	SLC N	SLOW key	Under the modes: JUMP3、JUMP7、FADE3、FADES7、 FLASH、AUTO、can slow down the change(8 levels)
10	AUTO	AUTO key	JUMP3、JUMP7、FADE3、FADES7、and FLASH mode automatically cycle
11	FLASH	FLASH key	Turn on the white light strobe mode
12	JUMP3	JUMP3	3 colors jump change
13	JUMP7	JUMP7	7 colors jump change
14	FADE3	FADE3	3 colors gradient
15	FADE7	FADE7	7 colors gradient

Smart APP









- Scan the QR code or search "Keepsmile" to download the smart app.
- Open your phone Bluetooth to search for led lights devices, device name format: KSxx-xxxxxx



- Solution Forbid to click the led lights device name directly, they will be connected automatically when you enter the APP.
- Enter the smart APP, click car light to start your technology journey.



Smart APP 2

- Please do not click on the device name, please go directly to the "Keepsmile" app.
- When you enter the "Keepsmile" app and select "Car Light", you will see the connection status of your device.
- Auto connect successfully:



• De Click the icon and disconnect:



• Individually control one of the two sets of

equipment:





How to sync music to Keepsmile app

- * Please note for Android phones, the songs will sync from any music APP, but for iPhone users, it only can sync to music from iTunes because of Apple's system and software limitations"
- Download music on your computer.
- Download and Install iTunes on your computer
- Log on iTunes with your Apple ID and password
- Add "downloaded music" files to your iTunes
- Sync your iPhone with iTunes by your computer
- iTunes's music playlist will be automatically sync to smart app music menu.

Customer Service

- Warranty: 12-Month Limited Warranty
- Support: Lifetime Technical Support
- Email: Support003@keepsmile.vip
- (m) Official Website: https://www.amazon.com/keepsmile



Schedule

• Click to select the name of the device you want to connect:



• Click and set the product on time:



• Click and set the product off time:

