

nuwave® E1000

OXYPURE ZERO™ AIR PURIFIER



Master Your OxyPure Zero



Scan the code to watch how-to videos and more!

Owner's Manual

Model: 47251

47261

Rev.1



Questions or Concerns?

Amazon Purchases: support@nuwavenow.com
1-888-502-7807

All Other Purchases: help@nuwavenow.com
1-877-689-2838

Mon-Fri 7:30am-4:30pm CST

THANK YOU!

Congratulations on your Nuwave® purchase. We know there are many options available and sincerely appreciate the trust you have placed in us.

For the last 30 years, we have committed to introducing products that promote healthy living at affordable prices. By combining the highest quality designs with cutting edge technology, we have always strived to blend feature, function, and innovation into every product we make. We hope you will agree.

We would love to hear from you. Please feel free to reach out with any feedback or comments that could improve your experience. We would also enjoy hearing about your successes. **Scan the QR code below to email us.**



For Amazon Purchases
support@nuwavenow.com



For All Other Purchases
support@nuwavenow.com



Register Today!

Use your smartphone or device to **scan the QR code** located on the back of your unit to register your product, or **visit [nuwavenow.com/register](https://www.nuwavenow.com/register)**.

Connect with Us!



#nuwavenow

Visit [nuwavenow.com](https://www.nuwavenow.com) to see other great products and accessories.

TABLE OF CONTENTS

Important Safeguards	4-5
Parts & Accessories.....	6
Before First Use.....	7
Assembly Guide	7
Table Top Use	7
Nuwave Connect App	8
Wi-Fi Connectivity.....	9
Operating the Nuwave® OxyPure	10-12
Cleaning & Maintenance	12-14
Troubleshooting Guide	15-16
Limited Warranty	17-19



**Meets California ozone
emissions limit.
CARB certified**



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

ALWAYS KEEP THIS MANUAL HANDY FOR FUTURE REFERENCE.

READ ALL INSTRUCTIONS and WARNINGS: The failure to follow any of the important safeguards, warnings, or instructions for safe use is a misuse of the unit that can void your warranty and create the risk of serious injury. When using the unit, basic safety precautions should always be followed.

1. **ONLY** use the unit for its intended purpose.
2. To protect against the risk of electrical shock, **DO NOT** immerse the cord, plug, or any part of the unit in water or any other liquid.
3. Close supervision is necessary when the unit is used by or near children. The unit is not intended for use by children, persons with reduced physical, sensory, or mental capabilities, or those who lack expertise or knowledge of this device.
4. **DO NOT** operate the unit with a damaged cord, plug, after any malfunction, or if the unit has been dropped or damaged in any way. Contact Customer Service for more information.
5. Discard the protective plastic covering the power plug before use.
6. **DO NOT** run the cord under carpeting, throw rugs, runners or other coverings.
7. **DO NOT** route the cord under furniture or appliances. Arrange the cord away from high-traffic areas where it will not pose a tripping hazard.
8. **DO NOT** plug the unit into an outlet or power strip that is being used by other appliances.
9. Remove any dust or water from the plug, if needed.
10. **ALWAYS** set up the unit on a flat, stable surface.
11. **DO NOT** set up the unit where it could be pushed, kicked, or tripped over.
12. Leave at least 2-3 feet of space between the unit's vents and any walls.
13. **DO NOT** install the unit near a heating device, flammable or combustible gases or vapors, or in areas exposed to moisture or water.
14. **DO NOT** operate the unit on its side.
15. **DO NOT** place objects on top of the unit.
16. **DO NOT** sit or stand on, or lean against, the unit.
17. Alteration or modification of any part of the unit, or the use of attachments not recommended by the manufacturer, may cause fire, injury, or damage to property.
18. As with most electrical units, electrical parts are live even when the unit is off. Be sure the unit is unplugged when assembling.
19. **DO NOT** use the unit in a factory or industrial setting where machine oil may be present in the air.
20. Turn the power OFF on the unit before unplugging it.
21. Unplug the unit from outlet when the unit is not in use or will be left unattended for an extended period of time; before putting on or taking off parts; when removing or replacing the filters, and before cleaning.

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

22. **DO NOT** operate the unit if an abnormal sound or motion is detected.
23. If a hard or foreign object comes into contact with the fan, do not operate. Turn off and unplug the unit.
24. Inspect the unit for any loose or missing parts before and after each use. If parts are loose, damaged, or missing, contact Customer Service by emailing:
For Amazon Purchases:
support@nuwavenow.com
For All Other Purchases:
help@nuwavenow.com
25. **DO NOT** pull, lift, drag, pick up, or carry the unit by its cord.
26. **DO NOT** block the air inlet or outlet vents.
27. **DO NOT** operate the unit without filters or the Filter Access Panel in place.
28. **DO NOT** place anything with a strong odor or chemical on or close to the odor sensor.

FILTER CHANGING PRECAUTIONS

1. Once all filters have been removed, the body of the unit can be washed with warm, soapy water. Dry thoroughly before replacing the filters.
2. **ALWAYS** use rubber gloves when handling the filters.
3. When removing dirty filters, **ALWAYS** do so outside or in a well ventilated area.
4. **ALWAYS** replace your filters with Nuwave filters made for your model of air purifier.

ELECTRICAL INFORMATION

These servicing instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Power-Supply Cords

A short, detachable power-supply cord is provided to reduce the risk of becoming entangled in, or tripping over, a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer, detachable power-supply cord or extension cord is used:


1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The longer cord should be arranged so that it will not drape over any countertop or tabletop where it could be pulled on or tripped over unintentionally.
3. The unit should be operated on a separate electrical outlet from other operating appliances due to wattage limitations.

WARNING

RISK OF ELECTRIC SHOCK: To reduce the risk of electric shock, this equipment has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet. Do not alter the plug in any way.


These servicing instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

PARTS & ACCESSORIES

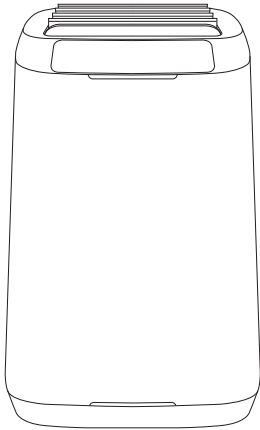

Power Base


Part #: OTA5

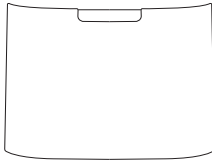

Filter Access Panel

Part #: OTP3


Side

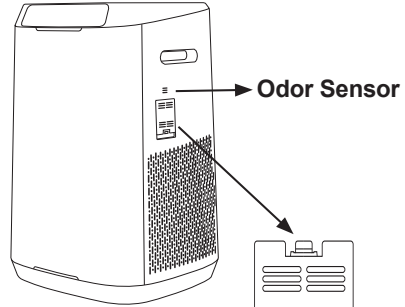

Odor Sensor

Dust Sensor Cover

Part #: OTP2




Wheels (2)

Part #: OTP1




Wheels with Brake (2)

Part #: OTP4

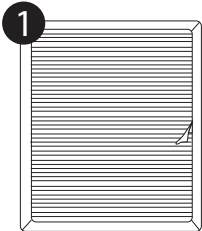


**Stainless Steel
Prefilter (2)**

Part #: OTA4

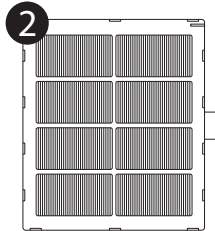


Bio-Guard® Filter (2)

Part #: OTA3

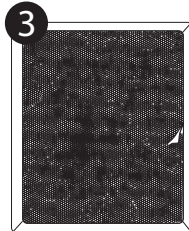

**Ozone Emission
Removal Filter (2)**

Part #: OTA2

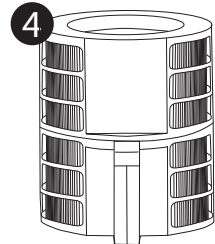

**Bio-Guard® 360
Filter**

Part #: OOA1

ORDERING PARTS

Keeping your unit up and running with new filters is a breeze.


1. Locate the part number on the above images, then
2. Contact Nuwave Customer Service by emailing:

For Amazon Purchases: support@nuwavenow.com


For All Other Purchases: help@nuwavenow.com, or order online at www.nuwavenow.com.

ASSEMBLY



Open

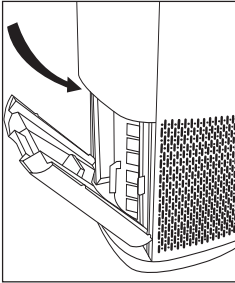


Access to Filters

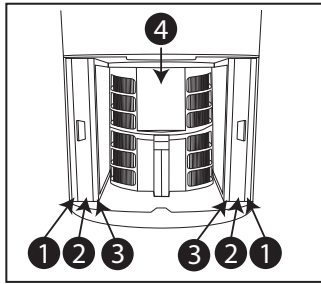


Removing & Inserting Filters

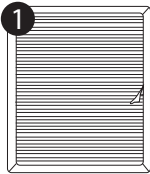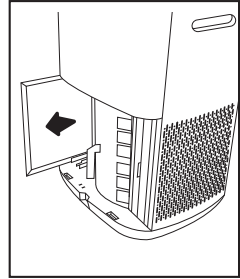


**Stainless Steel
Prefilter (2)**

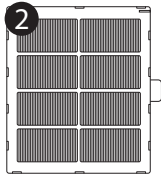

**Bio-Guard®
Filter (2)**

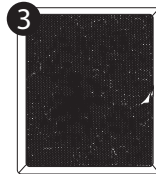


**Ozone
Emission
Removal
Filter (2)**

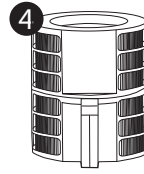

**Bio-Guard®
360 Filter**

BEFORE USE:

1. Make sure the unit is unplugged. Open the panel on the back to expose the filters.
2. Pull the filters from their slots.
3. Remove the plastic wrapping from the filters. The Bio-Guard Filter is not wrapped.
4. Fully reinsert the filters into the OxyPure and close the panel. The Power button will flash if not fully inserted.
5. Remove the sticker from the control panel.

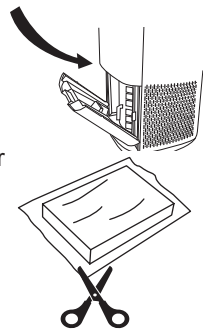

AIR FILTER ASSEMBLY

The OxyPure comes with seven different preassembled filters inside the unit (see diagram above. Access to Filters). Each filter is labeled with a number and an “L” or an “R” for Left and Right. Match these with the slot numbers when installing the filters. When the filters require cleaning, please refer to **Cleaning & Maintenance**. To install the Bio-Guard® 360 filter, slide it into place in the center.

TABLETOP USE

To use the unit as a tabletop unit, remove the wheels to ensure that it is stable and does not roll off the table.

THE NUWAVE® CONNECT APP

MONITOR AND CONTROL THE unit REMOTELY

The OxyPure Smart Air Purifier is equipped to operate using **WI-FI**. This allows you to conveniently operate your new air purifier from nearly any location, whether at home or while you are out and about, as long as you have a reliable Internet connection.

Download the Nuwave Connect App

This is an optional feature that is not required to operate your unit.

Using the QR reader in your Camera App:

1. Scan the QR code below.



2. It will take you to the App's download page on either the Google Play Store or the Apple AppStore, then just follow the download and installation instructions.

Downloading a QR reader App:

If your phone doesn't have that capability built-in, simply download a 3rd-Party QR Scanning App before scanning the Nuwave QR Codes and you are ready to go.

1. Open your device' mobile app store (Apple App Store or the Google Play Store).



2. Search for "QR code readers."
3. Simply download the QR code reader to your phone, open it, scan the code and you are ready to go.



Auto Scan Mode

1. Once you download the Nuwave® Connect app, ensure your phone is connected to your home Wi-Fi network on the 2.4GHz frequency and that your phone's Bluetooth is on.
2. Turn on the unit and activate Wi-Fi Pairing Mode by pressing and holding **ULTIMATE CLEAN** until the light next to the **Wi-Fi** symbol begins to blink rapidly.
3. In the Nuwave® Connect app, tap the **+** symbol, then tap **Auto Scan** and select your device.
4. Enter your **Wi-Fi** network's password and tap Confirm. If the connection is successful, the app will display "Added Successfully" on the screen.

WiFi LED Status Light Pairing Mode & Standby Mode

Solid Light.

The unit is paired with the wifi network and ready to be used.

Rapid Blinking Light.

The unit is in Pairing Mode.
The unit will stay in Pairing Mode for up to 3 minutes or until your device is paired.

Slowly Blinking Light.

The unit is in AP Pairing Mode.

No Light. The unit's WiFi is off.

THE NUWAVE® CONNECT APP

MONITOR AND CONTROL THE unit REMOTELY

If you're unable to pair your unit using Auto Scan, you can alternatively try one of the following pairing methods.

AP Mode

1. If you can't connect your unit using Auto Scan, follow the instructions in the app to reset the connection process.
2. Press and hold **ULTIMATE CLEAN** until the Wi-Fi light begins blinking slowly to enable AP Mode.
3. Tap the **+** symbol, then select the unit you want to add to the network.
4. Confirm that the Wi-Fi light on your unit is blinking slowly and tap AP Mode on your phone screen.
5. Connect your phone to the available hotspot following the instructions on the screen.
6. Once connected, return to the Nuwave Connect app and the unit will begin connecting automatically.
7. Once your unit is successfully connected, tap Done.

If the unit did not connect to your network, the Wi-Fi light will turn off. Repeat the steps for pairing. Make sure to select the proper Wi-Fi network and type the correct password.

Note: If your home network doesn't broadcast in a 2.4GHz or a dual band broadcast frequency, contact your ISP to inquire about setting up a 2.4GHz network.

EZ Mode


1. Tap the **+** symbol, then select the unit you want to add to the network.
2. Enter and confirm your Wi-Fi network password.
3. Tap AP Mode in the top right of your screen, then select EZ Mode to switch pairing modes.
4. Confirm that the Wi-Fi light on your unit is blinking rapidly.
5. Once the unit is connected, tap Done.

OPERATING THE NUWAVE® OXYPURE

CONTROL PANEL • POWER • MODES & FUNCTIONS

Operating the unit



The unit's control panel allows you to turn the unit on and off, choose an operating mode or function (see below), and monitor your filter health.

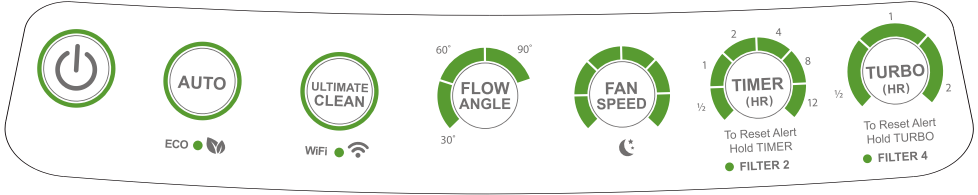

AIR/ODOR QUALITY - DETECTS PARTICLES AS SMALL AS 2.5/100MM

Low PM Level

High PM Level



AIR AND ODOR LEDS

The unit will display the Air/Odor quality based on the particulate matter in the air from low to high as represented below. If the PM level in the air exceeds the upper limit of the range, a warning is triggered with a beeping sound and a flashing LED. To turn off this warning, press AUTO and Fan Speed at the same time. Press the same buttons to turn the warning feature back on.



POWER BUTTON

1. Press **POWER** to turn the OxyPure on or off.
2. POWER will be lit green when on
3. POWER will be lit red when off.

Note: When powered on, the OxyPure will execute any previously selected functions or modes.

AIR QUALITY INDICATORS

The Air/Odor Quality indicators will automatically measure and display the current air quality in the room. These indicators will be lit to show the air quality (see the above graph). The CLEAN AND REPLACE FILTER INDICATOR lights next to CLEAN FILTER 2 and REPLACE FILTER 4 will illuminate, indicating that your filters will need to be cleaned.

OPERATING THE NUWAVE® OXYPURE

MODES & FUNCTIONS



AUTO MODE

When the AUTO function is used, the OxyPure will adjust the fan speed automatically dependent on the air quality.

- AUTO will light up green when selected.
- There is no time limit unless TIME is chosen.
- AUTO cannot be used with FAN or ULTIMATE CLEAN modes.

Auto + Turbo

1. Press **AUTO**.
2. Press **TURBO** to the amount of desired.



ULTIMATE CLEAN MODE

When in ULTIMATE CLEAN mode, the OxyPure will automatically adjust to the highest fan speed dependent when poor air quality is detected.

- ULTIMATE CLEAN will be lit green when selected.

Ultimate Clean + Turbo

1. Press **ULTIMATE CLEAN**.
2. Press **TURBO** to the time desired.

Ultimate Clean + Timer

1. Press **ULTIMATE CLEAN**.
 2. Press **TIMER** to the time desired.
- ULTIMATE CLEAN will not work with AUTO or FAN.

ECO ● ECO Mode

Allows you to save energy by turning off the unit's fan and lights until poor air quality is detected. While in Eco Mode, the fan will automatically run when the PM level is high and will remain off when the PM level is low.

1. Press and hold **AUTO**, and ECO will light up.
2. To turn off Eco Mode, press and hold **AUTO**; the unit will turn off, and the Power button will light up red.



TURBO MODE

The Turbo function cleans your air using the highest fan speed at the time selected. Works with AUTO and ULTIMATE CLEAN.

1. Press **TURBO** to the amount of working time and add function as desired
2. To exit TURBO, press **TURBO** until no bars are lit.

Note: If no other button is pressed after TURBO, then the unit will go to the Fan Speed set prior.

Turbo + Timer

To operate longer than 2 hours.

1. Press **TURBO** to 2 hours.
2. Press **TIMER** and set the additional time desired.



SLEEP MODE

When in Sleep Mode the LED lights will be off but the fan will still be active. Adjust the fan speed to your preference prior to going into Sleep Mode.

1. Press and hold **FAN SPEED** for 2 seconds to activate SLEEP Mode.
- The OxyPure will run at the fan speed that was previously selected.
2. To turn off SLEEP Mode, press any button.

Note: ULTIMATE CLEAN and TURBO will work while the OxyPure is in SLEEP Mode.



FAN SPEED

You can adjust from 6 different speeds.

1. Press **FAN** to desired speed.
- The fan cannot be turned off.
 - On the lowest fan speed, 1 bar will be lit.

Fan Speed + Timer

1. Press **FAN** to choose the desired speed.
2. Press **TIMER** to the time desired.

OPERATING THE NUWAVE® OXYPURE



TIMER

Use the Timer function to choose the duration of operation.

1. Press **TIMER**. The bar next to ½ hour will be lit. There are 6 preset times to choose from the bar will be lit green for the selected time: ½ hour, 1, 2, 4, 8, or 12 hours.
2. To turn off the TIMER, press **TIMER** one time when the 12 is lit, no bars will be lit.



AIR FLOW ANGLE

Pressing **AIR FLOW ANGLE** will allow you to adjust how the air leaves the unit, going from 30° to 60° to 90° and back.

MUTE

To mute the beep sounds. Press and hold **AIR FLOW ANGLE** for 2 seconds, a beep will be heard. Repeat to unmute.


CLEANING & MAINTENANCE

FILTER CLEANING TIPS AND TRICKS

Over time, the filters in your unit can get caked with contaminants that can be accidentally inhaled or released into the air if the filters are not handled properly during cleaning.

GENERAL TIPS

1. **Always Wear a Mask and Rubber Gloves**
This will prevent accidental inhalation of any contaminants when cleaning your filters.
2. **Move the unit, Not the Filters** Move the unit as close as possible to the location where you will clean the filters. This will minimize the chance of the filter being shaken.
3. **Handle the Filters Carefully**
As you remove the filters from the unit, be careful not to shake, drop, bump, or otherwise agitate them as doing so can cause the release of trapped contaminants.
4. **Dry the Filters Completely**
Never install a wet or damp filter into your unit as doing so will interfere with the function of the unit.
Note:
When drying filters a fan can be used, be sure it is away from a heat source.
5. **Clean the Louvers**
Raise the louvers to a 90 degree angle and then unplug the unit. That will keep them vertical while you wipe them down on each side with a warm, damp cloth. Plug the unit back in and allow them to come down again.

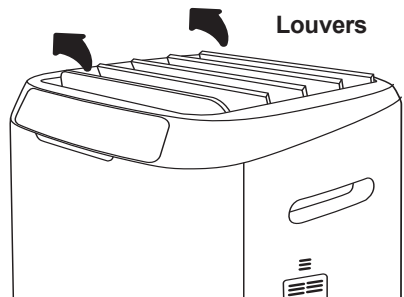


CLEANING AND MAINTENANCE

FILTER CLEANING TIPS AND TRICKS

THE STAINLESS-STEEL PREFILTER

(Filter 1)


The Prefilters need to be cleaned at least once every two months, depending on use.

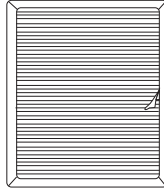

When Cleaning:

- Use a vacuum with a brush attachment to remove any dust or lint.
- Clean the filter with warm soapy water.
- Rinse the filter and allow to dry thoroughly. This can take up to 24 hrs.

THE BIO-GUARD AND BIO-GUARD 360 FILTERS (FILTERS 2 & 4)

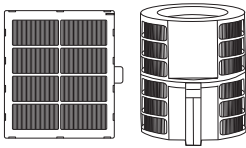

1. Remove the filters and immerse them in water.
2. Spray the filters with a mild detergent and let them sit for 2 – 3 minutes.
3. Submerge the filters in warm water, shake, and remove. If you cannot fully submerge the Bio-Guard® 360 Filter, then place it under low-pressure running water.
4. Repeat this process until the filters are clean.
5. Rinse the filters with warm water (see 3 above).
6. Dry the filters completely, out of direct sunlight, **DO NOT** use a heat source.

Note: The Bio-Guard™ Filter may discolor and retain odor after prolonged exposure to thick smoke and strong odors. This prolonged exposure will require more frequent cleanings to ensure maximum filtration efficiency.

When Cleaning:

- Immerse the filters in water immediately to eliminate the chance of any contaminants being released into the air.
- Wash and rinse as directed, but only long enough to clean the filter.
- After rinsing, shake the water out the filter to help dry the filter's internal electrical components.
- Dry thoroughly, away from direct sunlight, in a room with a strong breeze or a fan to blow air through the filter.
- Remember: The Bio-Guard Filter carries an 8,000V charge when it is operating, It **MUST** be completely dry, this can take up to 24 hours before it can be reinstalled into the unit.

THE OZONE EMISSIONS REMOVAL FILTER (FILTER 3)

1. Remove the filters. If possible, take them outside to clean.
2. Gently, but thoroughly, clean the filters using a brush-tipped vacuum.
3. Repeat the process on the other side. **DO NOT GET WET.**

WARNING

DO NOT immerse, wash or wipe with water, this will result in permanent damage to the **Ozone Filter.** It must be replaced!


Bio-Guard® Filter Cleaning Schedule

3 Months	Green	Indicates that the Bio-Guard filters SHOULD be cleaned to maintain optimal performance (Nuwave Recommendation).
6 Months	Red	When either light turns red (after about 6 months), that Bio-Guard filter MUST be cleaned.

CLEANING & MAINTENANCE

When Cleaning the Ozone Emissions Removal Filter:

- **DO NOT** get the Ozone Emissions Removal Filter damp or wet.
- Take this filter outside if at all possible.
- Clean with a brush-equipped vacuum.
- Marks on the filter media are normal and expected. They have no effect on the filter's functionality.

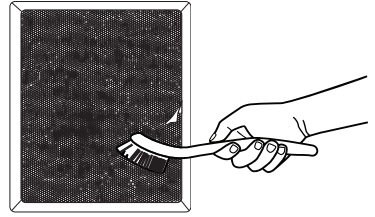


CLEANING THE ODOR SENSOR

The Odor Sensor is behind the three slots above the Dust Sensor Cover and may **ONLY** be cleaned using a brush-tipped vacuum.

CLEANING THE DUST SENSOR

The Dust Sensor is located on the side of the unit.

1. Open the Dust Sensor Cover.
 2. Using a dry cotton swab or small, soft brush, gently remove any dirt or dust from the Dust Sensor center opening.
 3. For more buildup on the Dust Sensor, wipe it with a slightly wet cotton swab.
 4. Remove any moisture with a dry cotton swab.
- The Dust Sensor requires regular cleaning (approximately every 3 months) for the unit to operate efficiently.
 - If your unit is set up in an area with high dust accumulation, more frequent cleaning of the Dust Sensor is needed.
 - **ONLY** use the cotton swab on the Dust Sensor.

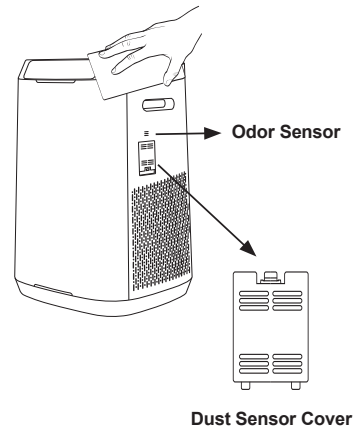

TROUBLESHOOTING GUIDE

The unit does not turn on.

1. The plug is not in the wall outlet. Plug it into the wall outlet.
2. **POWER** on the touch pad panel is not on. Press **POWER**.
3. The Filter Access Panel in the back is off or loose. Make sure the Filter Access Panel is on securely. The Power button will blink red.
4. If you are unable to close the Filter Access Panel for any reason, the unit will not operate and you will need to contact Nuwave Customer Service. **Exercise caution to ensure the tabs are not damaged when securing the Filter Access Panel.**

TIMER does not work when pressed.

The unit is not reading the function selected. Press **FAN SPEED** or **AUTO**, then press **TIMER**.

The fan is not blowing.

1. An appropriate outlet is not being used. Make sure the outlet has appropriate voltage for use.
2. The Filter Access Panel in back is not properly in place. Make sure the Filter Access Panel is on securely.

Speed of the airflow is not changing when FAN SPEED is pressed.

The unit may be in **AUTO** mode. Set the unit to another operating mode on the touch pad then press **FAN SPEED**.

Airflow from the Top Vent is weak.

The air filter(s) are dirty. Clean the air filters.

The unit[®] is producing smoke or odor.

The air filter(s) are dirty. Clean the air filters. If the problem continues, contact Customer Service.

CLEAN FILTER Indicators have not reset after the filter(s) have been cleaned.

1. The Odor Sensor is not reading the clean filter. Turn the unit off then on again. Press and hold down **TIMER** for 2 seconds until a beep is heard.
2. Turn the unit off, unplug and adjust the filter(s). Plug in and turn the unit on again.
3. The Filter Access Panel in back is not securely in place. Make sure Filter Access Panel is on securely.
4. The Dust Sensor is dirty. Clean the Dust Sensor.

TROUBLESHOOTING GUIDE

ULTIMATE CLEAN does not come on when pressed.

The unit is not reading the function selected. Turn the unit on and off by pressing **POWER** twice.

Power is blinking red.

When the Filter Access Panel is removed, the power icon will be back-lit solid red. Pressing **POWER** will make it blink. However, as a safety measure, the unit will not operate when the Filter Access Panel is removed. Ensure that Filter Access Panel is installed securely.

The Odor Sensor is not resetting itself and the indicator light is not clearing.

Contact Customer Service by emailing:

For Amazon Purchases: *support@nuwavenow.com*

For All Other Purchases: *help@nuwavenow.com*.

LIMITED WARRANTY

THE MANUFACTURER WARRANTIES

Nuwave, LLC warrants that Nuwave® OxyPure Zero Smart Air Purifier will be free from manufacturer defects for 1 year from the date of purchase, under normal household use, and when operated in accordance with the Manufacturer's written instructions. The Limited Warranty covers the Original Purchaser only. The Manufacturer will provide the necessary parts and labor to repair the product at the Nuwave LLC Service Department. After the expiration of the warranty, the cost of the parts and labor will be the responsibility of the owner.

THE WARRANTY DOES NOT COVER

The Limited Warranty is voided if repairs are made by an unauthorized dealer, or the serial number data plate is removed or defaced. Normal deterioration of finish due to use or exposure is not covered by this Warranty. This Limited Warranty does not cover failure, damages, or inadequate performance due to accident, acts of God (such as lightning), fluctuations in electric power, alterations, abuse, misuse, misapplications, corrosive-type atmospheres, improper installation, failure to operate and maintain the unit in accordance with the Manufacturer's written instructions, failure to regularly clean and maintain the reusable filters in accordance with the Manufacturer's written instructions, abnormal use, commercial or rental uses, or resold units. Nuwave LLC reserves the right to void the Limited Warranty, where allowable by law, for products purchased from an unauthorized dealer.

TO OBTAIN SERVICE

The owner shall have the obligation and responsibility to pay for all services and parts not covered by the warranty; prepay the freight to and from Service Department for any part or system returned under this warranty; and carefully package the product using adequate padding material to prevent damage in transit. The original container is ideal for this purpose. Include in the package the owner's name, address, daytime telephone number, a detailed description of the problem, and your Return Goods Authorization (RGA) number by emailing:

For Amazon Purchases: support@nuwavenow.com

For All Other Purchases: help@nuwavenow.com

to obtain the RGA number. Provide the serial number and proof of date of purchase (a copy of the receipt) when making claims under this warranty.

MANUFACTURER'S OBLIGATION

The Manufacturer's obligation under this Limited Warranty is limited, to the extent allowable by law, to repairing or replacing any part covered by this Limited Warranty which upon examination is found to be defective under normal use. The Limited Warranty is applicable only within the continental United States and only to the original purchaser of the manufacturer's authorized channels of distribution. **THE LIMITED WARRANTY MAY NOT BE ALTERED, VARIED OR EXTENDED EXCEPT BY A WRITTEN INSTRUMENT EXECUTED BY THE MANUFACTURER. THE REMEDY OF REPAIR OR REPLACEMENT AS PROVIDED**

UNDER THIS LIMITED WARRANTY IS EXCLUSIVE. IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES TO ANY PERSON, WHETHER OR NOT OCCASIONED BY NEGLIGENCE OF THE

LIMITED WARRANTY

MANUFACTURER, INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOSS OF USE, COSTS OF SUBSTITUTION, PROPERTY DAMAGE, OR OTHER MONEY LOSS. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation exclusions may not apply. This Limited Warranty gives specific legal rights, and there may also be other rights which vary from state to state. **EXCEPT AS OTHERWISE EXPRESSLY PROVIDED ABOVE, THE MANUFACTURER MAKES NO WARRANTIES EXPRESSED OR IMPLIED ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE TO ANY OTHER PERSON. READ YOUR OWNER'S MANUAL. IF YOU STILL HAVE ANY QUESTIONS ABOUT OPERATION OR WARRANTY OF THE PRODUCT, PLEASE CONTACT NUWAVE LLC.**

DISPUTE RESOLUTION PROCEDURE

For disputes relating to use of the website or use or purchase of a Nuwave product or service (collectively "Disputes"), you agree to first contact Nuwave LLC, by emailing legal@nuwavenow.com. If we cannot resolve your dispute informally, any and all disputes shall be submitted to final and binding arbitration. You may start the arbitration process by submitting in writing a demand to the American Arbitration Association ("AAA") and sending a copy to Nuwave. Nuwave will pay all filing costs. A single arbitrator of the AAA will conduct the arbitration in a location convenient to you or by phone. The arbitrator's award will be binding and may be entered as a judgment in a court of competent jurisdiction. The arbitration will be conducted in accordance with the provisions of AAA's Commercial Arbitration Rules and Mediation Procedures in effect at the time of submission of your demand for arbitration. See https://www.adr.org/sites/default/files/CommercialRules_Web.pdf. Except as may be required by law as determined by an arbitrator, no party or arbitrator may disclose the existence, content, or results of any arbitration hereunder without prior written consent of both parties.

A. WAIVER OF RIGHT TO SUE. By agreeing to arbitration, you understand that, to the maximum extent permitted by law, you are agreeing to waive your right to file suit in any court, to a court hearing, a judge trial, or a jury trial.

B. CLASS ACTION WAIVER. To the maximum extent permitted by law, you expressly agree to refrain from bringing or joining any claims in any representative or class-wide capacity, including but not limited to, bringing or joining any claims in any class action or class-wide arbitration.

C. OPT OUT PROCEDURE. To request to opt out of arbitration you must contact Nuwave LLC by emailing:

For Amazon Purchases: support@nuwavenow.com

For All Other Purchases: help@nuwavenow.com.

You will have 30 days from the date of product delivery to opt out of arbitration with respect to any dispute arising out of or relating to use or purchase of any Nuwave product. If more than 30 days have passed, you are not eligible to opt out of arbitration and will have waived your right to sue or participate in a class action with respect to the dispute arising out of your purchase or use of a Nuwave product. For any dispute arising out of your use of Nuwave's website, you have 30 days from the date you provided information to the website to opt out of arbitration. If more than 30 days have passed, you are not eligible to opt out of arbitration and you will have waived your right to sue and participate

LIMITED WARRANTY

in a class action with respect to the dispute arising out of your use of Nuwave's website.

D. SOME MATTERS ARE NOT SUBJECT TO ARBITRATION. Notwithstanding the foregoing, the following shall not be subject to arbitration and may be adjudicated only in the state and federal courts of Illinois: (i) any dispute, controversy, or claim relating to or contesting the validity of our intellectual property rights and proprietary rights, including without limitation, patents, trademarks, service marks, copyrights, or trade secrets; (ii) an action by a party for temporary, preliminary, or permanent injunctive relief, whether prohibitive or mandatory, or other provisional relief; or (iii) interactions with governmental and regulatory authorities. You expressly agree to refrain from bringing or joining any claims in any representative or class-wide capacity, including but not limited to, bringing or joining any claims in any class action or any class-wide arbitration.

READ YOUR OWNER'S MANUAL

If you still have any questions about operation or warranty of this product, please contact Nuwave LLC at:

For Amazon Purchases: support@nuwavenow.com

For All Other Purchases: help@nuwavenow.com.

Para la versión en español de este manual,
visita www.nuwavenow.com.

www.nuwavenow.com



nuwave[®]

OXPURE ZERO™ AIR PURIFIER
E1000

Master Your OxyPure Zero



Scan the code to watch
how-to videos and more!

Questions or Concerns?

Amazon Purchases: support@nuwavenow.com
1-888-502-7805

All Other Purchases: help@nuwavenow.com
1-877-689-2838

Mon-Fri 7:30am-4:30pm CST

FOR HOUSEHOLD USE ONLY

120VAC / 0.8A / 60 Watts

Model:

47251

47261

Rev.1

For patent information please go to:

www.nuwavenow.com/legal/patent

Designed & Developed in USA

Nuwave LLC

560 Bunker Ct.

Vernon Hills, IL 60061, U.S.A.

Made in China

©2024 • All Rights Reserved.

EPA Establishment Number: 101594-CHN-1

Item: BM47251

Rev.1-V14-YK

11-01-24