


AI VOICE RECORDER

Instruction manual



To ensure the best use experience, please read the user manual carefully and keep this manual properly for future reference

Operation and function description

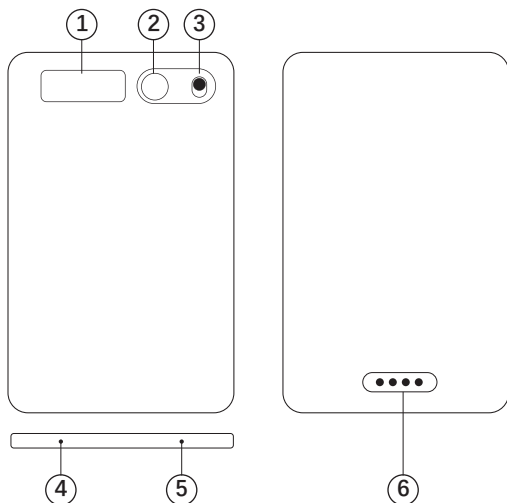


① Display	④ Mic hole
② Power key	⑤ Mic hole
③ Record button	⑥ Magnetic interface

Operation instruction


Power off status Press and hold the power button for 3 seconds to turn on the device.

Power on status Press and hold the power button for 3 seconds to shut down the device.




Standby status

When the screen is light off, short press the power button to light the screen.

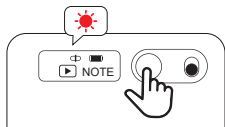

Start recording

Push the recording button up and the recorder vibrates once, indicating that recording has started.




Pause recording

Short press the power button to pause while recording.



End recording

Push the recording button down, the recorder vibrates twice, and the word "save" appears on the display, which means saving and ending the recording.




CALL Mode (Call recording mode)

1. When the screen is on but not in recording mode, double-click to switch to Call mode.
2. When the screen is on and recording is on, double-click to switch the mode and then restart the recording.





NOTE Mode (Normal Recording Mode)

1. When the screen is on but not in recording mode, double-click to switch to NOTE mode.
2. When the screen is on and recording is on, double-click to switch the mode and then restart the recording.





Bluetooth connect

Open APP search product equipment and connect to bluetooth.

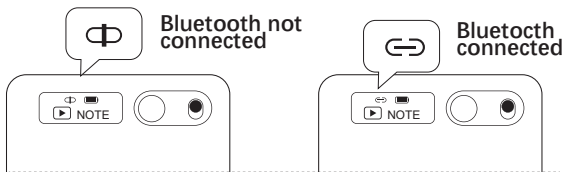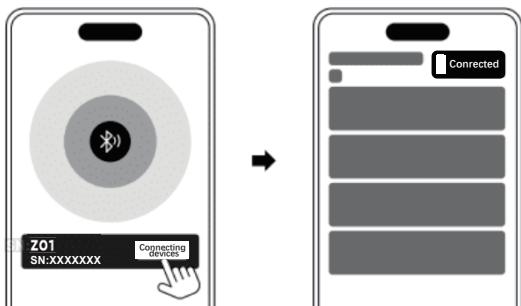


After a successful connection, click the APP recording button or the FW920 recording button to start recording. Once the recording is complete, the corresponding recording content will be available in both the FW920 and the mobile APP.

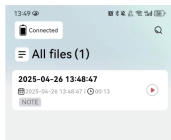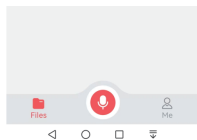

(2) APP Transcription Languages


Open the APP, click on the file you need to transcribe, enter the playback transcribe interface, click on Transcribe, select Template - Transcribe Language, and then click Start Transcribe. Wait for a few minutes, and you can view the transcribe, summary and mind map.

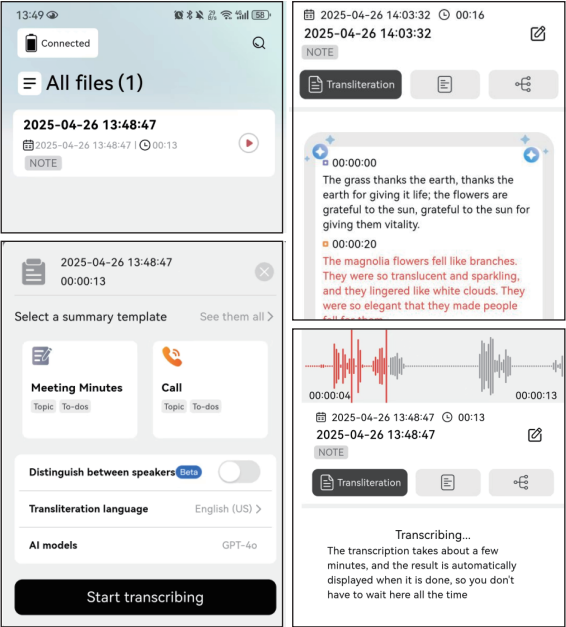

Transcribing the language only refers to transcribing the language corresponding to the recording. For example, when transcribing English, it can only be transcribed into English.

(3) Selection of transcription templates

Enter the playback and transcription interface, click on Transcription, select View All, and choose the module corresponding to the recording file.




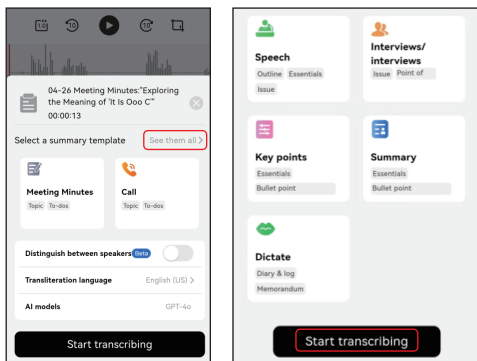


Note: There are 9 major categories and 31 minor items in the recording module.

- 1: General: Meeting minutes, phone calls, speeches, interviews/interviews, key points, summaries, oral accounts.
- 2: Meetings: Meeting minutes (available for direct selection in General), presentation meetings, distribution of opinions, discussion meetings, subject meetings, family meetings, technical meetings.
- 3: Speeches: Speeches (available for direct selection in General), class notes, lectures, training.
- 4: Calls: Calls (direct selection available in the General App), phone discussions, and phone consultations.
- 5: Interview/Interview: Interview notes, interview
- 6: Medical: SOAP, psychotherapy records, medical consultations
- 7: Sales: BANT, consultation, discussion
- 8: Office Work: Contract agreements, copywriting planning, project discussions
- 9: Consultation: Customer needs assessment, case consultation



(4) Transcription and Translation

After the transcription is completed, click the "⋮" icon in the upper right corner, select the object you want to translate, choose the location of your translation server", select the target language, and click "OK".

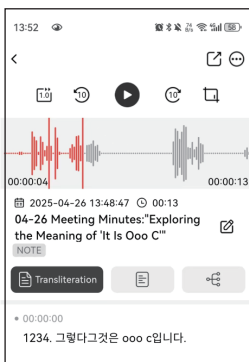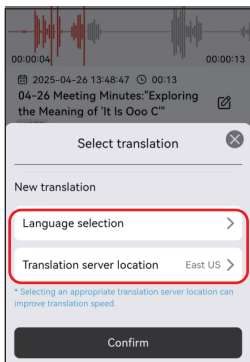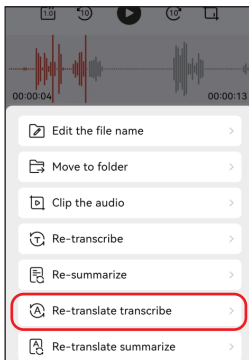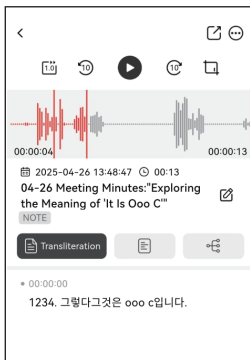

(5) Sharing and exporting files

Transcribe or transcribe and translate the file, then share or export it. Click the "🔗" icon and select the option of sharing or exporting.

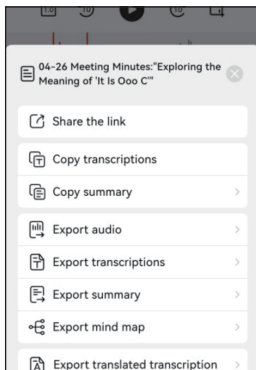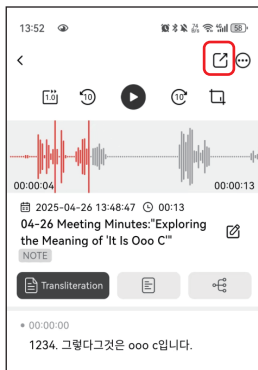

Note:

- 1: When sharing a link, the link will expire after 7 days.
- 2: When exporting audio, text, summaries, and mind maps, there are several format options available:

Transcription	TXT, SRT, DOCX, PDF
Summary	TXT, DOCX, PDF, Markdown
Mind-map	JPEG, Markdown
Audio	MP3, WAV

(6) APP System upgrade

Apple and google: Open the automatic upgrade in the APP store. After the app is updated, it will be updated automatically without the need for users to update it manually.

Android: As the APP is not available on the Android APP Store, users need to re-scan the QR code to install it or search for "DOWAY" in the mobile system APP store to download the app and reinstall it when updating the app system

(7) Recording storage location and transcription storage location

When the APP is not connected, the audio files are stored in the memory of the FW920.

When connecting to the APP, the recordings are stored in the FW920's memory and the mobile phone APP. (If there are no recordings made when connecting to the APP in the FW920, they can be downloaded and transferred to the mobile phone APP after connecting to the APP.)

The transcribing of recordings is only stored in the mobile phone APP.

(8) Charging and data transmission

Charging method: Connect the magnetic contact of the original data cable to the FW920, and insert the USB-A male plug into a 5V/1A charger.

The connection and usage method of OTG with mobile phones and computers: Connect the magnetic contact of the original data cable to the FW920. First, plug the USB-A male plug into the original OTG adapter, and then plug it into the mobile phone or computer for use.

Product Information

Model number of products	AI intelligent voice recorder
Cell and combination method	Polymer battery /400mAh/1 piece
Input input interface	Magnetic suction contact
Storage of machine	64GB
Whether the recording is encrypted	no
Recording support format	MP3
Recording bit rate	32kbps
Length of recording	Up to 35 hours
Mode of recording	Start recording on the machine/ start recording on the APP
Power off standby time	About 166 days
Microphone performance	Simulated silicon wheat + bone wheat
Bluetooth protocol	5.3
Transport protocol	USB 2.0
Whole machine material	Aluminum alloy
Operating service temperature	0 to 45 degrees Celsius

Matters needing attention

Legal restrictions

Please strictly abide by relevant laws and do not use this product illegally. The company does not assume any commitment or responsibility for the consequences of illegal behavior.

Privacy Protection

All data is stored only on the recording device, unless you sync the recording file with the app. In this case, the file will be stored on the smartphone.

Data Security

The company is not responsible for loss or damage of personal data caused by hardware, software, product maintenance, battery replacement or other unexpected circumstances.

Product setting

Due to firmware upgrades, the actual settings and usage of this product may be different from this manual. If product performance and functions change, please refer to the latest product.

Security

Keep the device and accessories out of the reach of children to avoid choking or other injuries. Do not expose the battery (battery pack or installed batteries) to fire or excessive heat (such as sunlight, etc.).

Important Notice

Do not use chemicals or reagents to clean the recorder, as this will damage the surface of the recorder and corrode it.

Battery

If the product is not used for a long time, please charge and discharge the product once every three months to prevent battery damage.

Memory storage capacity

The system software estimates a small amount of storage space. Actual available capacity will be slightly less than what is shown in the specifications.

The Management of Low-Power Radio Frequency Radiation Motors

For low-power radio frequency equipment that has obtained a password certificate, companies, businesses or users are not allowed to change the frequency, increase the power or change the original design characteristics and functions without approval. The use of low-power radio frequency equipment shall not affect flight safety and interfere with legal communications: if interference is found, it should be immediately stopped and can only be used again after improvement to no interference. The legal communication in the preceding paragraph refers to radio communications operating in accordance with the provisions of the Telecommunications Management Act. Low-power radio frequency equipment must withstand interference from legal communications or industrial, scientific and medical radio wave radiating electrical equipment.

Radio frequency exposure

This device has been evaluated to comply with the general RF exposure requirements. This device may be used without restriction in portable exposure conditions.



Please search "DOWAY "in the corresponding mobile system APP store to download the APP, or scan the QR code below to jump to the app store to download the app.

