

NEWYES AI Voice Recorder



USER'S MANUAL



Please read this user guide carefully before use.
If you want to download the data, please be sure to use the original data cable.
This machine must be charged with 5V charger, if you use fast charger over 5V,
it may cause the machine to burn out.

Catalogue

English	1
German	1
French	1
Italian	1
Spanish	1
日本語	1

Product Parameters

Product Name	AI Voice Recorder
Size	85*55*3.3mm / 3.35*2.16*0.13 Inch
Weight	33g
Input	5V/ 1A
Charging Port	Magsafe
Recording Time	32GB-270 Hours/ 64GB-540 Hours / 128GB-1080 Hours
Charging Time	2 Hours
Using Time after Full Charging	28 hours for no noise reduction; 15 hours with noise reduction

Install the App and create your account.

QR



APP Store Search for AIREC downloads



AIREC

AIREC



Product Structure




Package includes: 1 recorder, 1 cable, 1 ring magnet, 1 storage case, 1 user manual


How to use

Move the switch upwards to turn on your device


Pull upwards to open

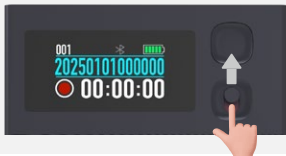


Turn down to shut down

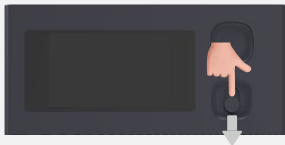

Open the AIREC App, click [+ unconnected], and click connect device.

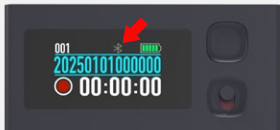


To be connected: Bluetooth logo flashing
Connected: Bluetooth logo fixed

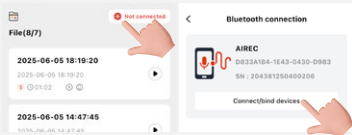


Once the connection is successful, you will enter the recording interface first .

How to use


App Recording

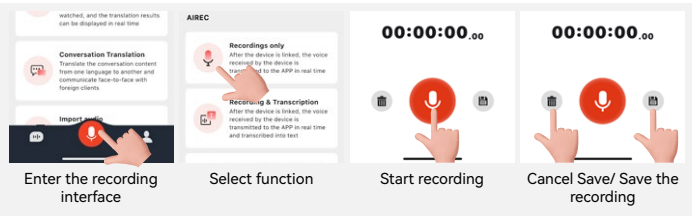


How to use the App

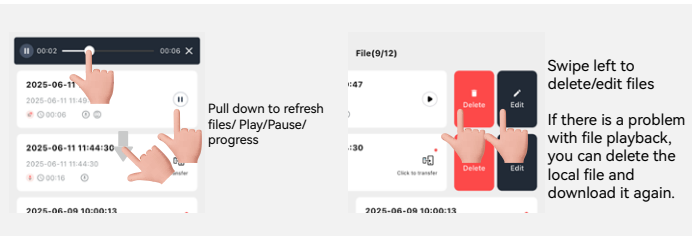

How to use

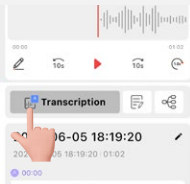


Transcription/
Summary/
Mind-Map

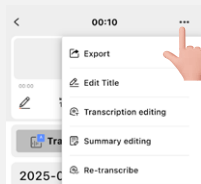

More operations

Local recording (Not connected with mobile phone)

Pull up to start recording

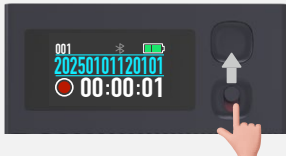


Lightly press to pause/resume recording




(display remaining memory for
recording duration during pause)

How to use

Press lightly twice to lock the screen/
Lock the screen and press once to unlock

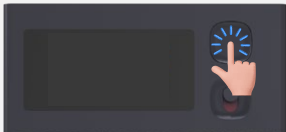

Long press for 2 seconds to save the recording/
Long press for 2 seconds to restart recording.

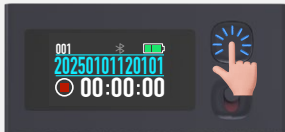


Swipe down, save and shut down



How to use

Local recording (connected with mobile phone)


Long press for 2 seconds to start recording

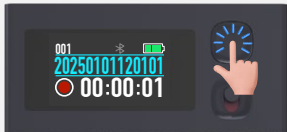


Lightly press to pause/resume recording



Press lightly twice to lock the screen/
Lock the screen and press once to unlock

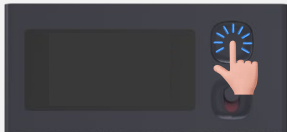


Long press for 2 seconds to save the recording

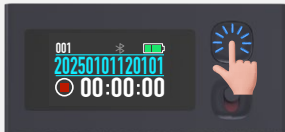

How to use

Reset

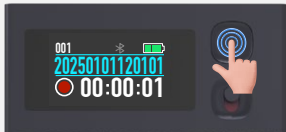

When unable to use normally, press and hold the button for 15 seconds to reset.

Charge

It is recommended to use the original data cable to connect the charger. If using adapter, please use power adapter with charging current 1A or below to charge, otherwise it may damage the machine or cause danger. Charging status, screen battery level box jumping; Full status, screen prompts full charge. If the product is not used for a long time, please charge at least once every three months to prevent battery damage.

Note:

This device comes with an intelligent reset system. Please save the file being recorded before connecting to the computer. Due to the clear recording effect and high sound quality parameters of this product, the recording file is relatively large. Please extract it in a timely manner. Our company is not responsible for any data loss.