


# Rokid Air

- 快速入门指南
- Quick Start Guide
- 퀵스타트 가이드
- 빠른 시작 설명서

## Packaging List

The following lists the items available when you open the package:

① Rokid Air glasses × 1

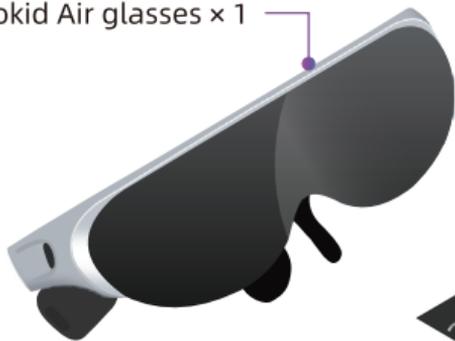

③ Glasses cleaning cloth × 1



② USB-C cable × 1



④ Glasses Case × 1



## Product Usage Mode

Rokid Air glasses support two modes: AR Mode and Projection Mode.

The functionality and experience provided by Rokid Air glasses varies depending on your device type.

### Projection Mode

Magnify your device's screen display by several times, and enjoy a stunning experience provided by the portable giant screen.



### AR Mode

Download and run the Rokid Air app (on compatible devices) to enter a 3D virtual space and experience the AR Mode.



# How to Use Rokid Air Glasses

## Step 1: Connect Device with Rokid Air Glasses

Depending on the device you are using, select one of the following four methods to connect the device to Rokid Air glasses.

### 1.1 Connect via a Wireless Adapter

If your device doesn't support DisplayPort over USB-C but support Wi-Fi screen projection (e.g., iPhone, Xiaomi, etc.), please refer to the user manual of the wireless adapter and connect the device.



To view the user guide,  
please scan the QR code or  
go to <https://www.youtube.com/c/RokidAir>

## How to Use Rokid Air Glasses

### 1.2 Download the Rokid Air App for Direct Connection

If your Android device supports DisplayPort over USB-C (e.g., Samsung, Huawei, Honor, etc.), please download the Rokid Air App and directly connect your device to Rokid Air glasses.



Scan the QR code to download the Rokid Air App




To view the user guide, please scan the QR code or go to <https://www.youtube.com/c/RokidAir>



## How to Use Rokid Air Glasses

### 1.3 Connect Via an HDMI-to-USB-C Adapter

If your device supports HDMI (e.g., Nintendo Switch, PlayStation, Xbox, etc.), you can use an HDMI-to-USB-C adapter to connect your device to Rokid Air glasses.

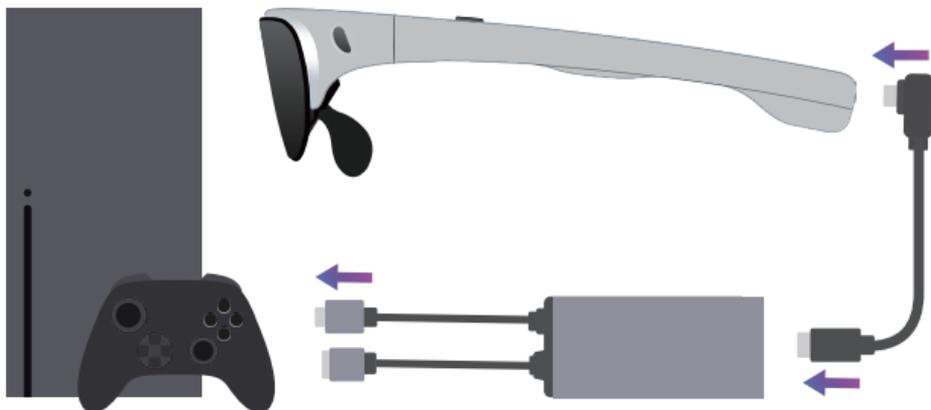


To view the user guide,  
please scan the QR code or  
go to <https://www.youtube.com/c/RokidAir>



## How to Use Rokid Air Glasses

### 1.4 Direct Connection with DisplayPort over USB-C

If you have other devices that support DisplayPort over USB-C (e.g., Intel NUC, MacBook, etc.), you can directly connect your device to Rokid Air glasses.

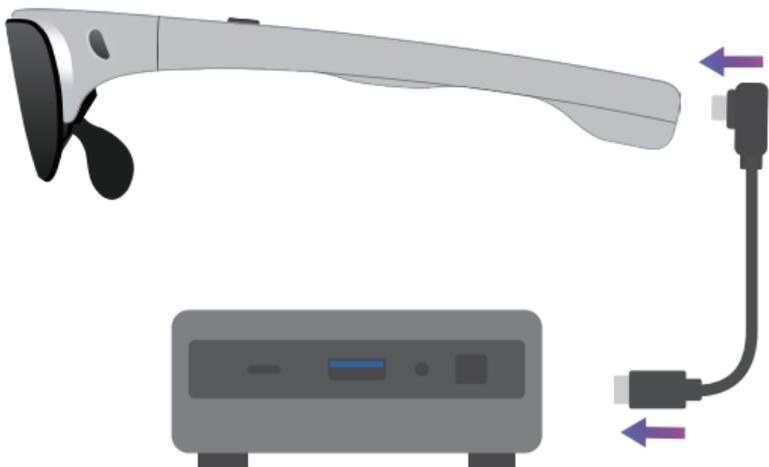

To view the user guide,  
please scan the QR code or  
go to <https://www.youtube.com/c/RokidAir>



## How to Use Rokid Air Glasses

### Step 2 (Optional): Adjust the nose pad

Press or separate the nose pad and then adjust the height of the nose pad to fit your nose bridge until the screen image is clearly and completely presented in front of your eyes.



## How to Use Rokid Air Glasses

### Step 3 (Optional): Adjust the diopter

Rokid Air glasses enables nearsighted users (myopia of 0.00~-5.00 D) to get a perfect vision by adjusting the diopter knobs. This function is not supported for users with astigmatism or farsightedness.



If ghosting occurs on the screen or the screen is split into multiple views:

- 1) Make sure that each eye is adjusted clearly;
- 2) Focus on the real environment that is 3 meters away through the glasses;
- 3) Get used to the current screen display (this may take about 1 minute)  
Then the ghosting will disappear.



纵享Rokid Air  
Enjoy Rokid Air Glasses  
Rokid Airグラスをご活用ください  
Rokid 에어 글래스 즐기기



亲爱的中国大陆用户

无论您在试用过程中遇到任何问题，  
请随时联系我们。



扫描二维码加官方微信

售后热线：400-113-0099  
售后邮箱：support@rokid.com

Dear customers

Contact us at any time if you encounter  
any problem with Rokid glasses.



Scan the QR code to join  
our Facebook Group

Global After-sales Service:  
support-air@rokid.com