

Quick Installation Guide


AC5400 Wireless Tri-Band MU-MIMO Gigabit Router

Archer C5400

- 1 Place the router horizontally and extend the antennas to the maximum angle.
Note: For best performance, horizontal installation is recommended. Antenna direction and position can affect performance in vertical installation situations.

Connect the Hardware

If your internet connection is through an Ethernet cable directly from the wall instead of through a DSL / Cable / Satellite modem, connect the Ethernet cable to the router's Internet port, and then follow Step 1, 5 and 6 to complete the hardware connection.

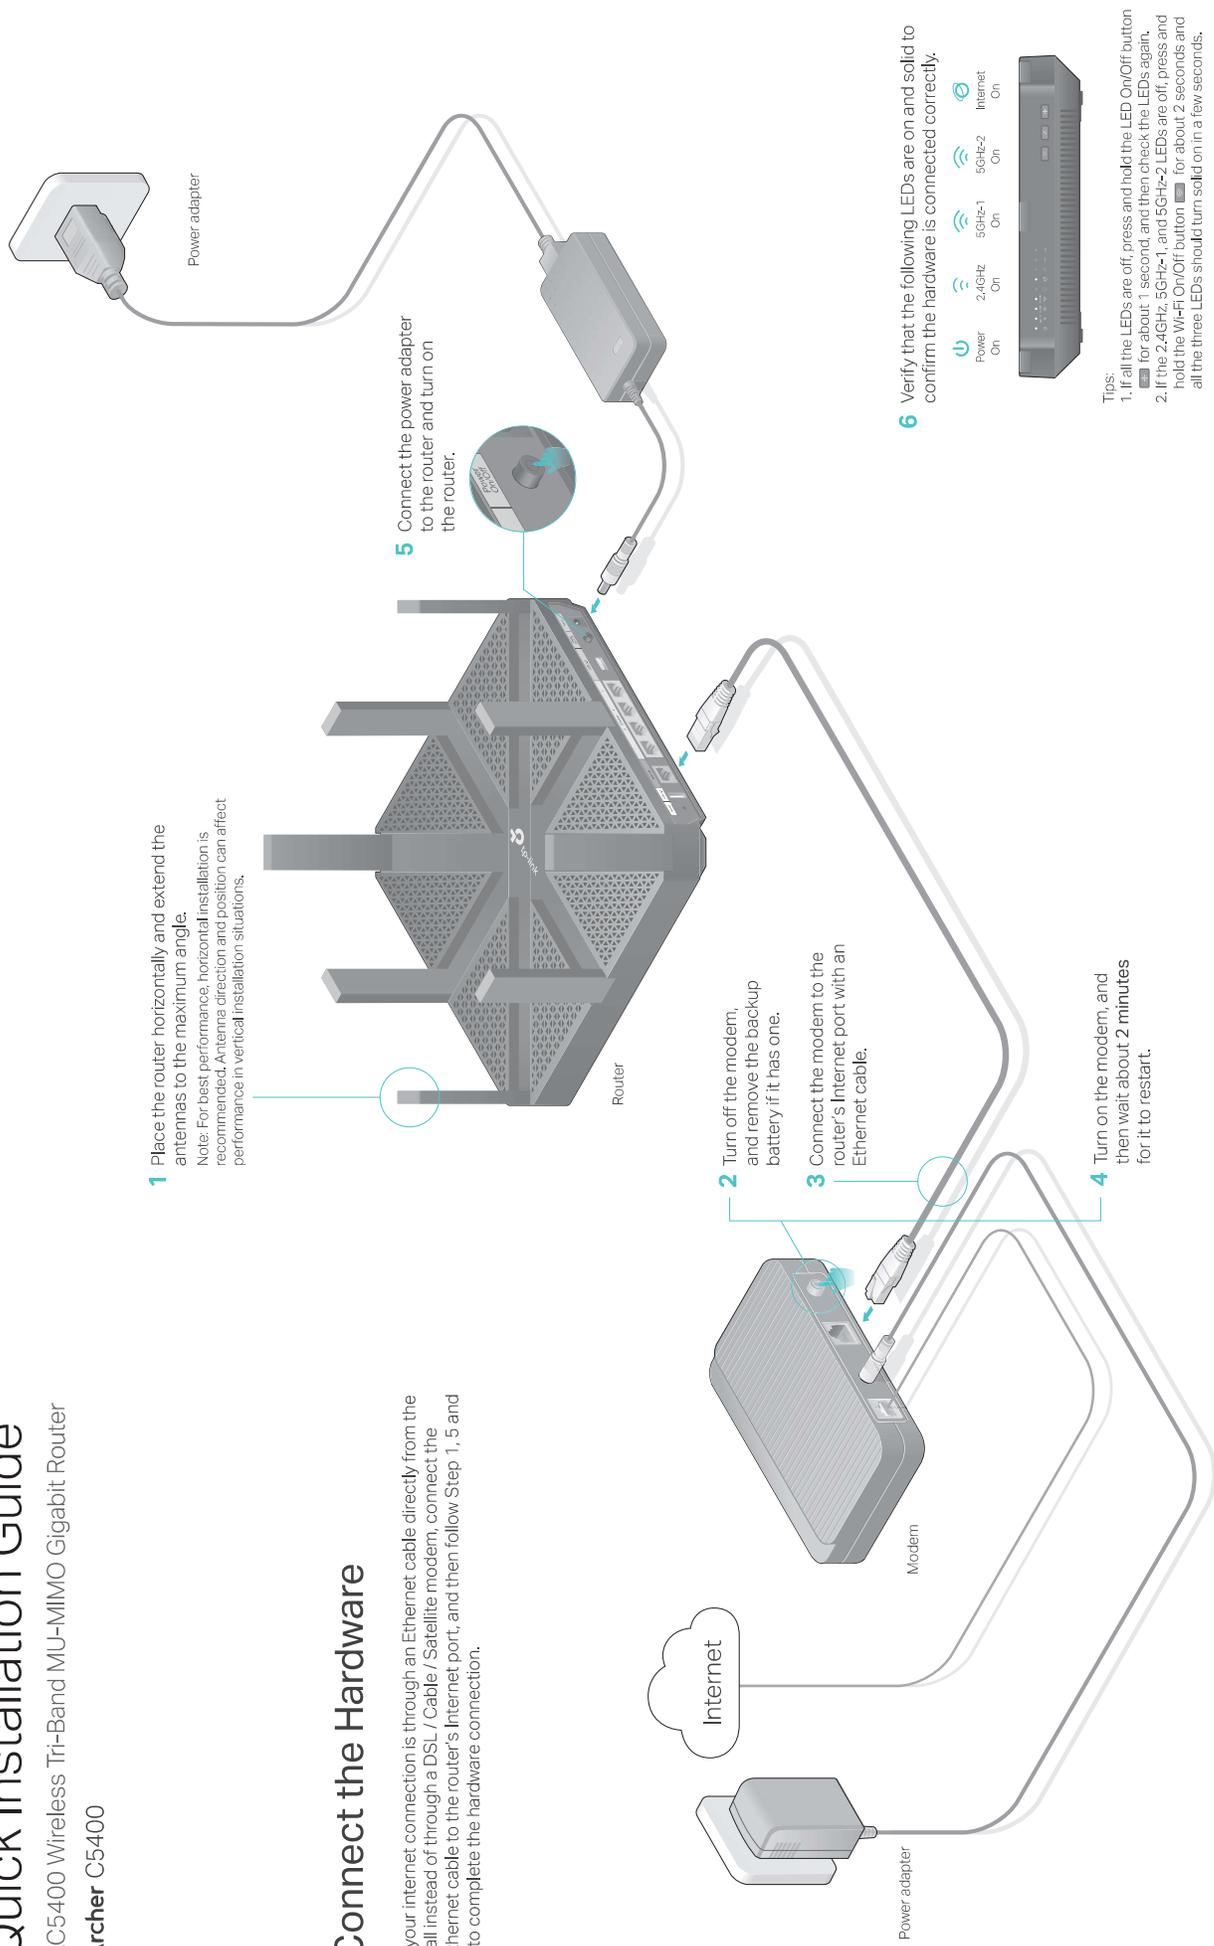

- 6 Verify that the following LEDs are on and solid to confirm the hardware is connected correctly.



Tips:
 1. If all the LEDs are off, press and hold the LED On/Off button for about 1 second, and then check the LEDs again.
 2. If the 2.4GHz, 5GHz-1, and 5GHz-2 LEDs are off, press and hold the Wi-Fi On/Off button for about 2 seconds and all the three LEDs should turn solid on in a few seconds.

Configure the Cloud Router

Method ONE: Via TP-Link Tether App

1. Download the Tether app.




2. Connect your smartphone to the router.




The default wireless network names (SSIDs) and passwords are printed on the label at the bottom of the router.

3. Connect the router to the internet.

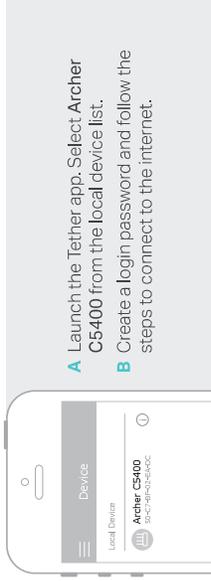

4. Register the TP-Link Cloud service.

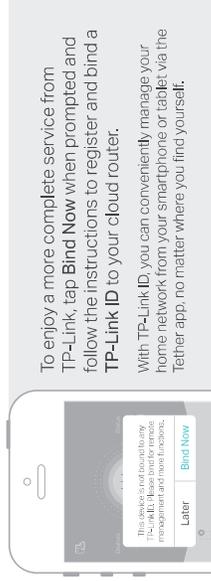

Enjoy the internet!

Method TWO: Via Web Browser

1. Connect your device to the router (wired or wireless).

- **Wired**

Turn off the Wi-Fi on your computer and connect the devices as shown below.



- **Wireless**

a Find the SSID and wireless password printed on the label of the router.


b Click the network icon of your computer or go to Wi-Fi settings of your smart device, and then select the SSID to join the network.




2. Connect the router to the internet.

A Launch a web browser, and enter <http://tplinkwifi.net> or <http://192.168.0.1> in the address bar. Create a login password and then click Let's Get Started.

Note: If the login window does not appear, please refer to Q1 of Need Help? in this guide.

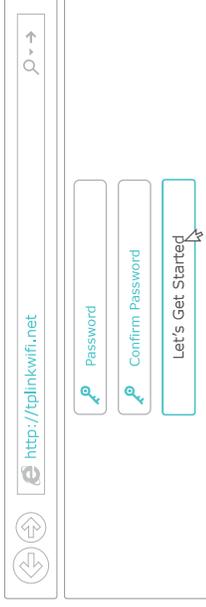

B Follow the step-by-step instructions to set up the internet connection and register the TP-Link Cloud Service.

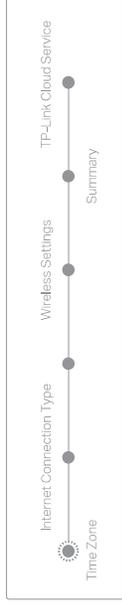

Enjoy the internet!

USB Applications

With the dual USB ports, it's easy to share printers, files and media with multiple devices.



USB 2.0 Port

Local Storage Sharing
Share files from the USB drive with devices on your home network.


Remote Access
Access the USB drive when you are away from home.



To learn more about the USB applications, visit <http://www.tplink.com/app/usb>, or simply scan the QR code.

TP-Link Cloud Service

TP-Link Cloud service provides a better way to manage your cloud devices. For example:

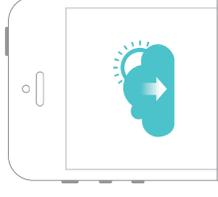

Remote Management

Easily manage your home network when you are out and about via the Tether app on your smartphone or tablet.

Timely Upgrade Notifications

Keep informed of the latest firmware updates, ensuring your router stays at its best.

One for All

Manage multiple TP-Link Cloud devices, all from a single TP-Link ID.

You can set up and enjoy cloud functions via the Tether app or through the web management page at <http://tplinkwifi.net>.

To learn more about TP-Link Cloud service and other useful features supported by the router (including Guest Network, Parental Controls, Access Control and more), please refer to the User Manual at www.tplink.com.

Need Help?

Q1. What should I do if I cannot access the web management page?

- If the computer is set to a static IP address, change its settings to obtain an IP address automatically.
- Verify that <http://tplinkwifi.net> is correctly entered in the web browser. Alternatively, enter <http://192.168.0.1> or <http://192.168.1.1> in the web browser and press Enter.
- Use another web browser and try again.
- Reboot your router and try again.
- Disable and enable the network adapter being used.

Q2. What should I do if I cannot access the internet?

- Check if the internet is working normally by connecting a computer directly to the modem using an Ethernet cable. If it is not, contact your internet service provider.
- Log in to the web management page of the router, and go to the Basic > Network Map page to check whether the internet IP address is valid or not. If it is, please run the Quick Setup again; otherwise, check the hardware connection.
- Reboot your router and try again.
- For cable modem users, log in to the web management page of the router. Go to Advanced > Network > Internet > MAC Clone, click Use Current Computer MAC Address and click Save. Then reboot both the modem and the router.

Q3. How do I restore the router to its factory default settings?

- With the router powered on, use a pin to press and hold the Reset button on the back unit the Power LED blinks.
- Log in to the web management page of the router, go to Advanced > System Tools > Backup & Restore, and click Factory Restore. The router will restore and reboot automatically.

Q4. What should I do if I forget my web management page password?

- If you are using a TP-Link ID to log in, click Forget password on the login page and then follow the instructions to reset it.
- Alternatively, press and hold the Reset button on the back of the router until the Power LED blinks to reset it, then visit <http://tplinkwifi.net> to create a new login password.

Q5. What should I do if I forget my wireless network password?

- If you have not changed the default wireless password, it can be found on the label at the bottom of the router.
- Connect a computer directly to the router using an Ethernet cable. Log in to the router's web management page at <http://tplinkwifi.net>, and go to Basic > Wireless to retrieve or reset your wireless password.



For technical support and other information, please visit <http://www.tplink.com/support>