


AquaDance®


Premium Combination Shower

1. Remove old shower head from Shower Arm and clean Shower Arm Threads (Fig. 1).
2. Screw Nut of Water Diverter with Mesh Washer (already inside Nut) onto Shower Arm (Fig. 1).
3. Position Hose Outlet of Diverter facing DOWN, then hand tighten connection (Fig. 2). You can further tighten connection by using wrench or pliers, just make sure to wrap cloth around Nut to protect it from scratching.
4. Screw Shower Head with Mesh Washer (already inside its nut) onto Front Outlet (Fig. 2).
5. Turn ON water to test connection. If leakage occurs, follow instructions below.

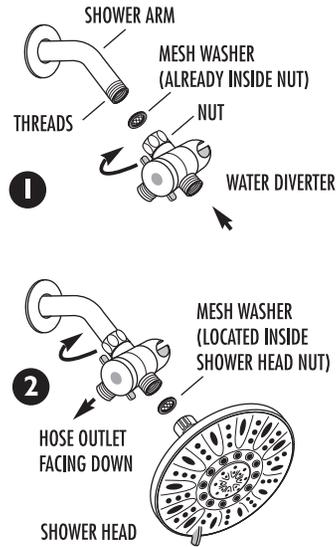

If Leakage Occurs at Shower Arm Connection, Use Plumber's Tape (included) on Shower Arm Threads


Disconnect Diverter and wrap Plumber's Tape (included) around Shower Arm Threads (Fig. 3). Reconnect Diverter and test connection with water to make sure the leakage has been eliminated.

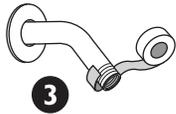

6. Screw one Hose Nut with Hose Washer in place onto Hose Outlet (Fig. 4). Screw other Hose Nut with Hose Washer in place onto Hand Shower handle and place Hand Shower into Rotatable Holder.

If Hand Shower does not fit well into Holder Slot, check to make sure that wider side of Holder's Slot opening is on TOP (Fig. 5). If Holder is upside down, rotate it 180° into correct position. If it is too tight to rotate, loosen the Philips screw on the inner Slot wall, then rotate Holder into correct position and re-tighten screw.

If Hand Shower does not stay UP and falls down because Holder rotates freely, tighten the Philips screw on the inner Slot wall. If it does not tighten any further, call Customer Care to get free replacement sent to you within 24 hours.

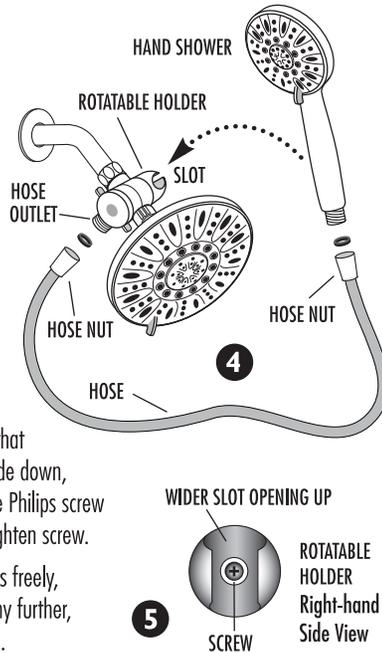


IMPORTANT: Hand tighten connections ONLY. DO NOT use wrench or pliers.

Use plumber's tape ONLY if needed on shower arm threads if Diverter Washer fails to stop leakage. DO NOT use plumber's tape on any other connections.

NOTE: If your shower arm has a ball on the end instead of a thread, this old type of shower arm will not work with this and most other showers on the market today. Your existing shower arm can be easily replaced with a standard 1/2" thread shower arm available at most plumbing supply stores.

If it appears that you are missing Washer(s) or other part(s), or have a defective part, call Customer Care to get free replacement sent to you within 24 hours.

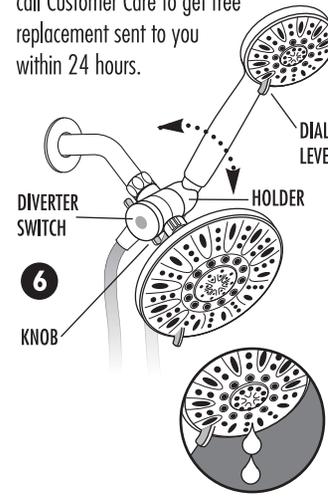

To Use 3 way Water Diverter

To change water flow, turn Diverter Switch 90° with Knob pointing in the shutoff direction (Fig. 6). Point Lever STRAIGHT to use Hand Shower, DOWN to use Shower Head or UP to use combination of both.

To Adjust Angle of Hand Shower

Rotate Holder in vertical directions to set desired Hand Shower angle.

To Use 6-function Shower Head and Hand Shower Dial

Turn Dial Lever to select desired water pattern for each shower.

Choose from 4 full or 2 combination settings. When turning Shower Head dial, we recommend that you hold Shower Head with free hand to prevent accidental loosening of Diverter connection.

To Save Water while Lathering or Shampooing

To save water, turn Dial Lever to PAUSE (shut-off) mode.

For your safety (to prevent pressure buildup), PAUSE mode has water dripping instead of complete shut-off. After use, DO NOT leave Dial set to Pause mode.


Tips For Best Performance

As with all combination showers, using both showers together always causes water pressure to drop in each showerhead. Use shower head or hand shower individually to maximize water pressure for high-power performance. Use combined dual-shower application for gentle pampering, wider flow coverage and targeting of different body areas.

NOTE: This combination shower system is equipped with water flow regulator that limits maximum water flow to 2.5 gallons (9.5 liters) per minute at 80 psi water pressure when both showerheads work together or independently.

Cleaning Instructions

To maintain proper working condition, clean flexible nozzles by rubbing with finger or soft bristled toothbrush, or soak in 50% white vinegar/50% water solution. If, over time, a loss of water pressure occurs due to build-up of residue and mineral deposits inside water flow regulator, you can remove Flow Regulator (Fig. 7) and soak it in white vinegar for 1/2 hour. DO NOT use harsh chemicals, heavy-duty cleaners or abrasives. This may damage parts or finish and may void warranty.

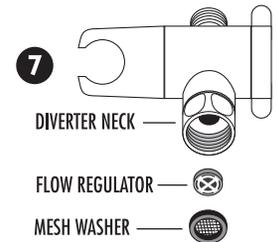

If you have installation problem, please DO NOT return this product before calling first.

For Questions on Installation or Part Replacement Call Toll Free

1-888-869-4010

Mon. - Fri. 9:00 AM - 4:00 PM Eastern Time

www.ipshowers.com

A112.18.1 Maximum Flow 2.5 Gallons Per Minute 9.5 Liters Per Minute
US Patent No. 7,299,510 Made in China

LIMITED LIFETIME WARRANTY

Interlink will repair or replace any of this product's parts that exhibit defects in workmanship or materials for above stated period from date of purchase. If malfunction occurs, send only defective part(s) with proof of purchase to Customer Service Department at the address listed below. This warranty does not cover product purchased from unauthorized distributors, malfunction or damage due to accident, misuse, use of harsh chemicals or failure to follow any included written instructions. This warranty gives you specific legal rights. You may also have other rights that vary where you reside.

Items:
4228,
4328

Interlink Products 1315 E. Elizabeth Ave., Linden, NJ 07036