



User Manual

Model:H5040+H5054


Water Detector With Wi-Fi Gateway

English




Detectors have paired with the gateway in advance. You only need to connect the gateway to the network. Please see pages 01-09.

At a Glance

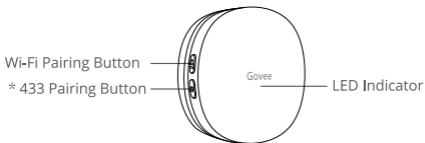

Wi-Fi Gateway

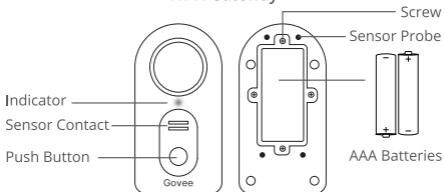

Water Leak Detector

Govee Water Leak Detector is a device that sounds an alarm once detecting water drip or leak. Connecting to Wi-Fi via the gateway, it instantly sends you alert notifications of water leaking by app or email whether you are at home or outside.

* 433 is a communication protocol with a frequency of 433MHz.

Wi-Fi Gateway

Wi-Fi Pairing Button: Connect the gateway to Wi-Fi.

433 Pairing Button: Connect the gateway to the water leak detector.

LED Indicator: Show status of the gateway.

LED Indicator	Gateway Status
Solid blue ●	Has connected to Wi-Fi.
Flash blue slowly 🌑	Ready to connect to Wi-Fi.
Flash blue quickly 🌒	Connecting to Wi-Fi.
Solid red ●	Fail to connect to Wi-Fi.
Flash blue and red alternately 🌑 🌑	Ready to pair with the water leak detector.

Water Leak Detector

Sensor Contact: Detect water drip.

Sensor Probe: Detect water leak.

Push Button: Pause alarm / Adjust volume.

Batteries: 2 X AAA Battery.


Packing List

SKU	B5040101	B5040105	B5040109
Water Leak Detector	3	1	2
Wi-Fi Gateway	1	1	1
AAA Battery	6	2	4
User Manual	1	1	1
Service Card	1	1	1

Checking the Water Leak Detector

1 Insulation sheet removal.

Pull out the insulation sheet vertically.

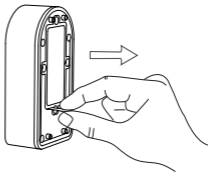

- ## 2 Press the button and the detector beeps 1s later, indicating it works well. If not, please open the back cover via a PH00/PH0 screwdriver to replace new batteries.

Press the button once.



- ## 3 Adjust alarm volume by pressing the button twice within 1s and the indicator will flash quickly. The volume level cycles through HIGH - MEDIUM - LOW - MUTE, and default volume is high.

Press the button twice quickly.



- 4 The detector will alarm if you drip some water on the sensor contact or put it on the surface with water.



Water Drip



Water Leak

- 5 Press the Push Button to stop alarm for 5s. Remove the device from water and wipe it up to stop alarm completely.




Wipe it up

Notice: When the battery is low, the device sounds “dididi” and flash red slowly.

Installing Your Device

- 1 Plug the gateway into a power outlet;
- 2 Lay the water leak detector flat.
Notice: Keep distance between the gateway and the detector less than 60m/197ft.

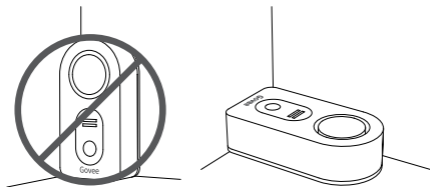

Preparation Before Connecting

- 1 A Wi-Fi router supporting the 2.4GHz (NOT 5GHz) and 802.11 b/g/n bands.
(Notice: Most of 5GHz routers can also be set to 2.4GHz band or dual band.)
- 2 Make sure Wi-Fi name and password are correct.
- 3 A smartphone or tablet supporting 2.4GHz network.


- 4 Download the app named Govee Home from the App Store (iOS devices) or Google Play (Android devices).



Connecting to a Wi-Fi Network

- 1 Connect your phone to 2.4GHz network;
Notice: Android device users should turn on Location and iOS users should tap Setting - Govee Home - Location - Always in your phone.
- 2 Open Govee Home, tap "+" icon in the top right corner and select "H5040";
- 3 Press and hold Wi-Fi Pairing Button " ■■■ " for 3s. The gateway will get ready to connect to Wi-Fi when the indicator flashes blue slowly;

Press and hold for 3s.

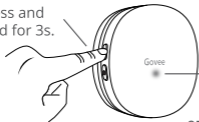


Flash blue slowly.

- 4 Follow on-screen instructions in the app to complete the connection;
- 5 Connected to Wi-Fi successfully. The indicator keeps solid blue and you can find the water leak detector in the device list; Notice: If you cannot find the detector, please swipe down the device list page to refresh or refer to "Add or Re-add Water Leak Detector" below to add the detector.



- 6 The indicator keeps solid red if it failed to connect to Wi-Fi;

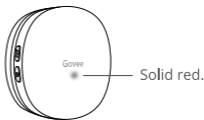


Please check the above steps and try again; or you can select "H5040" in the app and tap "Video Guide" for more instructions.

Notification Setting

App notification: Open app, select “water leak detector” in the device list, and tap setting icon in the top right corner.

Receive information push	<input checked="" type="checkbox"/>
Turn on/off notification push for water leak.	
Sound alarm	<input checked="" type="checkbox"/>
Turn on/off the sound of app notification.	
Vibration alarm	<input checked="" type="checkbox"/>
Turn on/off the vibration of app notification.	

Email notification: Open app, and tap “My Profile”  in the lower rightcorner --- “Notification settings”.


Receive information push	<input checked="" type="checkbox"/>
Turn on/off email notification for water leak.	

Add or Re-add Water Leak Detector

Notice: The detector is added by default when the gateway connects to Wi-Fi successfully.

- 1 Press the "433 Pairing Button" (power icon) and hold for 3s. The gateway will get ready to pair when the indicator flashes red and blue alternately;

Press and hold for 3s.

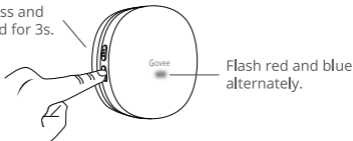


- 2 Put the detector nearby the gateway. Press the Push Button and the detector will send pairing signal;


The detector beeps and the LED shows red for 2s.



- 3 The gateway is receiving the signal;



- The gateway has paired with the water leak detector;

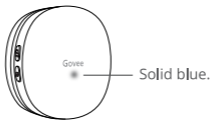

- Swipe down the device list page in app to refresh and you can find the new-added device;

Notice:

- If the gateway fails to pair to the detector in 30s, its indicator will flash blue quickly and it will exit the pairing mode.
- There's 1s delay for beep sound after you press the Push Button.
- Please check the above steps and try again if pairing fails.

Troubleshooting

- The gateway cannot connect to Wi-Fi. / The connection is unstable.
 - 5GHz network is not supported. The device only supports 2.4GHz.
 - Check the name of the network and password.
 - Place the gateway within coverage of the router signal.

- d. No obstructions like metal door or wall between the gateway and the detector are suggested.
- 2 The water leak detector cannot work.
- a. Pull out the insulation sheet before using.
 - b. Open the back cover via a PH00/PH0 screwdriver, remove and re-install the battery.
 - c. Check whether the battery is running low.
- 3 No/Delayed notification in the app.
- a. Make sure that Android device users turn on Location and iOS users select "Setting - Govee Home - Location - Always" in the phone.
 - b. Keep the distance between the gateway and the detector as close as possible.
 - c. No obstructions between the gateway and the detector is suggested.
 - d. The time interval between two water detection should be longer than 90s, otherwise the app won't push notification.
 - e. Check whether the indicator of the gateway flashes when the detector is triggered. If not, please re-add the detector.

Warning

- 1 Keep devices work temperature within 32°F - 140°F and humidity below 90%RH.
- 2 Do not disassemble devices violently.


Specifications

Wi-Fi Gateway	
Voltage	AC 110-240V 50/60Hz
Wi-Fi Frequency	2.4GHz
Wi-Fi-enabled Distance	100m/328ft

Water Leak Detector	
Voltage	DC 3V
Working Distance (No obstructions)	60m/197ft
Maximum Alarm Decibel	100dB
Radio Frequency	433MHz
Waterproof Rating	IP66

Customer Service

 Warranty: 12-Month Limited Warranty

 Support: Lifetime Technical Support

 Email: support@govee.com

 Official Website: www.govee.com

 @Govee  @govee_official  @govee.official

 @Goveeofficial  @Govee.smarthome

CAUTION:

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

FCC and ISED Canada Statement

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1.Reorient or relocate the receiving antenna.
- 2.Increase the separation between the equipment and receiver.
- 3.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4.Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC and IC Radiation Exposure Statement

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

la distance entre l'utilisation et l'appareil ne doit pas être inférieure à 20 cm.

Responsible party :

Name: GOVEE MOMENTS(US) TRADING LIMITED

Address: 13013 WESTERN AVE STE 5 BLUE ISLAND IL 60406-2448

Email: support@govee.com

Contact information: <https://www.govee.com/support>

Govee is a trademark of Shenzhen Intellirocks Tech. Co.Ltd.

Copyright ©2019 Shenzhen Intellirocks Tech. Co.Ltd. All Rights Reserved.



Govee Home App

For FAQs and more information,
please visit: www.govee.com