


Wireless Switch User Manual

Product Appearance

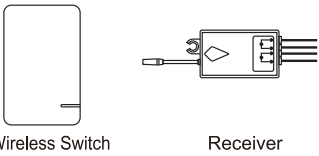

★ Note: The product depicted in this manual may appear ★ slightly different from what you receive in the box

E-mail:service@thinkbeeco.com

This device complies with part 15 of the FCC Rules. The user is cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

1

- Consult the dealer or an experienced radio/TV technician for help.
To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.


Installation Warnings:

1. For first time use, the switch and receiver need to be paired.
2. **Please avoid the receiver falling from a height above 1 meter and causing damage.**
3. **Do not touch the output live line with output neutral line after wiring, or receiver will be short circuit.**
4. It is not advisable to install switch on metal surface or receiver in a metal confined cover, metal will shield wireless signal, thus shortening remote control distance.
5. Install the receiver where the human body cannot touch directly .Cautious: Do not leave any copper wire exposed out of the connector.

2

Installation

Receiver

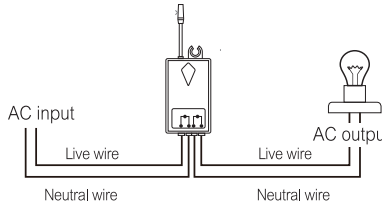

Reminder: When received the product, the wireless switch and the receiver must be paired up before use. Please refer to the 4th page : Pairing.

3

Pairing

-
1. Connect the receiver between the light and the power source.
 2. Power on electricity, press and hold the setting button for 2 seconds. When the indicator light flashes, it enters into Pairing mode, then loosen your finger.
 3. Press the wireless switch that you want to pair. Light on, indicating that the Pairing is successful.
 4. Not recommended that 1 switch controls many receivers.

Add another switch to paired switch

-
- Press and hold paired switch panel for about 20s till LED indicator on switch blinks rapidly ,then loosen your finger, press the new one ,finally test whether it can turn on/off the lamps.

4

Delete Pairing for paired switch

(Please use cautiously)

-
1. Press and hold paired switch panel for about 60s.
 2. The switch LED indicator status changes: blinks rapidly → blinks 8 times slowly → blinks 9 times at slower speed → blinks once at super slow speed. Then loosen your finger.
 3. Press the switch panel again, light goes off and it won't control the lamp.

Delete Pairing for paired receiver

(Please use cautiously)

-
1. Press and hold the receiver button for about 10s
 2. Its LED indicator status changes from rapid blinks to slow. Then loosen your finger.
 3. Press the paired switch panel, light goes off and it won't control the lamp.

5


Installation

Wireless Switch

Wireless Switch

The switch can be surface mounted with screws or double-sided stickers. or set it on the table.

1. **Install with Double-sided adhesive. (Included)**



Pick up the area where you're going to place the switch, clean the surface with wet rag, post the adhesive rubber in the back of the switch, then attach the switch to the clean surface.

2. **Install with screws (not included)**


First, take apart the frame and button panel of the switch, Fix the switch base on the wall with two screws, then install the parts together.

6

Panel disassembly method



Replace the battery

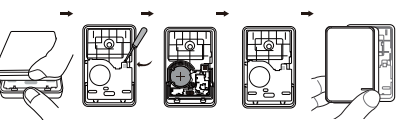

Disassemble the panel
Remove the battery cover shell with a slotted screwdriver to replace the battery (Leave positive pole of the battery upwards), fix and lock the battery cover then cover the panel

7

Application

(Home, hotel, inn or Factory etc.)


- a. A one-gang wireless switch controls a wireless receiver



- b. A receiver can be controlled by 8 pcs of wireless switch panels at most.




- c. Three A one-gang wireless switch controls a wireless receiver

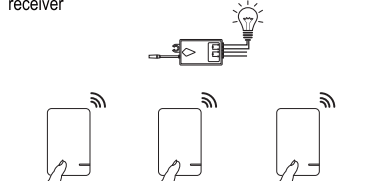

8

- d. The integrated load of the wireless receiver is 1000W.

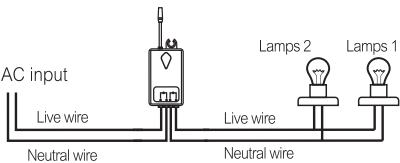


Lamps can be: LED lights, incandescent bulbs, exhaust fans, or WIFI devices etc.

9

Set Open / Close state of the receiver in combination use with traditional switch

Note: The receiver is default in Close state when leaving the factory.

1. Power off electricity, install the receiver as the diagram, and distinguish live from neutral lines.
2. Power on electricity, then program receiver with the switch according to the Pairing chapter.

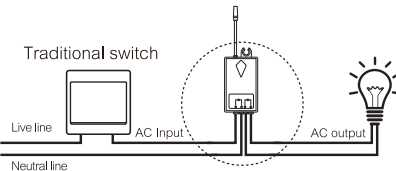

Wiring diagram of add wireless switch to traditional switch.



10

What is the difference between Open and Close state?

In combination use with traditional switch, if the receiver is in "Open" state, turn on the traditional switch and the lamp lights up immediately; if the receiver is in "Close" state, turn on the traditional switch and you also need to press the wireless switch to turn on lights.
No matter the receiver is in Open or Close state, only if turn on the traditional switch could you control lights using the wireless switch.

Setting Open / Close state of receiver

Press and hold setting button for 16s, loosen your finger when the indicator light is continuously bright. (During the 16s, the indicator light will change from quick flash to slower flash, after that, the indicator light will be off, then will be on.)

11

Specifications:

Parameters of the wireless switch
Product Size: 75 × 48 × 15 (mm)
Waterproof: IP66
Fireproof level: V0
Switch times: ≈600,000 times
Standby current: ≤0.01 uA
Battery model: CR2032
Battery life: 6~8 years life time
Working frequency: 433.932 +/-75KHz
Wireless Range: 300~400m Open Space 30~50M Indoor
Working temperature: -40~+70℃
Working humidity: 0~90%
Storage temperature: -40~+80℃

Specifications:

Parameters of the wireless receiver
Product Size: 39 × 23 × 22 (mm)
Fireproof level: V0
Working voltage: AC 80-150V
Mixed load: ≈1000 W (LED)
Resistive load: ≈1800W
Standby current: ≤0.5W
Working frequency: 433.932 +/-75KHz
Wireless Range: 300~400m Open Space 30~50m Indoor
Working temperature: -25~+65℃
Working humidity: 0~90%
Storage temperature: -40~80℃