

User Manual of Product 1:

APC UPS Battery Replacement, RBC2, for APC Back-UPS Models BE500R, BK300C, BK350, BK500, BK500BLK, BK500M, BK500MC, BK500MUS, and SC420, SU420NET black

User Manual of Product 2:

APC UPS Battery Replacement APCRBC154 for APC Back-UPS Models BE600M1, BE670M1, BN650M1, BN675M1



by Schneider Electric

Battery Cartridge Replacement



For information on recycling the used battery, see the Used Battery Information sheet included with the replacement battery.

Back-UPS


BN1250LCD

BR1000-CH, BR1100CI series, BR1200LCDI, BR1300LCD, BR1500LCD, BR1500LCDI


BX900R, BX1200R, BX1300LCD, BX1300LCD-CN, BX1500LCD

DL1000VNT


❶ Press release tabs and slide off battery door.

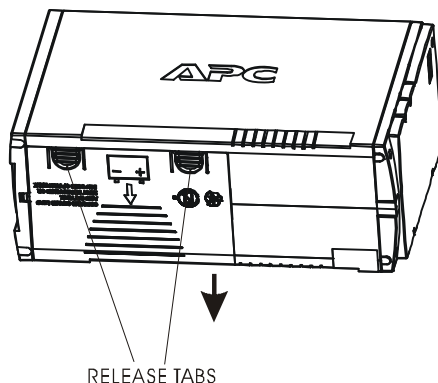


❷ Disconnect the battery wires.

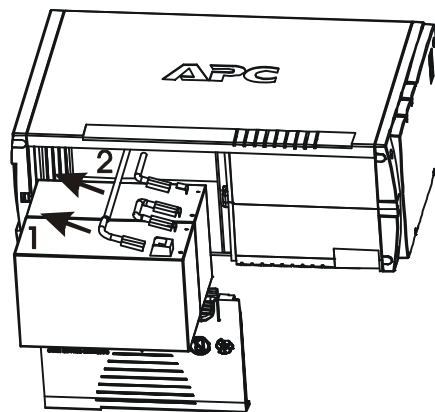


❸ Replace with the new battery and connect the wires.

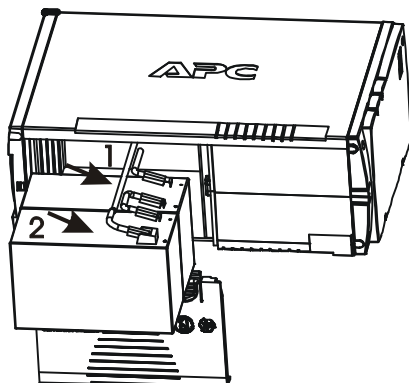


❹ Close the battery door.

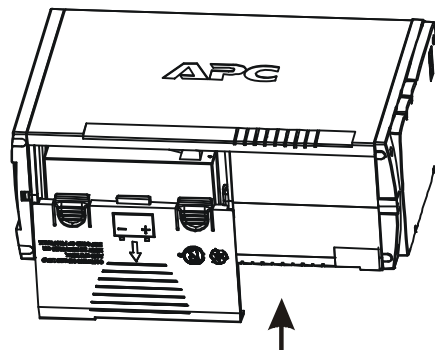


Back-UPS BK 200/500, Back-UPS Pro, Smart-UPS SU 280/420

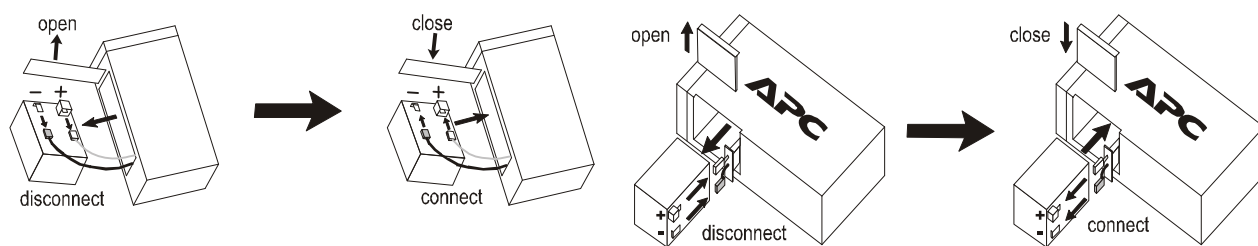


Back-UPS Pro USB 350/500/650

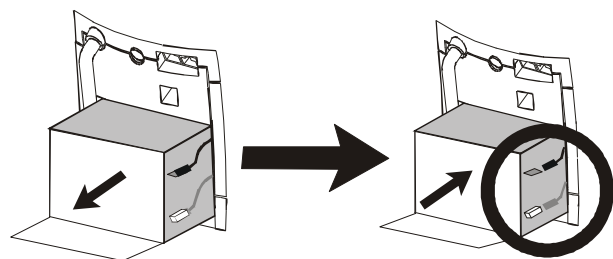

Back-UPS 1000/1400

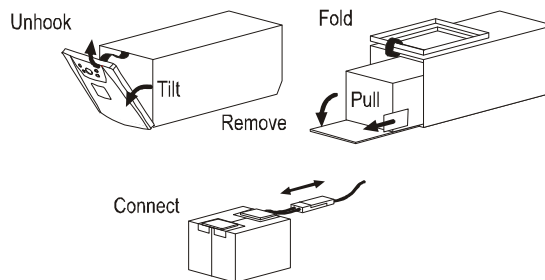


Back-UPS Office 250/500

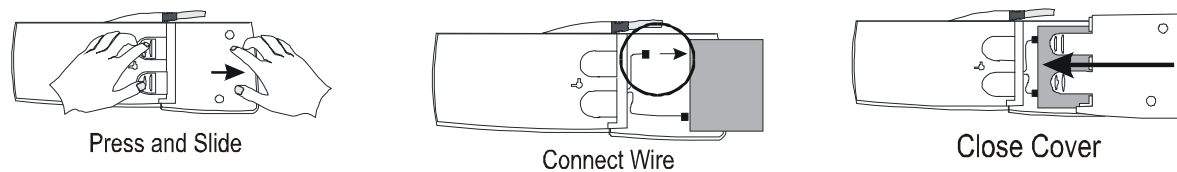


Back-UPS ES350/ES500


remove screw

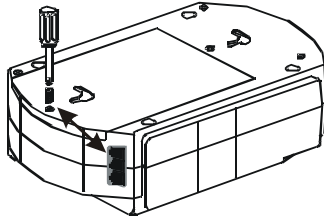


slide cover off

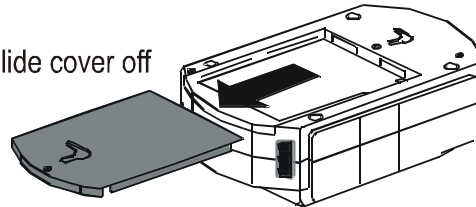


disconnect wires, replace with new battery and reconnect wires.

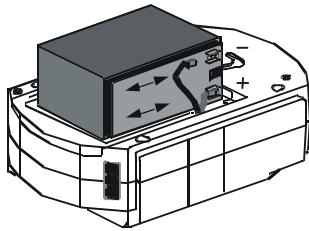

Back-UPS ES 500

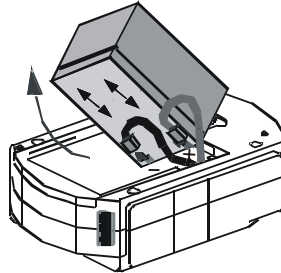


Close cover and
reinstall screw

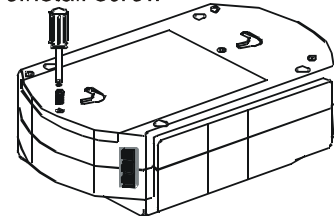


Back-UPS ES 350/450/550/650/725/750 (120 V) Back-UPS ES 400/550/700 (230 V)


press release tabs and slide off cover

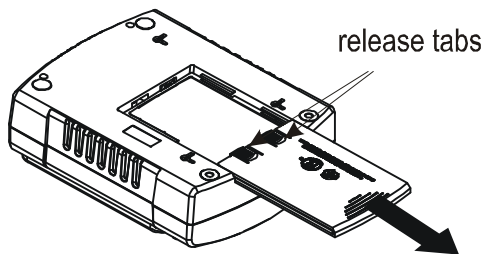

Disconnect wires, replace with new
battery and reconnect wires.

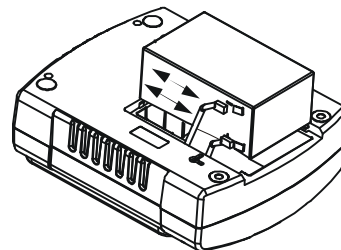


close cover

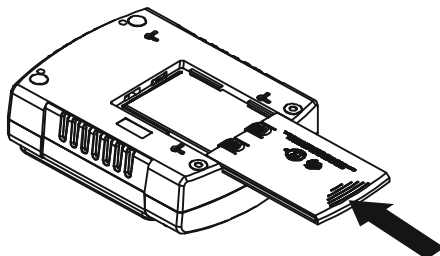


Smart-UPS


Smart-UPS Rack-Mount (5.25 inch models)

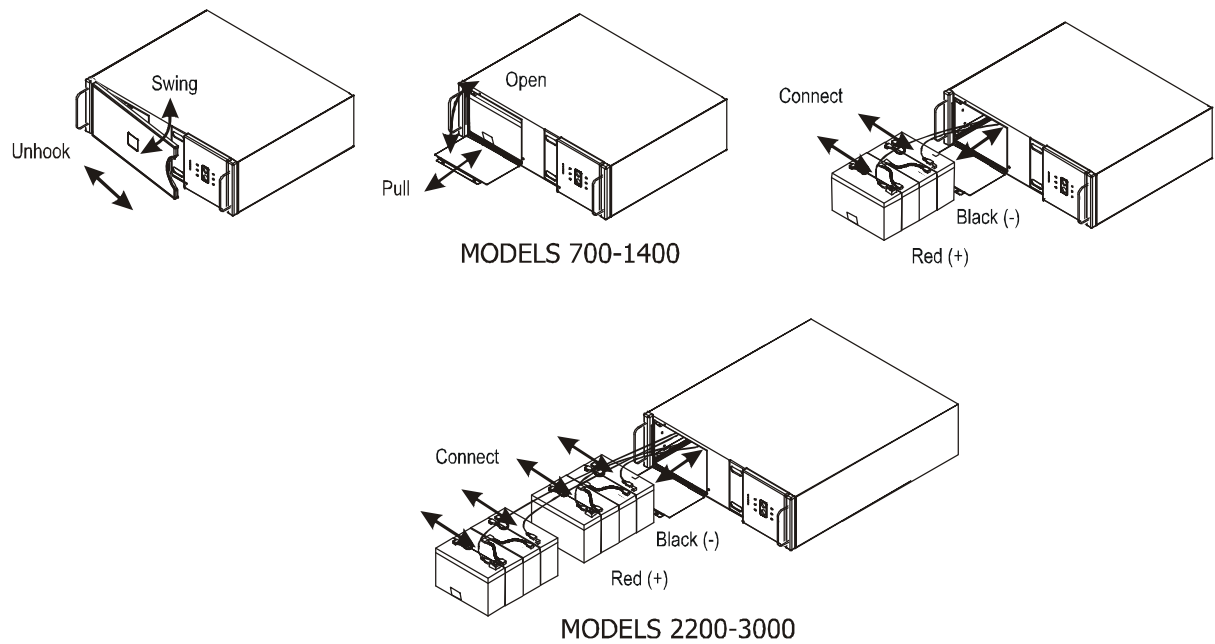


Smart-UPS Rack-Mount (8.75 inch models)

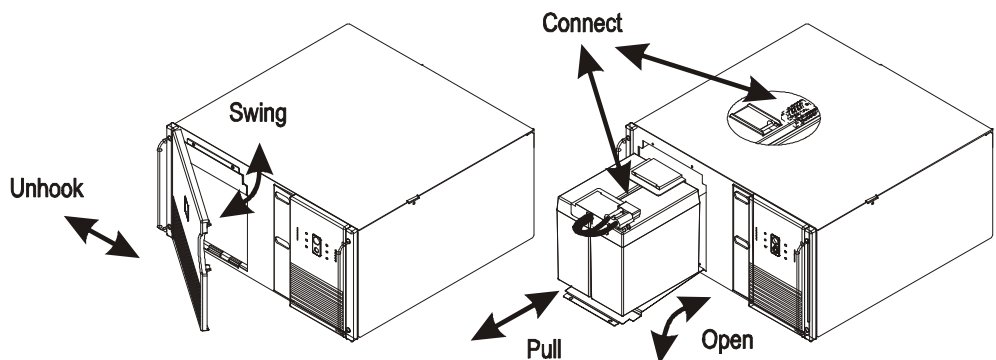


Smart-UPS Rack-Mount XL Battery Packs

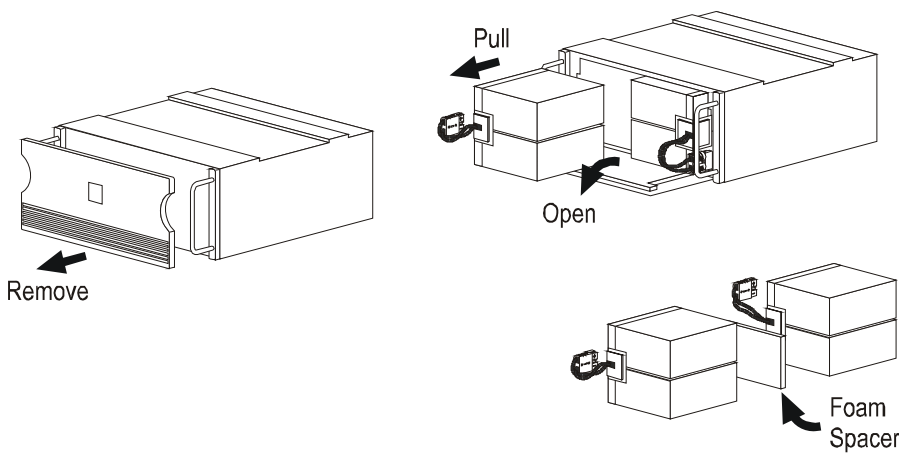


Smart-UPS 2200/3000

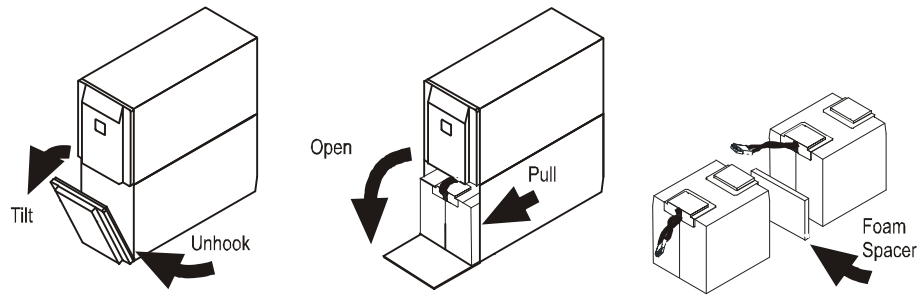






UXBP 24/48/48M

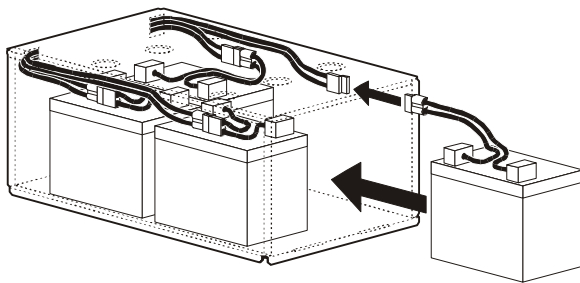

SmartCell XR

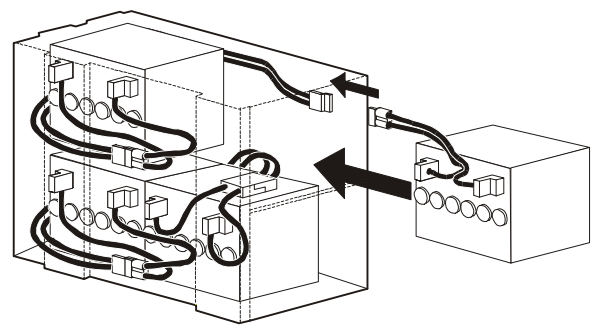


Smart-UPS 450/1500 Smart-UPS XLBP

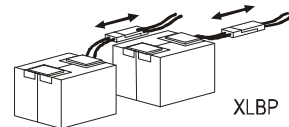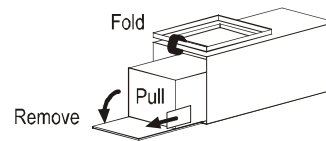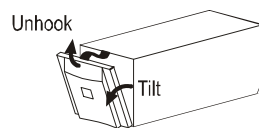


BX800/1100xx-xx


1. To remove the front panel, insert a screwdriver into the notch on the bottom of the unit. Forcefully tap the screw driver to unsnap the front panel off of the unit. Remove the screws from the back panel of the unit.

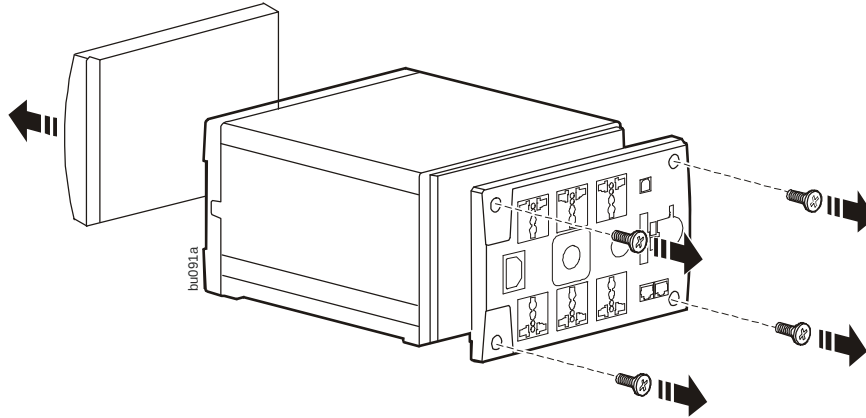

2. Remove the side panels.

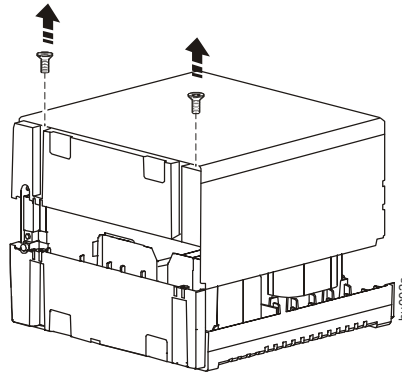


3. Detach the red and black wires from the battery. Remove the old battery and replace with new battery. Reconnect the battery wires, red to the + and black to the -. Reassemble the unit.

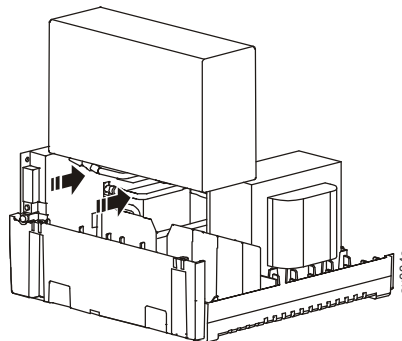


BX650xx-xx


1. Remove screws from bottom of the front panel of the UPS. Slide the front panel upwards to remove it.

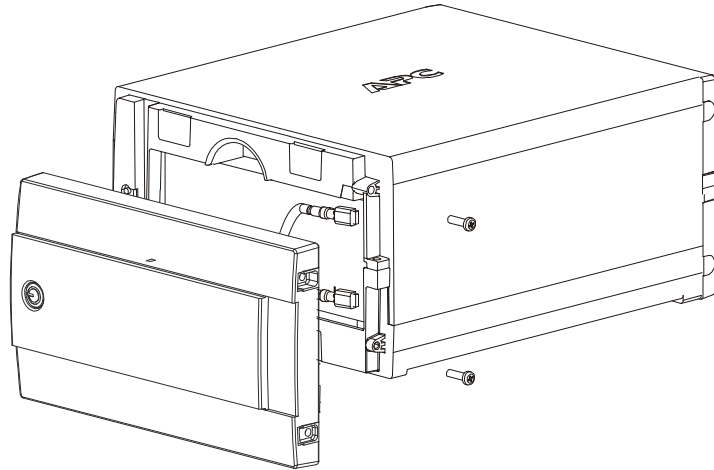

2. Detach the red and black wires from the battery.


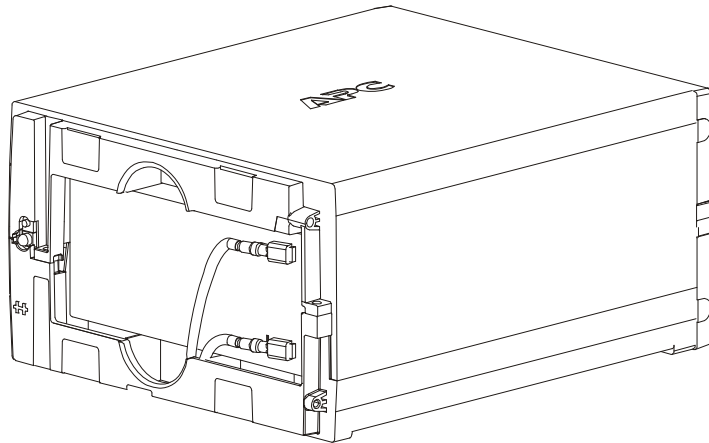


3. Replace with a new battery. Connect the wires: red to the “+” terminal and black to the “-” terminal. Reassemble the UPS.


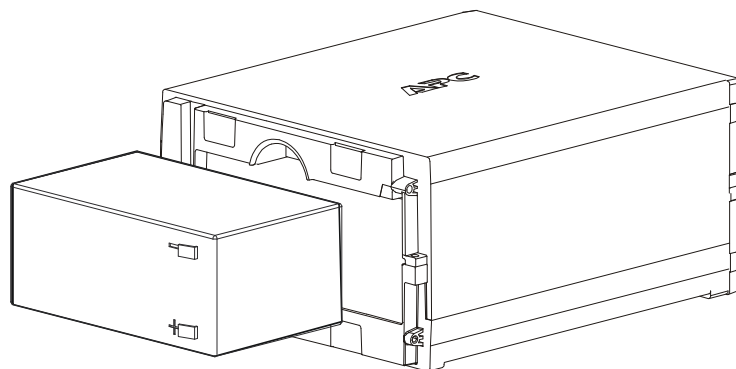


Installation Guide APCRBC154


- ❶ Press the battery compartment cover release tabs located on the rear side of the unit. Slide the battery cover off.

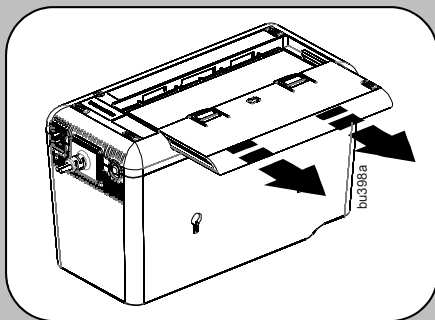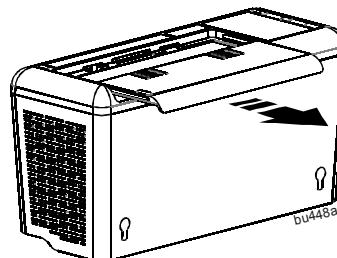Back-UPS Connect models**Back-UPS models**

- ❷ Connect the battery cables securely to the battery terminals. It is normal for small sparks to be seen when the battery cable is connected to the battery terminal. Once the terminals are connected insert the battery, with the terminals facing down, into the battery compartment.

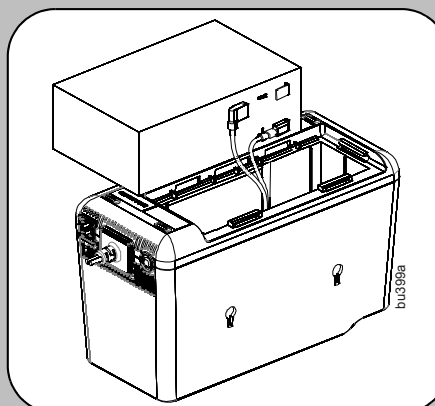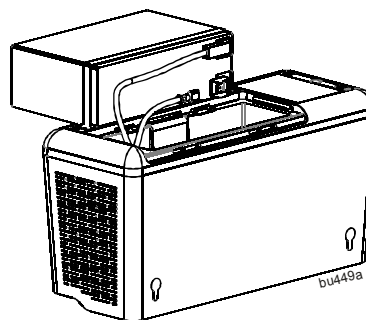Back-UPS Connect models**Back-UPS models**

- ❸ Reinstall the battery compartment cover. Be sure that the release tabs lock into place.

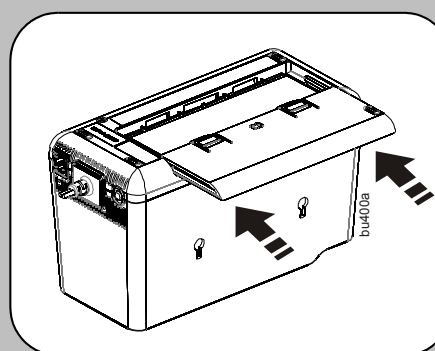Back-UPS Connect models**Back-UPS models**