

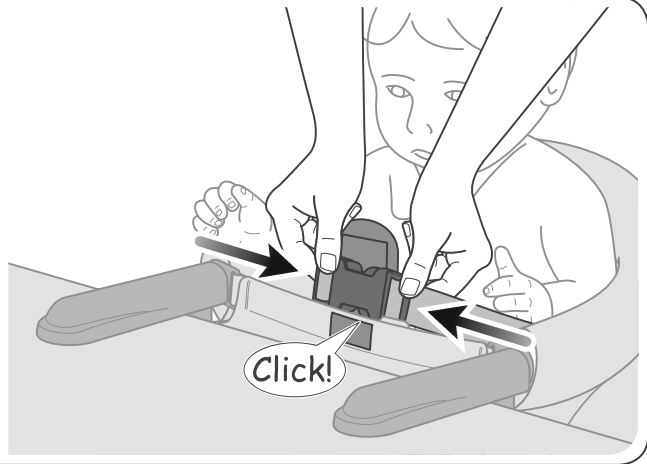



11

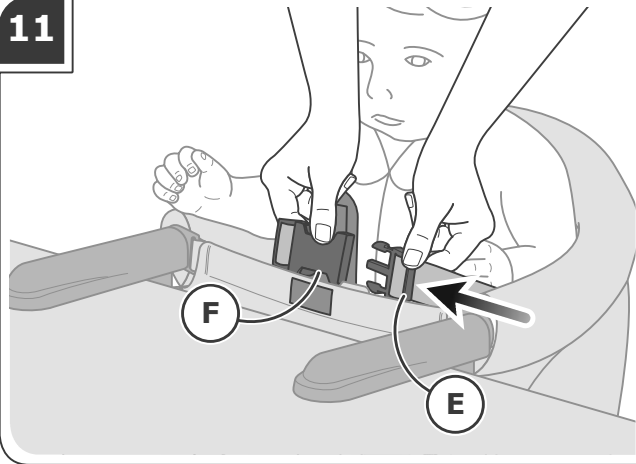


12

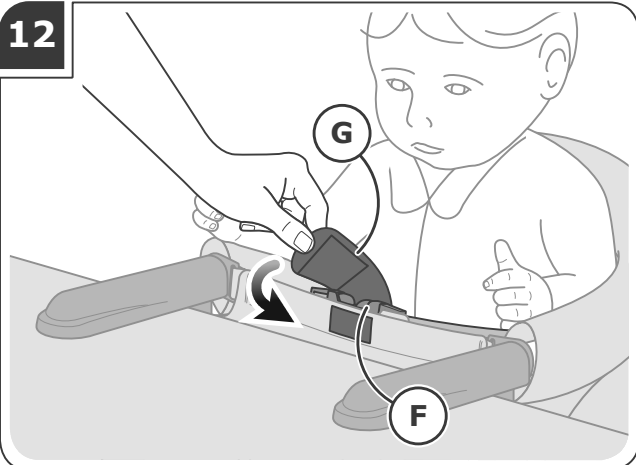


13

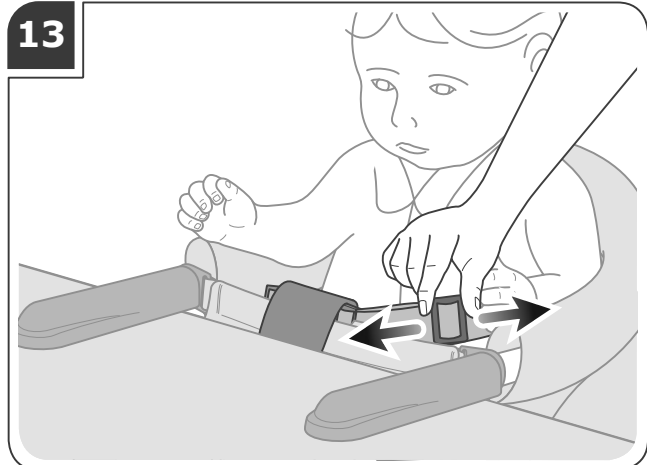


14

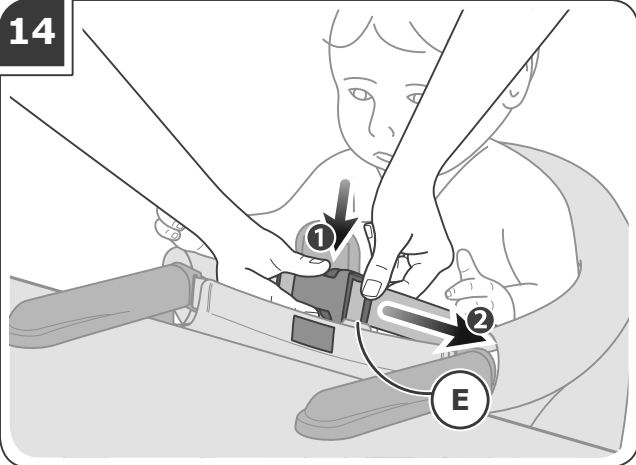


15

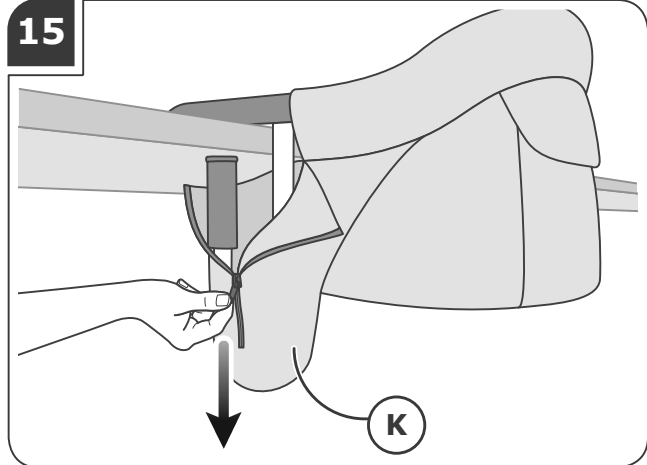



16

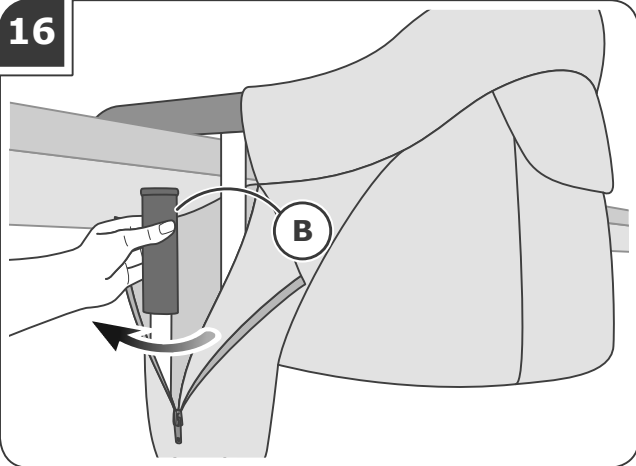




17

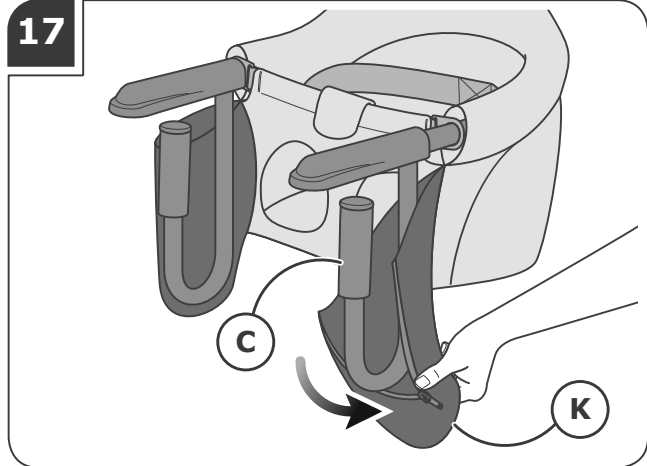



18

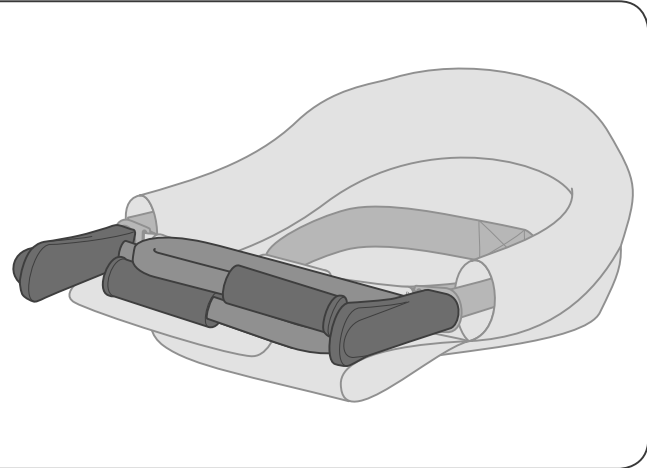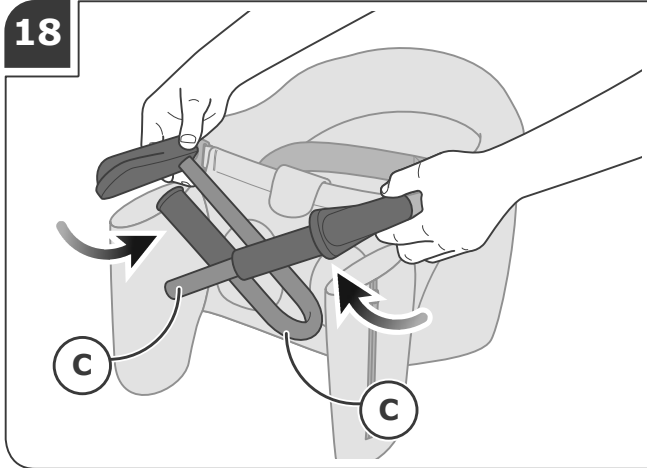


19

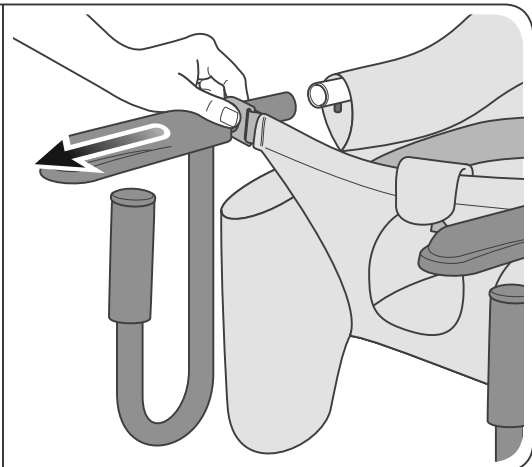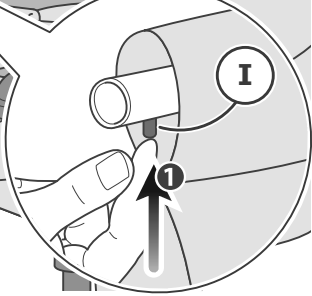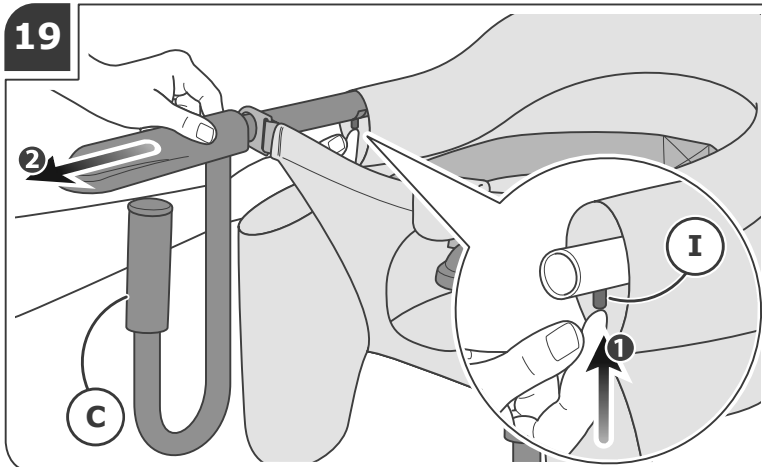



20

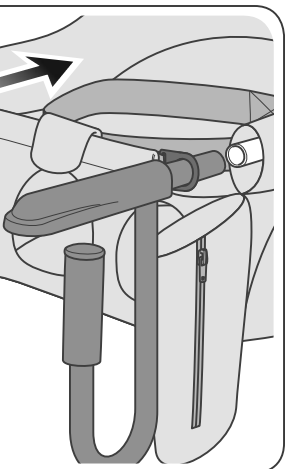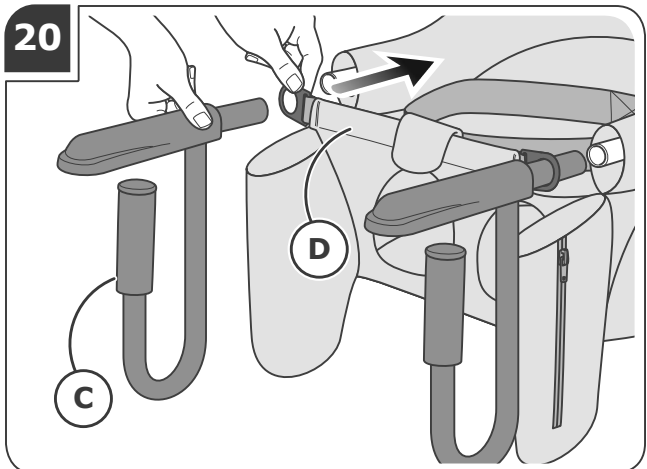


21

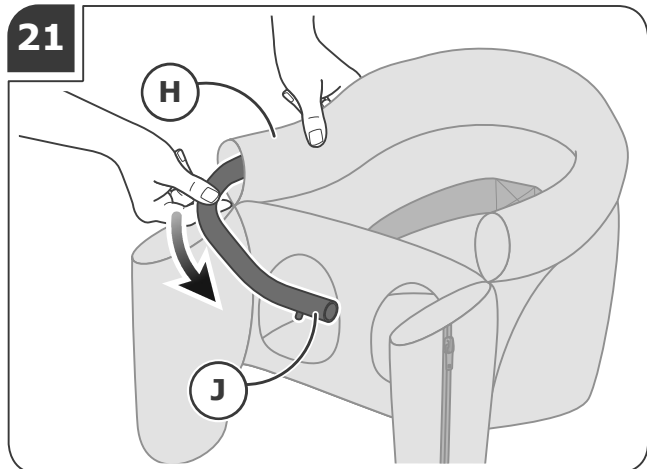

22

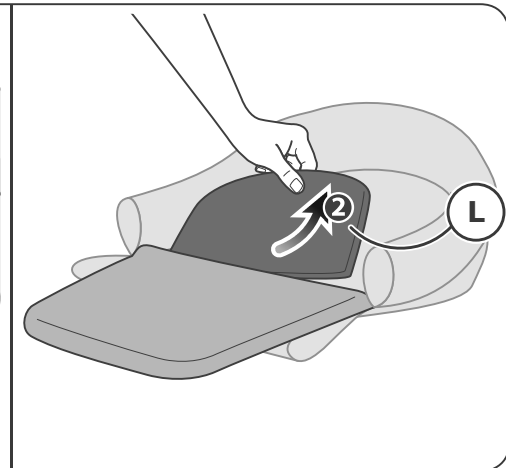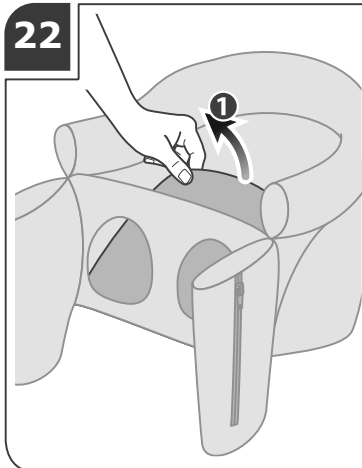

23

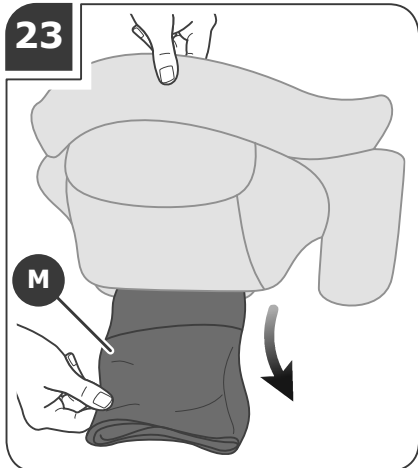

INSTRUCTIONS

LIST OF COMPONENTS

fig. 01

- A** Arms
- B** Clamps
- C** Support Arms
- D** Front Safety Strap
- E** Waist Belt
- F** Central Buckle
- G** Crotch Strap
- H** Lining
- I** Locking Pins
- J** Chair Support Pipe
- K** Lower Support Arms Cover
- L** Rigid seat Support

Before assembling, confirm that the hook-on chair and all its components have not been damaged during transport or handling. If any damage exists, no matter how slight, DO NOT USE THE CHAIR.

Contact Inglesina for any necessary replacement parts.

ASSEMBLY OF THE SUPPORT ARMS

fig. 02 The Support Arms (**C**) are delivered disassembled.

fig. 03 Place the plastic rings of the front safety strap (**D**) over the support arms (**C**). Slide the support arms (**C**) into the frame of the Fast Seat.

fig. 04 The spring loaded locking pins (**I**) should “click” through the corresponding holes in order to lock the support arms (**C**) in place. DO NOT zip the lower support arms cover over the support arms (**C**).

POSITIONING CHAIR

fig. 05 Place the hook-on chair close to the table and slide the arms (**A**) along the top of the table. Push the hook-on chair all the way forward to the edge of the table. The entire bottom surface of the arms (**A**) must be in full contact with the top of the table. Confirm the support arms (**C**) are properly in place under the table.

fig. 06 Screw the clamps (**B**) by rotating them counterclockwise until reaching the bottom of the table. Tighten the clamps (**B**) at least three (3) full turns after the clamp (**B**) first contacts the bottom of the table.

fig. 07 Zip the lower support arms cover (**K**) over the support arms (**C**), covering the support arms (**C**) and clamps (**B**).

fig. 08 WARNING! Confirm that the hook-on chair is securely anchored to the table by trying to pull it away from the table and downwards. Do not place a child in the hook-on chair if chair moves at all during this test. Failure to securely anchor the hook-on chair can result in an accident, personal injury or death.

fig. 09 WARNING! Never attach the hook-on chair to table tops with beveled, angled or other decorative profiles more than 3.5 cm (35 mm or 1.3 inches), even if the clamps (B**) fully contact the underside of the table. There is a risk the hook-on chair will detach from the table, resulting in an accident, personal injury or death.**

fig. 10 WARNING! Never attach the hook-on chair to a table with profiles that do not ensure full contact between the entire bottom surface of the arms (A**) and the top of the table, and the clamps (**B**) with the bottom of the table. There is a risk the hook-on chair will detach from the table, resulting in an accident, personal injury or death.**

SAFETY BELTS

fig. 11 Always secure the child with the waist belt (E). Insert the two clips on the ends of the waist belt (E) into the central buckle (F) attached to the crotch strap (G).

fig. 12 Loop the end of the crotch strap (G) over the central buckle (F).

fig. 13 Be sure to properly tighten the waist belt after placing the child in the hook-on chair.

WARNING! The failure to properly tighten the waist belt may cause the child to fall or slide out of the hook-on chair, resulting in personal injury or death.

CLOSING AND REMOVING THE CHAIR

fig. 14 Unhook the waist belt (E). Confirm that the child's feet and legs are free from the hook-on chair support arms or any parts of the table (C). Remove the child from the hook-on chair.

fig. 15 Unzip the lower support arm cover (K) over the support arms (C) and clamps (B).

fig. 16 Loosen the clamps (B) by rotating them clockwise. Remove hook-on chair by pulling it away from the table.

fig. 17 Remove the clamps (B) from the lower support arms cover (K).

fig. 18 Rotate the support arms (C) inward and upward for storage.

CLEANING

fig. 19 Push the locking pins (I) on the hook-on chair arms inwards and pull away the two support arms (C).

fig. 20 Remove the plastic rings of the front safety strap (D) from the ends of the support arms (C).

fig. 21 Remove the hook-on chair support pipe (J) from the lining (H).

fig. 22 Then, remove the rigid support (L) from the bottom of the hook-on chair.

To re-assemble to hook-on chair, follow these steps in reverse order.

TRANSPORT BAG

fig. 23 The hook-on chair is equipped with a convenient integrated transport bag (M).