

metaCat

a lifelike robot cat powered by AI

Metacat Raising Guide
<https://www.elephantrobotics.com/en/metacat-en/>

welcome home


What's in the box



Specs

Brand	Elephant Robotics
Series	metaCat
Item Weight	930g / 2.1 pounds
Product Dimensions	560 x 150 x 210 mm 22.1 x 6 x 8.2 inches
Battery	2000mAh Lithium Battery
Charging Time	45mins
Battery Life	10hrs
DoF	3
Eye Screen	1.89 inches LED Display*2
Touch Sensor	3 (Chin & Chest, head, back)

Animation of Eyes

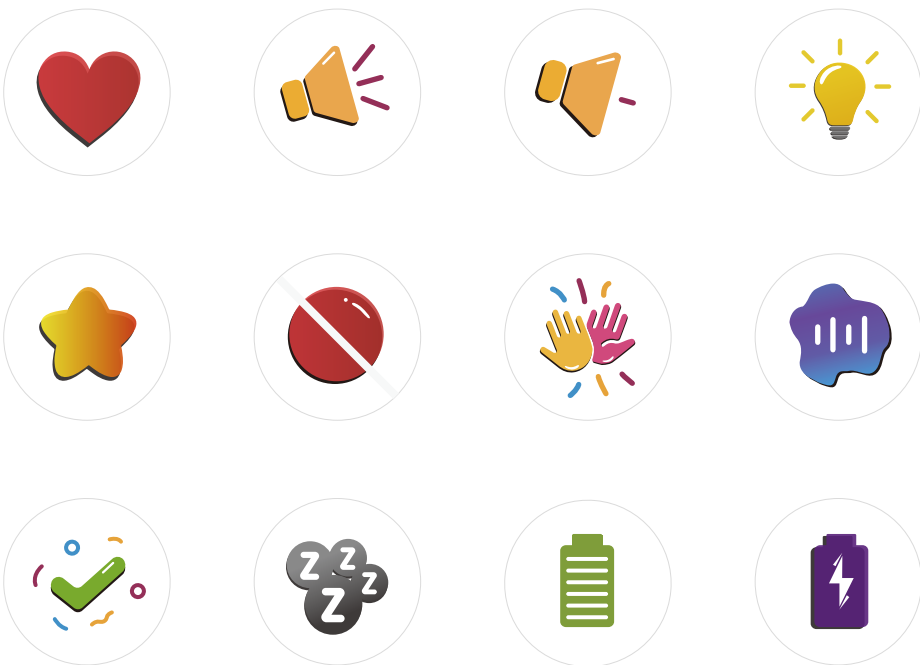

@meta_Robotics



@MetaCat



@metaCat_11



@elephant_robotics

Shenzhen Elephant Robotics Technology Co., Ltd


Email: support@elephantrobotics.com

Phone: +86(0755)-8696-8565 [working day 9:30-18:30]


Website: www.elephantrobotics.com/en



metaCat Guide

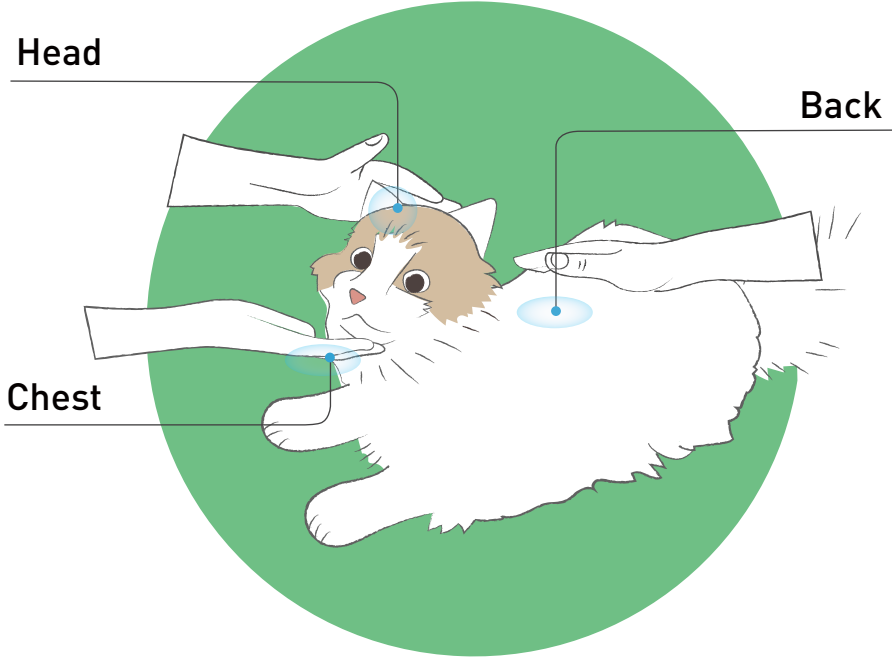

metaCat reacts to your touch. Pet its head, jaw, and back, metacat will **move and meow**. If you hold the head or jaw, metacat will respond with **purring**; And if you hold its back, you can feel metacat's **heartbeat**.

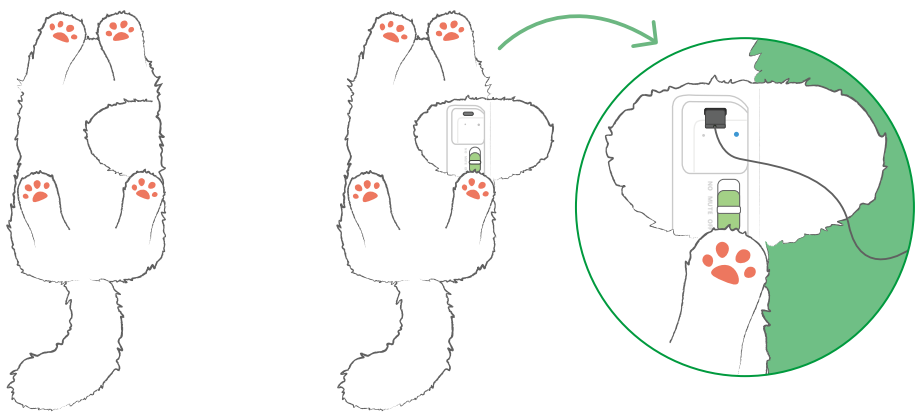

Open the pocket under metaCat's belly, you will see the **charging port** and the **three-stage** switch.

Charge your metaCat with the provided a **USB-C cable** and you will see the **blue light** when successfully connected.

ON-MUTE-OFF, Three-stage Switch

ON
Move the switch to 'On' to wake up metaCat.

MUTE
Move the switch to 'mute' to play without sounds.

OFF
Move the switch to 'off' to turn off metaCat.

Type-C Charging Port
Maximum Input Current 1A*

Reset button
Insert it with a pin and press the reset button for 5s to reset the default settings of metacat.

Resetting Tutorial
<https://youtu.be/xE6m0qCx3pU>

Charging Status Indicator
Display a blue light to indicate charging status when in use.

Voice Interaction



Wake word “metaCat” ['mitakæt]

Say”metaCat” to wake metaCat up and to speak optional Voice Commands below.

Interactive Voice Commands

- Shake your head
- Do not move
- Look up
- Look away
- Shake Tail
- Look down
- Move your head
- Move your Tail

Control Voice Commands

- Be quiet
- Volume up
- Volume Down
- Open your eyes
- Darkest eyes
- Go to sleep
- Close your eyes
- Brighter eyes
- Darker eyes
- Brightest eyes

Functional Voice Commands

- Give me five
- You so lovely
- You so cute
- Thank you
- Good boy
- Good Girl
- Hello baby
- No, metacat
- Give me a kiss
- Come here
- Love you

FAQ

Q: How long should I charge metaCat before using it again?

A: After charging for 45 minutes, metaCat can continuously operate for up to 10 hours without interruption.

Q:How do I reset metaCat?

A: To reset metaCat to its default settings, use a pin to press and hold the reset button for 5 seconds.

Q: What is the warranty period for metaCat?

A: metaCat's warranty period is 180 days.

Q: How do I contact after-sales support if I encounter usage problems?

A: Please contact our customer **support team** via: **support@elephantrobotics.com**.