

USER MANUAL

Rechargeable Batteries Charger

POWEROWL since
1996

A Professional Battery Manufacturer



service@powerowl.net



Warranty card included



Dear Customer

Thank you very much for choosing POWEROWL products, In order to use and maintain the charger correctly, please read this manual in detail.

If you receive a product that is abnormal, please contact us immediately, we will solve the problem for you. Thank you for your understanding.



Parameter Description:

Model: ZN825E

Input: DC 5V 2A

Output: 1.4V 250mA

Applicable battery type: AA/AAA NiMH NiCD rechargeable batteries

Dimensions: 155.2mm X 75.2mmX 30.2mm

Weight: 125g






Features:


- (1) Suitable for 1-8 pcs AA/AAA NiMH/NiCD rechargeable batteries.
- (2) Micro USB input, the USB cable is included.
- (3) Over-heat, over-current, over-voltage, short-circuit protection and defective battery detection.
- (4) Advanced IC/ ΔV control function.
- (5) LED indicates individual charging status:
Charging --- stay red;
Fully Charged--- stay green;
Defective batteries or insert in wrong ways --- red - blinking.
- (6) LED indicators can be used to test each slot of the charger:
Connect the charger with electricity (without batteries in it), if LED is green, it means normal; if the LED is red, it means this slot is defective (cannot charge batteries anymore, but not dangerous).
- (7) This charger can charge any number of AA AAA rechargeable batteries, which makes your charging easier. This function shortens the charging time by 5% compared to the chargers without such function:

Support any number of AA/AAA
Rechargeable batteries for charging.


Other chargers must be charged
with two batteries at the same time.

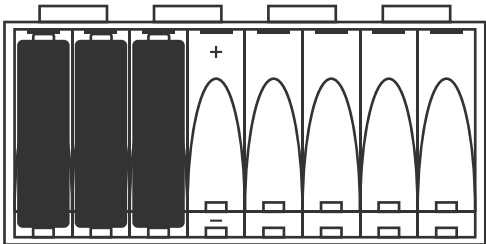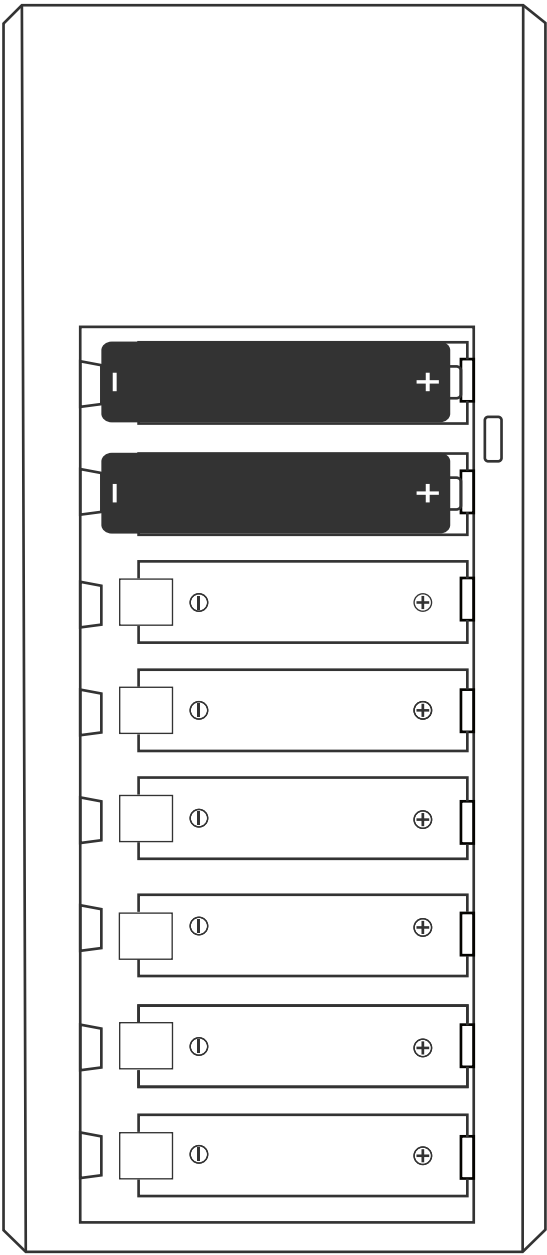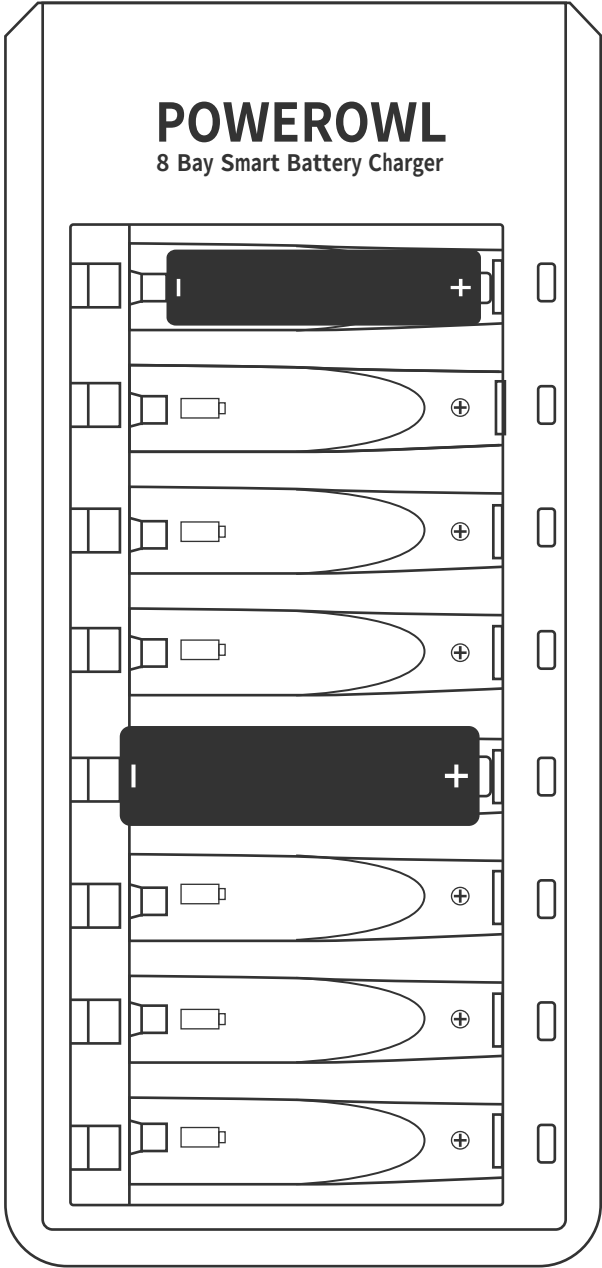

AA Battery 3pcs

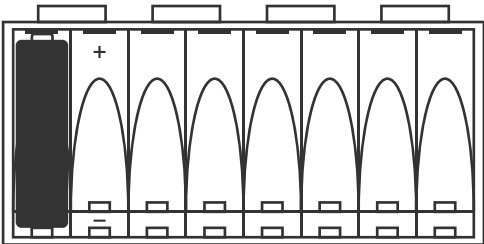

AA Battery 1pcs

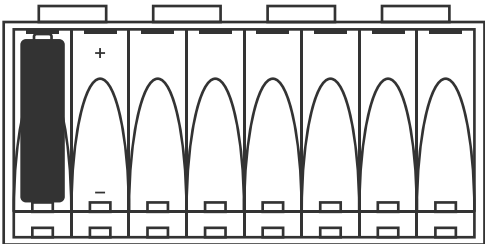


AAA Battery 1pcs



Operating Instructions:

- (1) Insert 1 or 8 pcs AA/AAA NiMH/NiCD rechargeable batteries into the charger. Pay attention to the polarity marks "+" and "-".
- (2) Connect the USB cable with the micro socket.
- (3) Remove batteries and unplug the charger after charging.




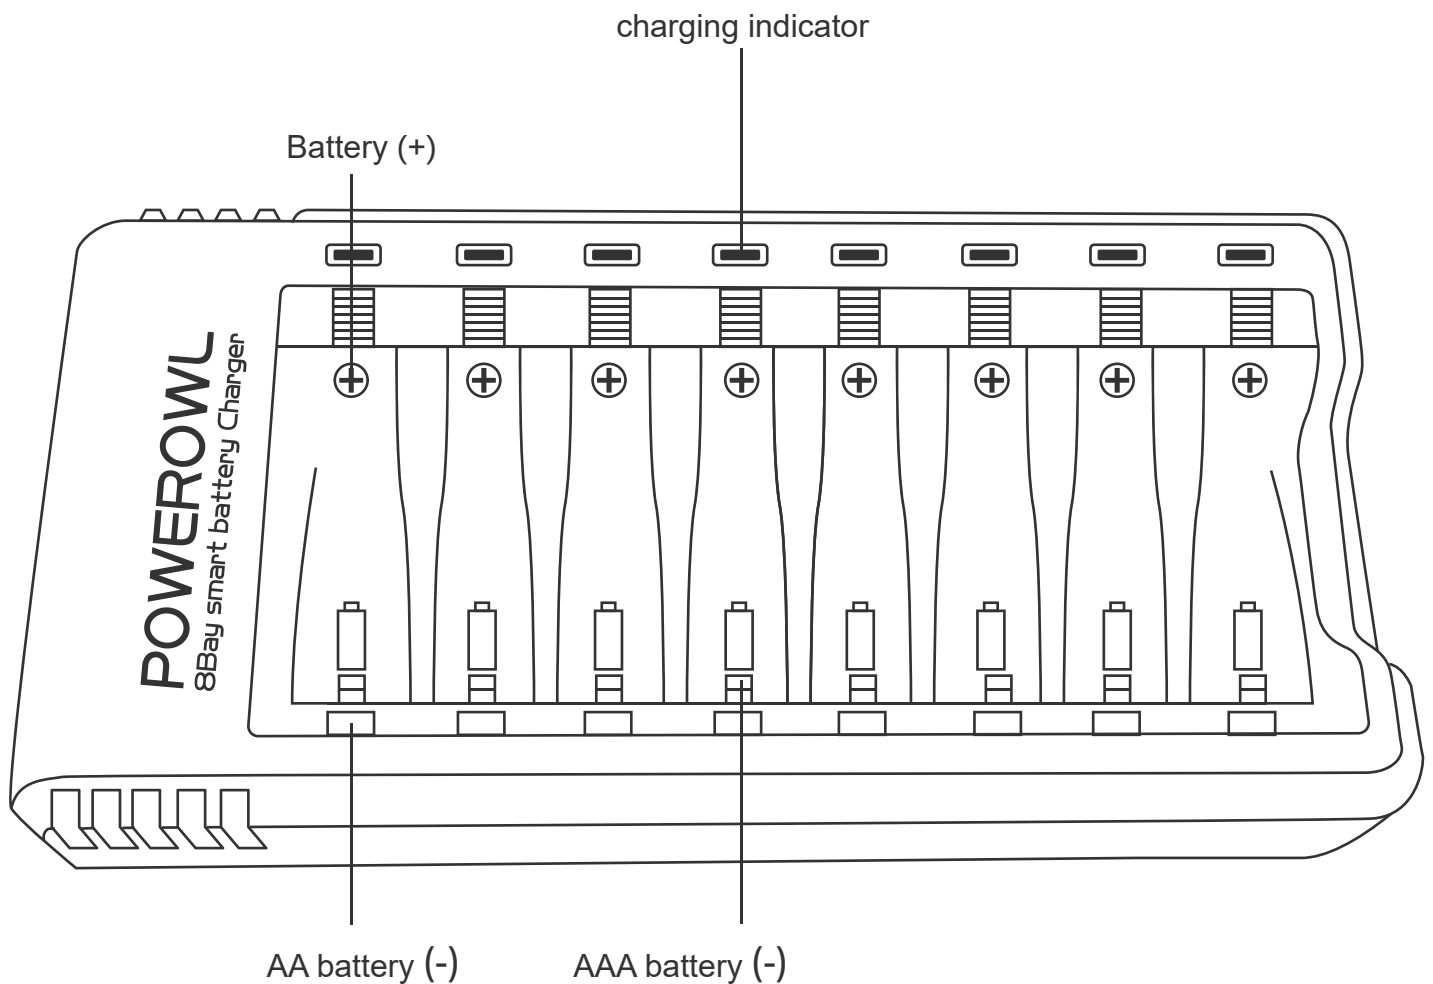




Cautions:

- (1) Batteries which are broken by the skin are not allowed to be charged.
- (2) It is limited to charge for DC 1.2V Ni-MH or Ni-CD rechargeable batteries, do not use it to charge other types batteries like alkaline batteries.
- (3) Please ensure the battery installed is correct: make the +/- pole of the battery is match for the +/- pole of the charger, or a slight electric shock may occur.
- (4) This charger is for indoor charging and do not expose it to rain or snow. And it should be used between 0°C-35°C(32°F-95°F).
- (5) Do not decompose, assemble or process the charger.
- (6) Do not drop the charger on the ground or place the weight on it.
- (7) Children must be supervised by adults using this charger.
- (8) Using environment: 0°C-35°C(32°F-95°F), it is normal phenomenon that the battery is warmer than room temperature when charging.
- (9) Do not make or store the charger in direct sunlight, hot equipment or other hot places.
- (10) During charging, do not cover the charger with items such as towels or clothing to Avoid causing a fire.
- (11) When the charger is not used, remove the battery from the charger so as not to cause battery loss.

(12) When installing the battery for charging, make sure to insert the negative(-) terminal of the battery first, then press the top of the battery to connect the positive(+) contact plate. Incorrect direction to install the battery will cause damage to the negative terminal of the charger and the battery sleeve.

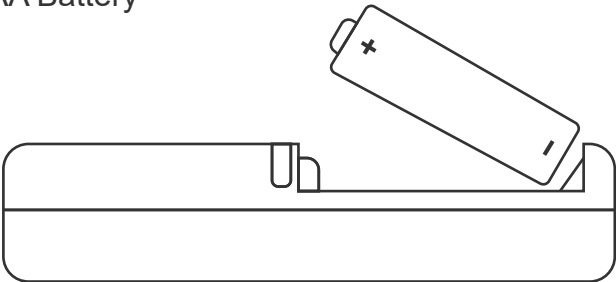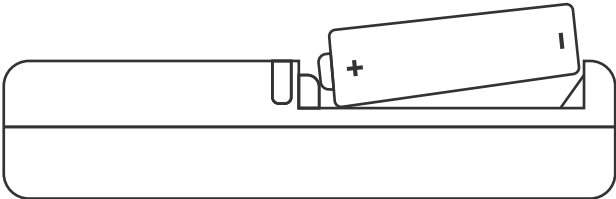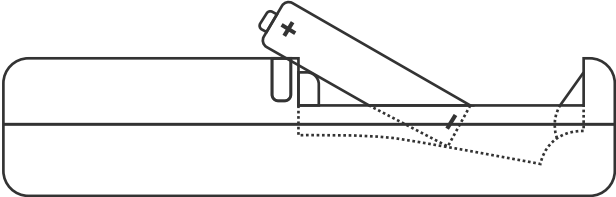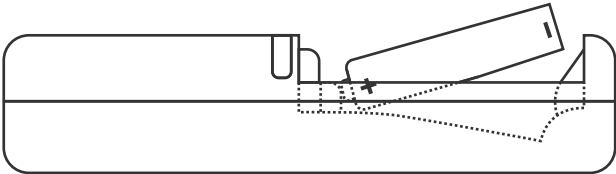✓correct direction to install the battery	✗Incorrect direction to install the battery
AA Battery 	AA Battery 
AAA Battery 	AAA Battery 



Warranty Card

Dear Customer:

Hello, if you encounter any problems with our products,
please contact us at the first time,
Email: service@powervip8.com,
thank you

POWEROWL

Model:

Purchase date:

User:

Buyer:

Name:

Name and address:

Address:

Telephone:

THANK YOU FOR CHOOSING

POWEROWL service team is online 24 hours

 service@powerowl.net