



Exterior Function Introduction [Front]

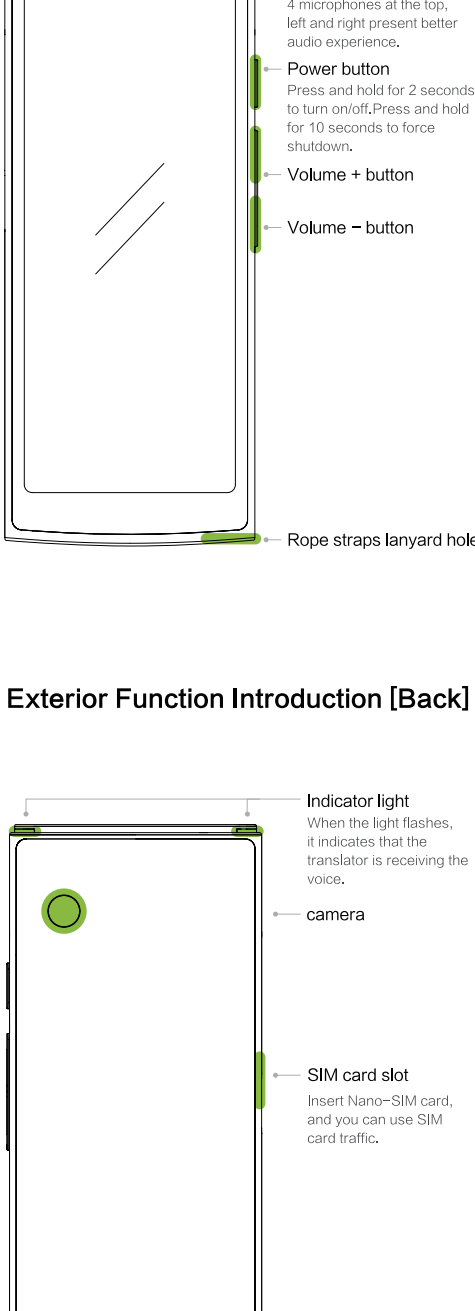

Exterior Function Introduction [Back]

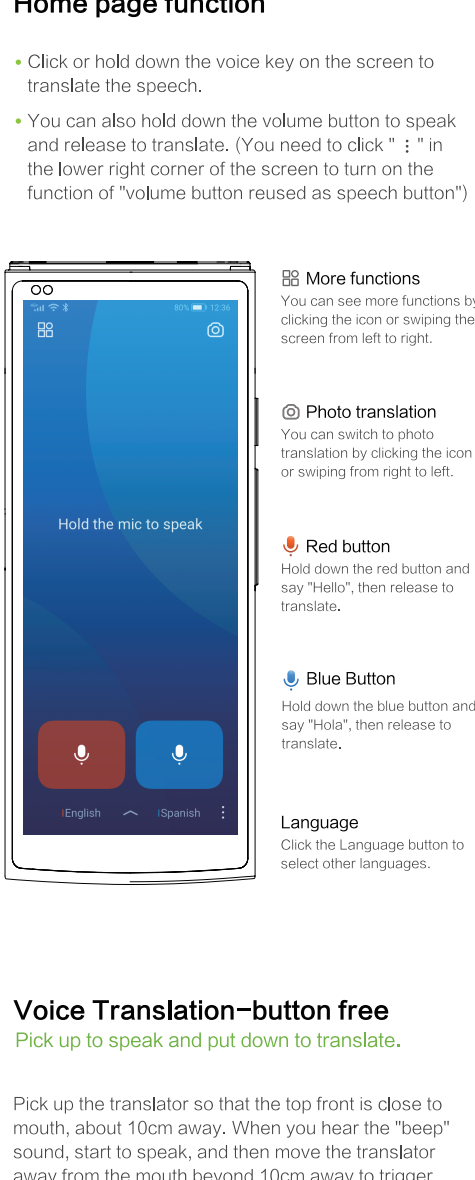

Home page function

- Click or hold down the voice key on the screen to translate the speech.
- You can also hold down the volume button to speak and release to translate. (You need to click " : " in the lower right corner of the screen to turn on the function of "volume button reused as speech button")




Voice Translation-button free

Pick up to speak and put down to translate.

Pick up the translator so that the top front is close to mouth, about 10cm away. When you hear the "beep" sound, start to speak, and then move the translator away from the mouth beyond 10cm away to trigger the translation.

When using this function, please click " : " in the lower right corner of the voice translation interface to ensure that the "button-free translation" function is turned on.

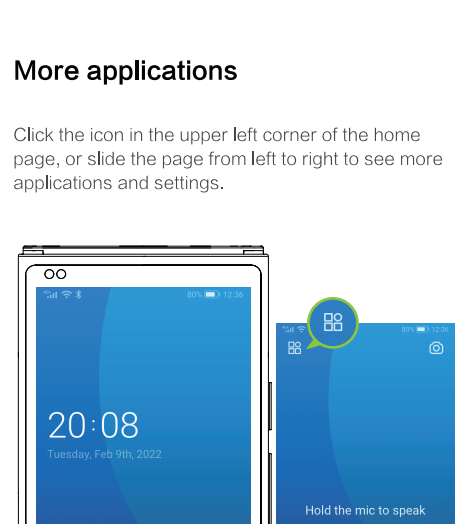


Pick up to speak and put down to translate.

Voice Translation-button free

Hand out to automatically broadcast translation and receive sound.

After finish speaking, you can hand out the translator to show and broadcast the translation to the other party in full screen. At the end of the broadcast, the translator will automatically record, recognize the other party's voice and translate.

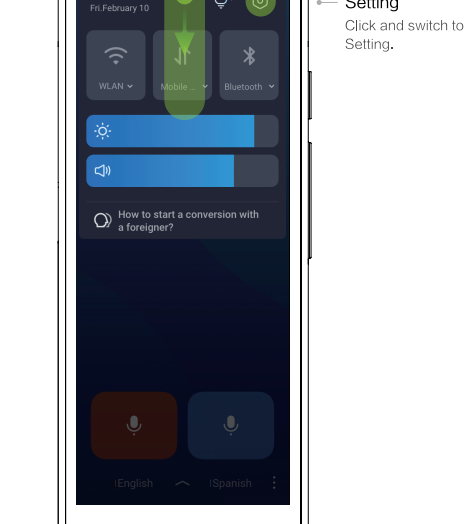


After finish speaking, you can broadcast the translation and automatically receive the other party's voice.

Photo Translation


Full-screen framing, shooting and instant translation.

- Full screen mode**: select the language to translate, and after pressing the shutter, it can directly translate the text into the target language.
- Smear mode**: select the language you need to translate and press the shutter to smear the text of the area you need to translate into the target language.

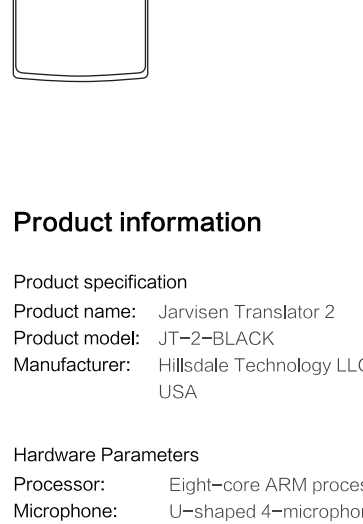


More applications

Click the icon in the upper left corner of the home page, or slide the page from left to right to see more applications and settings.

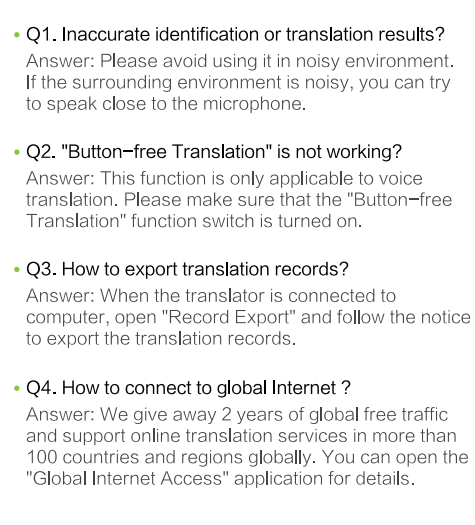


Quick setting

You can swipe down from the top status bar to see more quick setting.

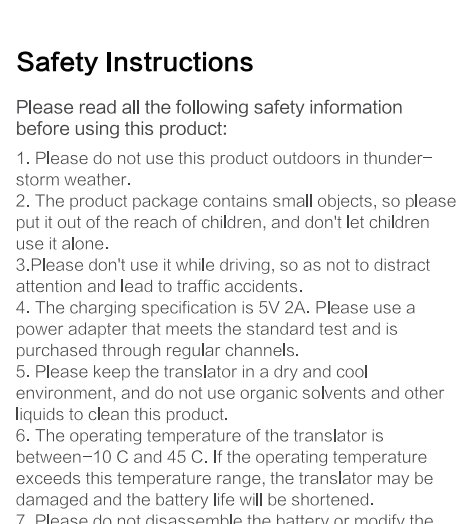

Accessories

Accessories include:
Type-C data cable, SIM pin, instruction manual and protective case.

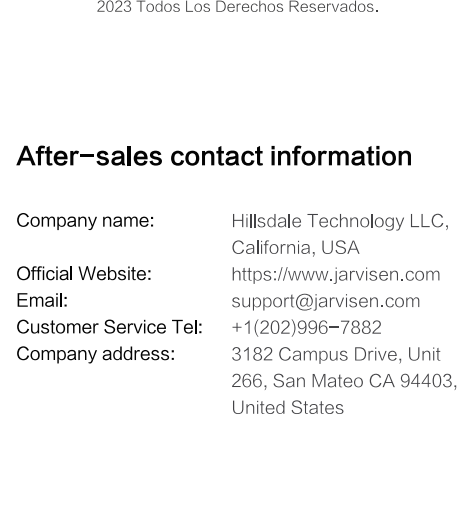

Product information

Product specification
Product name: Jarvisen Translator 2
Product model: JT-2-BLACK
Manufacturer: Hillsdale Technology LLC, California, USA

Hardware Parameters
Processor: Eight-core ARM processors
Microphone: U-shaped 4-microphone array
Horn: 1612 classic superlinear horn
Home screen: 5.05-inch HD full screen
Sensors: gyroscope, distance sensor

Size and weight
Size: 56.5 * 140.6 * 10.4 mm
Product weight: 130g

Charging battery
Charging specification: DC 5V 2A
Battery capacity: 2100 mAh

Frequently Asked Questions

Q1. Inaccurate identification or translation results?
Answer: Please avoid using it in noisy environment. If the surrounding environment is noisy, you can try to speak close to the microphone.

Q2. "Button-free Translation" is not working?
Answer: This function is only applicable to voice translation. Please make sure that the "Button-free Translation" function switch is turned on.

Q3. How to export translation records?
Answer: When the translator is connected to computer, open "Record Export" and follow the notice to export the translation records.

Q4. How to connect to global Internet ?
Answer: We give away 2 years of global free traffic and support online translation services in more than 100 countries and regions globally. You can open the "Global Internet Access" application for details.

Q5. How to change the font size?
Answer: You can turn to "Setting-Display-Font Size" and increase the font size.

Q6. How to download the offline language package?
Answer: In "Voice Translation-Offline Package Management", download the off-line package of the corresponding language, and you can use the off-line translation function without network.

Q7. Why the translator is charging abnormally?
Answer: The charging specification is 5V 2A. Please use a power adapter that meets the standard and purchase through official channels. If the battery of the translator is discharged due to long-term non-use, it needs to be continuously charged for more than half an hour, and then try to switch on.

This guide is for reference only, and the software will be continuously upgraded. Please refer to the physical object.

Safety Instructions

Please read all the following safety information before using this product:

- Please do not use this product outdoors in thunder-storm weather.
- The product package contains small objects, so please put it out of the reach of children, and don't let children use it alone.
- Please don't use it while driving, so as not to distract attention and lead to traffic accidents.
- The charging specification is 5V 2A. Please use a power adapter that meets the standard test and is purchased through regular channels.
- Please keep the translator in a dry and cool environment, and do not use organic solvents and other liquids to clean this product.
- The operating temperature of the translator is between-10 C and 45 C. If the operating temperature exceeds this temperature range, the translator may be damaged and the battery life will be shortened.
- Please do not disassemble the battery or modify the charger without permission. The battery of the translator can only be replaced by Hillsdale Technology Company or its authorized service provider.
- Any radio transmitting equipment (including this product) may interfere with the use of improperly protected medical equipment. Please consult medical personnel or medical equipment manufacturers to ensure that the relevant regulations are observed when the use of electronic equipment is prohibited. At the same time, for users who are equipped with pacemakers and hearing AIDS, please use them carefully according to the corresponding medical equipment regulations.
- Please don't just rely on the translator as a communication tool in an emergency, such as medical aid. The translation results provided by the translator are for reference only and do not constitute any form of guarantee.
- Safety information related to product privacy can be viewed in the "Settings-Privacy" of the translator.
- Our company is only responsible for the official system and update system, and any unofficial third-party system will have security risks.

Derechos De Autor © Hillsdale Technology LLC, California, EEUU
2023 Todos Los Derechos Reservados.

After-sales contact information

Company name: Hillsdale Technology LLC, California, USA
Official Website: <https://www.jarvisen.com>
Email: support@jarvisen.com
Customer Service Tel: +1(202)996-7882
Company address: 3182 Campus Drive, Unit 266, San Mateo CA 94403, United States

Legal&Regulatory

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with RF specifications when used near your body at a distance of 10 mm.Ensure that the device accessories, such as a device case and device holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

Note: For more legal and e-labelling information, check on your device from Settings > Systems and Updates > About.