


ELEGO

Centauri Carbon

3D Printer

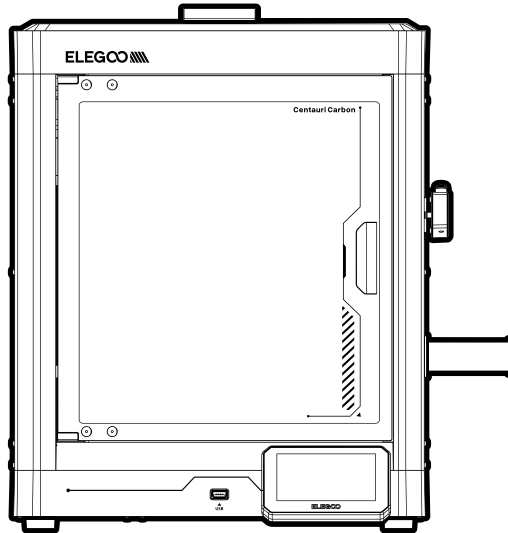

User Manual

Version 1.3

i Please Refer To The Included USB Drive For A Setup And Installation Instructional Video.

Thank you for choosing the ELEGOO Product!

Upon receiving your product, please check that the device is in good condition and all accessories are included. If you encounter any issues during installation, operation, or maintenance, please contact the ELEGOO after-sales team through the official channels below for professional support:

1. Visit our dedicated support page: <https://www.elegoo.com/pages/contact-support>. (We recommend copying the link and opening it in your browser.)
2. Scan the QR code below for one-on-one assistance.



(Note: To ensure optimal performance, each ELEGOO product undergoes rigorous printing tests before shipping. Minor surface scratches may be visible upon delivery; this is normal and will not affect functionality.)

NOTES

1. Do not place the printer in highly vibrating or unstable environment, as machine vibrations can affect print quality.
2. Do not touch the nozzle or heated bed while the printer is in operation to avoid burns and personal injury from high temperatures.
3. After printing, promptly utilize the residual heat in the nozzle to effectively clean the filament residue using a suitable tool. Avoid direct contact with the nozzle to prevent potential burns.
4. When printing low-temperature filaments such as PLA and flexible filaments, please remove the glass top cover.
5. We recommend using ELEGOO's slicing software to ensure the proper functioning of the machine and achieve optimal printing results.
6. Perform regular maintenance on the printer by cleaning the machine body with a dry cloth to remove dust and any sticky filament residue. Ensure the printer is powered off before cleaning.
7. Regularly check and clean the printer's cooling fans to prevent debris buildup and extend their lifespan.
8. Be cautious of the machine's high-speed moving parts to avoid any potential pinch hazards.
9. The Z-axis of the machine utilizes lead screws for its moving parts. Apply lubricating oil as needed to ensure smooth movement.
10. Children must be supervised by adults when using the machine to avoid personal injury.
11. In case of an emergency, directly turn off the power.
12. Ensure the machine is properly grounded for safe operation. Failure to properly ground or neglecting to ground the machine can increase the risk of electrical leakage.
13. If the machine is not in use for an extended period, please turn off the power and unplug the power cord.

Contents

Machine Parameters	1
Component Introduction	2
Accessory Specification	3
Machine Setup & Installation	4
Screen Operation Instruction	6
First Print	8
Filament Replacement	9
Slicing Software	10
LAN (Network) Printing	12
Mainboard Circuit Wiring Diagram	13

Printer Specifications

Printer Type: FDM (Fused Deposition Modeling)

Maximum Build Volume: 256*256*256(mm³)

Print Precision: $\pm 0.1\text{mm}$

Nozzle Diameter: Standard (0.4mm)

Print Speed: $\leq 500\text{mm/s}$

Ambient Environment Temperature: 5°C~40°C

Operating Temperature Specifications

Maximum Temperature of Nozzle: 320°C

Maximum Temperature of Heated Bed: 110°C

Software Specifications

Slicer Software: ELEGOO Slicer (recommended)

Input File Format: STL, OBJ, 3MF, STP

Output File Format: G-code

Interface: USB Drive, Wi-Fi

Power Supply Specifications

Input Power: AC 100-240V; 50/60Hz


Rated Power: 1100W@220V 350W@110V

Physical Specifications

Machine Size: 398*404*490mm

Net Weight: 17.5kg


Component Introduction

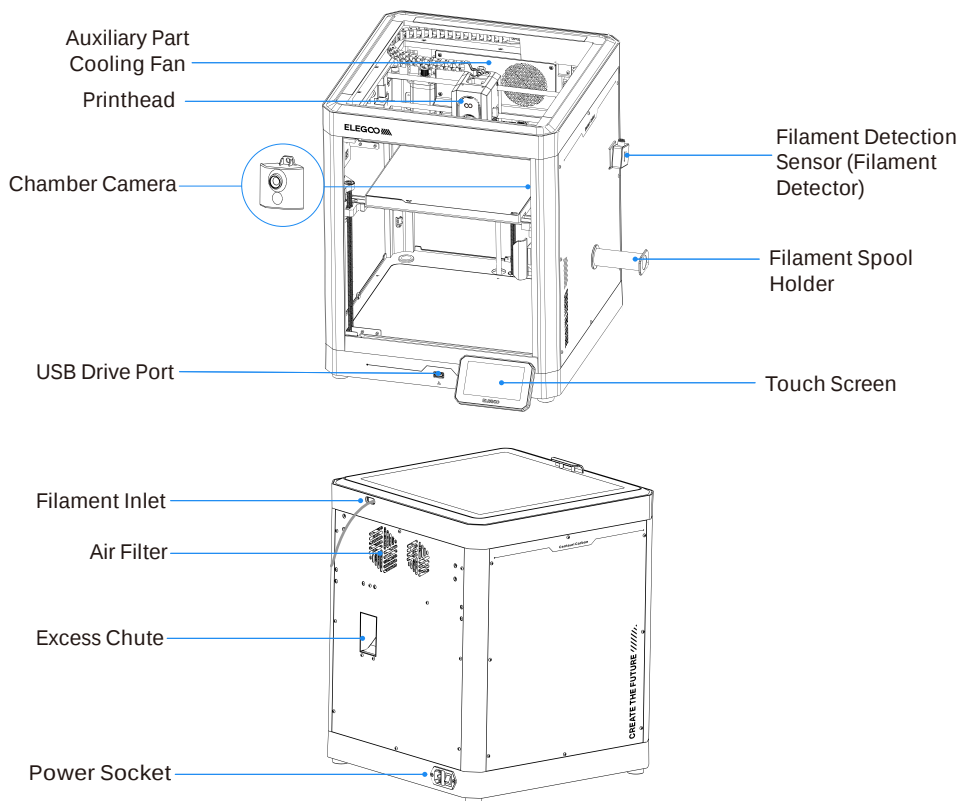

Accessory Specification




Touch Screen



Spool Holder




Filament Sample




Power Cord



Unclogging
Pin Tool

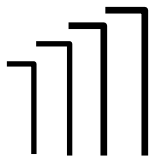

(1.5/2.0/2.5/3.0mm)
Allen Wrench



Screwdriver



Spare Heatbed
Nozzle Wiper



USB Drive



Scraper Blade




User Manual


Machine Setup & Installation




Scan to access tutorials

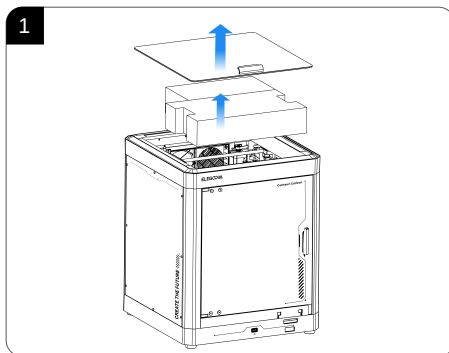

1. Take out the foam and tool kit from the printer.

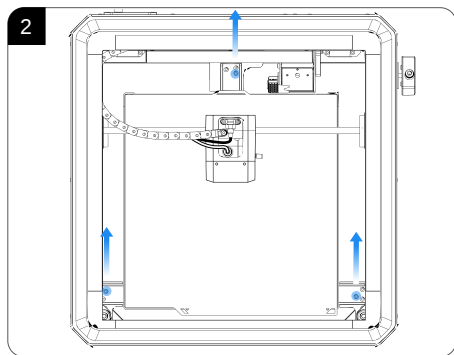


2. Unlock the heated bed and use an Allen wrench to remove the three screws in the picture.

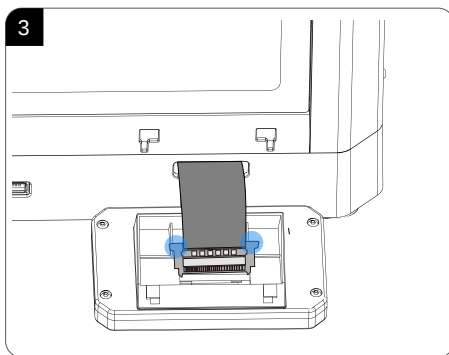


3. Insert the ribbon cable into the port by pressing the terminal as pictured. Make sure the gold contacts on the ribbon cable face upwards.


Machine Setup & Installation

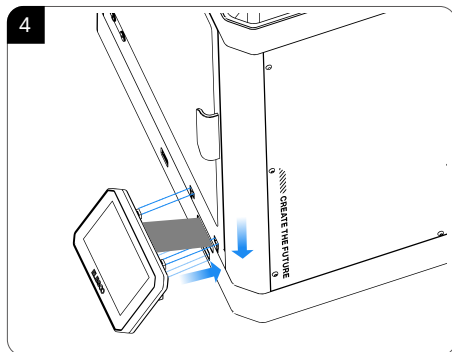

4. Install the screen into the corresponding slot on the printer and push it down to lock it in place.

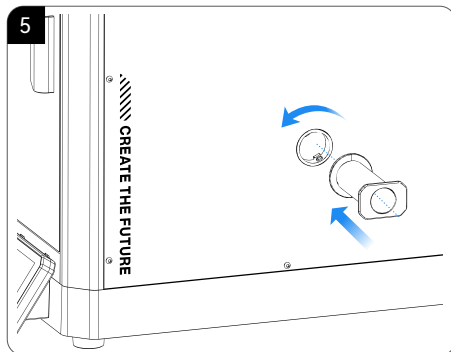

5. Mount the spool holder onto the hole on the right side of the machine and secure it by turning counterclockwise.

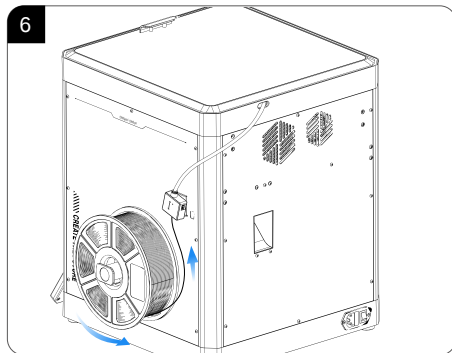


6. Load the filament by inserting one end into the filament detector and pushing it forward until it reaches its maximum position.



Important note: If you have disassembled machine components such as the nozzle assembly or build platform, make sure to re-level the platform before printing.


Screen Operation Instruction

1

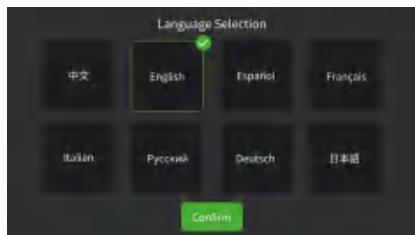

1. Language Selection

2

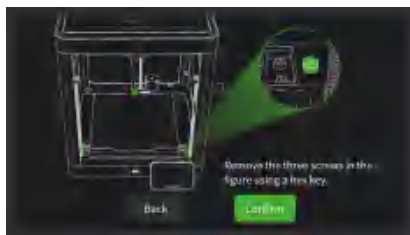


2. Follow the on-screen prompt to remove the three fixed screws of the build platform.

3



3. Ensure the printer chamber is free from foreign objects, then click "Confirm" to proceed.


4

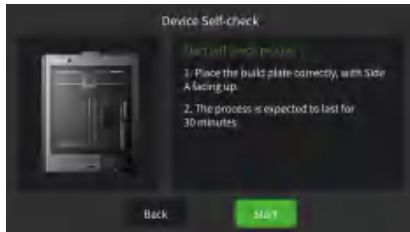

4. Enter the initial self-check process. Vibrations and noises during the self-check are normal.


Screen Operation Instruction

5

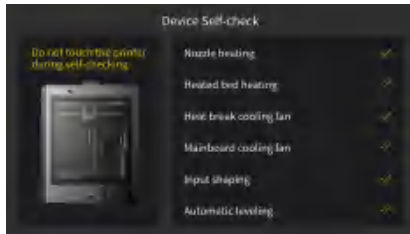

5. Do not tap or shake the machine during the self-check process to avoid error prompts.

6

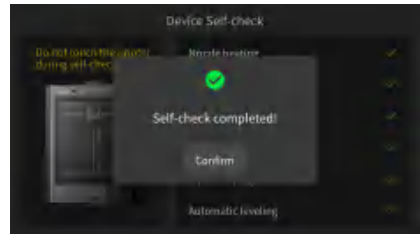

6. Self-check completed. Click "Confirm" to proceed.



Note: Ensure to recalibrate the printing platform before each print when switching sides on the double-sided textured flexible plate.


First Print

1



1. Click **[🔧]** - **[📏]** to set the nozzle temperature to the suitable temperature for the filament (e.g., 220°C for PLA). Wait for the temperature to reach the set value, then click **[▽]** repeatedly until the filament starts extruding from the nozzle.

3

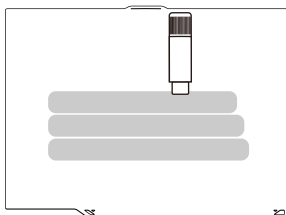


3. If the adhesion of the build plate decreases after prolonged use, you can apply solid glue or use platform adhesive spray to enhance the first-layer adhesion of the model, or replace the build plate.

2



2. Click **[📁]** - **[Local]** to select a model for test printing. (Tip: Long press to import print files from your USB drive to local storage.)


4

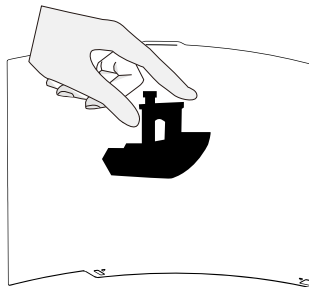

4. After the printed model cools down, detach the flexible build plate together with the model from the device. Bend the plate slightly to separate the model from it (avoid overbending to prevent deformation).


Filament Replacement

1

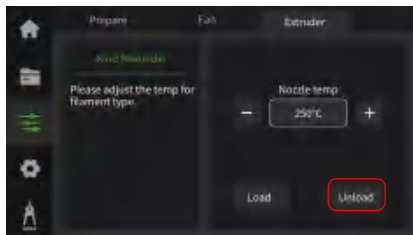


1. Click  and switch to the Extruder option. Click "Unload" and wait for the machine to complete the unloading process.

2

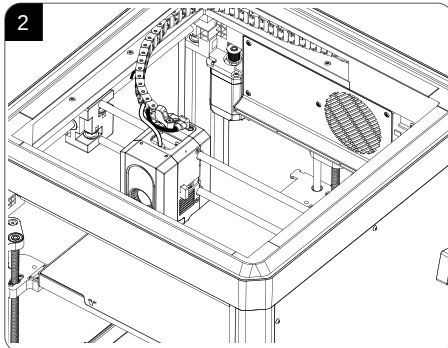


2. After unloading is complete, extract the old filament from the tube and replace it with a new one.

3

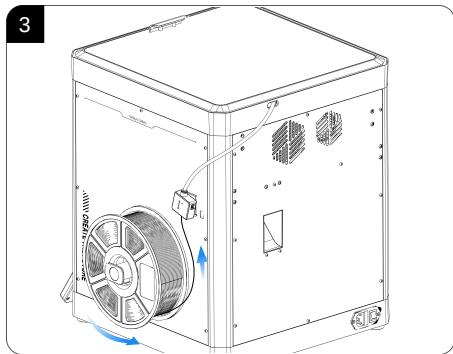

3. Load the filament by inserting one end into the filament detector and pushing it forward until it reaches its maximum position.

4

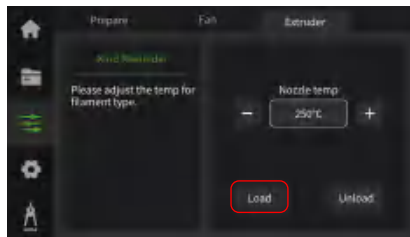


4. Click "Load" and wait for the nozzle to heat up. Once the nozzle reaches the preset temperature, it will start the filament loading process.

Slicing Software


The included USB drive contains slicing software for installation and use.

* Select your printer model before starting the slicing process.

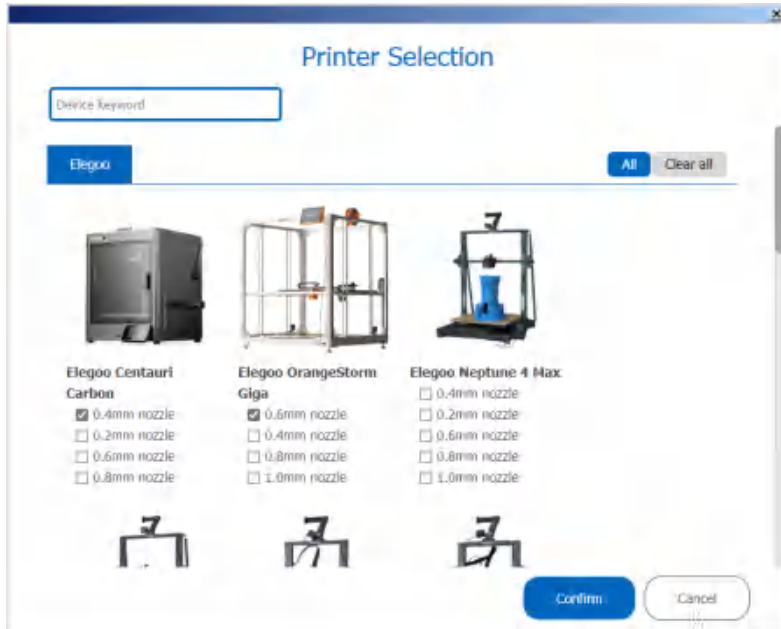


Slicing Software

1. Importing model for slicing: You can simply drag and drop the model file into the slicing software or click "File" in the top left corner and select "Import."
2. Exporting G-code file: You can use the web interface to send the generated G-code file directly to the printer for online printing or save it to a USB drive for offline printing.

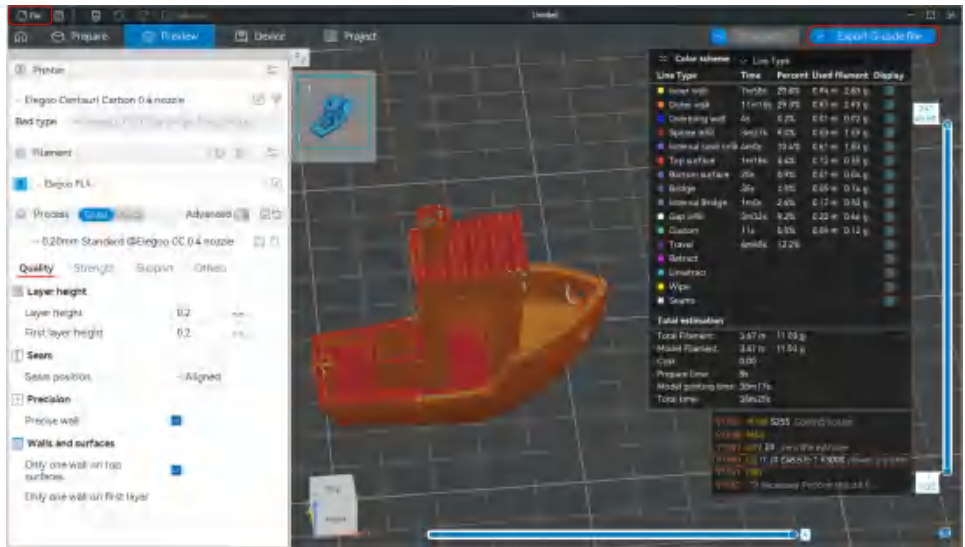


LAN (Network) Printing

1. The device supports Wi-Fi connection. Go to the “Network” interface, establish a successful connection, and check the IP address on the screen (refer to the image on the right).

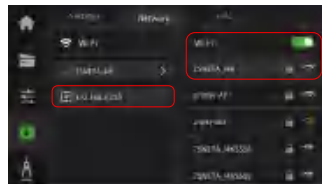

2. Connect your computer and printer to the same local area network (LAN). Open your browser and enter the printer's IP address in the address bar to access the backend management. Utilize the web interface to monitor the printing progress and pause/stop the print as needed.


*Upload G-code files for printing.

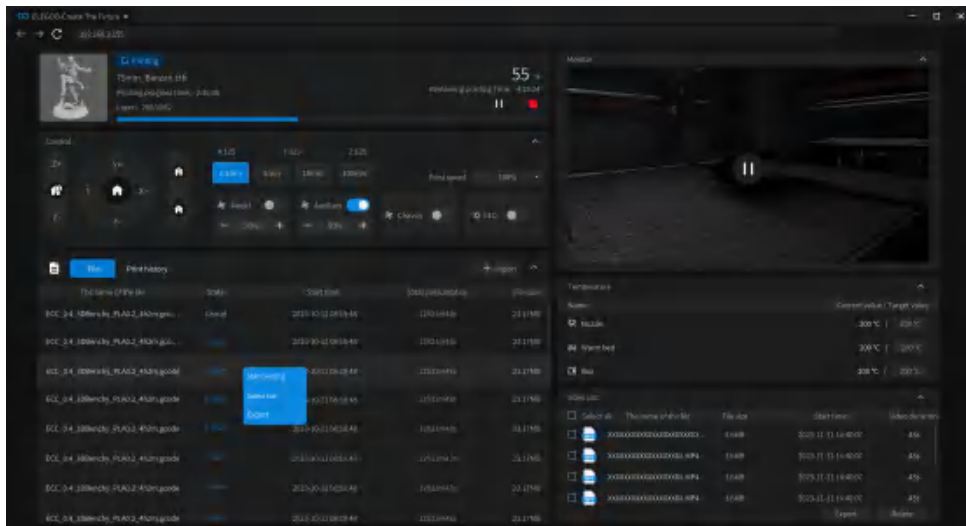

Mainboard Circuit Wiring Diagram



Type-C Interface (24V): It is strictly prohibited to directly connect this port to a computer or external devices, as it may result in damage.

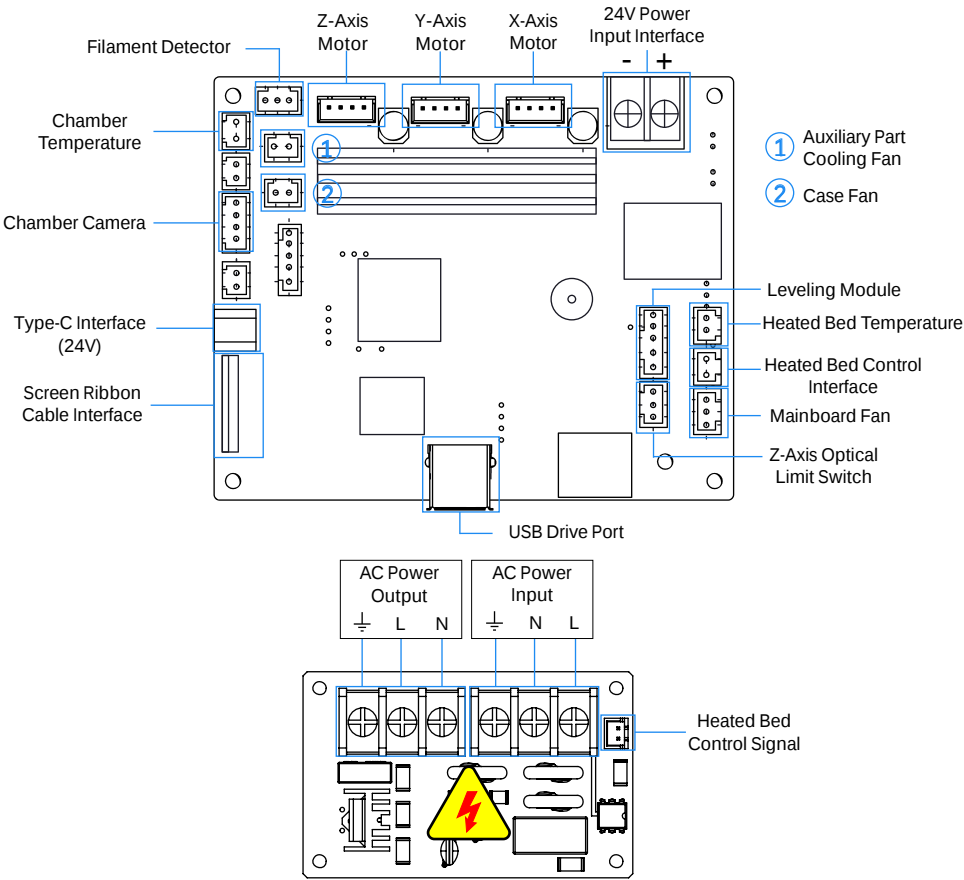

Warranty Statement

- ELEGOO printers are covered by a warranty from the date of receipt. Warranty periods for different components may vary. For more details, please visit our website (<https://www.elegoo.com/pages/refund-policy>).
- The free warranty does NOT include problems caused by self-disassembly and improper use, and wear and tear of the machine housing, etc.

After-sales service registration card

Date of purchase: _____

Place of purchase: _____

Printer: _____

S/N: _____


Fault description:

Contact: _____

Address: _____

Phone number: _____



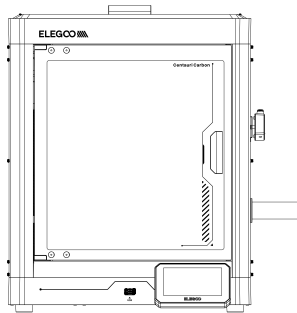

ELEGOO official website: www.elegoo.com

Happy Printing!