

**READ BEFORE USE
LIRE AVANT UTILISATION
LEA ANTES DE USAR**

Visit www.hamiltonbeach.com for our complete line of products and Use and Care Guides – as well as delicious recipes, tips, and to register your product online

Rendez-vous sur www.hamiltonbeach.ca pour notre liste complète de produits et de nos manuels utilisateur – ainsi que nos délicieuses recettes et nos conseils

Visite www.hamiltonbeach.com (EE. UU.) o www.hamiltonbeach.com.mx (México) para ver otros productos de Hamilton Beach o para contactarnos

Questions

Please call us – our friendly associates are ready to help.
USA: 1.800.851.8900

Questions

N'hésitez pas à nous appeler – nos associés s'empresseront de vous aider.
CAN : 1.800.267.2826

Preguntas

Por favor llámenos – nuestros amables representantes están listos para ayudar.

EE. UU.: 1.800.851.8900

MEX: 01 800 71 16 100

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.



Hamilton Beach®

Food Dehydrator

Déshydrateur
d'aliments

Deshidratador de
alimentos

English 2

Français 20

Español 38

Recipes Included!
Recettes à l'intérieur!
¡Recetas Incluidas!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not touch hot surfaces. Use handles or knobs.
5. To protect against risk of electric shock, do not immerse cord, plugs, or heating element assembly in water or other liquid.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off part.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. To disconnect, Pause or Reset/Stop the appliance and then remove plug from wall outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
13. Do not use appliance for other than intended use.
14. Do not operate the appliance by means of an external timer or separate remote-control system.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information

This product is intended for household use only.

⚠ WARNING Electrical Shock Hazard: This product is provided with a polarized plug (one wide blade) to reduce the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.

Parts and Features

To order parts:


US: 1.800.851.8900

www.hamiltonbeach.com

Canada: 1.800.267.2826

Mexico: 01 800 71 16 100


BEFORE FIRST USE: Wash all removable parts in hot, soapy water. Rinse and dry.

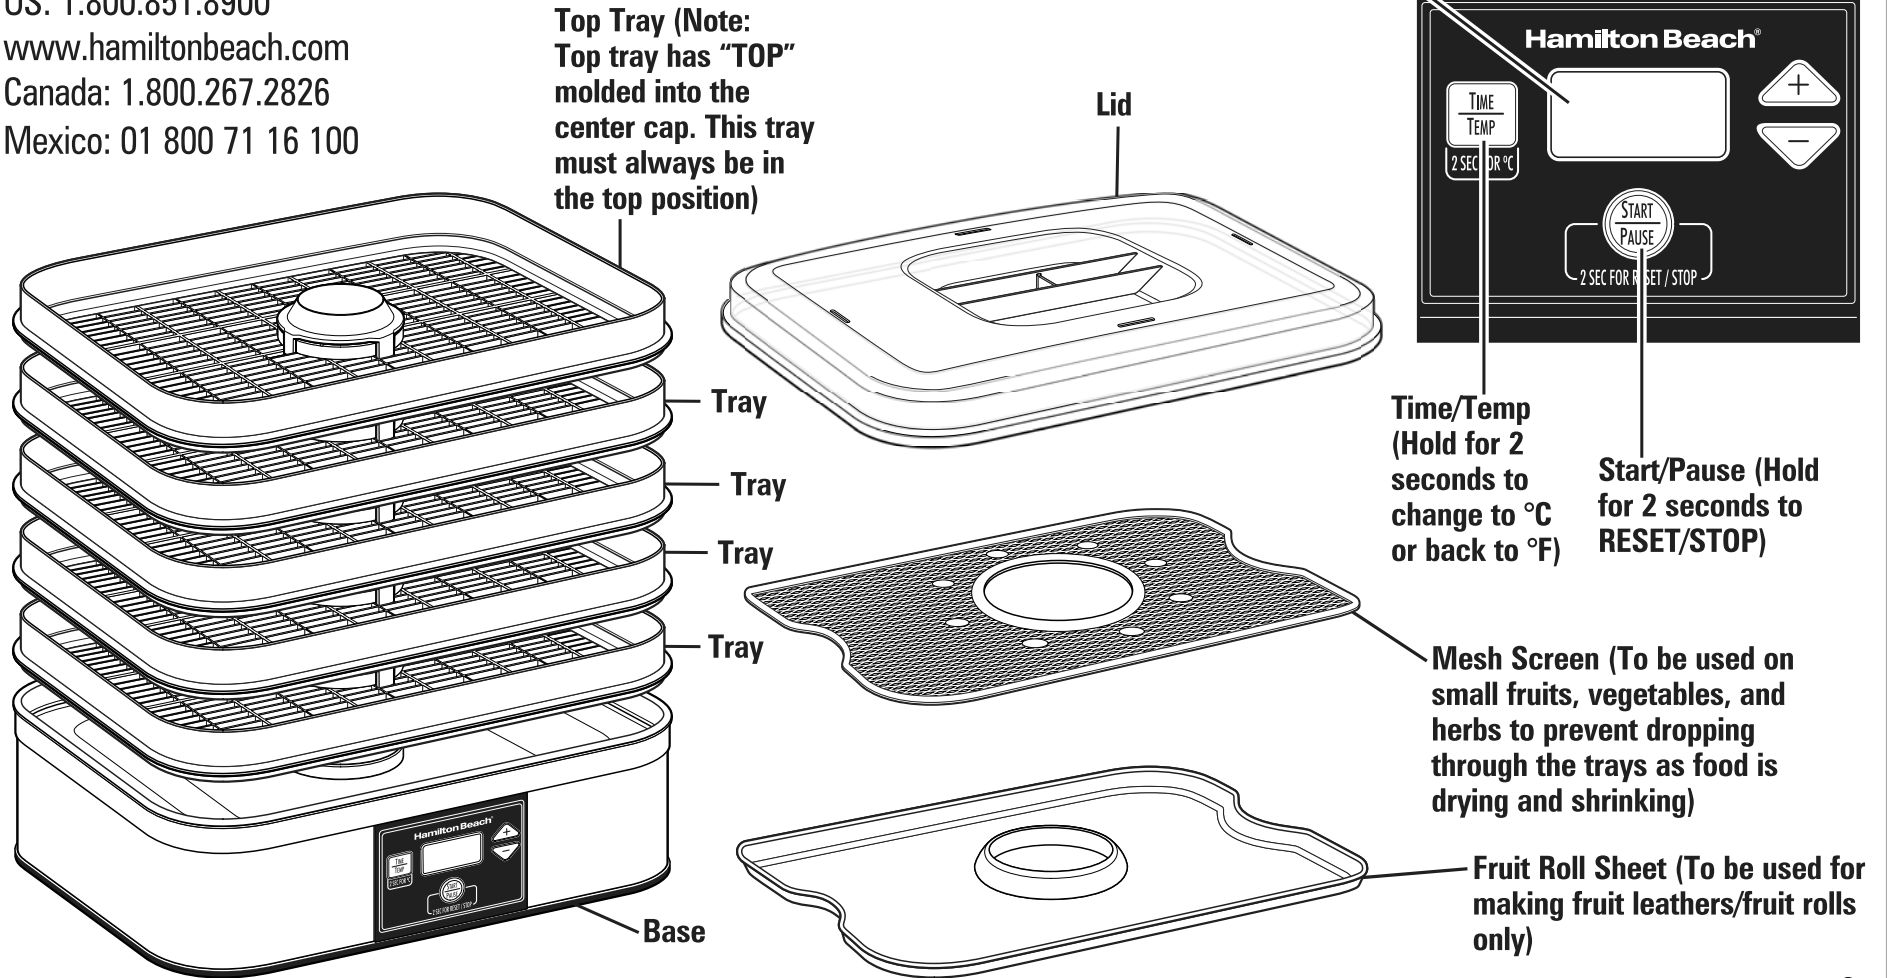


How to Load Trays and Screens

Dehydrator Preparation


- The top tray must always be in the top position for proper drying.
- All five trays should be used during each drying, even if some are empty.
- It is best to dry one type of similar food at a time; for example, all fruits or all vegetables.
- Always leave trays in place until drying is complete. You may remove food from trays when acceptably dried.

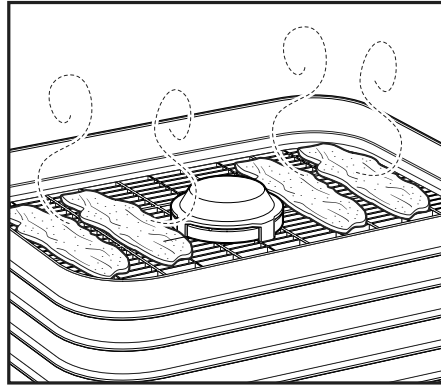


Always place food in a single layer on each tray for even drying. Do not overlap fruits, vegetables, or meats or crowd trays.

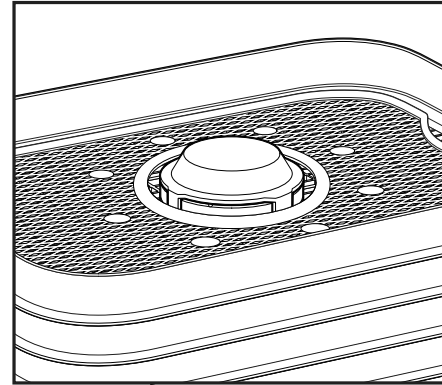


Use the mesh screen for drying herbs and small pieces of fruits or vegetables.

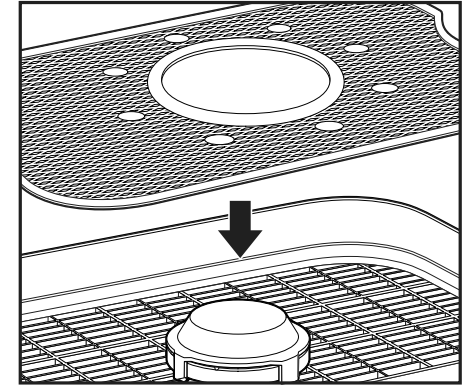


If using a mesh screen, place screen in tray before adding food. For best results, only use mesh screens in the top two trays.

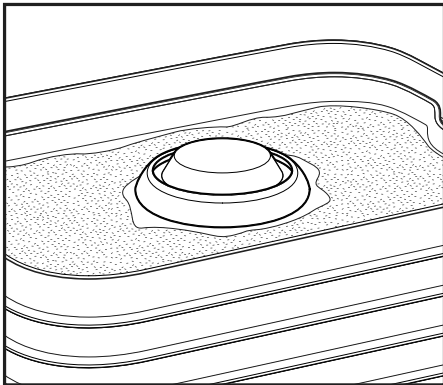

Use the fruit roll sheet for drying purees from fruits.

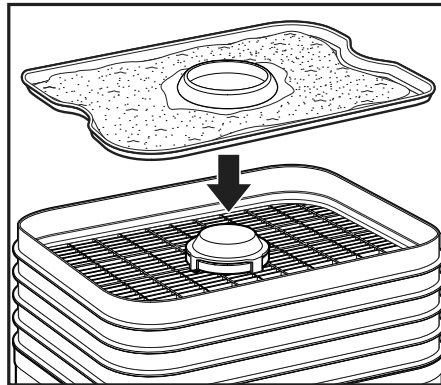


If using the fruit roll sheet, place sheet in the top tray. For best results, do not use more than two fruit roll sheets and place in the top two trays. Always stack the top tray last, before the lid, for proper drying.

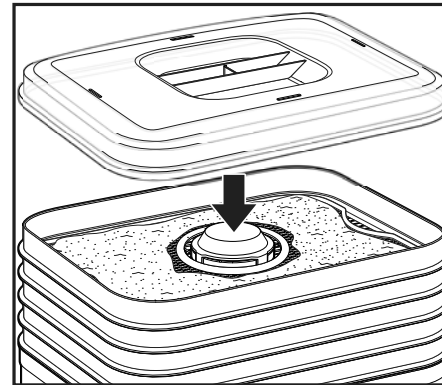


How to Use the Dehydrator

NOTES:


- Food should be stored in an airtight container once properly cooled.
- **To START, PAUSE, or RESET:** Press the **START/PAUSE** button.
- **To Change Time or Temperature During Drying Without Pausing or Resetting:** Press the **TIME/TEMP** button once for time or twice for temperature. The last setting will flash. Use arrows to adjust. Unit will continue drying automatically at the new setting.

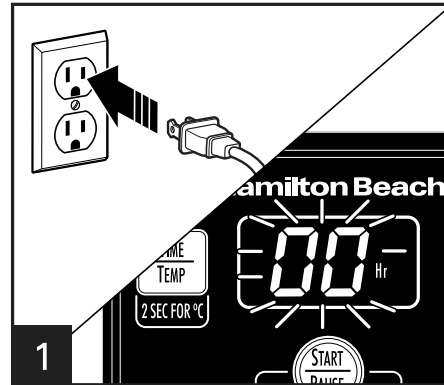


Plug in unit. Default time "00" will flash on the display.

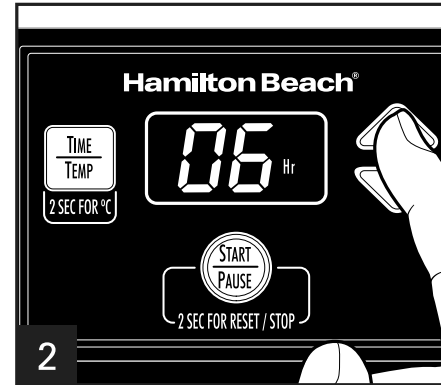

Press the + arrow to set the drying time. Maximum drying time is 48 hours, which can be set in 1-hour increments.

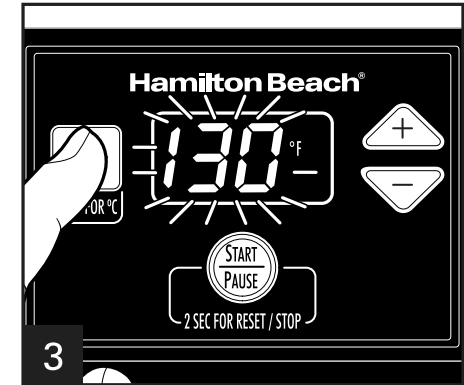


Press the **TIME/TEMP** button to set the temperature. Default temperature "130" will flash on the display.

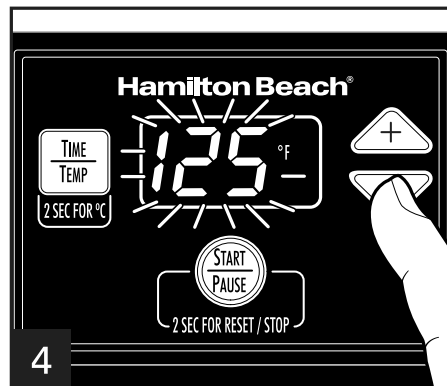


Press the + or - arrow to set the drying temperature. Press the **TIME/TEMP** button to adjust the temperature for Fahrenheit. Press and hold the **TIME/TEMP** button for 2 seconds while TEMP is displayed to change from °F to °C. Temperature can be set from 100°F to 160°F in 5° increments. **NOTE:** Default setting is Fahrenheit. If you reset this unit or unplug it while it is set for Celsius, it will go back to Fahrenheit.


How to Use the Dehydrator (cont.)

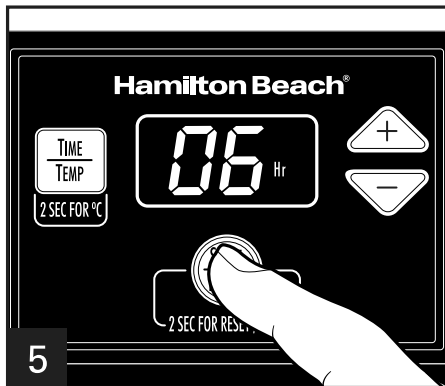


5 Press the **START/PAUSE** button to start drying. The display will alternate from showing **TIME** and **TEMP** over the drying period.

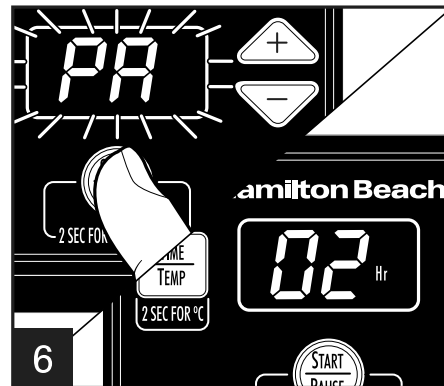


6 **To PAUSE to Check Food:** Press the **START/PAUSE** button and unit will pause. Display will flash "PA." Press the **START/PAUSE** button again to resume drying.

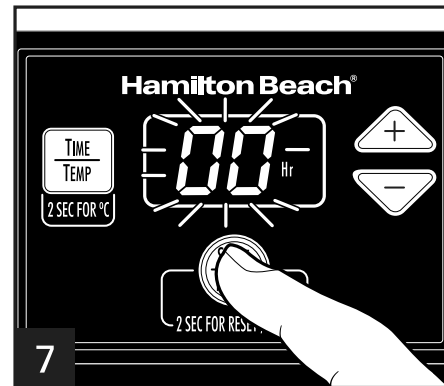


7 **To RESET:** Press and hold the **START/PAUSE** button for 2 seconds; "00" will flash in display. To continue drying, press **TIME/TEMP** button to set a new time and temperature.

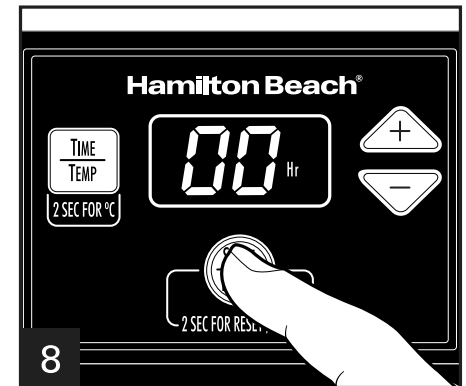

8 **To STOP "00" flashing:** Press and hold the **START/PAUSE** button again for an additional 2 seconds. "00" will still appear in display and not flash. If drying is complete, unplug the unit.

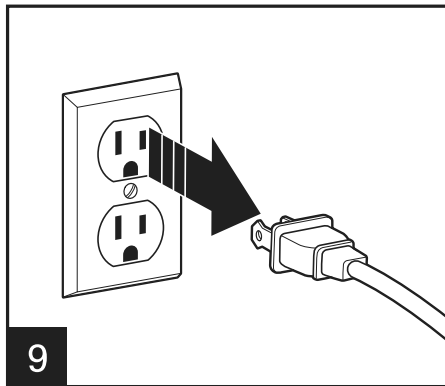

9 If drying is complete before programmed time has ended, **PAUSE** or **STOP** unit and then unplug. Let food cool completely on trays or wire rack before storing.

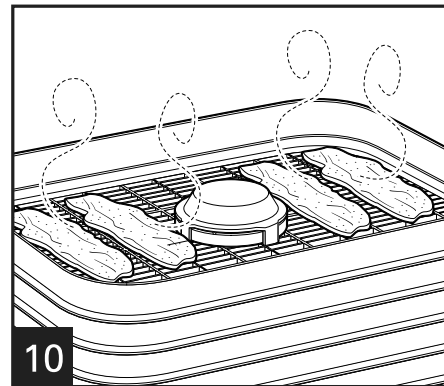

10

Food Safety Tips

- For food safety, to help ensure any bacteria present are destroyed, choose pretreatment or post treatment from below:
 - **Pretreatment of Meat Prior to Dehydrating** – Heat oven to 350°F (177°C). Drain and discard marinade from meat. Pat dry with paper towels and place meat in a single layer, leaving a space around each piece on baking sheet. Bake 5 to 10 minutes or until internal temperature reaches 160°F (72°C). Poultry must reach 165°F (74°C). **NOTE:** This method may reduce drying time and may result in a drier texture.
 - **Post Treatment of Meat After Dehydrating** – Heat oven to 275°F (135°C). Line a large baking sheet with foil. Place jerky in a single layer, leaving a small space around each piece. Bake for 10 to 12 minutes. Cool completely on a wire rack. Pat jerky dry with paper towels to remove any surface fats before storing.
 - Marinating meats helps with the flavor and texture of jerky. Do not marinate meat longer than recipe or package directions call for.
- TIP:** Post treatment of meat after dehydrating may result in a more desirable jerky texture. Try each treatment to determine which jerky you like best.

Dehydrating Fruits and Vegetables

A. Food Preparation

- Always wash hands before starting food preparation.
- Wash all fruits and vegetables before preparation.
- Choose fruits and vegetables that are in season for the best flavor.
- Discard any fruits and vegetables that have bruises or mold.
- Cut foods the same thickness, size, or shape before drying to ensure even drying.
- Some foods, like garlic, onions, cauliflower, and broccoli, have a strong smell when drying.

B. Pretreatment

- Some fruits and vegetables require pretreatment before drying. Blanch or add color protectors to preserve natural color.

How to Blanch (see *B on pages 10 and 11)

Blanching is recommended for some vegetables to help prevent color and flavor loss during drying and storage. Blanching is used to break the skins on some fruits to help shorten the drying process.

- Bring a large stockpot filled with cold water to a rolling boil.
- Place cleaned fruits or vegetables in a strainer with a handle.
- Dip strainer into the boiling water for the recommended time.
- Make sure that all the fruits or vegetables are covered with water for even blanching.
- After blanching is complete, plunge into a large bowl filled with ice water to stop the blanching process.
- Drain and completely pat dry the fruits or vegetables before dehydrating.

How to Protect Color (see #C on page 10)

Some fruits and potatoes may discolor during the drying process. To protect the color, follow these steps.

- Prepare a solution of equal parts lemon juice and water.
- Dip pieces into the solution; drain.
- If using a commercial fruit preservative, follow package directions.

C. Determining Dryness

- Many things influence drying time, including moisture content, type and amount of food, shape and evenness of food slices, air temperature, humidity, and your personal preference in texture of your food.
- Drying charts are a guideline. Drying times and temperatures vary for different types of foods; start checking food at the minimum recommended time referenced on the chart. If the food is not listed on the chart, pick a similar food.
- Combine any remaining food to upper trays for ease of checking doneness.
- Check all trays for doneness at the minimum recommended time on the chart.
 - All fruits should be able to bend and be slightly soft but not be tacky, except for apples and bananas which should be crisp.
 - All vegetables should be crisp and easily broken.

Dehydrating Fruits and Vegetables (cont.)

D. Drying Fruit Rolls

- Fruit rolls can be made with peeled and pitted pureed fresh fruits; canned fruit that has been well drained and pureed; defrosted frozen fruit, drained and pureed; or with store-bought applesauce.
- Fruits that are higher in pectin (apples, apricots, blueberries, grapes, peaches, pears, pineapples, and plums) will make a fruit roll with a nice leatherlike texture.
- When using a low-pectin fruit (grapefruits, lemons, limes, oranges, raspberries, and strawberries), combine with a higher-pectin fruit for an easy peelable fruit roll.
- Lightly spray the fruit roll sheet with nonstick cooking spray or lightly grease with vegetable oil before adding your pureed fruit.
- Evenly spread about 3/4 cup to 1 cup (177 ml to 237 ml) puree on the prepared fruit roll sheet about 1/4 inch (0.6 cm) thick.
- Add the fruit roll sheet to one of the top two trays for drying.
- Fruit rolls should be checked for doneness starting at 4 hours.
- Fruit rolls will be slightly tacky when dried.
- Always remove the fruit roll from the sheet after cooling for 15 minutes.
- The fruit roll should be slightly warm to easily remove from the fruit roll sheet.
- Once rolled up, cool completely before storing in an airtight container.

Storing Dehydrated Food

- Dehydrated foods have to be cooled completely before packaging.
- Properly dried foods need to be stored in a clean, dry, airtight container, such as resealable plastic bags, plastic containers, or glass canning jars with a tight-fitting lid, to keep foods from rehydrating.
- Store all packages in a cool, dry place.
- Dried fruits stored at 60°F (16°C) may keep up to 1 year, while vegetables stored at 60°F (16°C) may keep up to 6 months.
- Fruit rolls stored at room temperature may keep up to 1 month, if stored properly.
- If jerky has been properly dried, cooled, and packaged, it may be stored up to 2 months in an airtight container at room temperature.
- Storing at higher temperature locations will shorten the storing time. Place packaged foods in the freezer for a longer storing time.
- It is a good practice to check dehydrated foods daily. Dehydrate again if you see fruits and vegetables getting soft or if they have condensation on them. Check frequently during the additional drying, since this process will be much shorter.
- Always check the condition of your food prior to consumption. When in doubt, throw it out.

Dehydrating Chart for Fruits at 135°F (60°C)

*B = Blanching

#C = Color Protector

(See "How to Blanch" and "How to Protect Color" on page 8)

Fruit	How to Prepare	Pretreatment/Time	Dehydrating Time**	High-Pectin Fruit
Apples	Peeled, sliced 1/4 inch (0.6 cm) thick	#C	8 to 12 hours	Yes
Apricots	Pitted, peeled, sliced 1/4 inch (0.6 cm) thick	#C	15 to 19 hours	Yes
Bananas	Sliced 1/4 inch (0.6 cm) thick	#C	6 to 10 hours	No
Blueberries	Whole	*B/1 minute	14 to 18 hours	Yes
Cherries	Pitted, halved	–	22 to 26 hours	No
Cranberries	Whole	*B/1 minute	17 to 21 hours	Yes
Green or Red Seedless Grapes	Halved	–	19 to 23 hours	Yes
Kiwi	Sliced 1/4 inch (0.6 cm) thick	–	8 to 12 hours	Yes
Lemons, Limes, or Oranges	Sliced 1/4 inch (0.6 cm) thick	–	17 to 21 hours	No
Mangoes	Peeled, pitted, sliced 1/4 inch (0.6 cm) thick	–	13 to 17 hours	No
Nectarines	Peeled, pitted, sliced 1/4 inch (0.6 cm) thick	#C	11 to 15 hours	Yes
Peaches	Peeled, sliced 1/4 inch (0.6 cm) thick	#C	11 to 15 hours	Yes
Pears	Peeled, sliced 1/4 inch (0.6 cm) thick	#C	10 to 14 hours	Yes
Pineapples	Peeled, cored, sliced 1/4 inch (0.6 cm) thick	–	12 to 16 hours	Yes
Plums	Pitted, sliced in eighths	–	23 to 27 hours	Yes
Strawberries	Sliced 1/4 inch (0.6 cm) thick	–	6 to 10 hours	No

**Times may vary depending on the ripeness of your fruits and amount per tray. See "Dehydrating Fruits and Vegetables" on pages 8 and 9.

Dehydrating Chart for Vegetables at 125°F (55°C)

*B = Blanching (See "How to Blanch" on page 8)

Vegetable	How to Prepare	Pretreatment/Time	Dehydrating Time**
Bell Peppers	Sliced 1/4 inch (0.6 cm) thick	–	9 to 13 hours
Broccoli	Small florets	*B/2 minutes	9 to 13 hours
Carrots	Sliced diagonally 1/4 inch (0.6 cm) thick	*B/2 minutes	11 to 15 hours
Cauliflower	Small florets	*B/2 minutes	8 to 12 hours
Celery	Sliced diagonally 1/4 inch (0.6 cm) thick	–	5 to 9 hours
Grape Tomatoes	Halved	–	13 to 17 hours
Green Beans	Sliced 1/4 inch (0.6 cm) thick	*B/2 minutes	12 to 16 hours
Mushrooms	Sliced 1/4 inch (0.6 cm) thick	–	8 to 12 hours
Onions	Sliced 1/4 inch (0.6 cm) thick	–	14 to 18 hours
Squash, Yellow or Zucchini	Sliced 1/4 inch (0.6 cm) thick	–	7 to 11 hours
Tomatoes	Sliced 1/4 inch (0.6 cm) thick	–	10 to 13 hours

**Times may vary depending on the water content of your vegetables.

Dehydrating Fresh Herbs

- Herb leaves that are larger such as basil, bay leaves, mint, sage, or sorrel should be picked from the stems before drying.
- Herbs such as cilantro, dill, parsley, or rosemary should be kept on the stem for drying. It is easier to remove the herbs after drying.
- Always rinse herbs with cold water and carefully remove any remaining water with a salad spinner or paper towels. Herbs must be completely dried before dehydrating begins.
- Small herbs should be placed on the mesh screen for the best drying.
- Herbs are fast-drying when compared to fruits, vegetables, and marinated meats.
- Herbs crumble easily when dried.
- Herbs must be cooled completely before storing in an airtight container.

Dehydrating Chart for Herbs at 100°F (40°C)

Fresh Herb	Dehydrating Time**
Basil	4 to 6 hours
Chives	5 to 7 hours
Cilantro	4 to 6 hours
Mint	5 to 7 hours
Parsley	4 to 6 hours
Rosemary	5 to 7 hours

**Times may vary depending on the water content of your herbs.

Dehydrating Jerky

- Wash your hands with soap and warm water before preparation of jerky.
- Choose lean cuts of meat for jerky.
- Trim any fat from meat before marinating.
- Wrap meat in plastic wrap and freeze for a minimum of 1 hour for easy slicing before marinating.
- Marinate in a heavy-duty resealable plastic zipper bag or a glass dish. Do not use a metal pan for marinating, since it causes a flavor change and a possible reaction of the marinade to the metal of the pan.
- Always marinate meats for jerky in a refrigerator; drain and discard marinade before drying.
- Dehydrate jerky according to the recipe or follow jerky preparation according to package directions.
- Check jerky after 4 hours and every 30 minutes after.
- Jerky is dry when it cracks without breaking when bent.
- Pat jerky dry with a paper towel to remove any surface fats and cool completely before storing in an airtight container.
- If jerky has been properly dried, cooled, and packaged, it may be stored up to 2 months in an airtight container at room temperature.
- Always slice meats against the grain for a more tender jerky.
- Meat slices should be no more than 1/4 inch (0.6 cm) thick, 4 inches (10.2 cm) long and 2 inches (5.1 cm) wide.
- Never marinate meat at room temperature. Always refrigerate meat when marinating.
- Always follow the recipe directions.
- Label and date all containers of jerky.

NOTE: For food safety, to help ensure any bacteria present are destroyed, choose pretreatment or post treatment from below:

- **Pretreatment of Meat Prior to Dehydrating** – Heat oven to 350°F (177°C). Drain and discard marinade from meat. Pat dry with paper towels and place meat in a single layer, leaving a space around each piece on baking sheet. Bake 5 to 10 minutes or until internal temperature reaches 160°F (72°C). Poultry must reach 165°F (74°C). **NOTE:** This method may reduce drying time and may result in a drier texture.
- **Post Treatment of Meat After Dehydrating** – Heat oven to 275°F (135°C). Line a large baking sheet with foil. Place jerky in a single layer, leaving a small space around each piece. Bake for 10 to 12 minutes. Cool completely on a wire rack. Pat jerky dry with paper towels to remove any surface fats before storing.

Recipes

Whiskey Beef Jerky

Ingredients:

2 pounds (907 g) beef top round
2 cups (473 ml) root beer
1 cup (237 ml) whiskey
1/2 cup (118 ml) molasses
1/2 cup (118 ml) brown sugar
1/2 cup (118 ml) soy sauce
2 Tablespoons (30 ml) liquid smoke
1 Tablespoon (15 ml) garlic powder
1 Tablespoon (15 ml) chili powder

Directions:

1. Place beef in a resealable plastic freezer bag and freeze for 1 hour or until firm enough to slice easily.
2. In a medium bowl, mix remaining ingredients until brown sugar is dissolved.
3. Remove beef from freezer and slice against the grain into 1/4-inch-thick (0.6-cm) slices.
4. Add beef and marinade to bag, making sure meat is completely covered with marinade.
5. Close bag and refrigerate 8 to 12 hours.
6. Drain and discard marinade. Pat all slices of beef with paper towels.
7. Place beef slices in a single layer on the first tray, leaving space around each slice for proper drying. Fill trays with remaining beef slices.
8. Stack trays on base with the top tray last.
9. Set the dehydrator to 160°F (70°C) for 4 to 8 hours. Start checking beef for doneness at 4 hours and then every 30 minutes. Jerky is dry when you can bend it and the top cracks, but the slice does not break.
10. Heat oven to 275°F (135°C).
11. Line a large cookie sheet with aluminum foil. Place jerky in a single layer, leaving a small space around each slice.
12. Bake for 10 to 12 minutes. Cool completely on a wire rack. Pat dry with paper towels before storing in an airtight container.

Makes: About 1 pound

Recipes (cont.)

Cajun Beef Jerky

Ingredients:

3 pounds (1.4 kg) beef top round
3/4 cup (177 ml) Worcestershire sauce
1/2 cup (118 ml) water
1/2 cup (118 ml) soy sauce
1/3 cup (79 ml) teriyaki sauce
1 Tablespoon (15 ml) onion powder
1 Tablespoon (15 ml) Old Bay® Seasoning
1 Tablespoon (15 ml) liquid smoke
2 teaspoons (10 ml) Cajun seasoning
1 teaspoon (5 ml) celery seed

Directions:

1. Place beef in a resealable plastic freezer bag and freeze for 1 hour or until firm enough to slice easily.
2. In a medium bowl, mix remaining ingredients.
3. Remove beef from freezer and slice against the grain into 1/4-inch-thick (0.6-cm) slices.
4. Divide beef and marinade between 2 bags, making sure meat is completely covered with marinade.
5. Close bag and refrigerate 8 to 12 hours.
6. Drain and discard marinade. Pat all slices of beef with paper towels.
7. Place beef slices in a single layer on the first tray, leaving space around each slice for proper drying. Fill trays with remaining beef slices.
8. Stack trays on base with the top tray last.
9. Set the dehydrator to 160°F (70°C) for 4 to 8 hours. Start checking beef for doneness at 4 hours and then every 30 minutes. Jerky is dry when you can bend it and the top cracks, but the slice does not break.
10. Heat oven to 275°F (135°C).
11. Line a large cookie sheet with aluminum foil. Place jerky in a single layer, leaving a small space around each slice.
12. Bake for 10 to 12 minutes. Cool completely on a wire rack. Pat dry with paper towels before storing in an airtight container.

Makes: About 1 1/2 pounds

Recipes (cont.)

Teriyaki Beef Jerky

Ingredients:

2 pounds (907 g) flank steak
2 cups (473 ml) pineapple juice
1 bottle (15 ounces/444 ml) soy sauce
1 1/2 cups (355 ml) packed light brown sugar
1 cup (237 ml) rice vinegar
6 large garlic cloves, halved
2 small dried red chilis, halved

Directions:


1. Place beef in a resealable plastic freezer bag and freeze for 1 hour or until firm enough to slice easily.
2. In a medium bowl, mix remaining ingredients until brown sugar is dissolved.
3. Remove beef from freezer and slice against the grain into 1/4-inch-thick (0.6-cm) slices.
4. Add beef and marinade to bag, making sure meat is completely covered with marinade.
5. Close bag and refrigerate 8 to 12 hours.
6. Drain and discard marinade. Pat all slices of beef with paper towels.
7. Place beef slices in a single layer on the first tray, leaving space around each slice for proper drying. Fill trays with remaining beef slices.
8. Stack trays on base with the top tray last.
9. Set the dehydrator to 160°F (70°C) for 4 to 8 hours. Start checking beef for doneness at 4 hours and then every 30 minutes. Jerky is dry when you can bend it and the top cracks, but the slice does not break.
10. Heat oven to 275°F (135°C).
11. Line a large cookie sheet with aluminum foil. Place jerky in a single layer, leaving a small space around each slice.
12. Bake for 10 to 12 minutes. Cool completely on a wire rack. Pat dry with paper towels before storing in an airtight container.

Makes: About 1 pound


Care and Cleaning

⚠ WARNING Electrical Shock Hazard:

Disconnect power before cleaning. Do not immerse cord, plug, or base in water or other liquid.

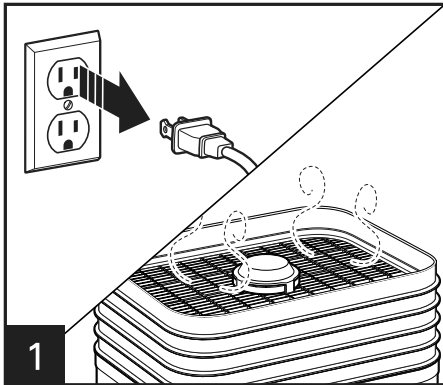

1 Unplug unit when through drying. Let cool.

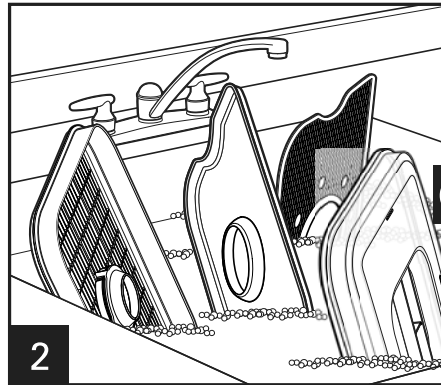


2 Wash in warm, soapy water.

OR



DISHWASHER-SAFE
DO NOT use the "SANI" setting when washing in the dishwasher. "SANI" cycle temperatures could damage your product.

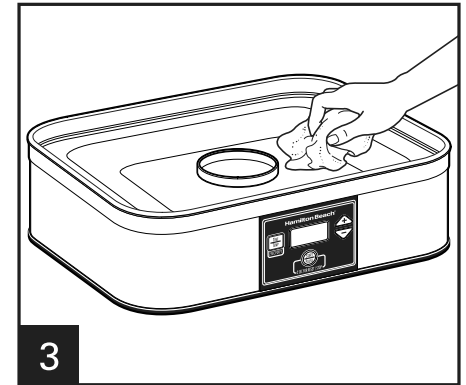

3 Wipe the base with a damp, soapy cloth.

Troubleshooting

PROBLEM

Food not drying.

PROBABLE CAUSE/SOLUTION

- Food could be cut too thick or peel could have been left on. Follow recommendations in charts on pages 10, 11, or 12, or according to the recipe.
- Too much food on each tray. Remove some foods and dehydrate for a longer time.

Food drying unevenly.

- Foods need to be cut uniformly.
- Foods with uneven pieces can be rotated during the drying process.

Fruits or vegetables become soft during storage.

- Too much moisture was left in the food. Dry further to remove excess moisture.

Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.