



Battery PTZ Camera

670C Instruction Manual
(EN)

Claim Your Lifetime Warranty




Thank you for choosing Ctronics products.

We are committed to providing the best service to all our customer.

If anything has happened to your product, please contact us for a lifetime warranty.



 Online support



 ctronics



CTRONICS.TECH

 ctronics



 ctronics support

E-mail: support@ctronics.com

Website: www.ctronics.com


Contents

English	-----	(01~15)
Deutsche	-----	(16~29)
Française	-----	(30~43)
Italiana	-----	(44~57)
Española	-----	(58~71)

Table of Contents

1. Product details -----	02
2. Download the mobile phone APP -----	02
3. Connect the camera to Wi-Fi network -----	03
3.1 Method 1:Use the camera to scan for network configuration ----	03
3.2 Method 2:Configure network via hotspot -----	06
4. Password modification -----	09
5. Functions interface -----	10
6. Low Power setting -----	11
7. Alarm and Video -----	12
8. Video playback and download -----	13
9. FAQ-----	13

1 Product details

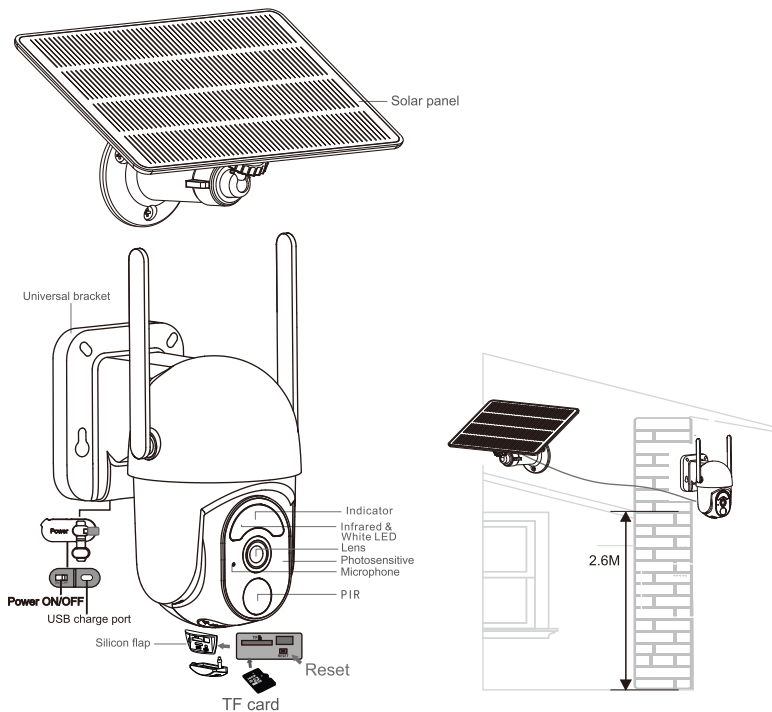

2 Download the Mobile Phone APP

① For Apple iOS, download the mobile phone application "CTRONICS" in the App store. For Android, download the mobile phone application "CTRONICS" in the Google Play store.

② During the camera connection, it will prompt you on whether to "Allow the APP to pass the application authority of the mobile phone?" Please select "Yes" to ensure all functions of the APP will operate normally.

3 Connect the camera to a Wi-Fi network

3.1 Method 1: Use the camera to scan for network configuration.

(Please scan the QR code below with your mobile phone, or access it through the link below:)

Video for Operation




<https://youtu.be/6EK58ochFVo>


① After long-time transportation, the battery may be low. Please charge it through a 5V mobile phone charger or the USB interface of a computer. Its indicator is red in charge or out after full charge.

② Find the WiFi network of your home and connect to it: put your mobile phone and the camera close to the router. Press the power-on button on the camera, and the indicator on the camera will flash in red. When in network configuration, the camera keeps giving a prompt tone to remind user to wait for completion of the network configuration (Picture 1 and Picture 2).

③ Note: The camera does not support 5G WiFi networks but 2.4G WiFi networks only.

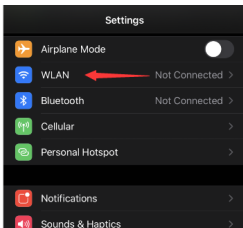

Picture 1

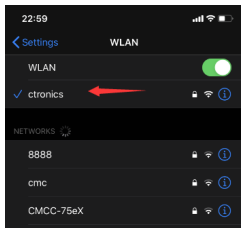

Picture 2

④ Open the CTRONICS APP and add the camera as below.

1. Click button "Add Camera" (Picture 3).

2. Choose "Camera lens scanning" as the network configuration mode (Picture 4).


3. Choose SSID of the WiFi network of your home, enter password ("ctronics888" is the reference password. Please enter the SSID password of the WiFi network of your home) and click button "NEXT STEP" (Picture 5).

4. After entry to the camera scanning page, the APP will generate a QR code automatically. Please put the QR code in a position about 15cm in front of the camera. The camera will then give a prompt tone, suggesting automatic configuration of the WiFi network by it (Picture 6).


5. After network configuration, click symbol "√" (Picture 7).

6. The camera will then have on-line display (Picture 8).


Note: As shown in picture 5, if the SSID shows "unknown ssid", please open the location permission of the CTRONICS App in the phone settings.

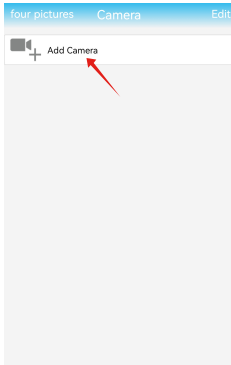

Picture 3

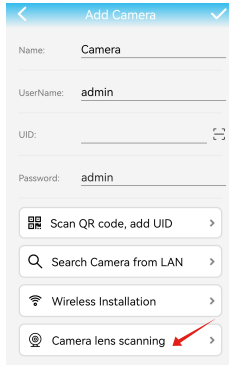


Picture 4

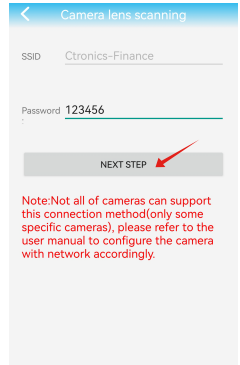


Picture 5



Picture 6

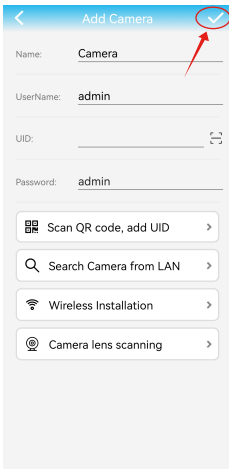

Picture 7

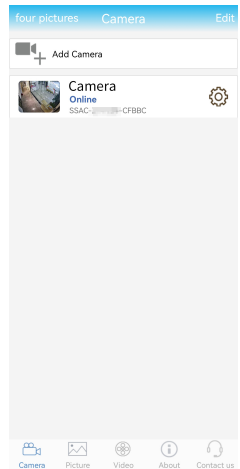

Picture 8

3.2 Method 2: Configure network via hotspot

(Please scan the QR code below with your mobile phone, or access it through the link below:)

Video for Operation




https://youtu.be/cWDe_xtO5is


① Press the power button. The indicator light will flash red and the camera will constantly sound a chime for network configuration.

② Place your mobile phone and camera next to the router for operation. Open the Wi-Fi setting interface of the mobile phone and find the hotspot with the name IPCAM-XXXXXX sent by the camera. Click connect and use the password 01234567.

This Wi-Fi is the camera hotspot. After the phone is connected, it will prompt "The current Wi-Fi has no Internet connection." Please choose to continue using (Picture 9 to Picture 10).

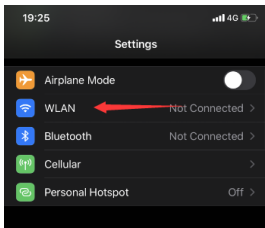


Picture 9

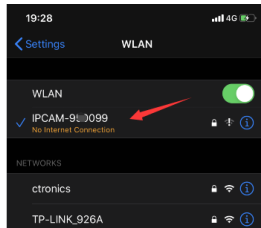


Picture 10

③ Open the CTRONICS APP and add the camera according to the following steps:


1. Click Add Camera; (Picture 11)
2. Click Search camera from LAN; (Picture 12)
3. Find device ID on LAN; (Picture 13)
4. Find camera online, click the tool icon; (Picture 14)
5. Click WI-FI Setting; (Picture 15)
6. Find your home network SSID and input password (ctronics888 is just for reference, please input your own password for your home SSID); (Picture 16 to Picture 17)
7. Camera is online from WAN. (Picture 18)

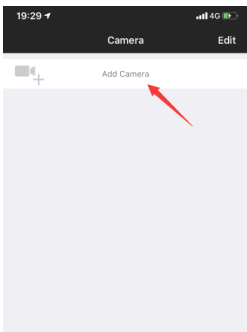


Picture 11

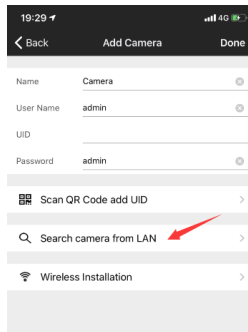


Picture 12

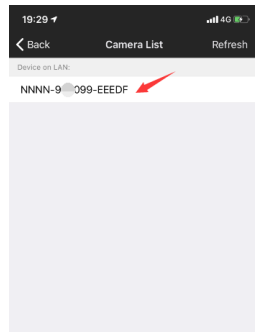


Picture 13

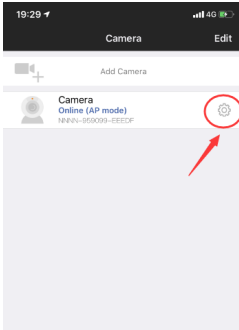


Picture 14

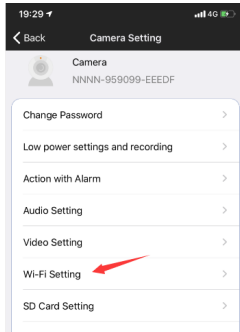


Picture 15

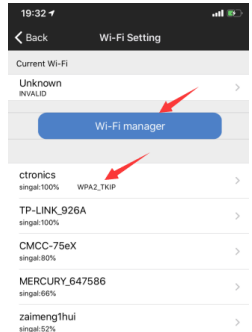

Picture 16

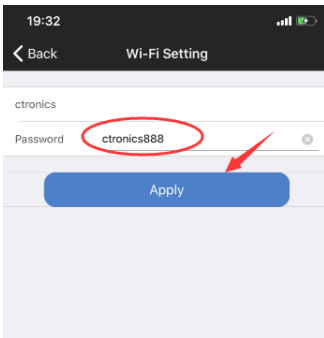

Picture 17

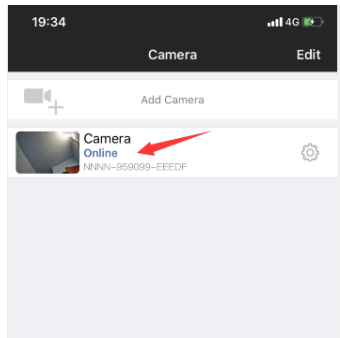

Picture 18

Note: If the network configuration is not successful, please operate as the following steps to try again:


1. After turning on the camera for one minute, please press and hold the camera reset button for 10 seconds, then release the camera reset button and reconfigure network again.

2. The home WiFi password cannot exceed 31 characters. The password should be case sensitive and avoid using special characters such as "? , ! , & , .". We recommend you use a combination of numbers and letters.


3. If you still cannot complete the network configuration of the camera or have any questions , please contact our email: support@c-
tronics.com. We will reply you within 24 hours.

4 Password Modification


To protect your privacy, we suggest you modify the camera password in the settings menu. The old password is "admin." After entering the new password, please click "Apply" and the camera will restart to complete the new password. (Picture 19 to Picture 21)

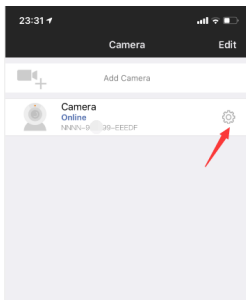

Picture 19

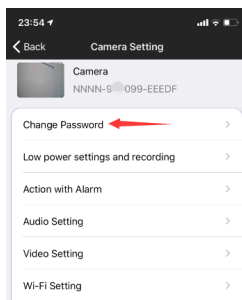

Picture 20

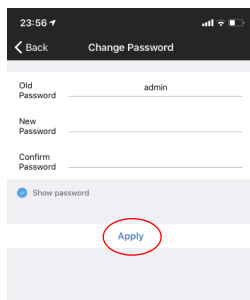


Picture 21

5 Functions interface




1. Battery	Displays the current quantity of electric charge and charging status.
2. Flip & Mirror Image	You can adjust the up and down flip and left and right mirroring of the camera image.
3. Light Mode	You can choose black and white night vision or color night vision.
4. Close the preview	You can close the preview image.
5. Intercom	Press and hold this icon to talk using intercom voice.
6. Voice Monitor	Turn on the voice monitor. Using the mobile app turn off the mute function and adjust the sound to the maximum.
7. Manual Capture	By pressing it, you can capture the current picture and save it in the APP local picture.
8. Manual Video	Press video recording to record the current screen and save it to the APP local recording.
9. HD and SD	You can easily switch the clarity of the preview images to HD and SD.

6 Low Power setting

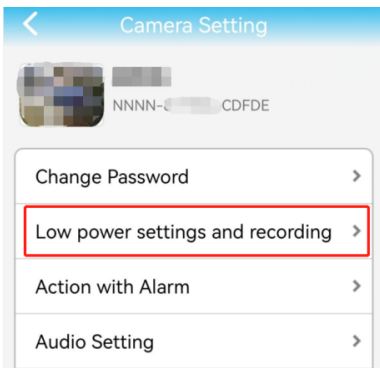

Picture 22

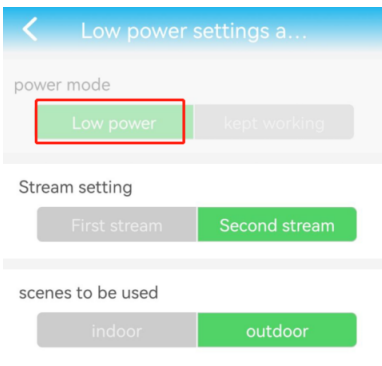


Picture 23

1. Power working mode: In winter, the solar panel may not absorb enough energy. It is recommended that you use the "low power" working mode to avoid using the "kept working" working mode to cause insufficient power supply and power off the camera (Picture 22).


2. Stream setting: You can choose the quality of the recorded video as "First stream" or "Second stream" according to your needs (Picture 23).

3. Using scene: You can choose "indoor" or "outdoor" according to the location where your camera is installed (Picture 23).

7 Alarm and Video

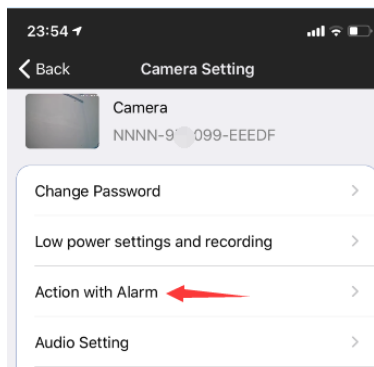

Picture 24

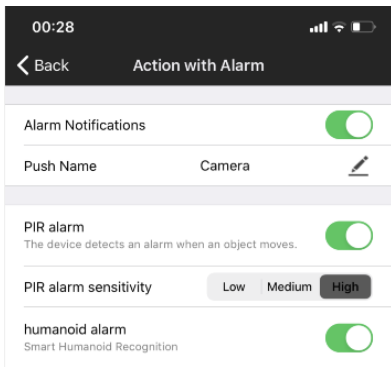

Picture 25


① Action with Alarm. If your mobile phone cannot receive an alarm push, please check whether the alarm notification permission is turned on in the CTRONICS application. The Android system usually automatically exits the APP after the phone is locked. Please set to allow the CTRONICS application to run in the background in "system settings."(Picture 24)

② Push Name: You can customize the name of the camera by modifying the Push Name. (Picture 25)


③ In order to reduce the false alarm of PIR caused by slow-moving cars or environmental factors, we recommend you turn on the PIR alarm and the humanoid alarm at the same time. (Picture 25)

④ Open the alarm recording to the SD card. You can select the length of the recording time after a single trigger of 10 seconds or 30 seconds. If you need to upload the alarm video to your own FTP server, you need to insert an SD card.


8 Video playback and download

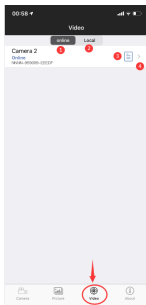

Picture 26

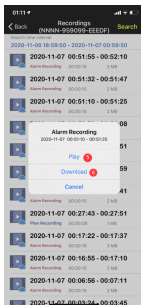

Picture 27

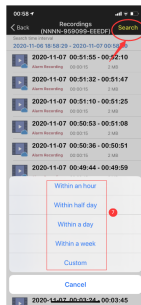

Picture 28

- ① "Online" means SD card video recording. (Picture 26)
- ② Local means manual video recording in the local video. (Picture 26)
- ③ The alarm log. (Picture 26)
- ④ Entering the video list. (Picture 26)
- ⑤ Playing video. (Picture 27)
- ⑥ Downloading video to your mobile phone. (Picture 27)
- ⑦ Filtering videos according to time. (Picture 28)

9 FAQ

① **Why does the camera automatically shut down after the red light flashes several times after pressing the power button?**

The camera has not been charge for long enough and the battery is low. Please use a 5V charger to charge the camera. The 5v/2a camera should charge for at least 8 hours and the 5v/1a should charge for at least 16 hours. If the camera is fully charged the charging indicator will change from red to green.

② Why did the camera fail to match the network?

The camera and mobile phone must be placed next to the router when initially configuring the network. In addition, the volume of the mobile phone needs to be adjusted to the maximum during voice distribution. Please pay attention to the case of the password when entering the password and avoid using special characters such as "?,!,&". We recommend that you use a combination of numbers and letters. If the Wi-Fi password is entered incorrectly, please reset the camera and reconnect to the network.

③ Why does the mobile phone continue to receive false alarms and the camera consumes a lot of power?

For the location of the camera, we recommend avoiding a large number of moving cars, chimneys, and direct sunlight. Such environments will cause false alarms and interference with PIR detection. In addition, the humanoid alarm can be turned on at the same time in the alarm settings to reduce false alarms, reduce camera wake-up time, and save power.

④ Why can't I see the video on my mobile phone?

We recommend that you check whether the camera's SD card is installed correctly. After inserting the card, please format the card in the phone APP settings. If the reading is still abnormal, please take the card and format it as FAT32 on the computer or replace the card for the test. In addition, please set the device time zone and the phone time zone to be consistent in the settings.

⑤ Why is the camera's recording time not the same as the local time?

Please set the device time zone and the phone time zone to be consistent in the settings. If the daylight saving time starts in the local time, please check the daylight saving time in the time zone setting.

⑥ Mobile APP often cannot connect to the camera, sometimes the picture freezes, and it takes a long time to see the picture after buffering?

The Wi-Fi signal strength of the camera receiving the router is affected by the installation environment. Therefore, it should be as close as possible to the router. The upload rate of the Wi-Fi network speed must reach at least 1.5 M/S to achieve stable data transmission.

⑦ My alarm recording is only 15 seconds, can I set the time longer?

Yes, you can set the alarm recording time to 30 seconds in the alarm settings. Please refer to the fifth part of the manual.

⑧ How do I delete the video files in the SD card?

The video files in the camera's SD card will be automatically overwritten after recording. For the safety of your video files, single file deletion is not supported. If you need to delete all, you can format the SD card in the APP.

⑨ How can I recover the password of the camera if I forget it?

The password cannot be recovered. If you forget the password, please press the power button for one minute and press and hold the reset button for 10-15 seconds, then release the reset button, the camera will be restored to the factory default and the password will be restored to the default "admin." At this time, please re-add the camera network to the mobile APP.